



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

This section explains how to disassemble:

- A) Windscreen
- B) Rear window
- C) Rear side window
- E) Engine hood window



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



A) Disassembling the windscreen

1. Disconnect the antenna connector.
2. Remove the seal around the perimeter of the windscreen.
3. Using a specific tool, remove the silicone around the perimeter of the windscreen. Ensure the Prime sticking the windscreen to the body is removed.
4. Using suction cups, remove the windscreen (A-Fig.1).



Always take the utmost care not to damage or scratch the windscreen during disassembly.



Fig.1



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



B) Disassembling the rear window

1. Using a suitable tool, remove the silicone around the perimeter of the window. Ensure that the Prime sticking the window to the body is removed.
2. Remove the rear window (A-Fig.2).



Always take the utmost care not to damage or scratch the rear window during disassembly.



Fig.2



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



C) Disassembling the rear side window

1. Using a suitable tool, remove the silicone around the perimeter of the rear side window. Ensure that the Prime sticking the rear side window to the body is removed.
2. Remove the rear side window (A-Fig.3).



Always take the utmost care not to damage or scratch the rear side window during disassembly.

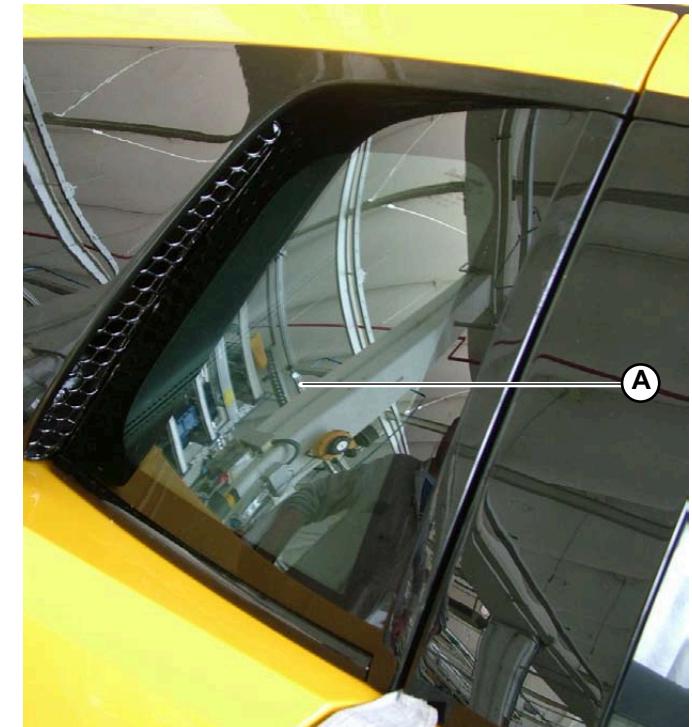


Fig.3



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



D) Disassembling the engine hood window

1. Using the special tool, remove the silicone around the perimeter of the window. Ensure that the Prime sticking the window to the engine hood is removed.
2. Using suction cups, remove the engine hood window (Fig.4).



Always take the utmost care not to damage or scratch the glass during disassembly.

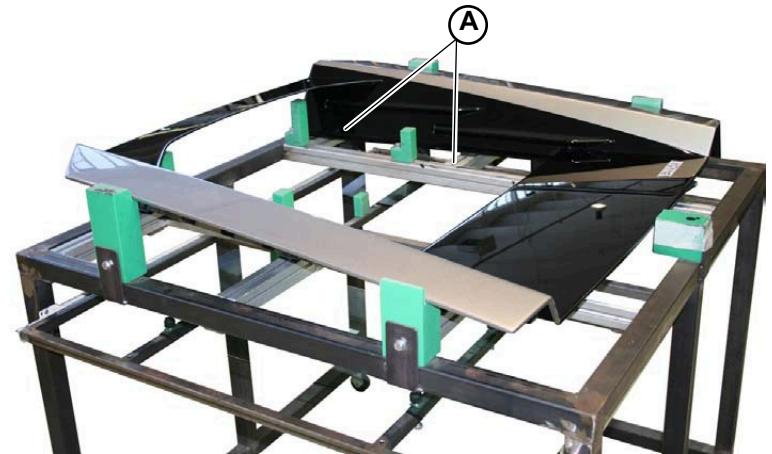


Fig.4

www.car60.com