



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

## Electrical equipment

Type	A 12V negative to ground
Recharging system	Alternator and voltage regulator
Battery	12V – 90Ah – 420A
Current rate with engine off and switch deactivated	7 ÷ 12 mA
Spark plug type:	NGK IR KR8BI
Spark plugs - Distance between electrodes	0.7 ÷ 0.8



Fig.1