

® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



Disassembling the interior roof lamp

1. Remove the interior lights (A-Fig.1) by releasing the 2 side clips from their couplings.
2. Disconnect the connection (B-Fig.1).
3. Unscrew the 2 mountings screws (C-Fig.2).
4. Remove the roof lamp (D-Fig.3) by releasing the 2 flanges (E-Fig.4) from their couplings.

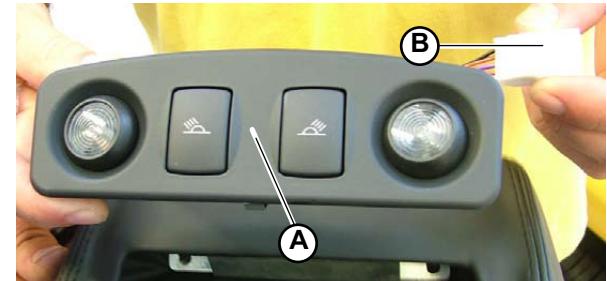


Fig.1



Fig.2

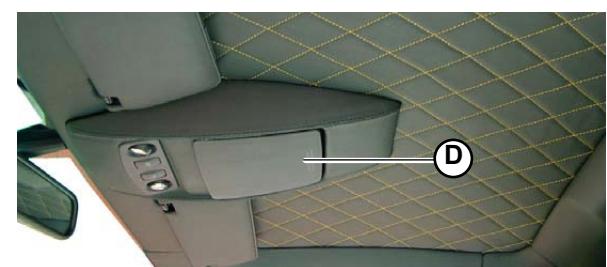


Fig.3



Fig.4