



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



## Airbag control unit disassembly

### Preliminary operations

- Disconnect the battery main switch inside the engine compartment and wait 2-3 minutes before carrying out any operation.
- Disassemble the right and left sides of the central tunnel (086303).

### Control unit disassembly

1. Disconnect the connector (A-Fig.1) from the airbag control unit.
2. Unscrew the three screws that secure the airbag control unit (B-Fig.1) to the crankcase of the central tunnel.
3. Remove the airbag control unit.

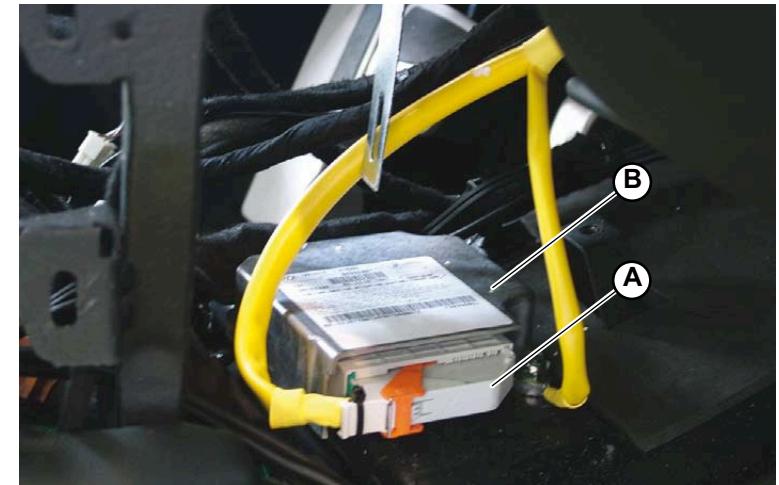


Fig.1