


喇叭开关

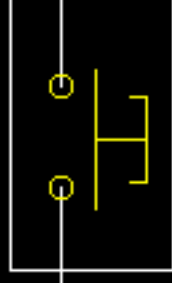

G21

G02D 0.85 B

G02


高音喇叭 K11A 0.85 Pw



G03B 0.85 B

G03

低音喇叭 K11W 0.85 Pw

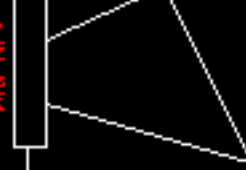

G25B 1.25 B

G25

G23B 1.25 B

G23