

启动或运行状态下的电源

常电源

常电源

蓄电池
接线盒
(BJB)
11-1

F25
10A
13-17

F87
60A
13-21

F69
30A
13-21

43

57

C1035B

56

C1035A

CBB25

WH-OG

1

C1026

4

C1026

CBB25

WH-OG

35

电源

1

蓄电池电压

30

C135

SBB69

GY-RD

防抱死
制动系统
(ABS) 模块
151-1

HS2 CAN +

HS2 CAN -

接地

14

C135

GD121

BK-YE

G112
10-4

C135

VDB25 GN-OG

42

VDB26 GY-BU



43

14-5


14-5

模块
通信
网络

防抱死
制动系统
(ABS) 模块
151-1

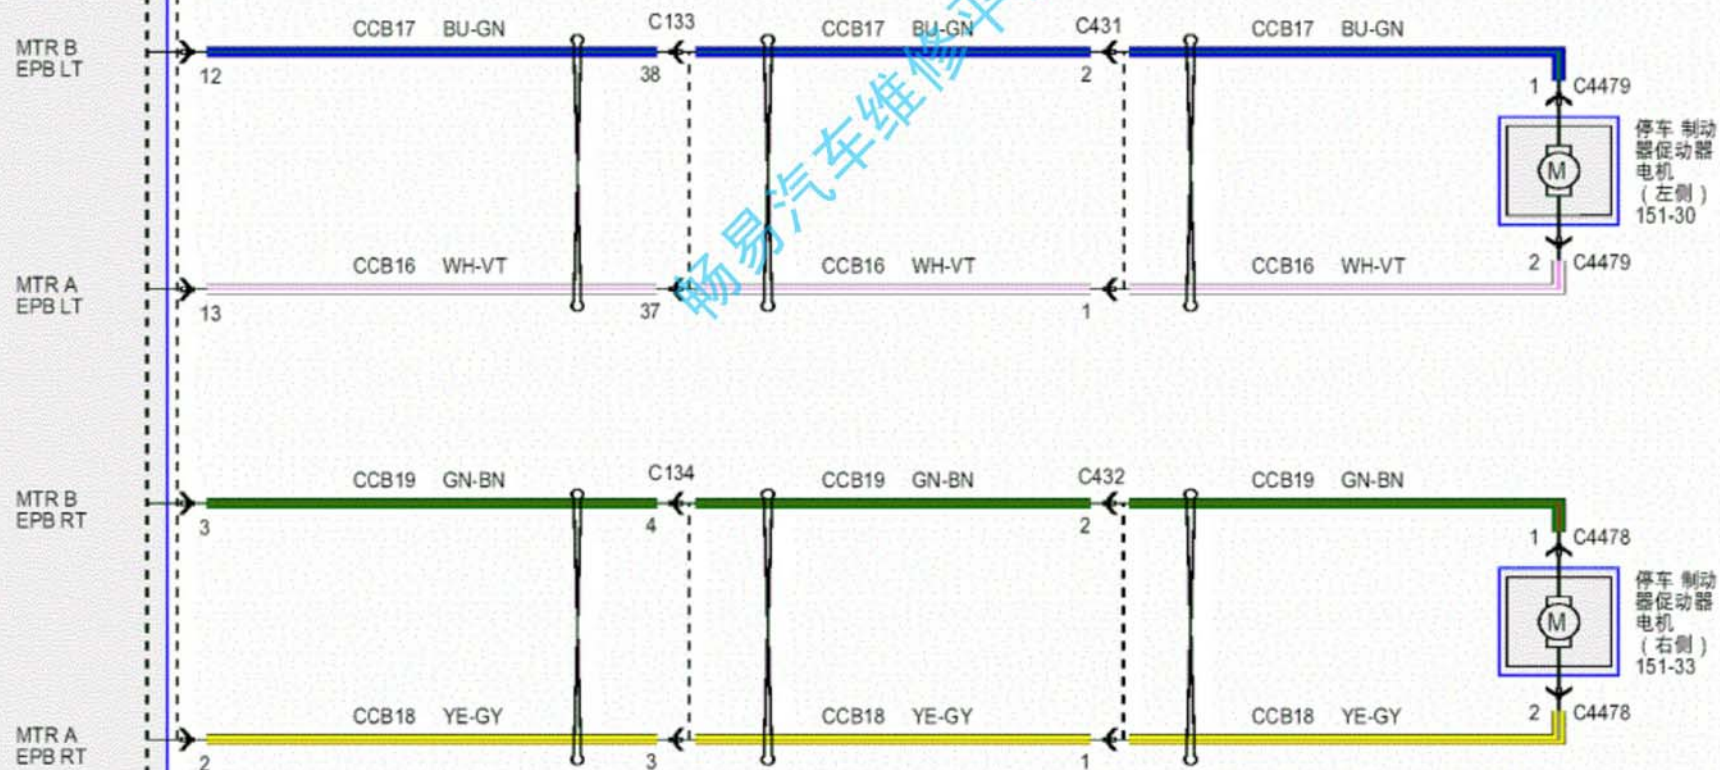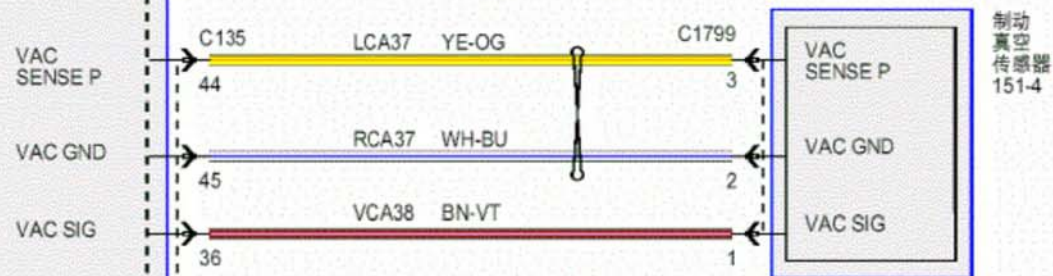

前轮速
传感器
(右侧)
151-5

 

C160
1
2

VCA03 VT-WH
RCA17 YE

 
C110
7
8

VCA05 GY-VT
RCA19 VT

C135
5
4

右前传感器HI
右前传感器LO

前轮速
传感器
(左侧)
151-5



C150
1
2

VCA03 VT-WH
RCA17 YE

 
C1047
7
8

VCA03 VT-WH
RCA17 YE

9
8

左前传感器HI
左前传感器LO

后部轮速
传感器
(右侧)
151-33



C426
1
2

VCA06 WH-OG
RCA20 BN

 
C134
29
28

VCA06 WH-OG
RCA20 BN

11
10

右后传感器HI
右后传感器LO

后部轮速
传感器
(左侧)
151-30



C440
1
2

VCA04 BU-OG
RCA18 BN-GN

C133
9
10

VCA04 BU-OG
RCA18 BN-GN


7
6

左后传感器HI
左后传感器LO


防抱死
制动系统
(ABS) 模块
151-1

畅易汽车维修平台

防抱死
制动系统
(ABS) 模块
151-1

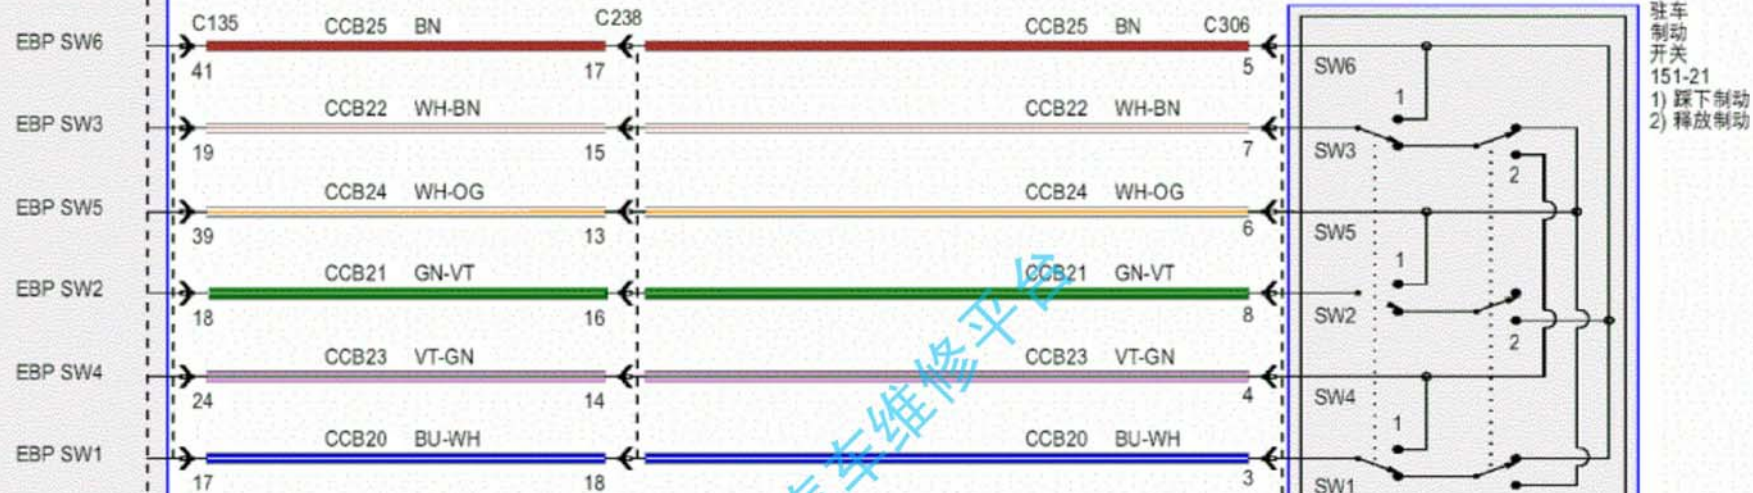

驻车
制动
开关
151-21
1) 踩下制动
2) 释放制动

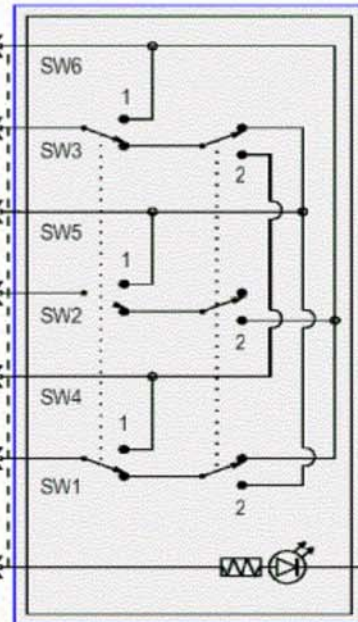

组合仪表和
仪表板 照明

