


已发布: 29-十一月-2011


发动机 - ID4 2.2 升柴油机 - 发动机 安装

安装


1.  小心: 必须小心操作, 以免损坏周围部件。

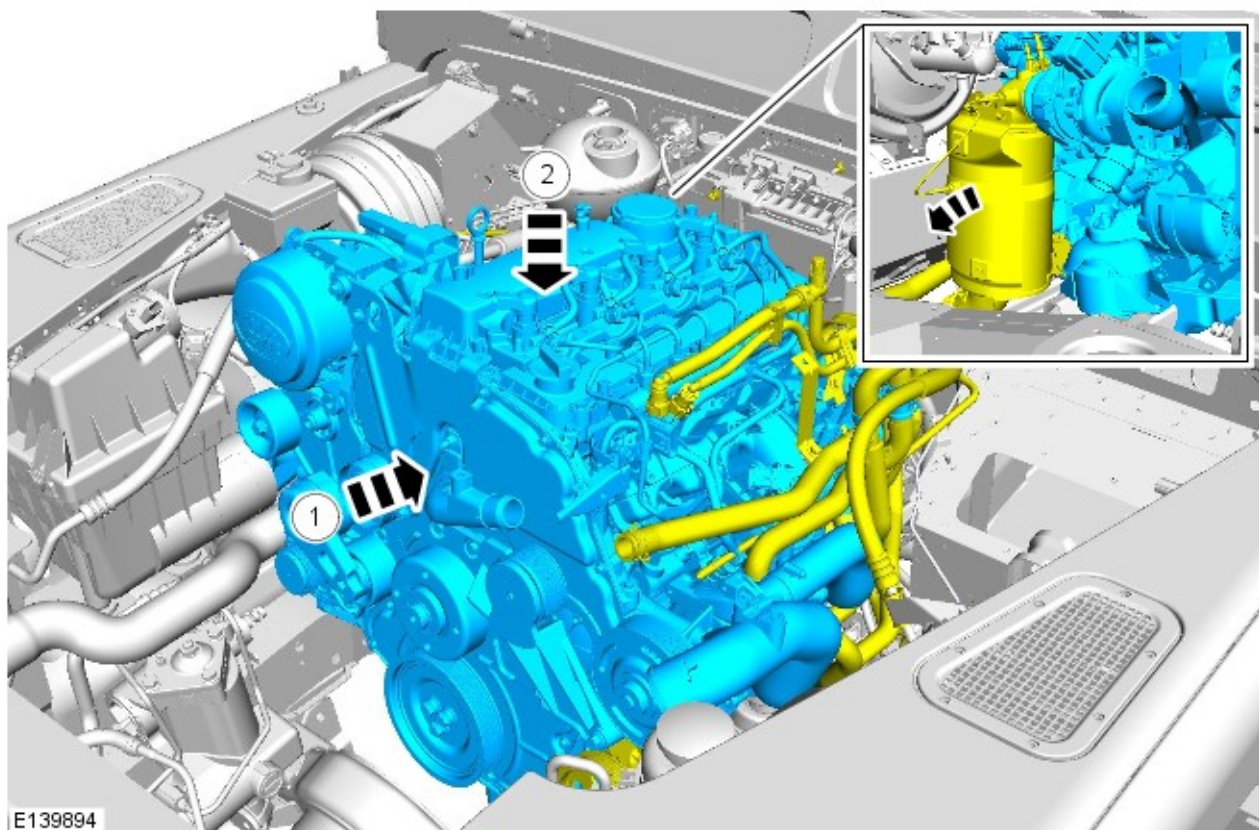


2. 扭矩: 23 牛米

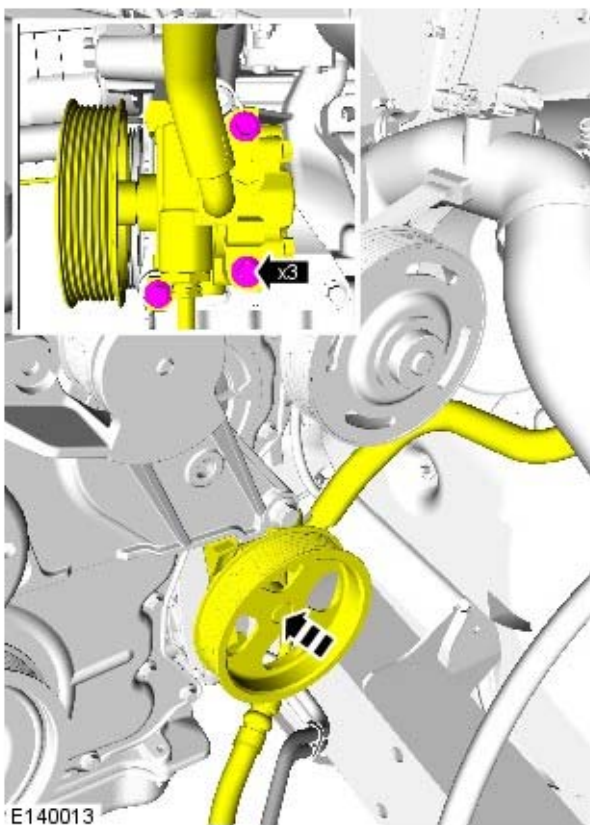


3. 扭矩: 80 牛米

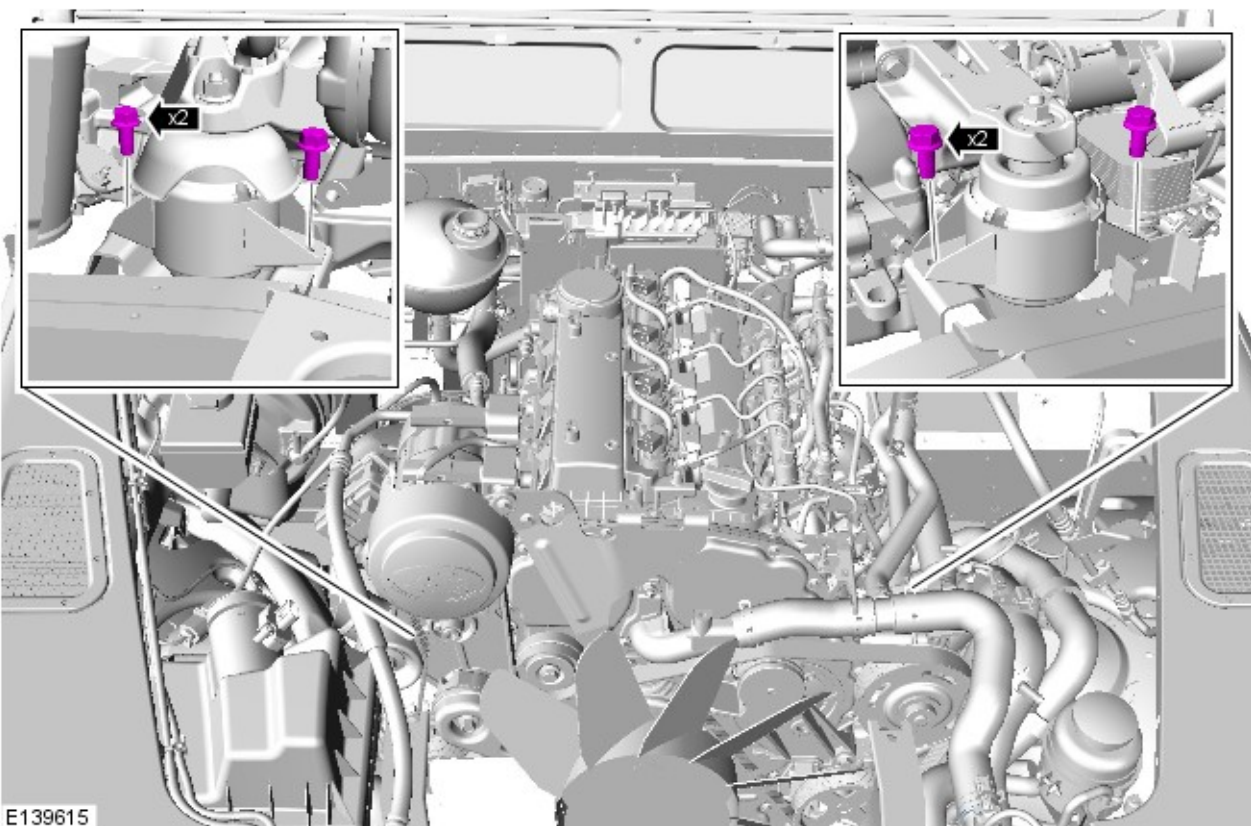

4. 注意: 确保安装一个新的衬垫。

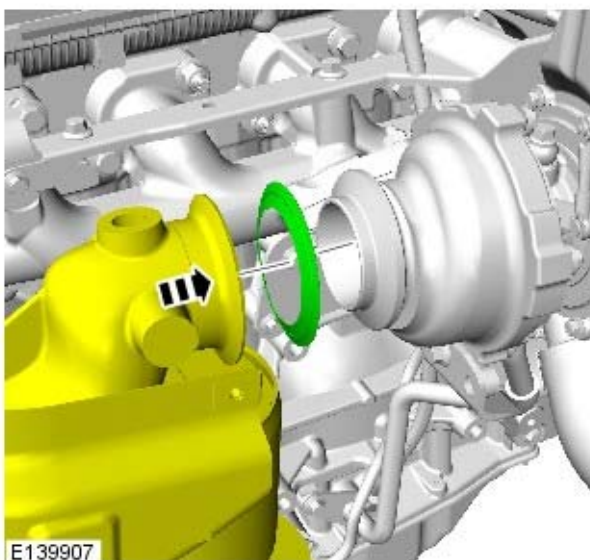


5. 扭矩：10 牛米

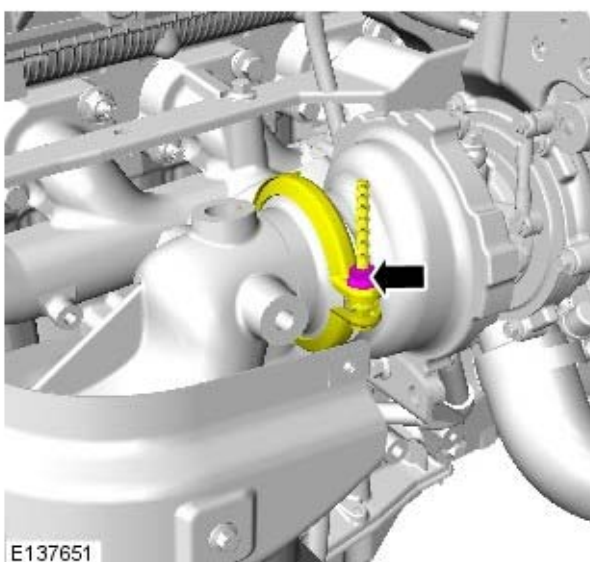


6.  警告：切勿在仅靠一个千斤顶支撑的车上或车下工作。务必使用安全架支撑车辆。

抬起并支撑车辆。


7. 扭矩：40 牛米

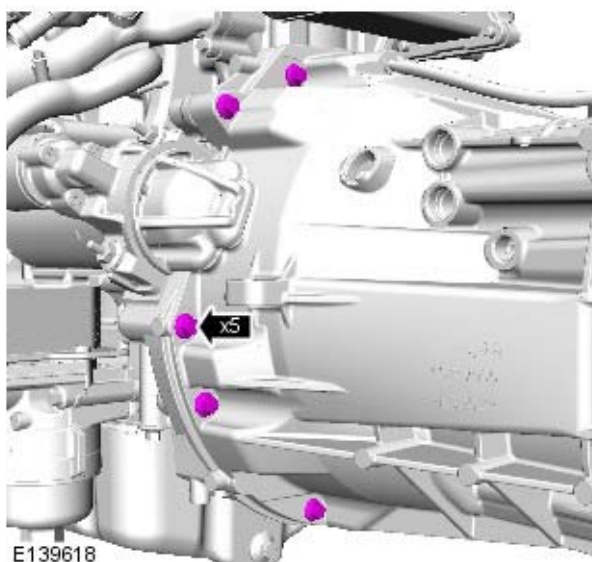


8. 扭矩: 40 牛米

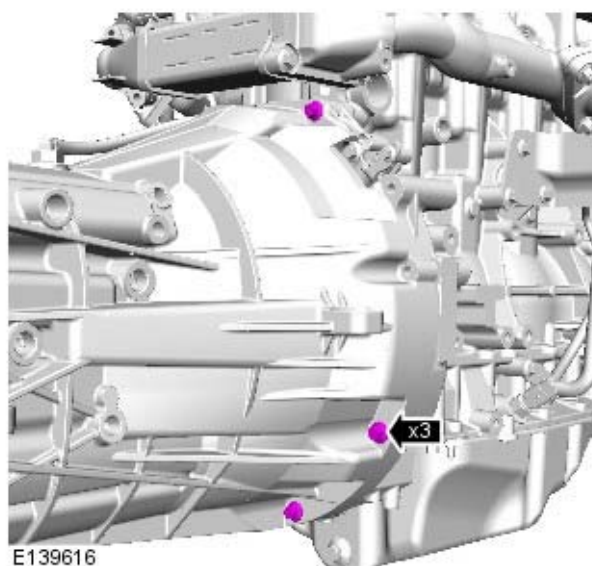

9. 扭矩: 40 牛米

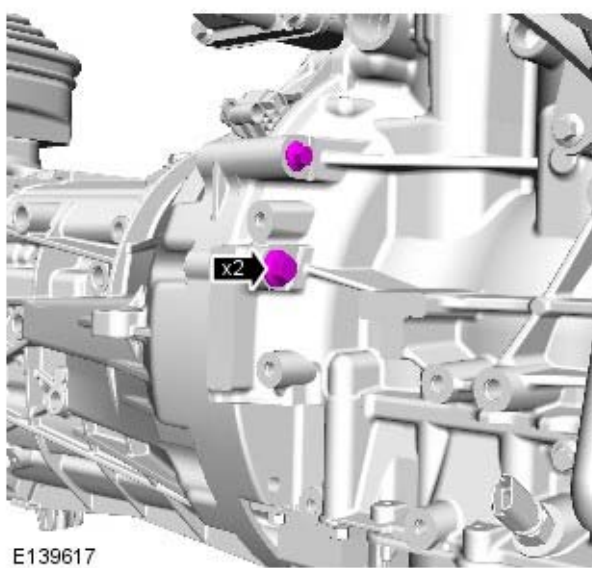


10. 扭矩: 25 牛米

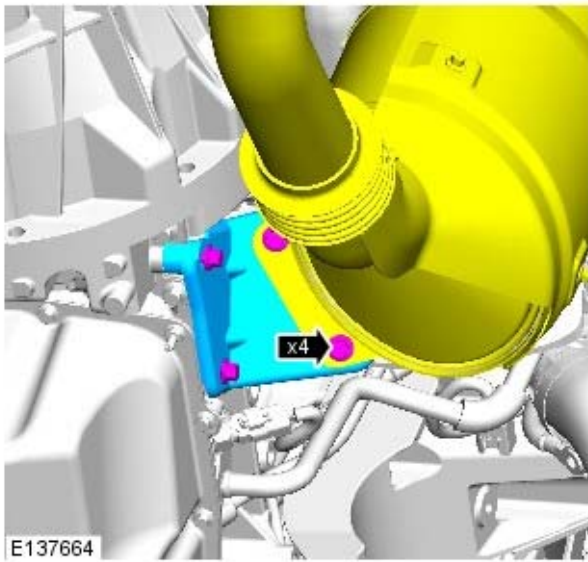


11. 降低车辆。


12.

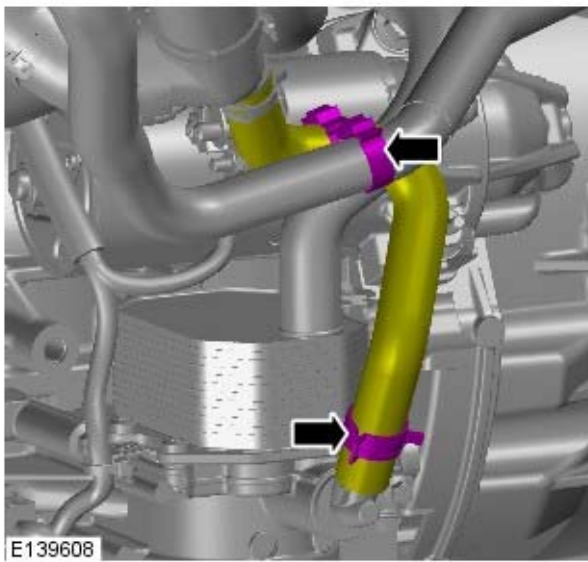


13.

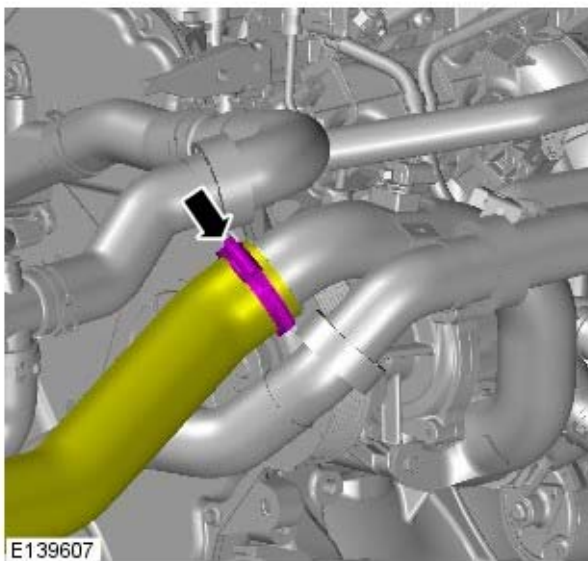


14.

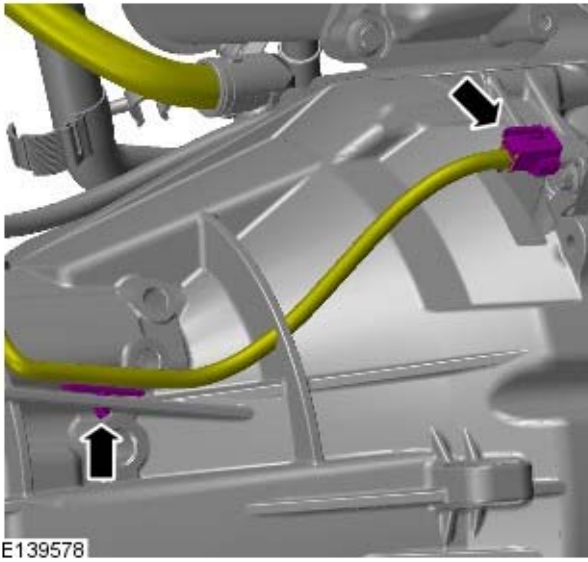



15.

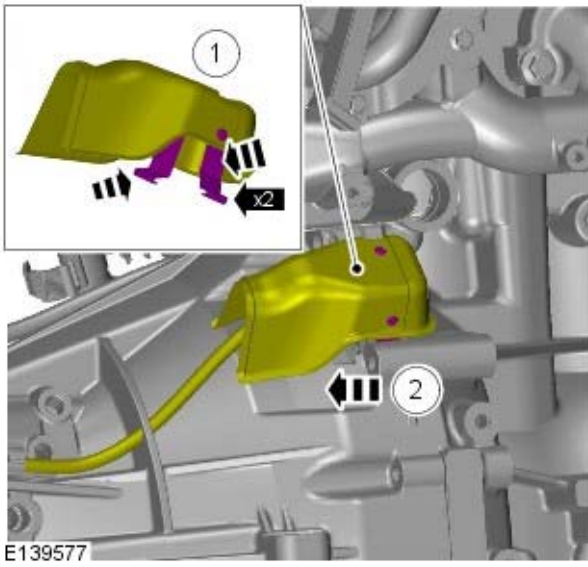

16. 扭矩: 3 牛米

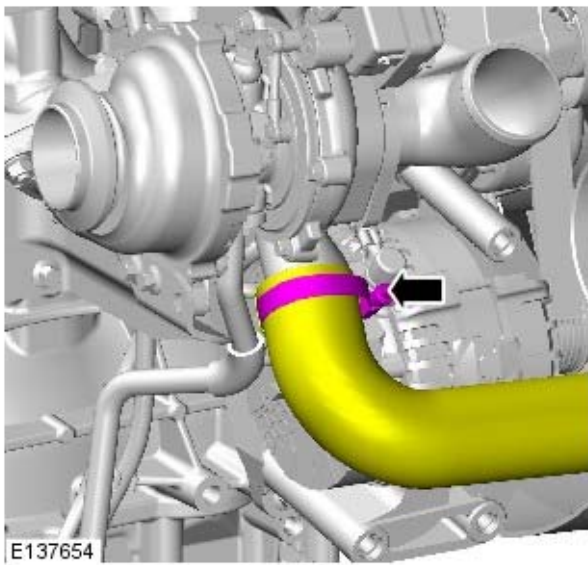

17. 扭矩: 3 牛米

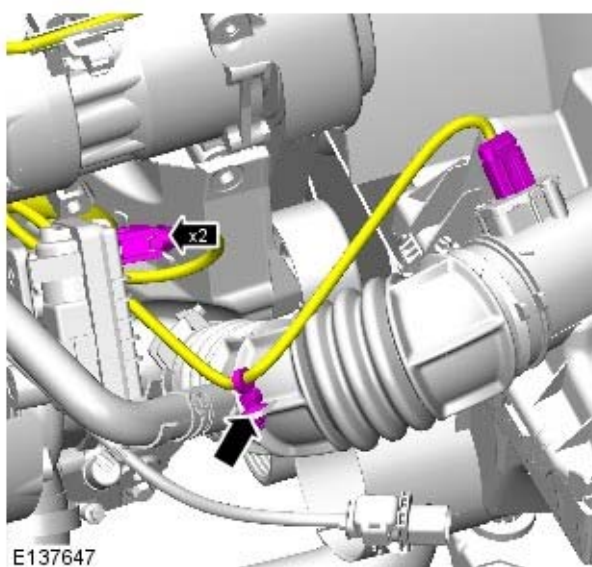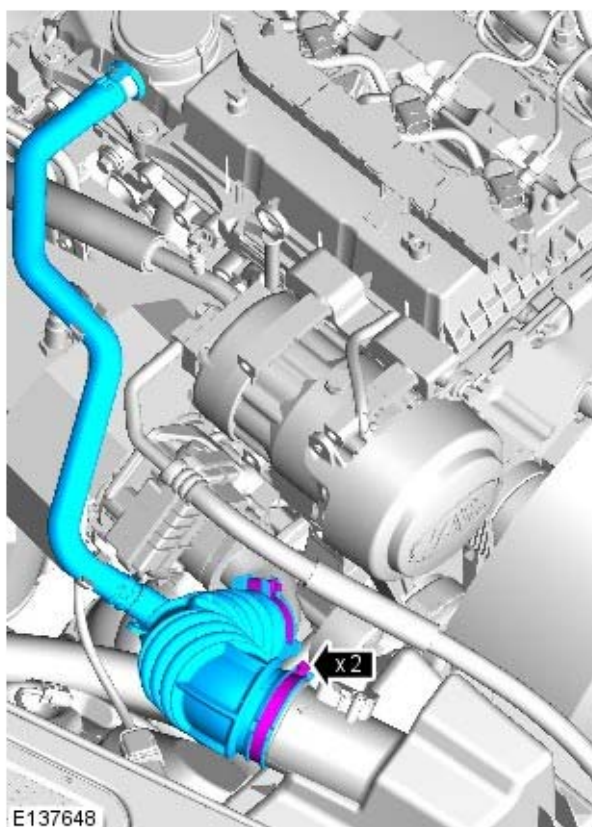


18.


19. 注意：卸下并丢弃塞盖。

注意：确保已安装新的密封件。


扭矩：30 牛米

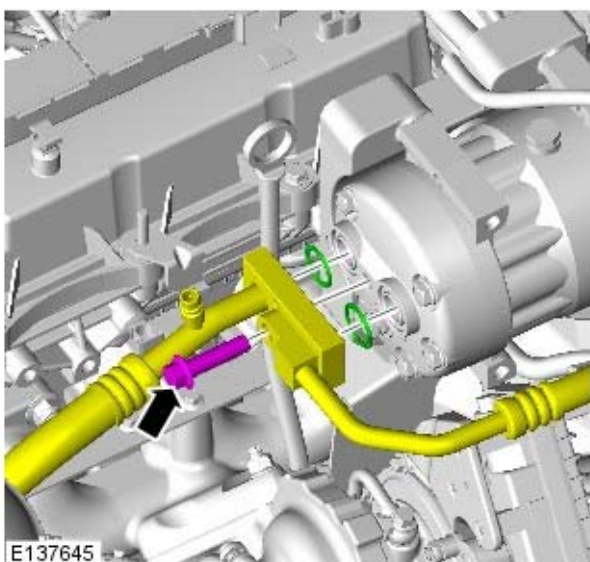


20. 扭矩: 35 牛米

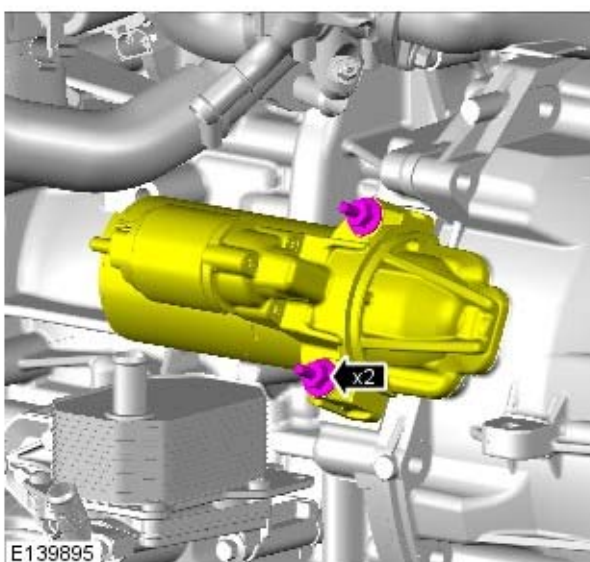


21. 扭矩: 12 牛米

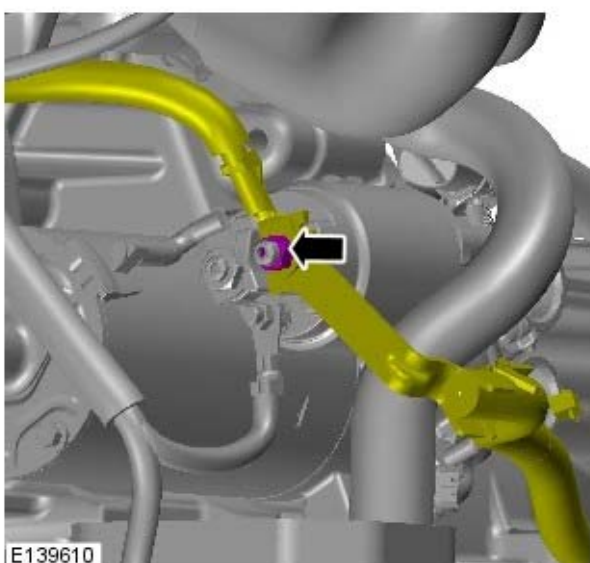


22.

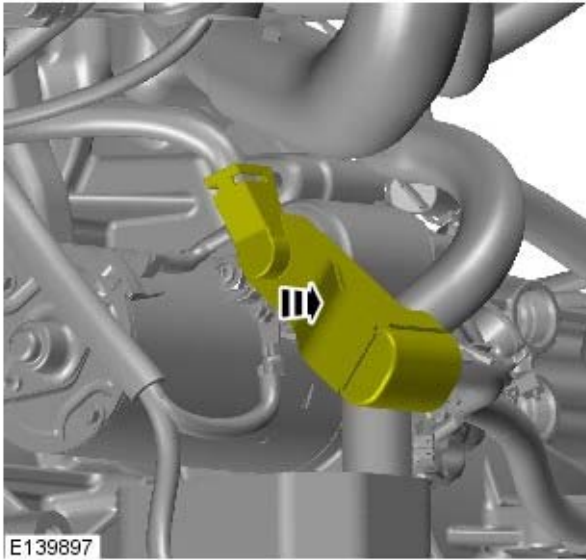


23. 扭矩: 10 牛米

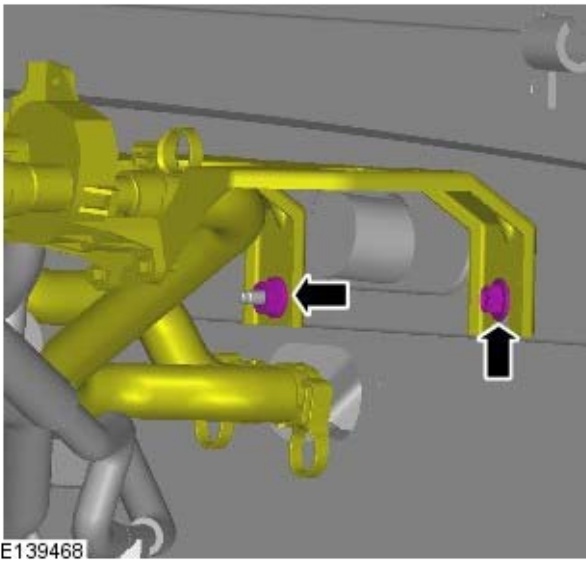


24.

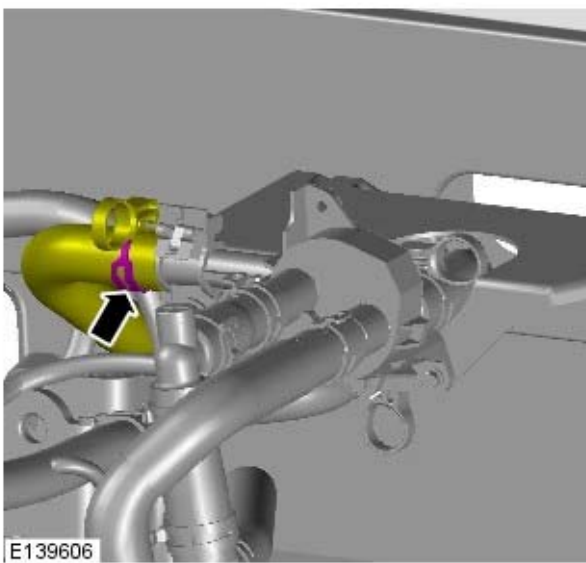


25.

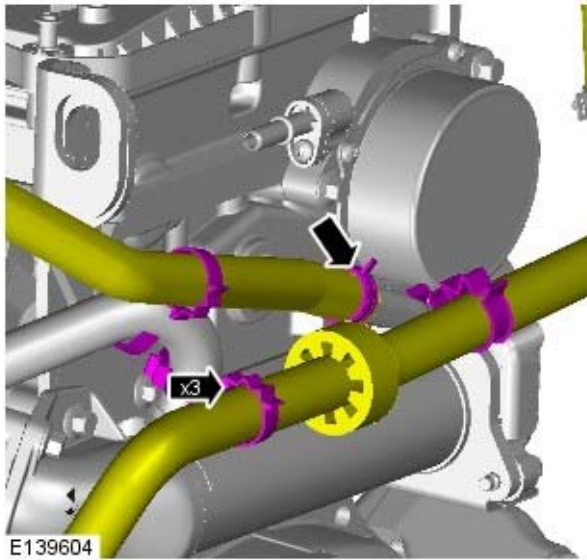


26.

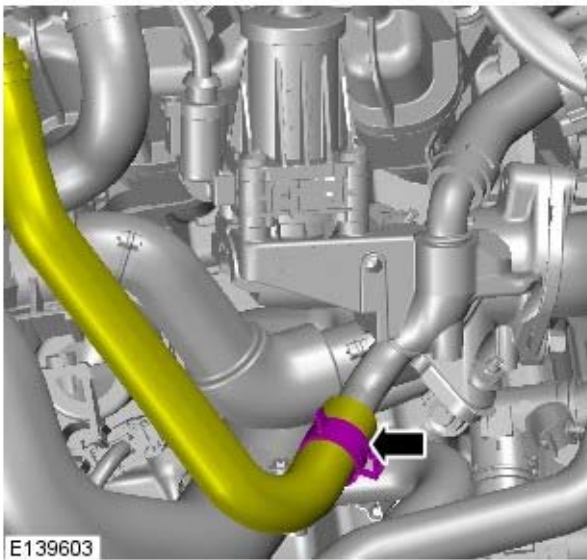


27.

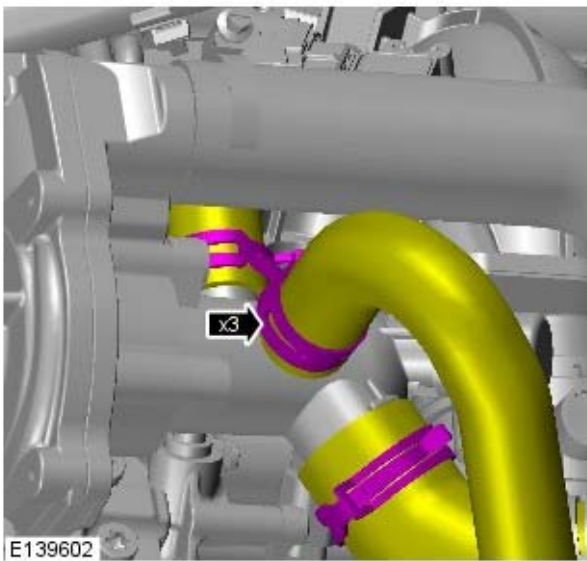


28.

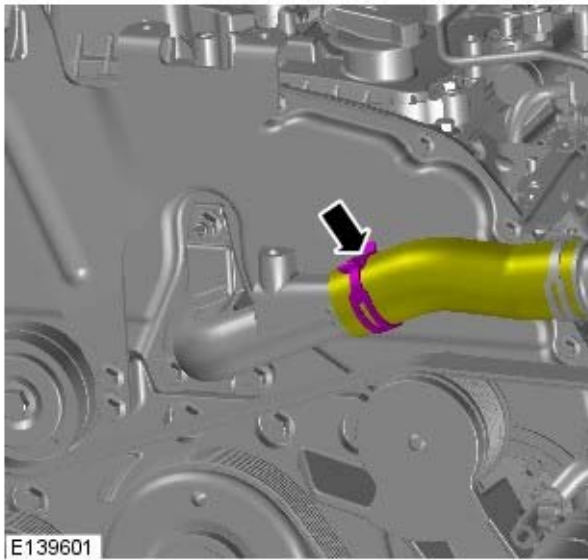


29.

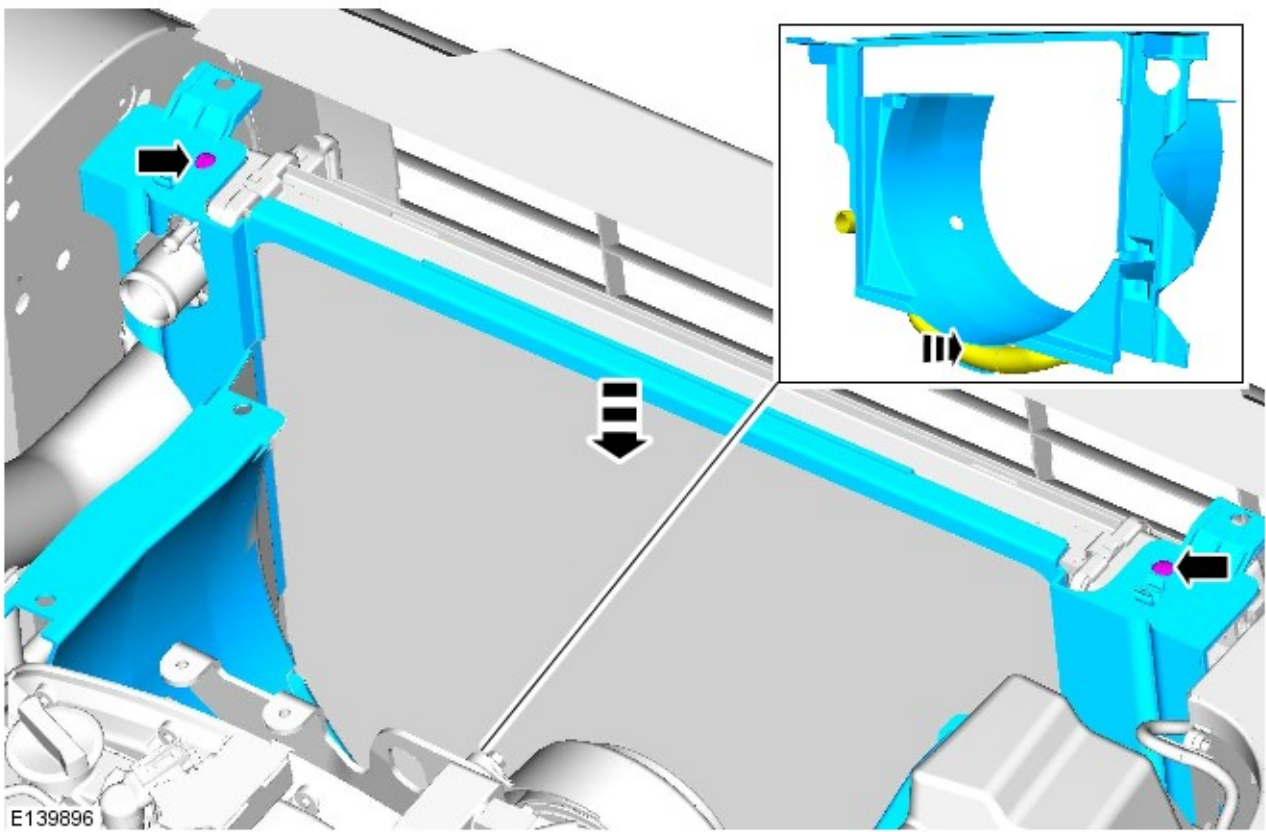


30.

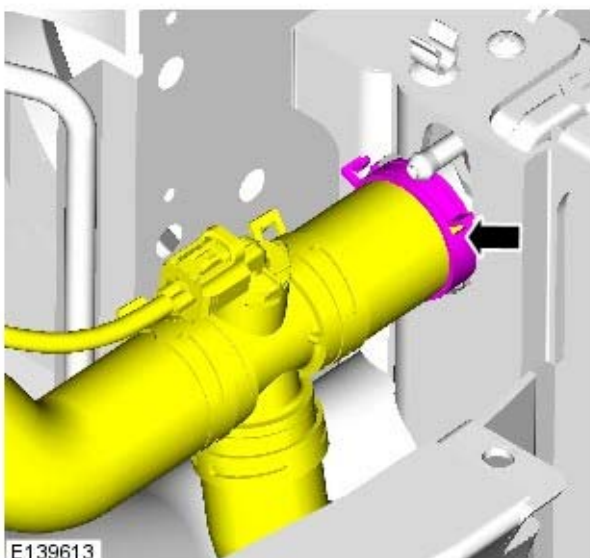

31.

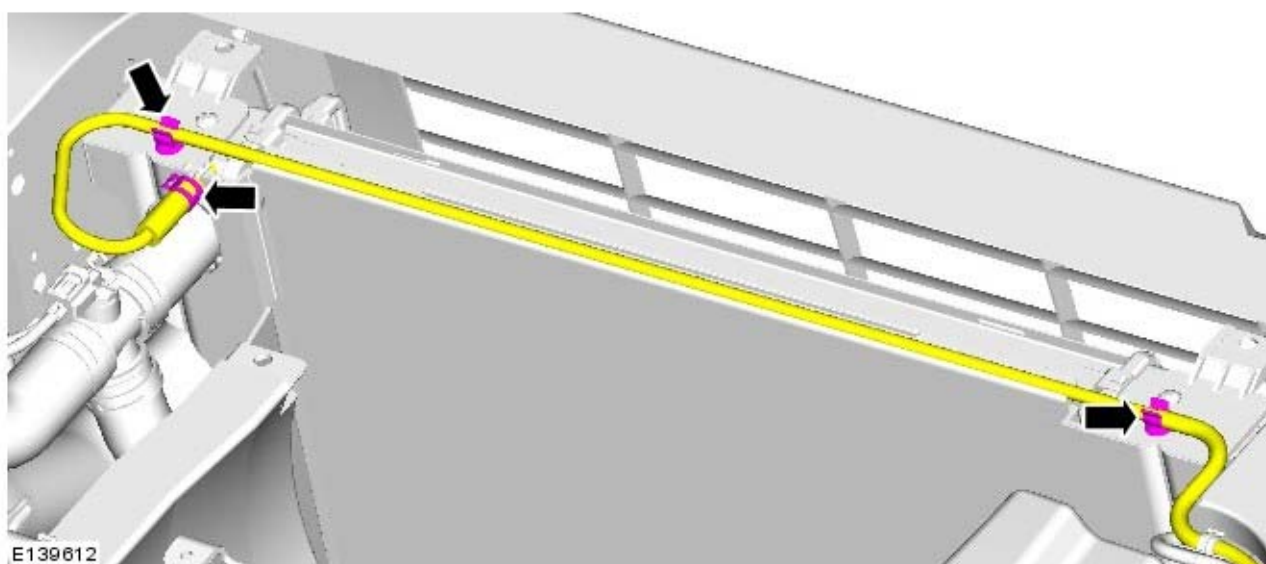


32.

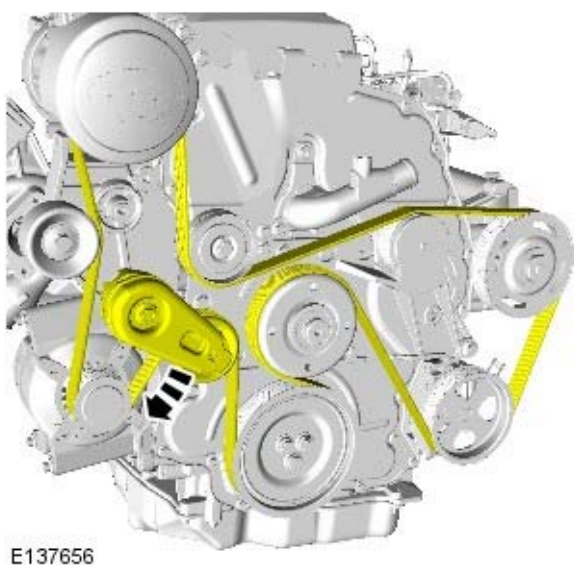

33. 进一步信息请参阅:[冷却风扇](#) (303-03 发动机冷却 - ID4 2.2 升柴油机, 拆卸和安装).

34.

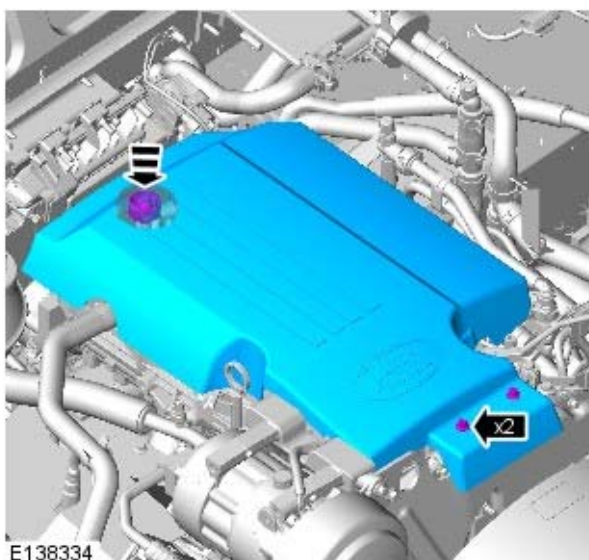

E138334

- 35. 进一步信息请参阅:[蓄电池断开和连接](#) (414-01 蓄电池、座架和电缆, 一般步骤).
- 36. 进一步信息请参阅:[冷却系统放油、加油和放气](#) (303-03 发动机冷却 - ID4 2.2 升柴油机, 一般步骤).
- 37. 进一步信息请参阅:[空调\(A/C\)系统恢复、评估和充电](#) (412-00 温度控制系统 - 常规信息, 一般步骤).