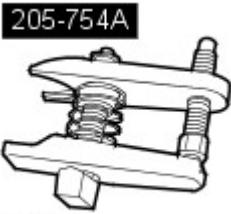
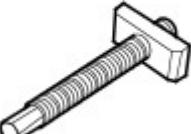



已发布： 11-五月-2011

前驱动半轴 - 半轴密封件RH

拆卸和安装

专用工具

 E45276	球头分离器(LRT-54-027) 205-754
 E49618	半轴拆卸器/更换器(LRT-60-030/1) 204-506/1
 E49620	半轴拆卸器/更换器(LRT-60-030/3) 204-506/3
 E49622	半轴安装器适配器 204-506-01
 E49621	固定工具 - 半轴拆卸器/更换器(LRT-60-030/5) 204-506/5
 E54134	轮轴油封拆卸器(LRT-37-004/2) 308-005
	脉冲拔取器(LRT-99-004) 100-012

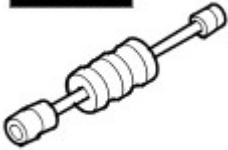 100-012 E54135	
 308-626/2 E54137	半轴油封安装器/导引器 308-626/2
 308-626/1 E54136	半轴油封安装器 308-626/1



拆卸**小心:**

 在某些半轴内端使用角度调整滚轮(AAR)球头没有内部固定机构，可以分开。

 切勿使半轴悬挂在没有支撑的一端，否则，将导致球头损坏。


1.  警告：切勿在仅有一个千斤顶支撑的车上或车下工作。务必使用安全架支撑车辆。

- 抬起并支撑车辆。
2. 卸下右侧半轴。
进一步信息请参阅: Halfshaft RH (205-04, 拆卸和安装).
3. 使用专用工具，卸下并丢弃半轴油封。

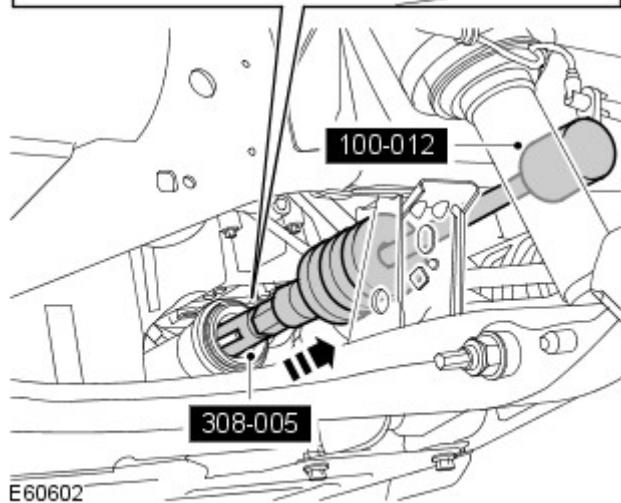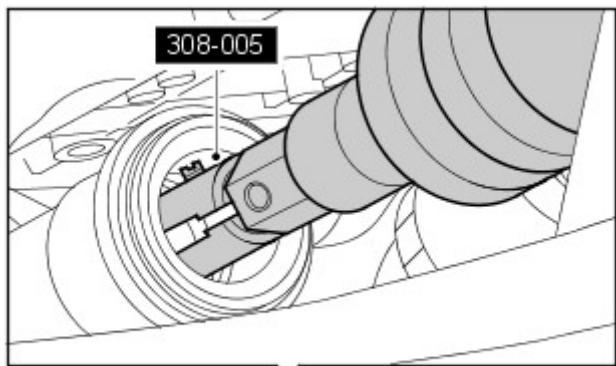

安装

1. 使用专用工具，安装一个新半轴油封。

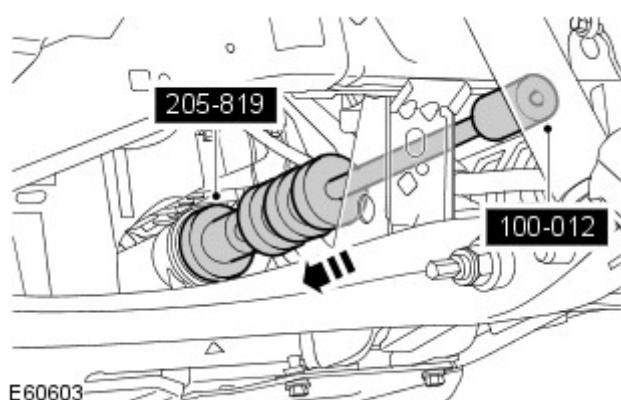

2. 安装右侧半轴。

进一步信息请参阅: Halfshaft RH (205-04, 拆卸和安装).