

已发布: 11-五月-2011

仪表盘和中控台 - 仪表板中央加强件

拆卸和安装


拆卸

注意: 该程序中的拆卸步骤可能包括安装的详细信息。


注意: 各图示中可能存在某些差异, 但基本信息始终是正确的。

1. 参阅: Floor Console (501-12, 拆卸和安装).


2.

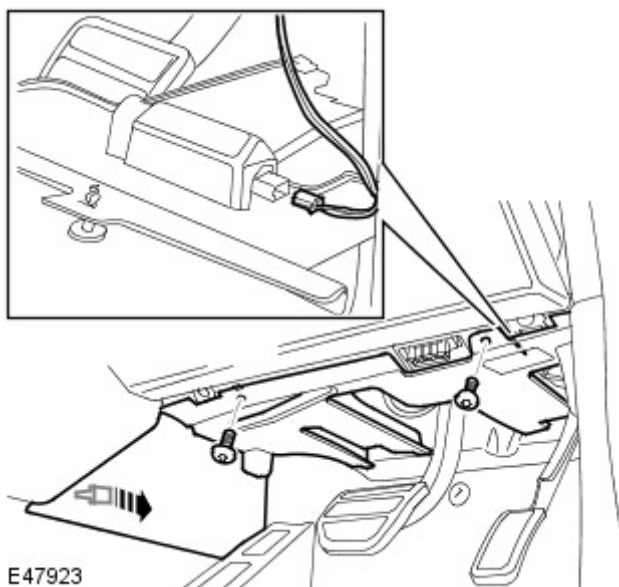


3.

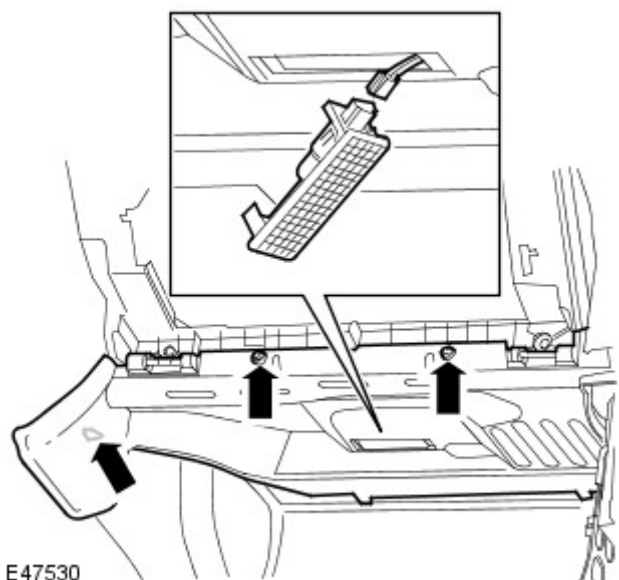


4.

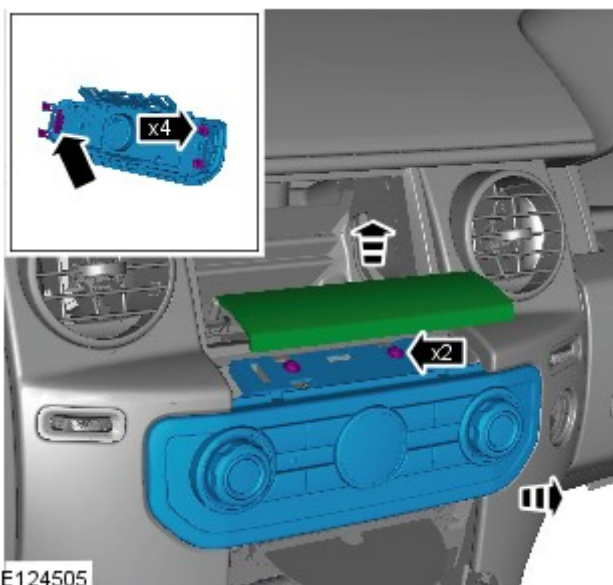


5.

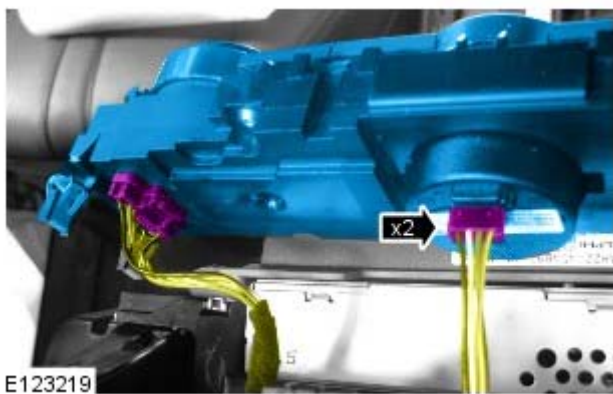

6. 注意： 所示为左驾，右驾与之类似。

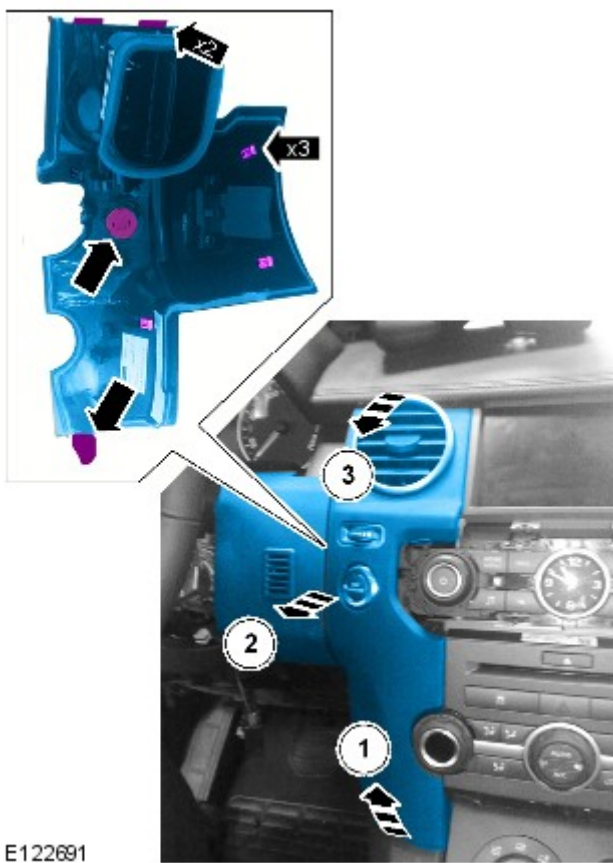


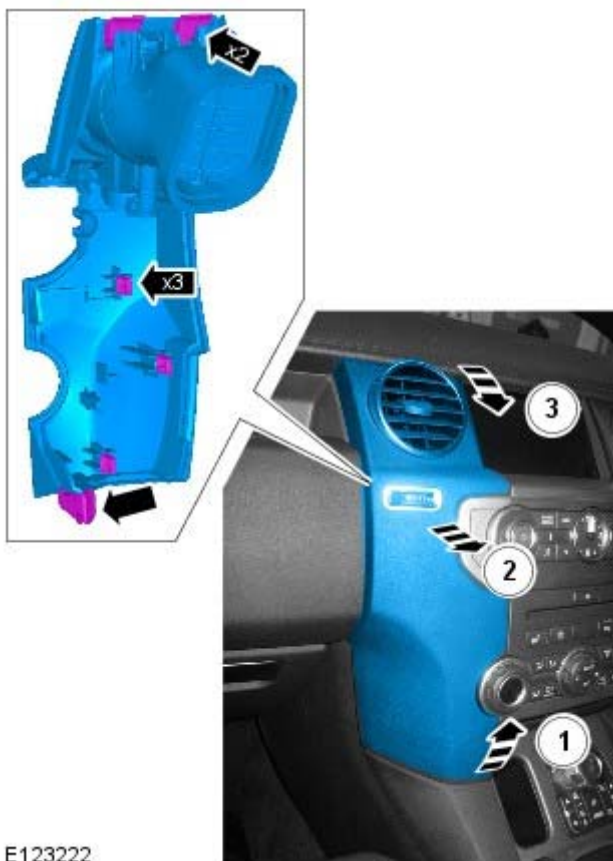

E123222


7. 注意： 所示为右驾，左驾与之类似。

8.

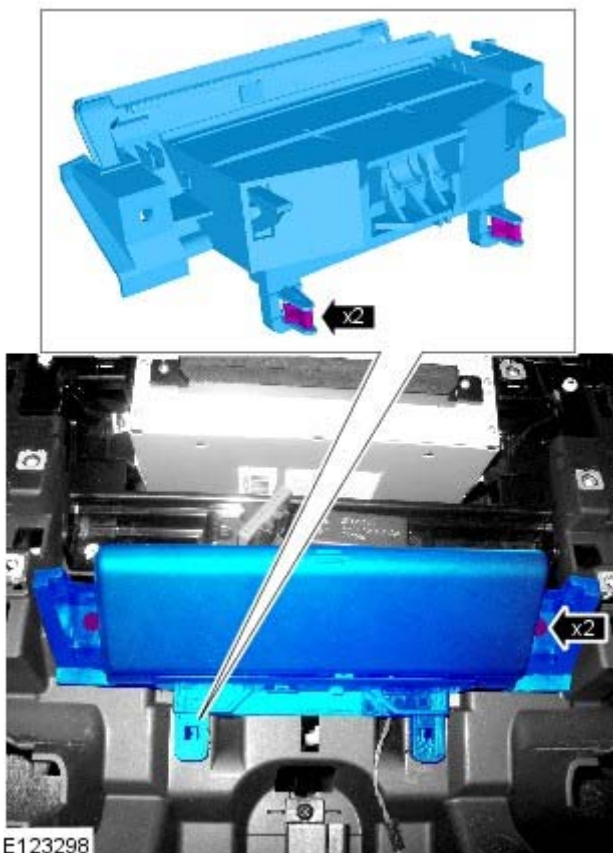



E123298

9.

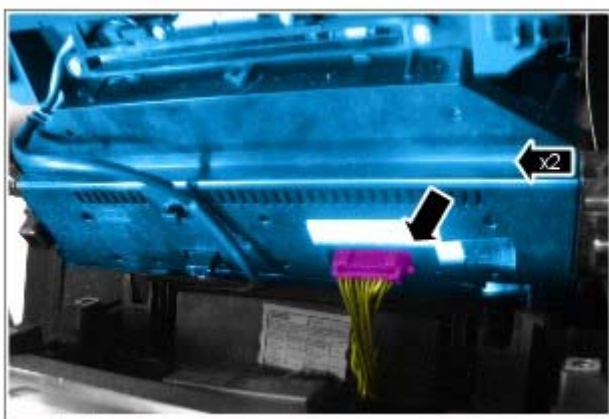

E123220

10.

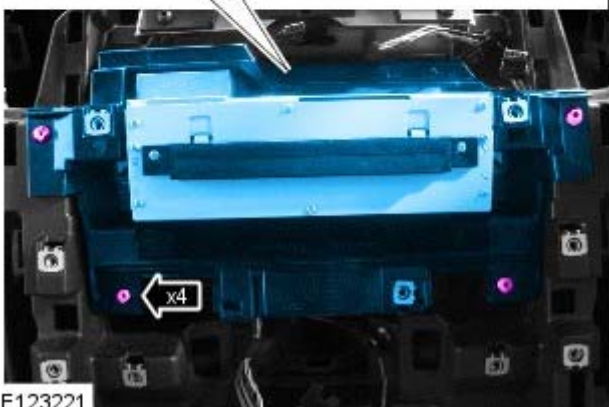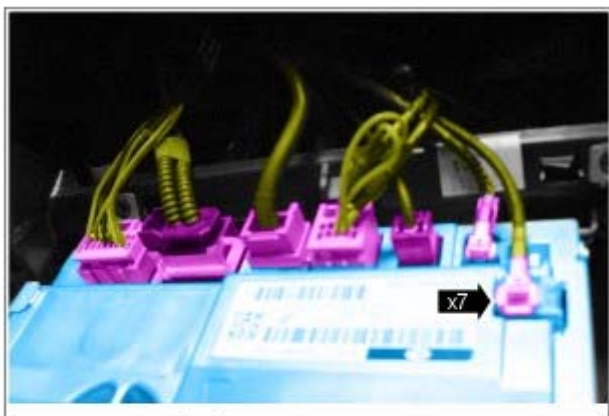



E123221

11.



E 122790

12.

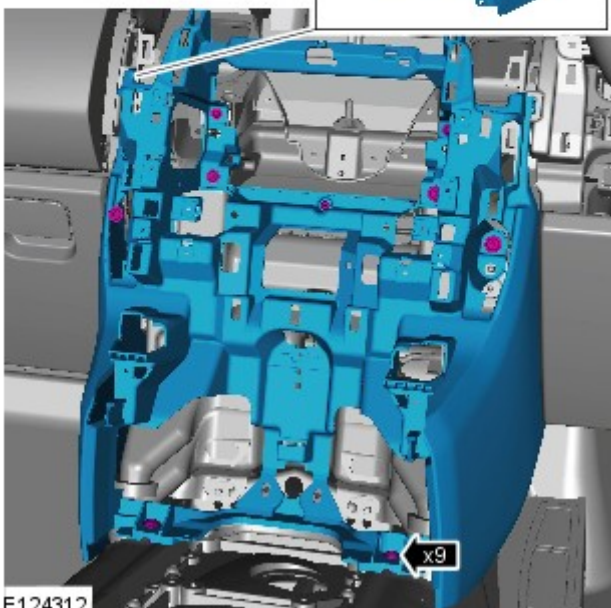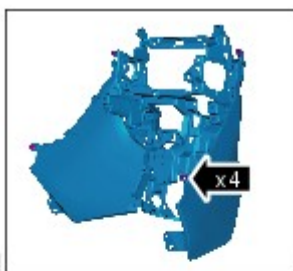

E124312

安装

1. 要进行安装，请反向执行拆卸程序。

