

已发布: 11-五月-2011

模块通信网络 - 蓄电池接线盒(BJB) V8 5.0 升汽油机

拆卸和安装


拆卸

注意: 各图示中可能存在某些差异, 但基本信息始终是正确的。


注意: 该程序中的拆卸步骤可能包括安装的详细信息。

1. 进一步信息请参阅:Battery (414-01, 拆卸和安装).
2. 进一步信息请参阅:Air Cleaner LH (303-12, 拆卸和安装).
3. 进一步信息请参阅:Air Cleaner RH (303-12, 拆卸和安装).


4.

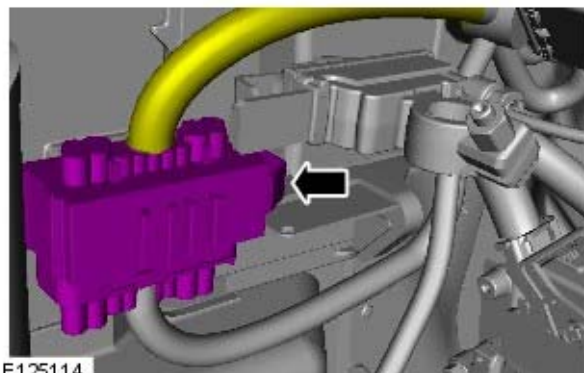


5.

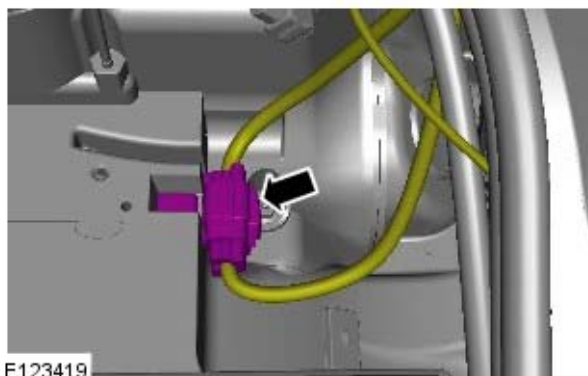


6.

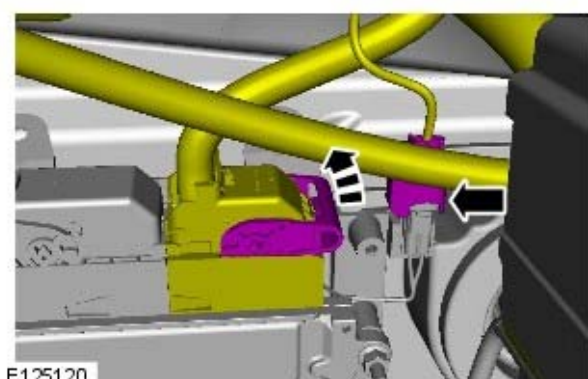

7.

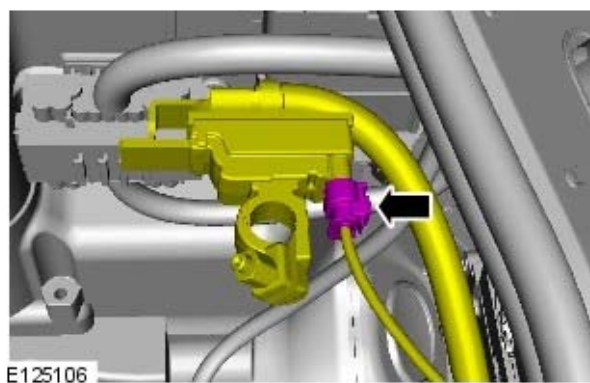


8.

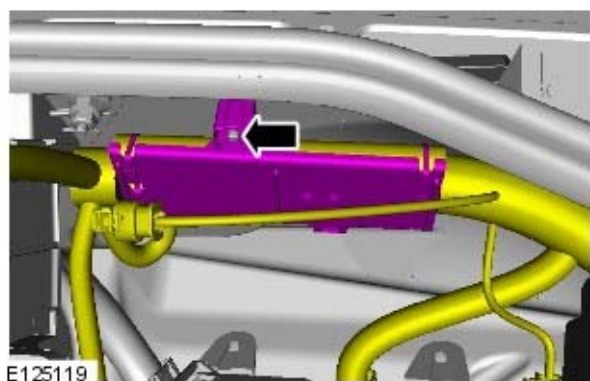


9. 卸下左前车轮和轮胎。


10.

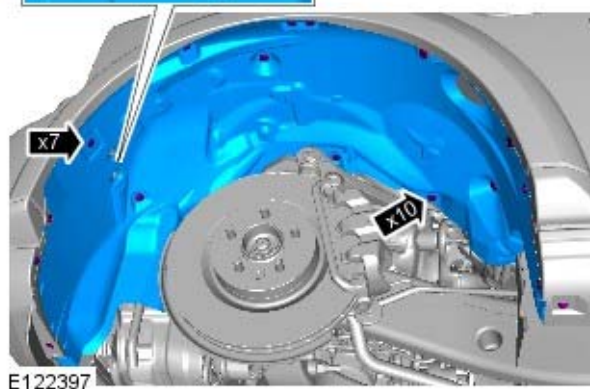


11.

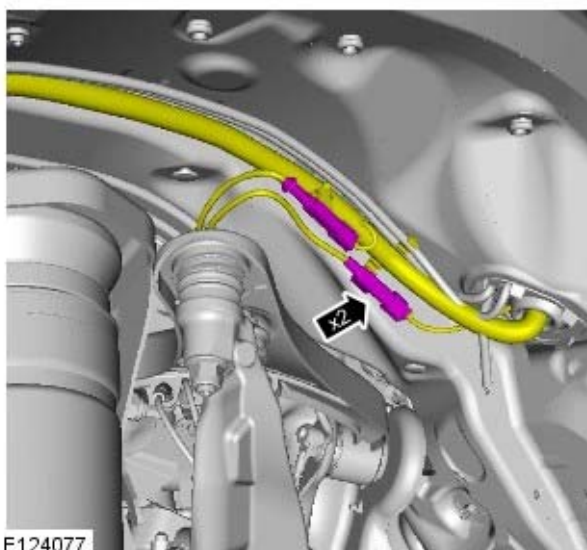


12.

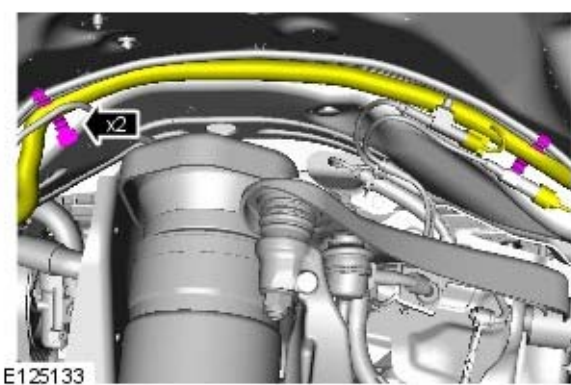



13. 扭矩: 10 牛米

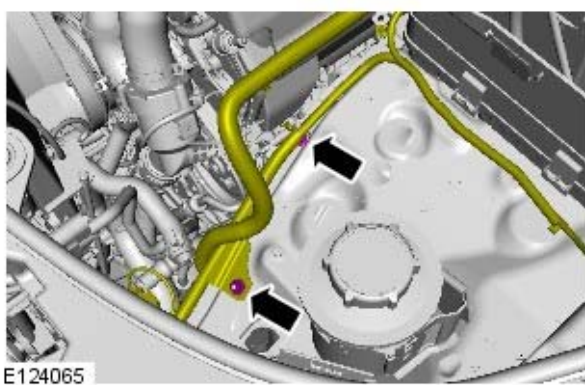


14.

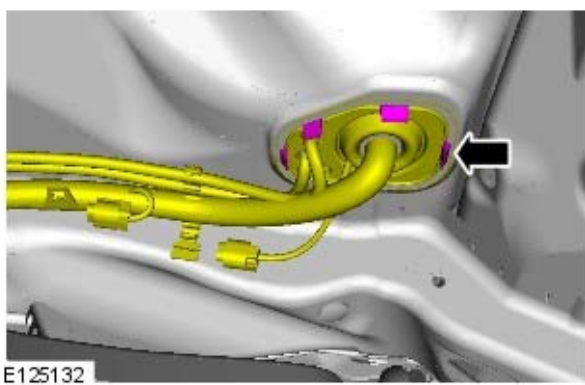


15. 注意: 所示为右驾车辆, 左驾车辆与之类似。

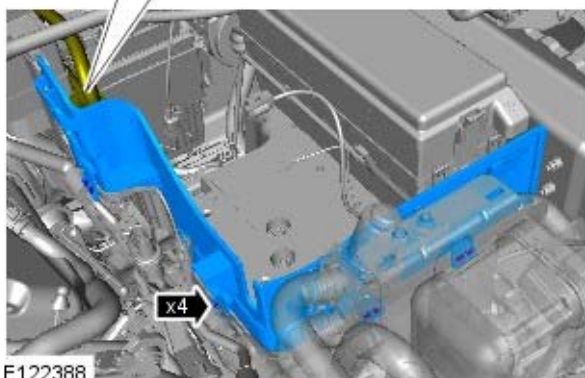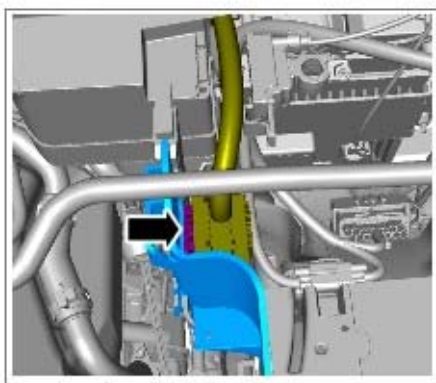


16.

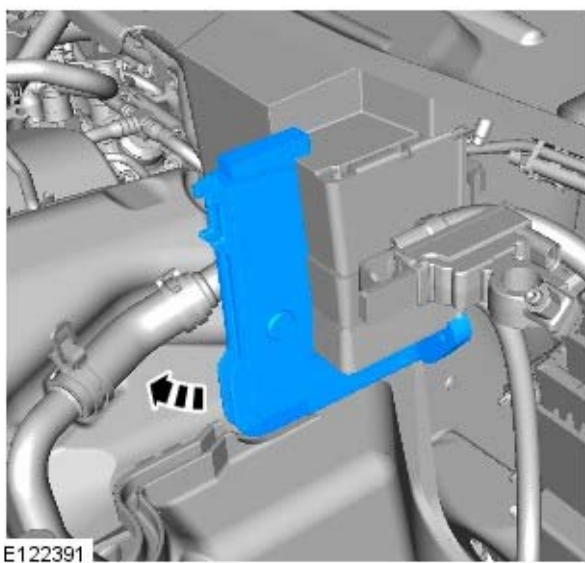


17. 扭矩: 12 牛米

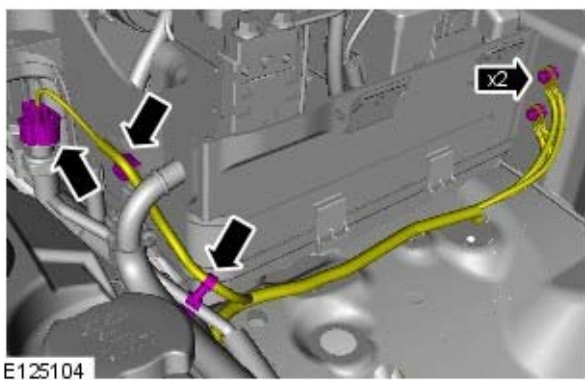


18.

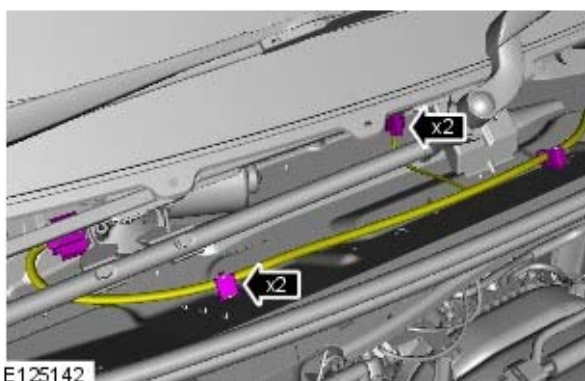


19.

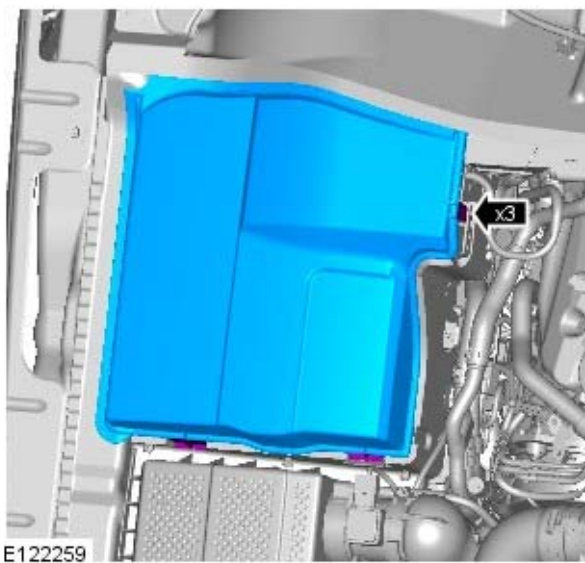


20. 扭矩: 10 牛米

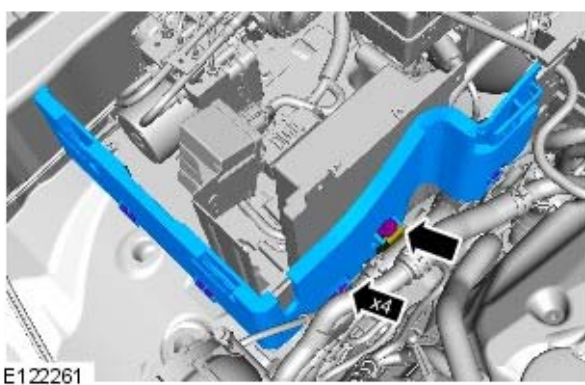


21.

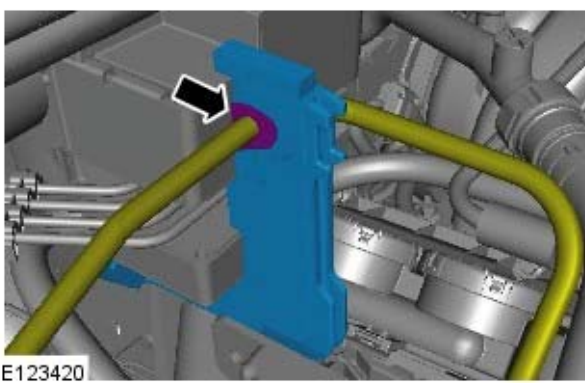


22.

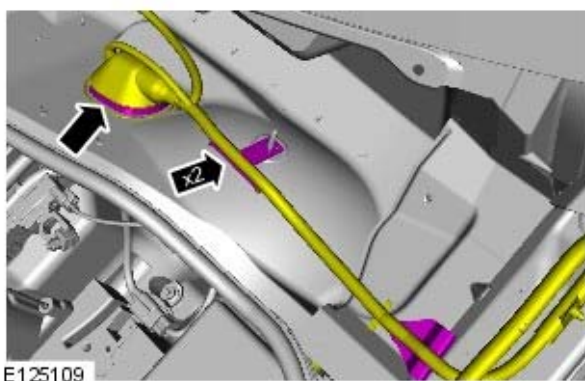


23. 扭矩: 10 牛米

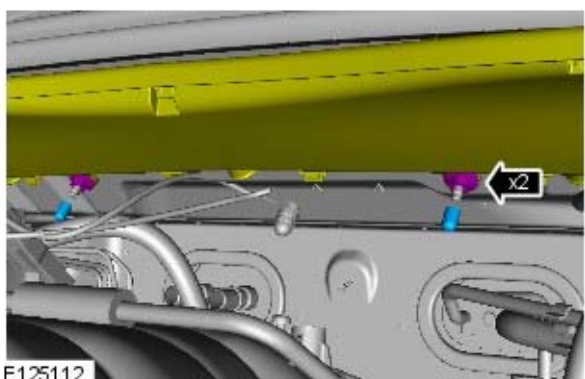


24. 扭矩: 10 牛米

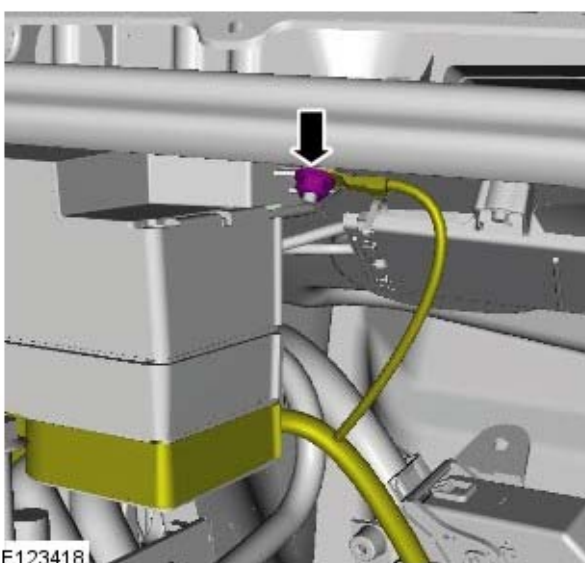


25. 扭矩: 10 牛米

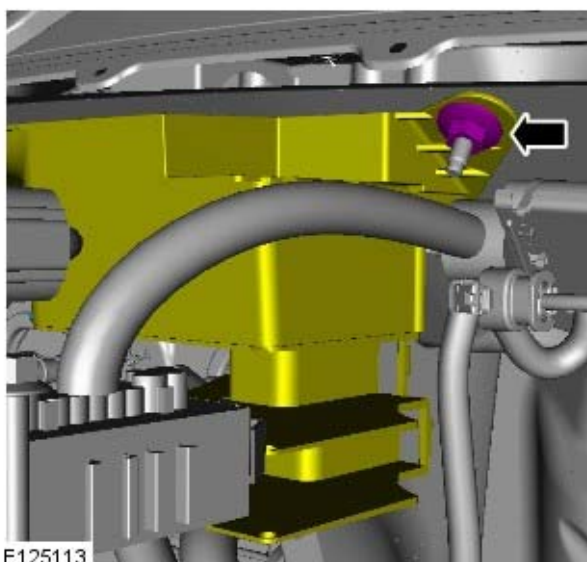

26. 扭矩: 10 牛米

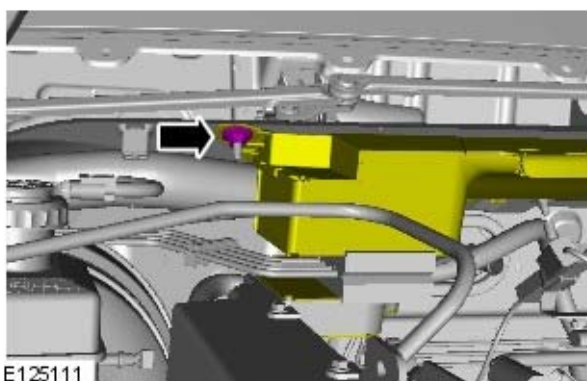


27.

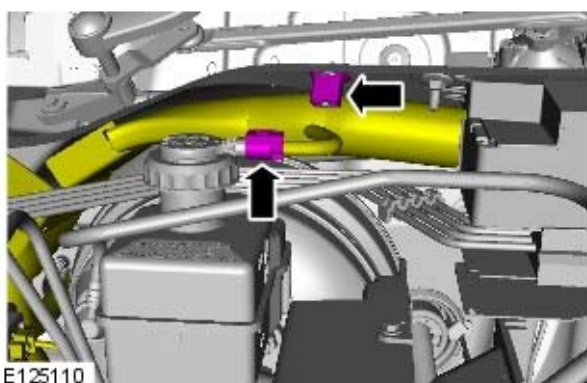


28. 进一步信息请参阅:Brake Booster (206-07, 拆卸和安装).


29. 扭矩: 10 牛米

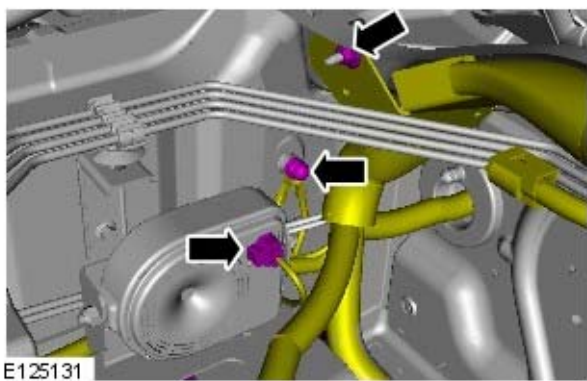


30.

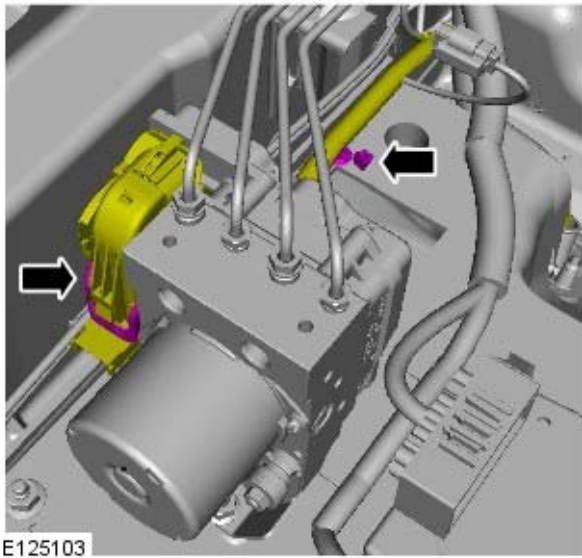


31.

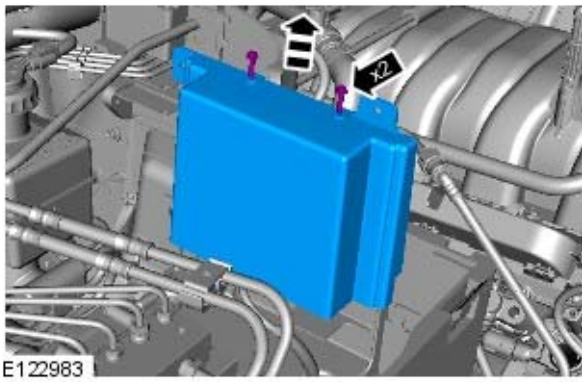

32.

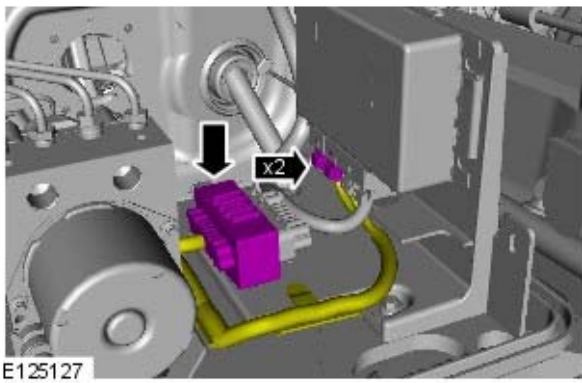


33.

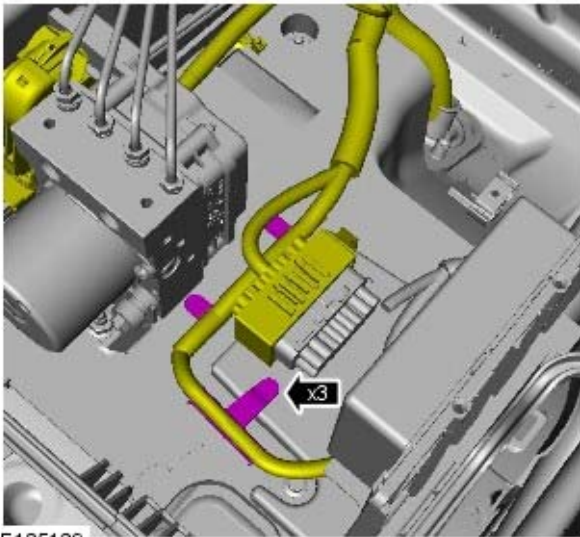


E125129

34.

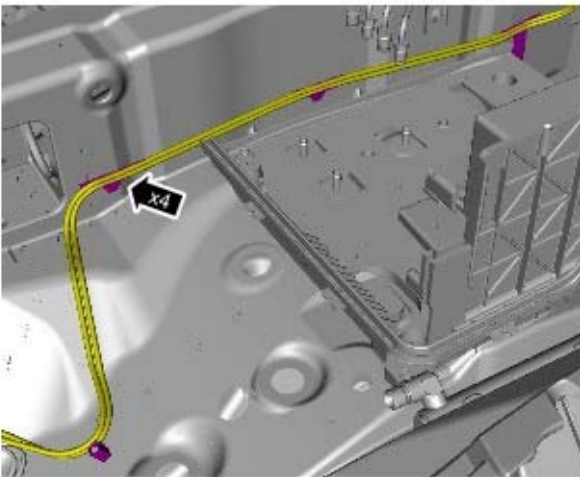


E125125

35.

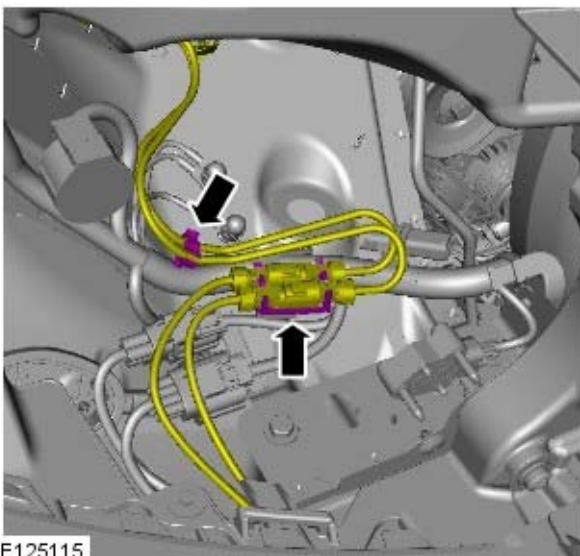


E125115

36.

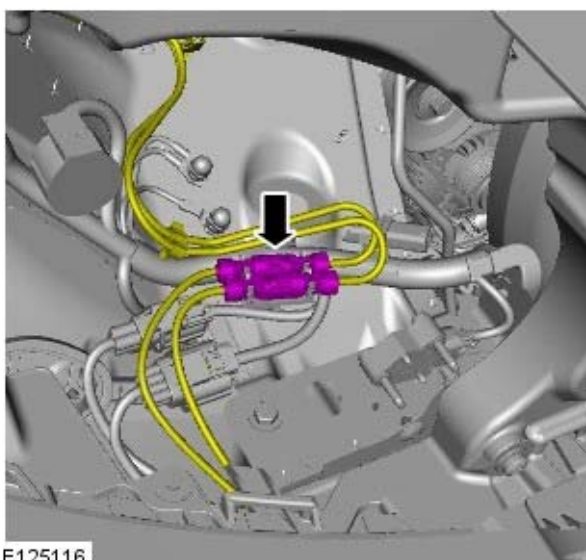


E125116

37. 扭矩: 10 牛米

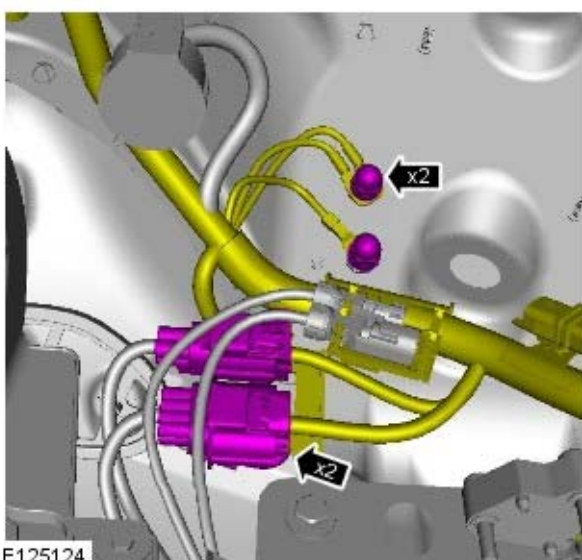


E125124

38.

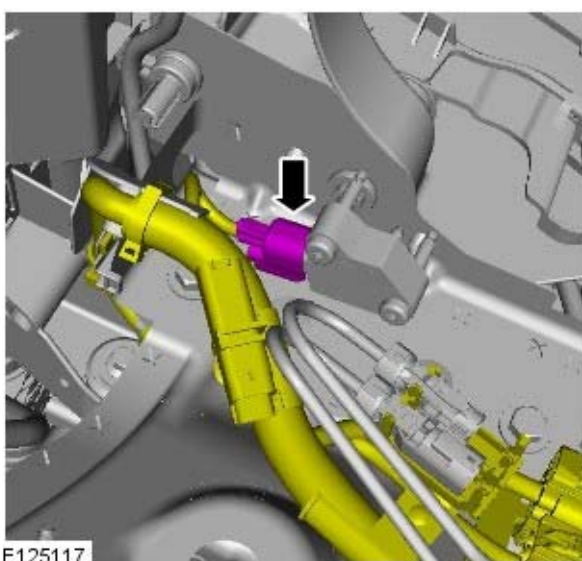


E125117


39.

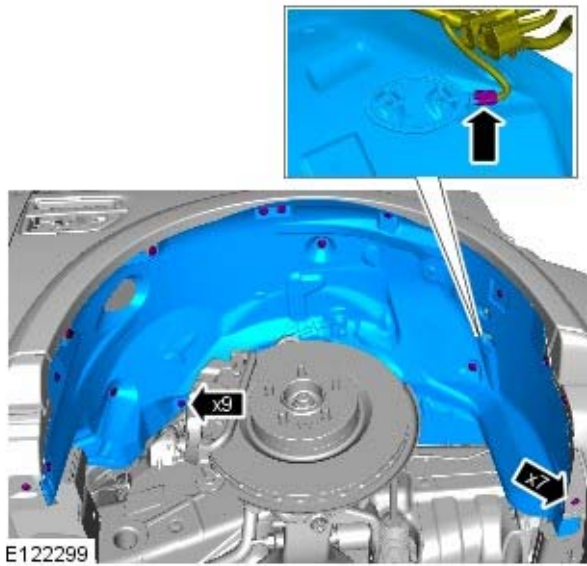


40.

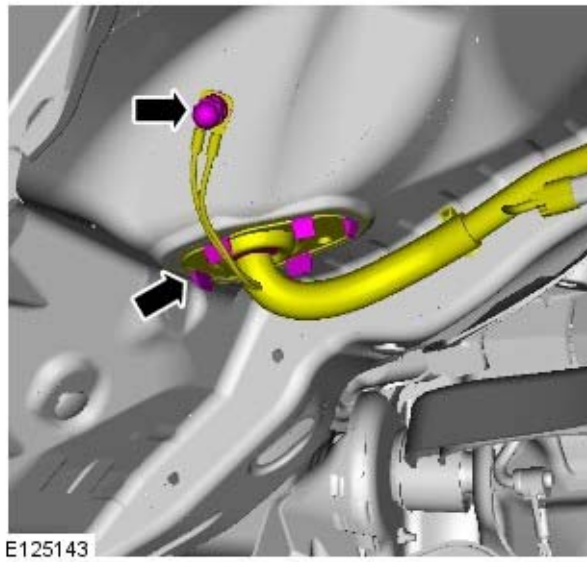


41.

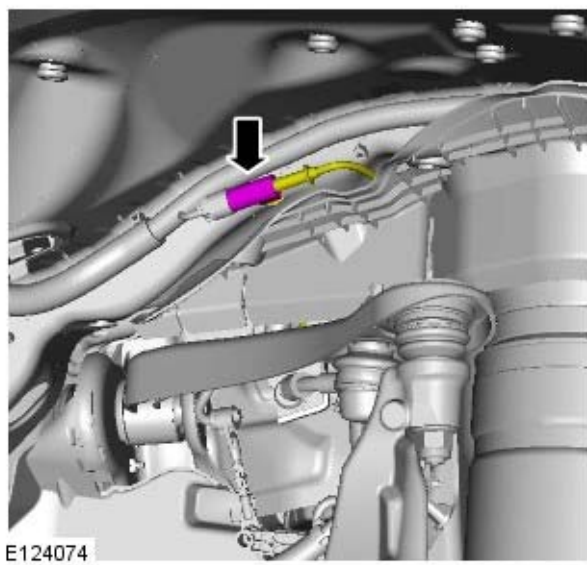


42.

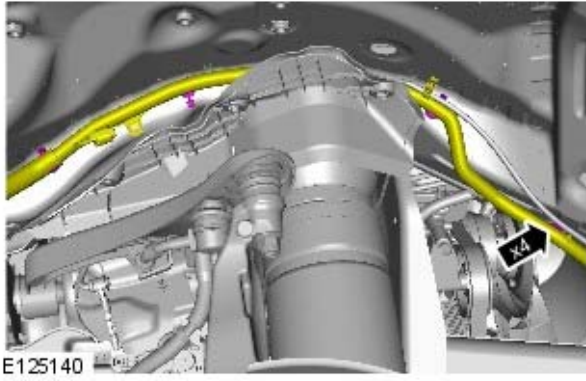


43.

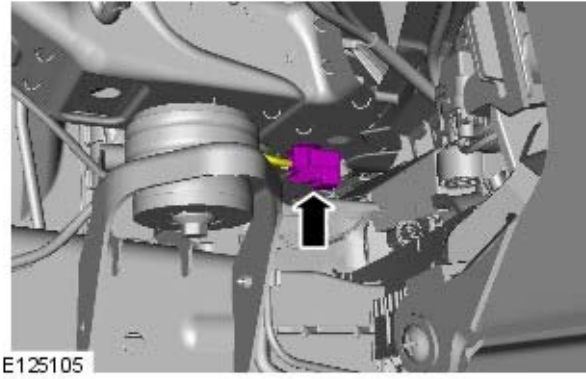


44.

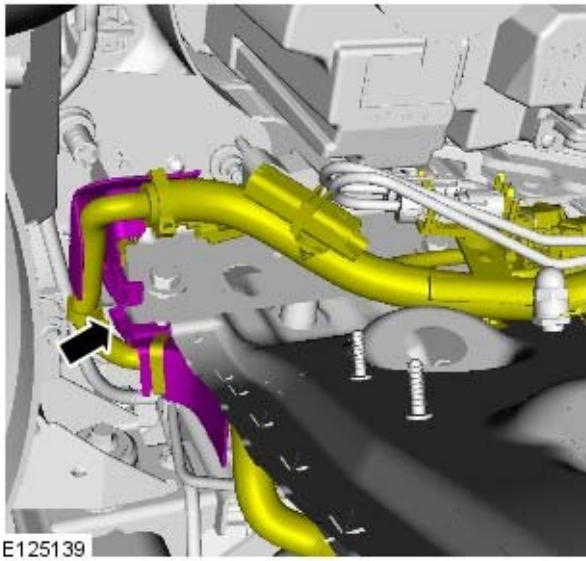


45.

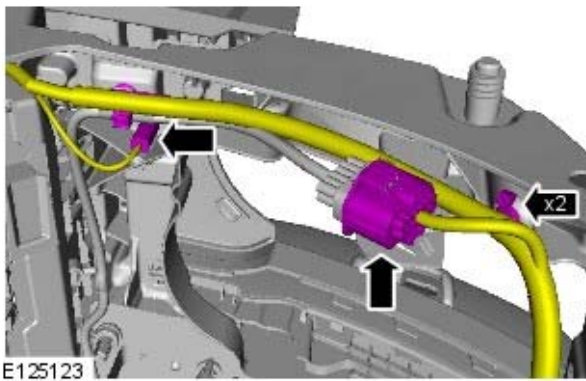


46.

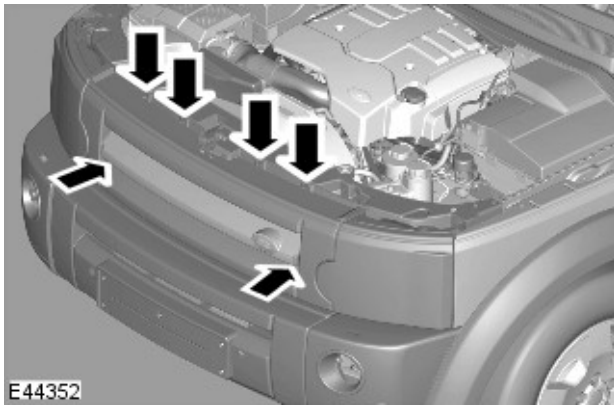


47.

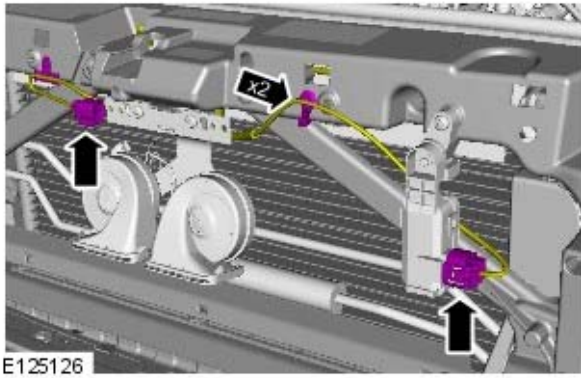


48.

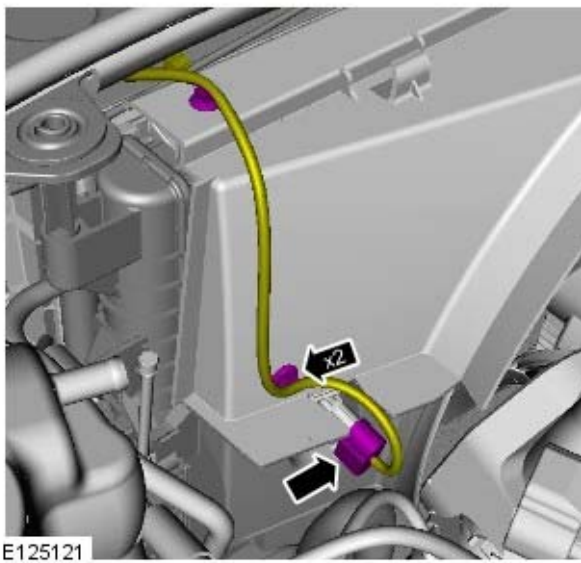

49.

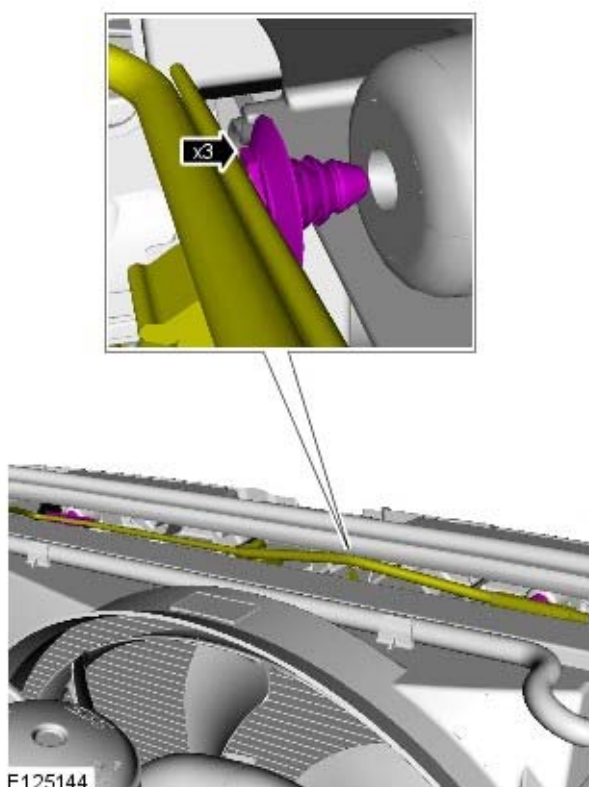


50.

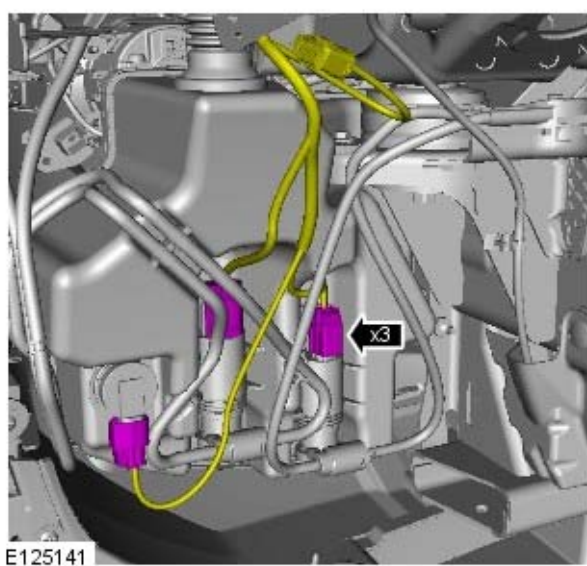


51. 进一步信息请参阅:Instrument Panel (501-12, 拆卸和安装).



52. 扭矩: 10 牛米

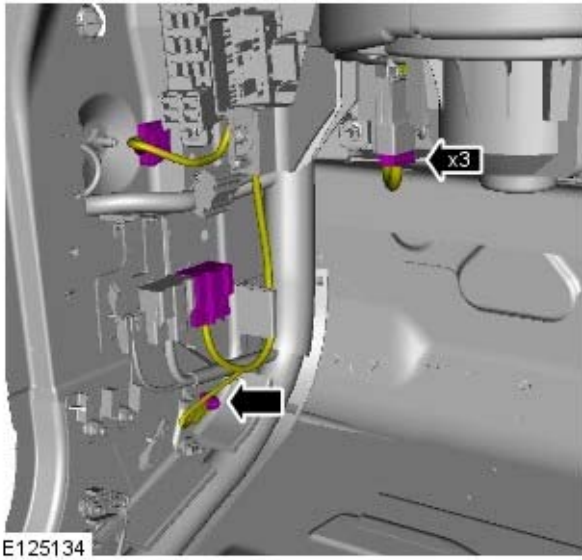

53.

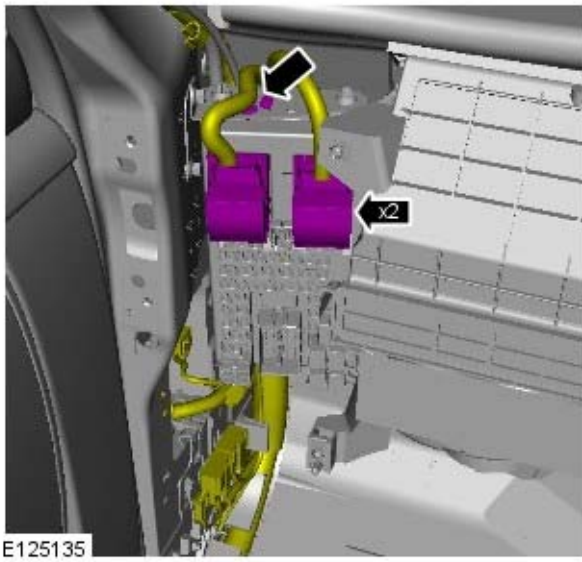


54. 扭矩: 10 牛米

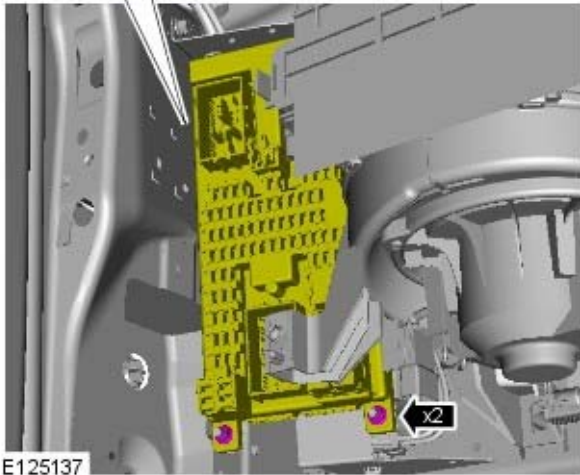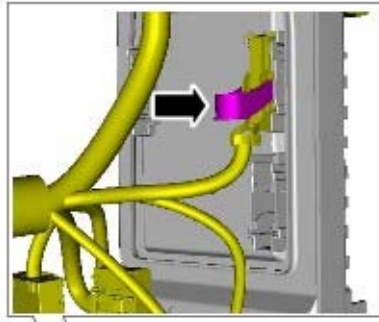


E125137

55.

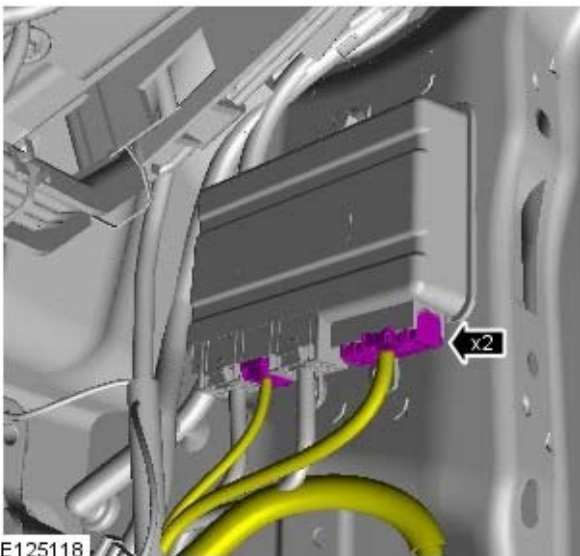


E125118


56.

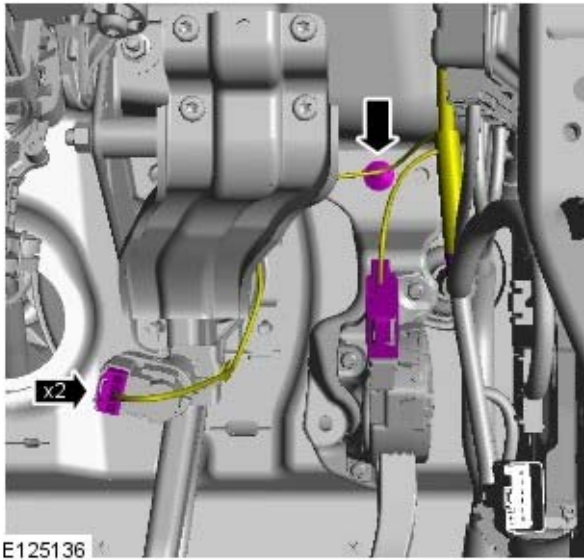

57.

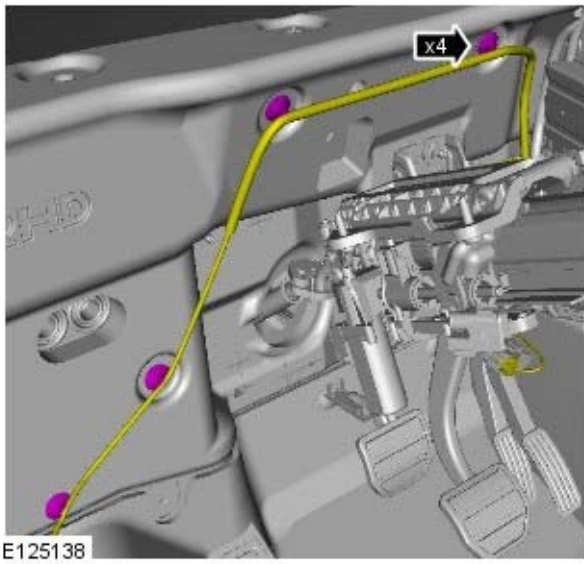

58.

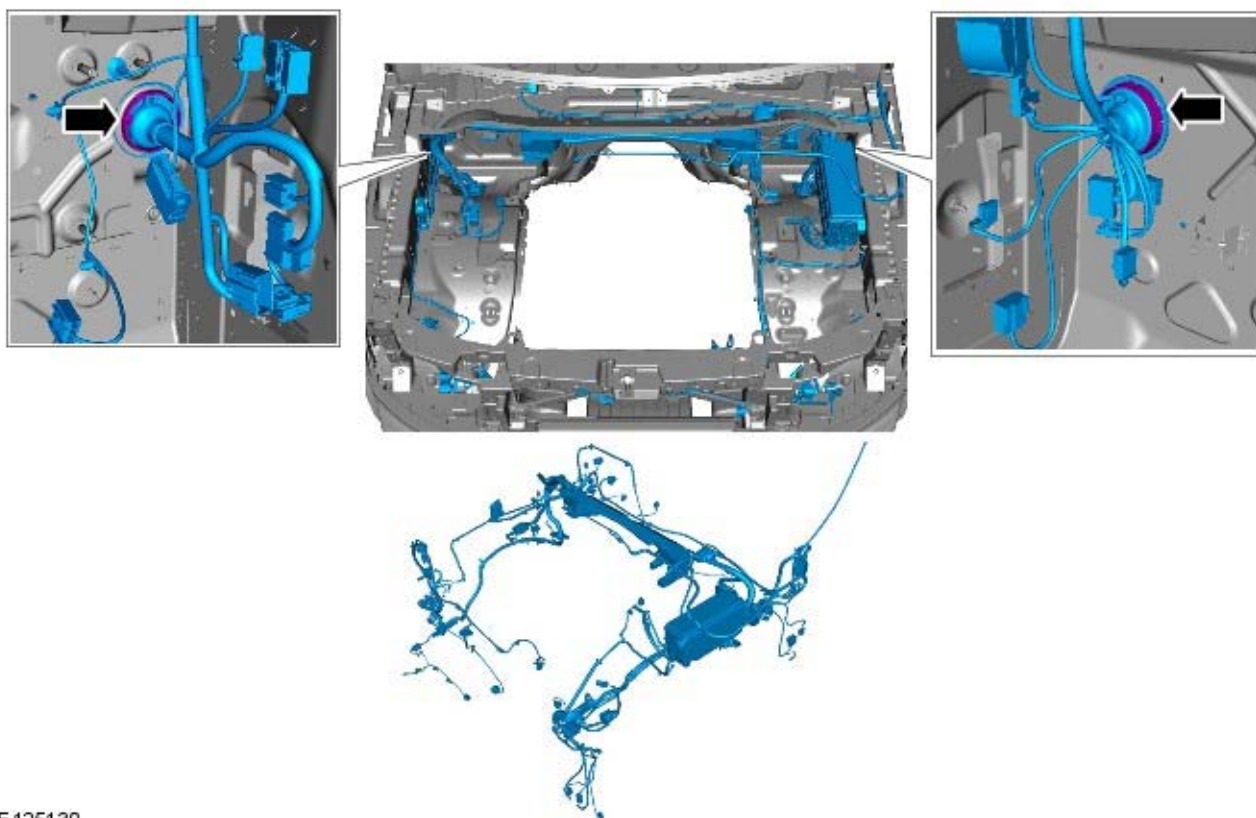

E125130

安装

1. 要进行安装，请按拆卸顺序反向执行。