

加油和控件 - TDV8 4.4 升柴油机 - 燃油轨 LH

拆卸和安装

拆卸




小心： 确保所有开口密封完好。 使用新的塞盖。


1. 参阅： [柴油燃油系统健康和安全预防措施](#) (100-00 一般信息, 说明和操作)。
2. 断开蓄电池接地电缆的连接。

参阅： [规格](#) (414-00 蓄电池和充电系统 - 一般信息, 规格)。
3. 参阅： [左侧空气滤清器](#) (303-12E 进气分配和过滤 - TDV8 4.4 升柴油机, 拆卸和安装)。
4. 参阅： [燃油滤清器元件](#) (310-01D 油箱和管线 - TDV8 4.4 升柴油机, 拆卸和安装)。
5. 参阅： [进气歧管充气室](#) (303-01E 发动机 - TDV8 4.4 升柴油机, 拆卸和安装)。
6. 参阅： [燃油喷射组件清洁](#) (303-04A 加油和控件 - TDV6 3.0 升柴油机, 一般步骤)。


7.

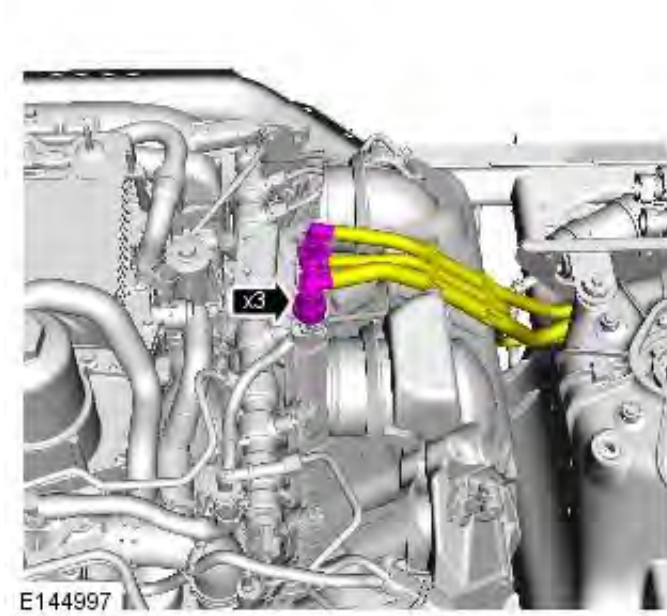


8.

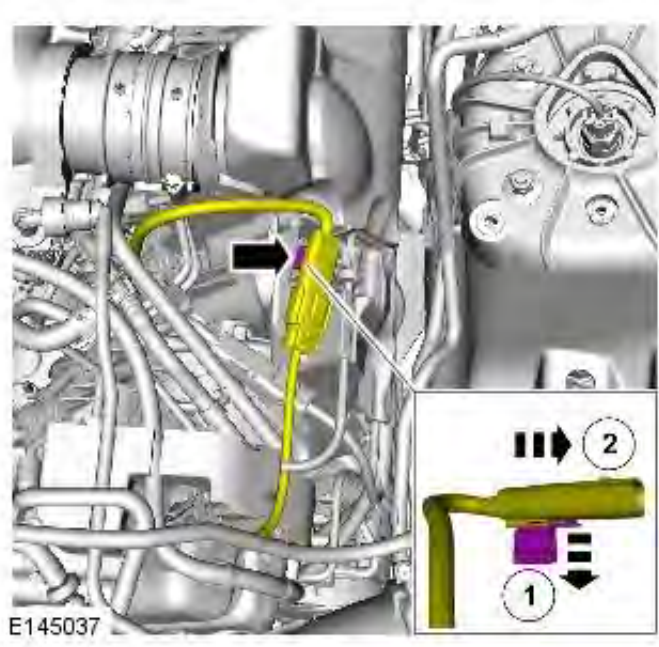


9.

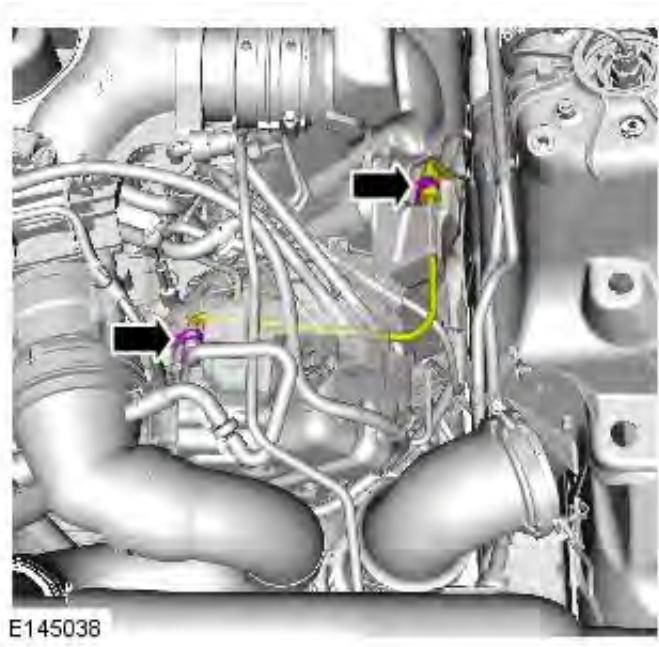

10.

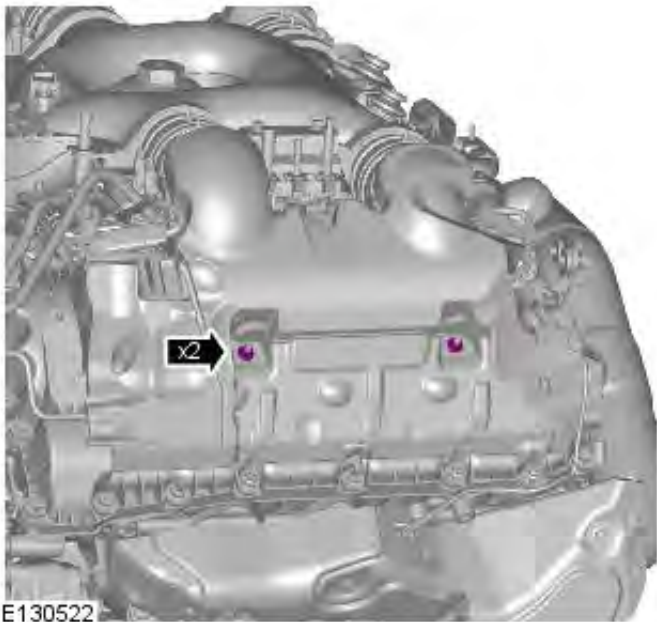


11.

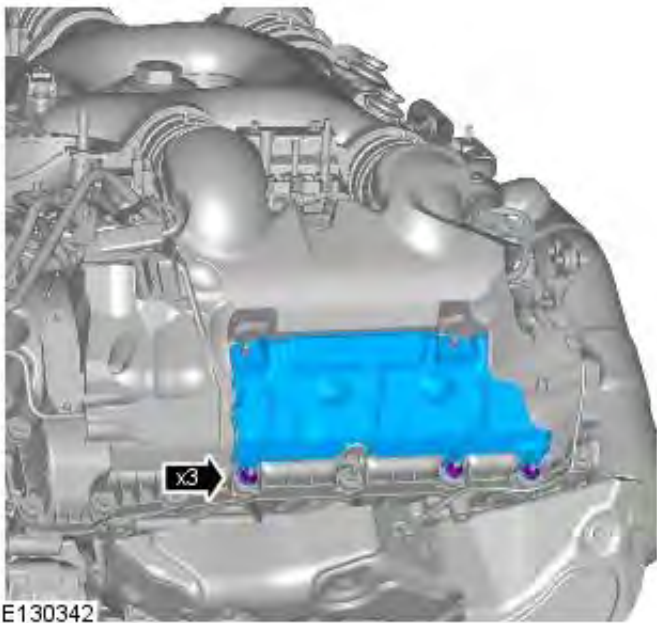


12.


13.

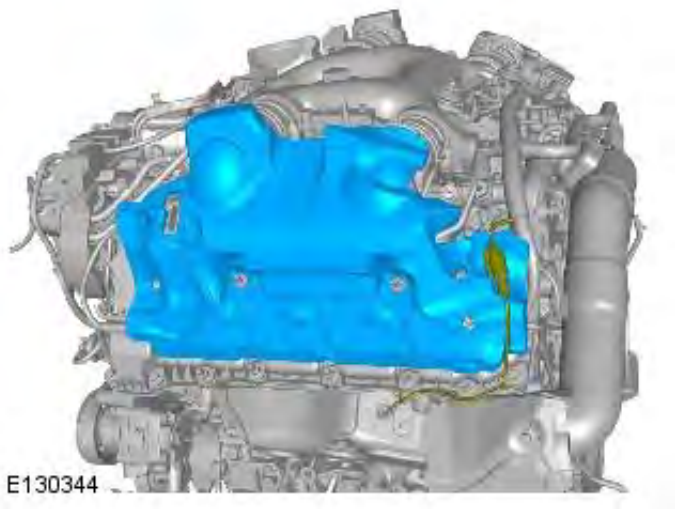

14.

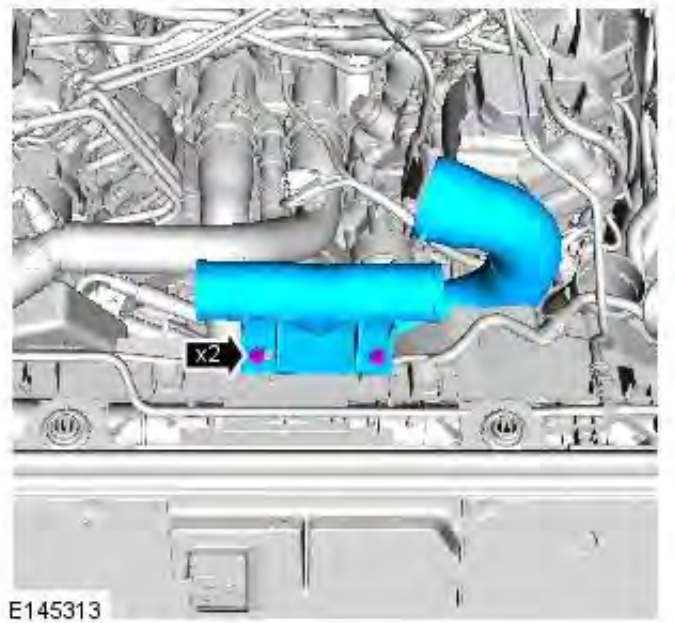


15.

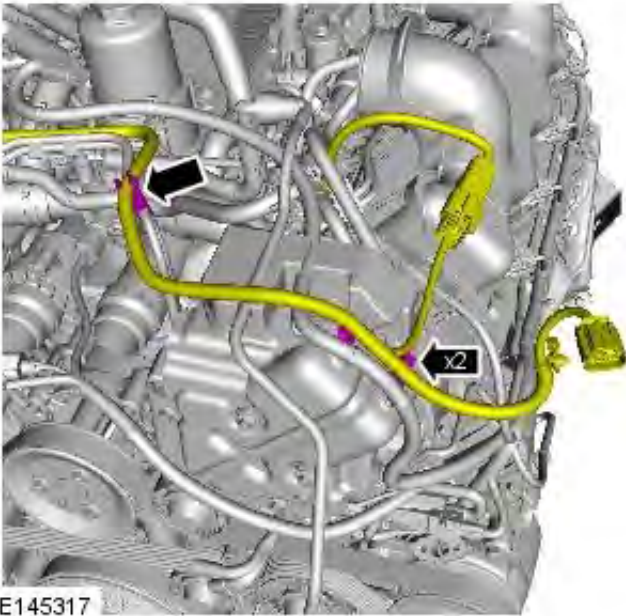


E145317

16.

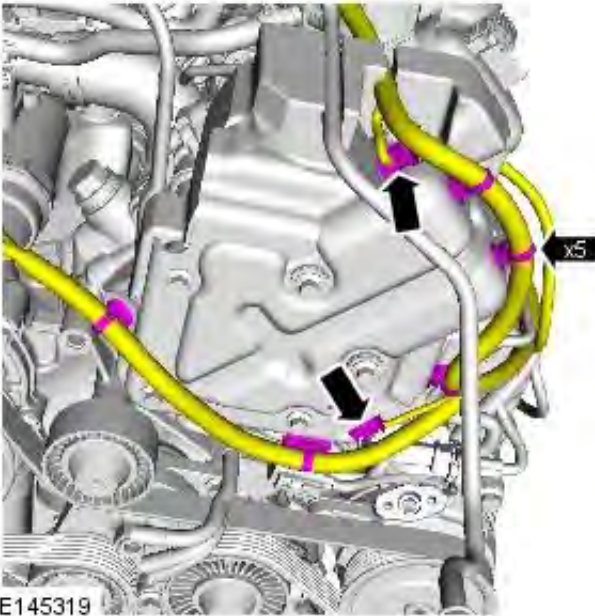


E145319

17.

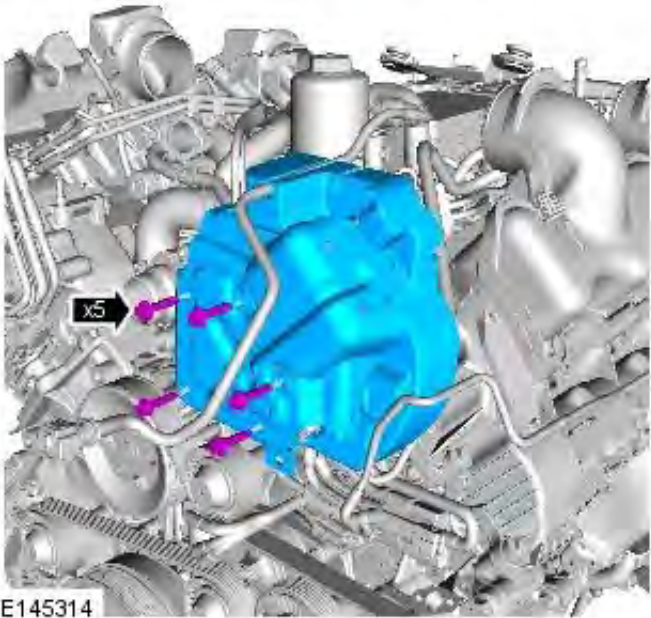


E145314

18.

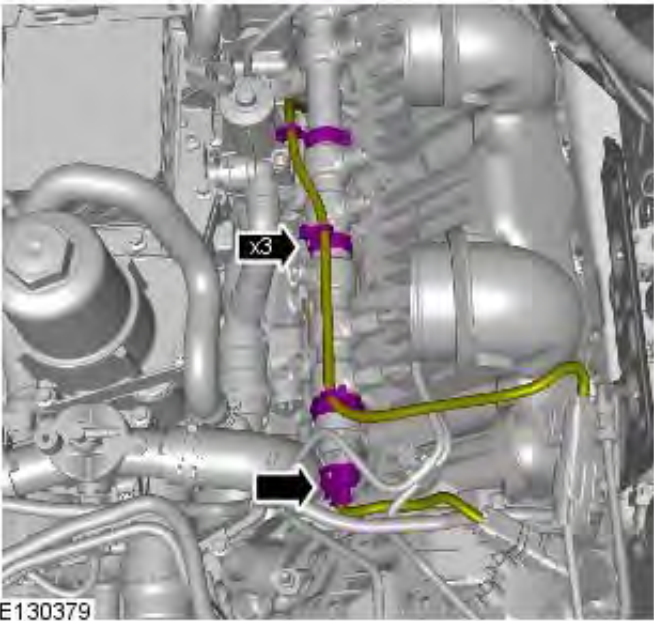


E130379


19.  小心： 丢弃燃油管路。

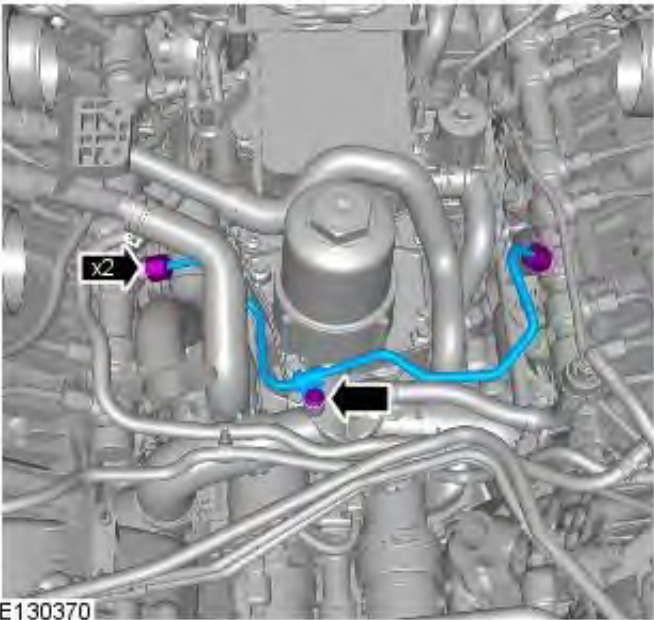


E130370

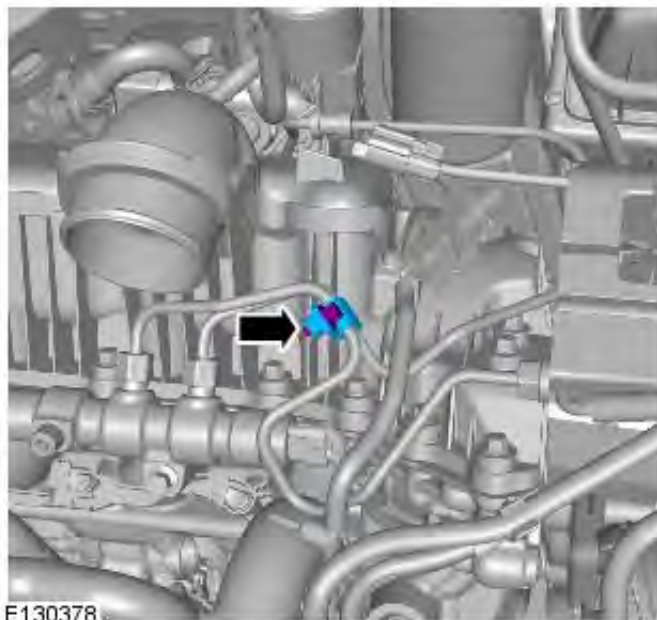


20.

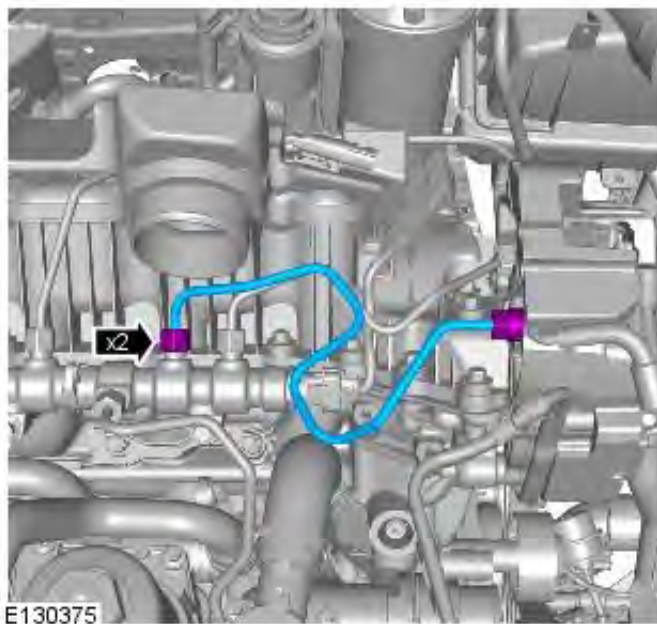
21.  小心： 丢弃燃油管路。22.  小心： 丢弃燃油管路。

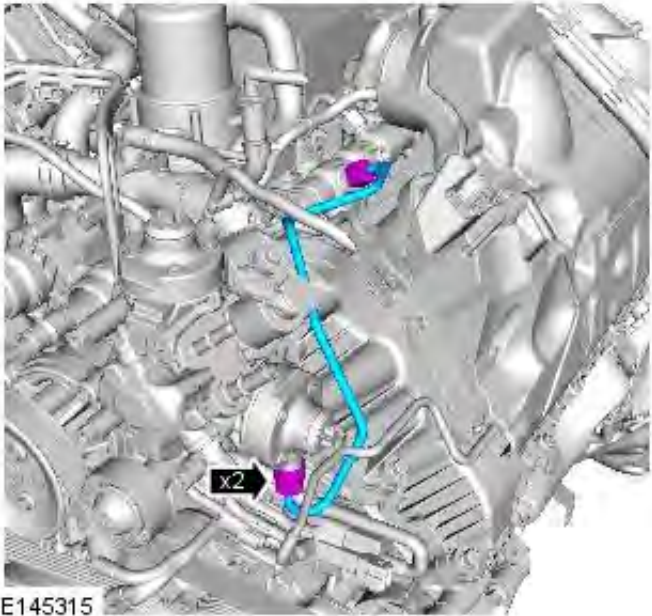


23.

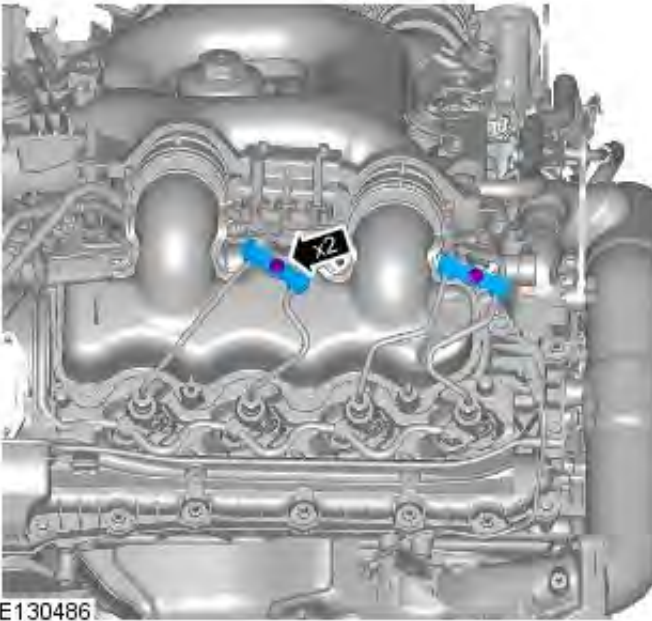

24.  小心： 丢弃燃油管。

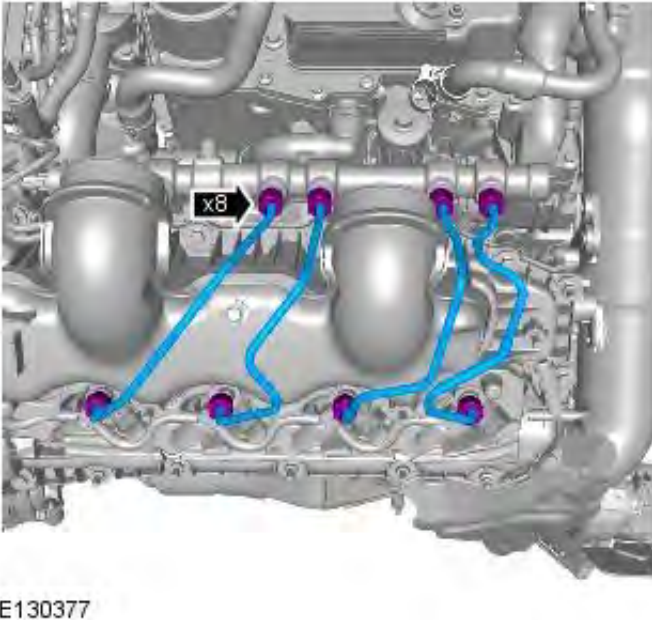


25.

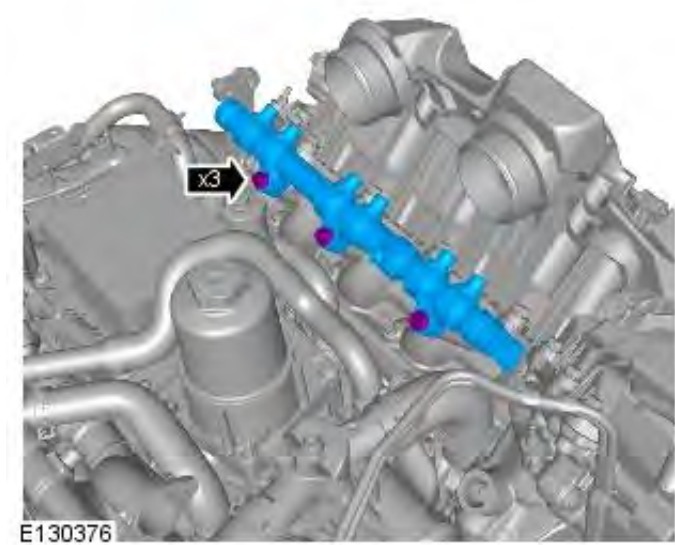


安装

⚠ 注意： 拆下并丢弃所有封口盖。


- 1. ⚠ 小心： 现阶段不要拧紧。

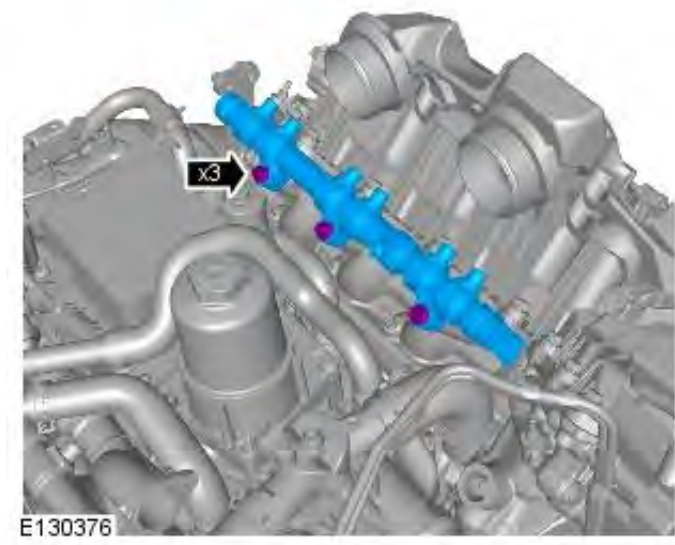

- 2. 小心：
 - ⚠ 安装新的燃油导管。
 - ⚠ 仅在此阶段用手拧紧接头。

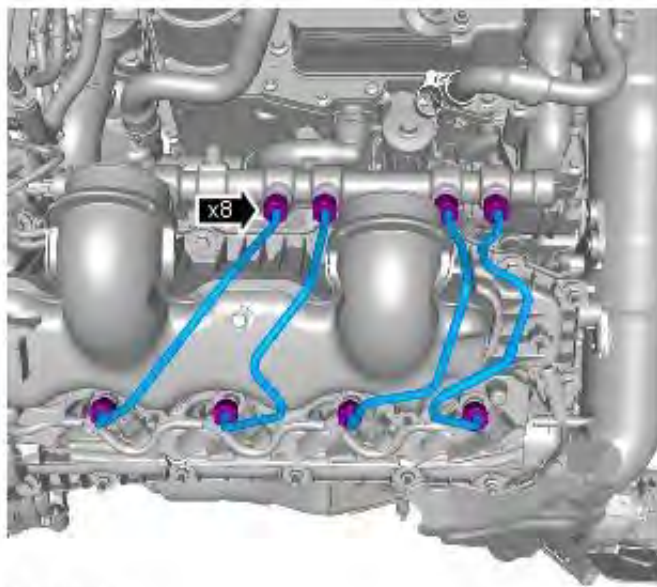


E130377

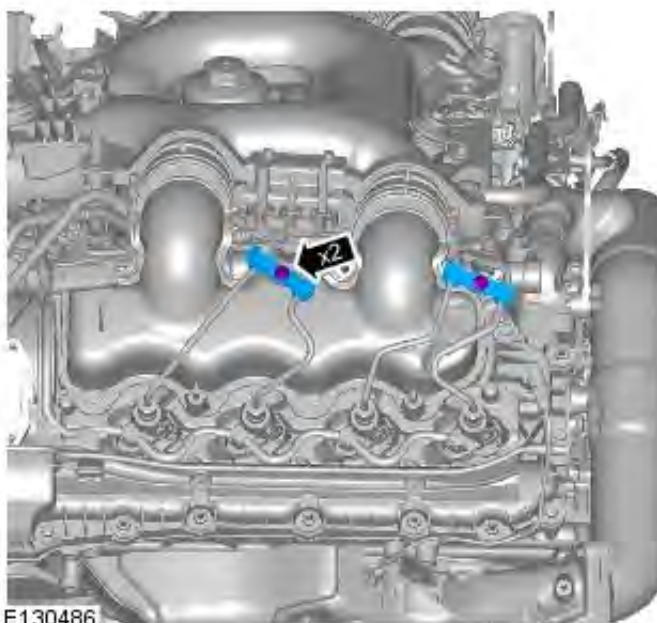

E130486

3.  小心：此阶段仅用手指拧紧螺栓。

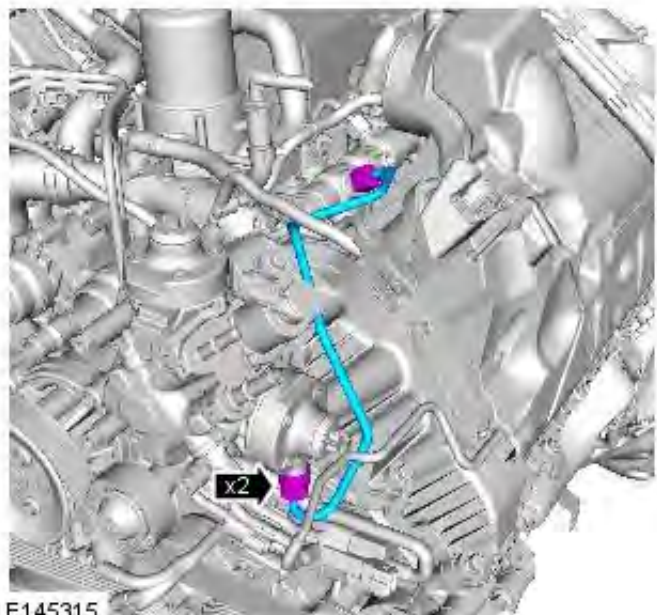


E145315

4. 小心：

 安装新的燃油导管。

 仅在此阶段用手指拧紧接头。

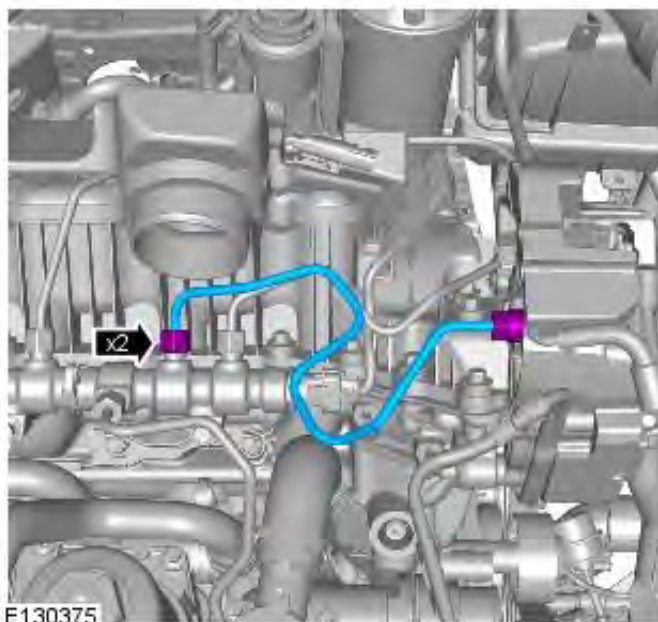


5. 小心:



安装新的燃油导管。



仅在此阶段用手拧紧接头。

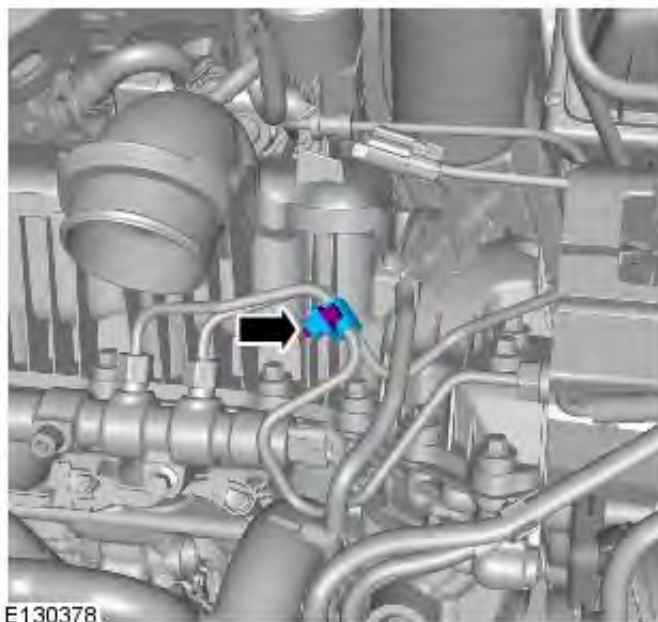6. 小心: 此阶段仅用手指紧固螺栓。

7. 小心:




安装新的燃油导管。




此阶段仅用手指紧固螺栓。



仅在此阶段用手拧紧接头。

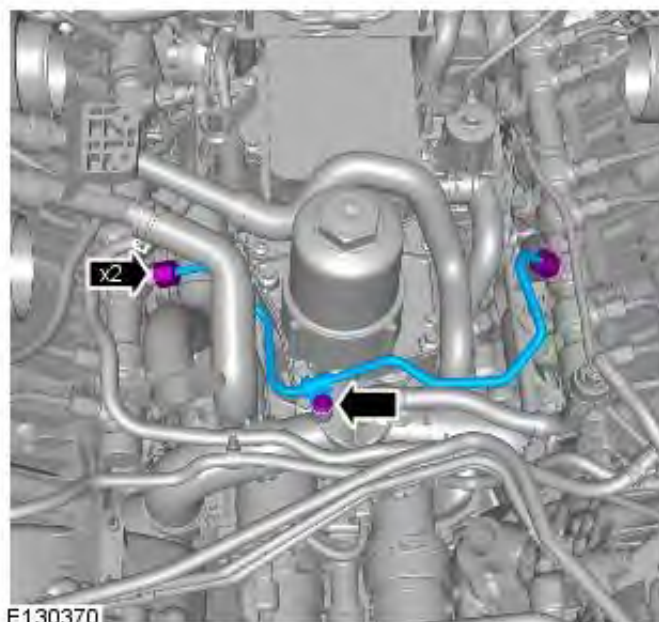



8. 扭矩: 23 Nm

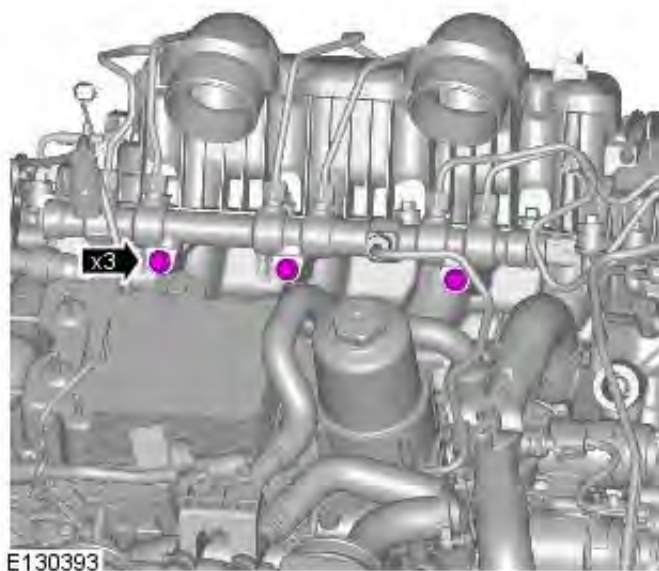


9. 拧紧所有。

扭矩: 10 Nm

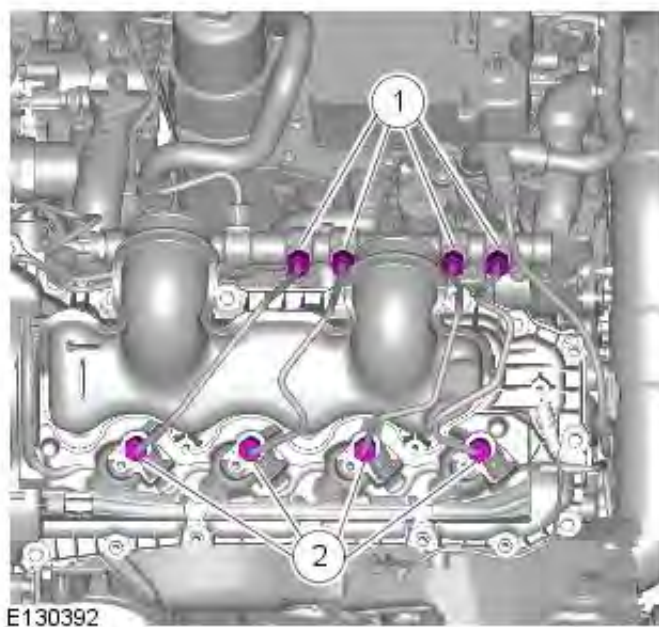

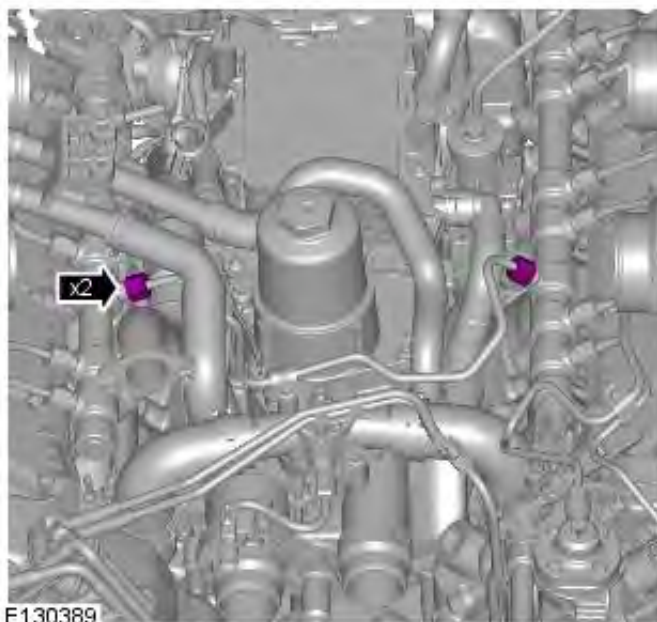

10. 扭矩: 10 Nm


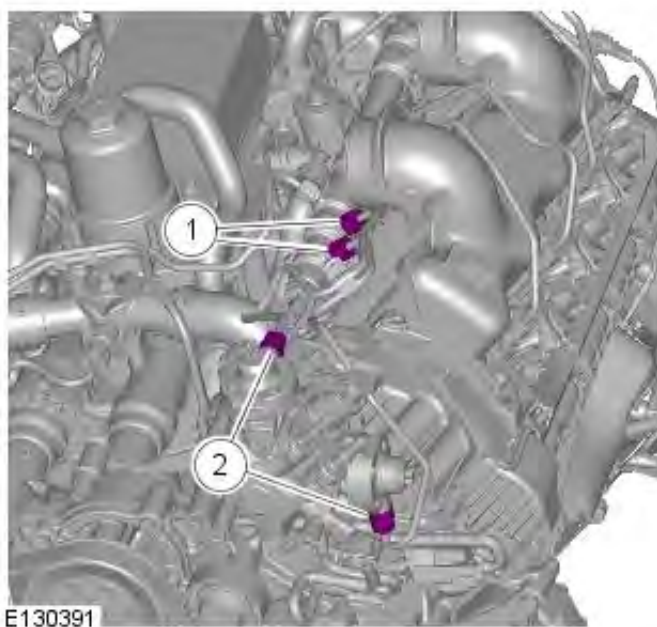


11. 拧紧所有。


扭矩: 10 Nm

12. 拧紧所有。


扭矩: 73°

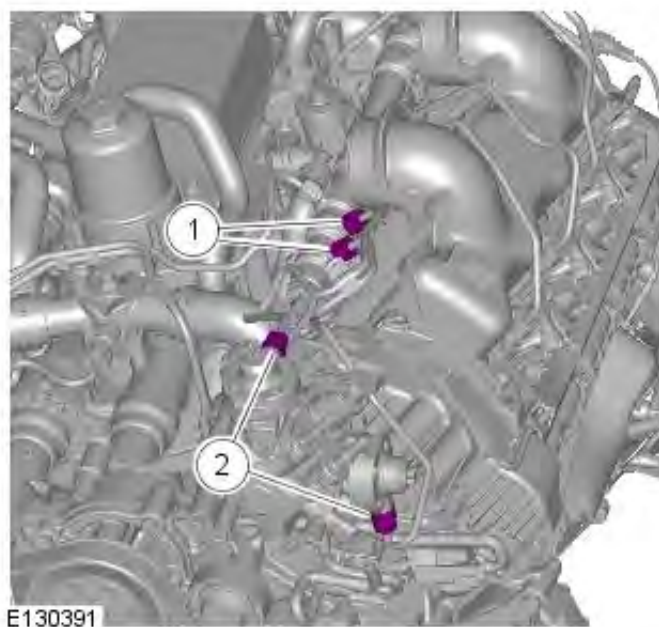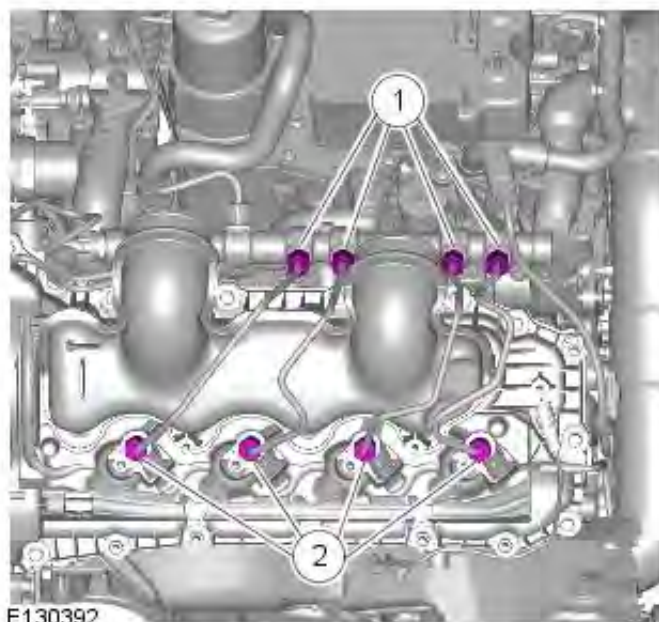


13. 扭矩:
 $\frac{73^\circ}{80^\circ}$

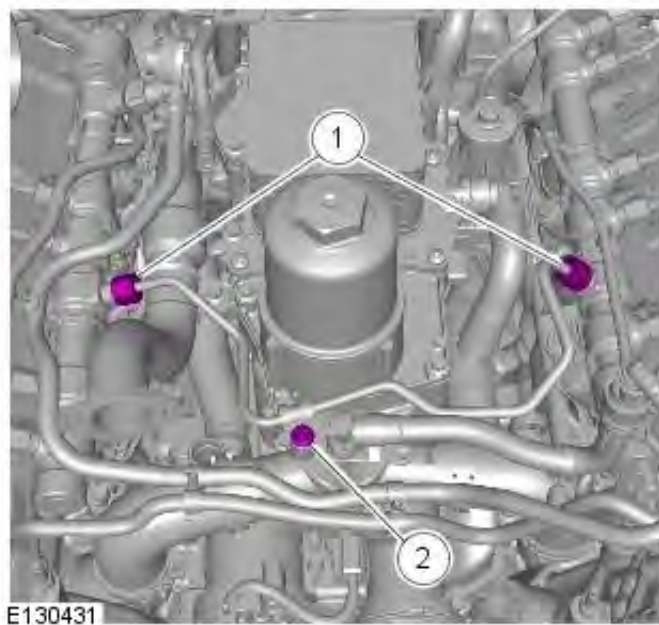

14. 扭矩:
 接头 $\frac{73^\circ}{80^\circ}$
 M6 10 Nm

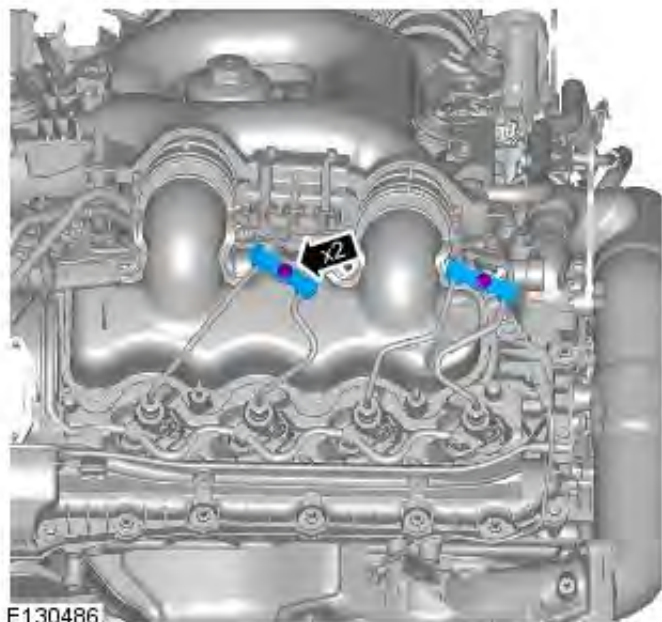


15. 扭矩: 10 Nm

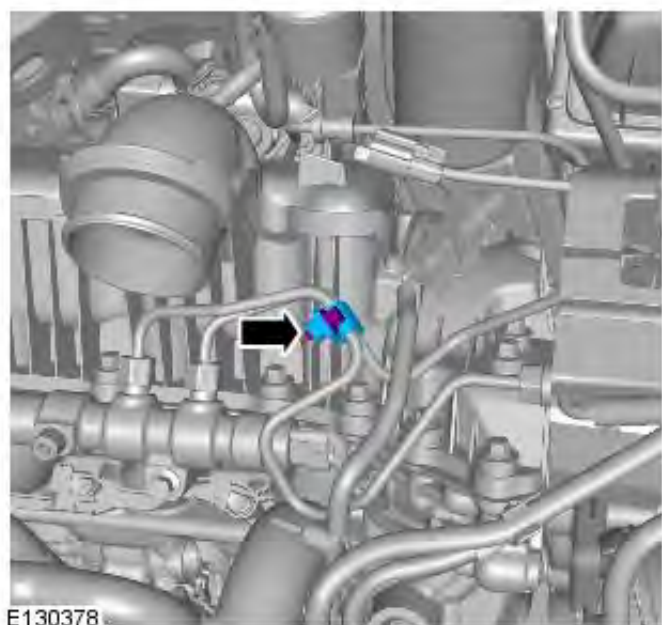


16. 扭矩: 10 Nm


17.

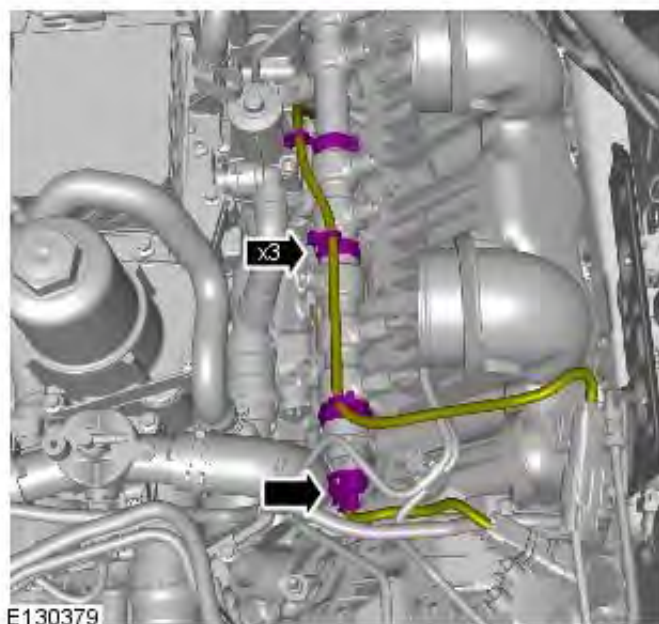

18. 扭矩: 10 Nm

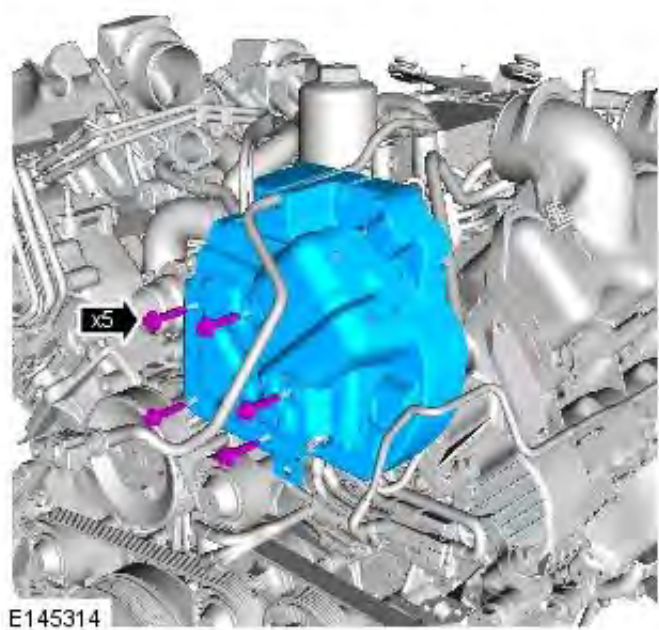


19.

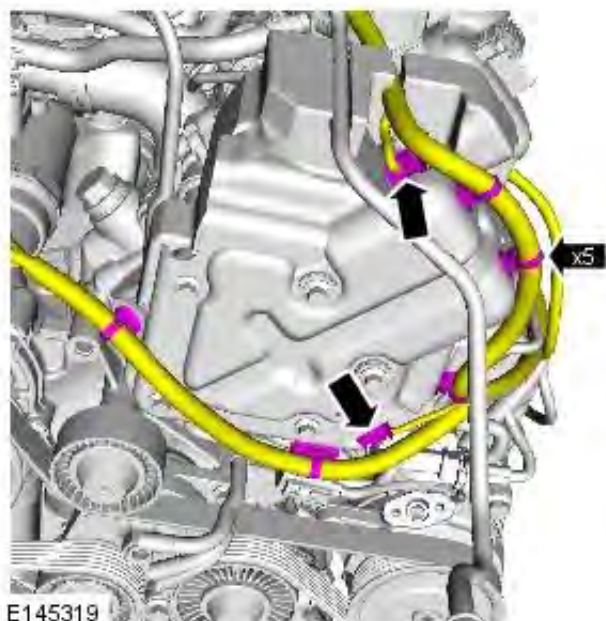


E145319

20.


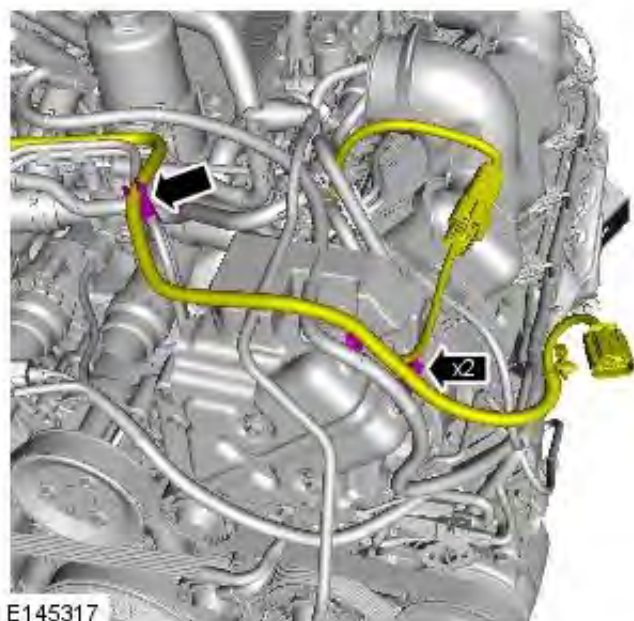


E145317


21. 扭矩: 10 Nm

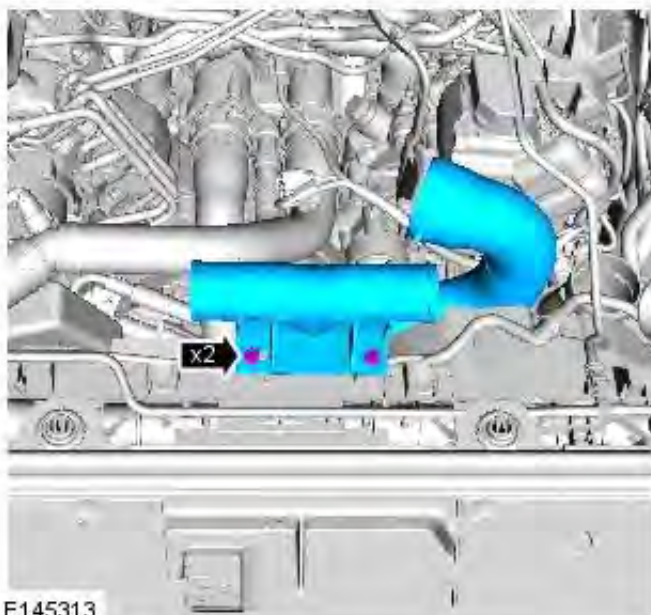


22.

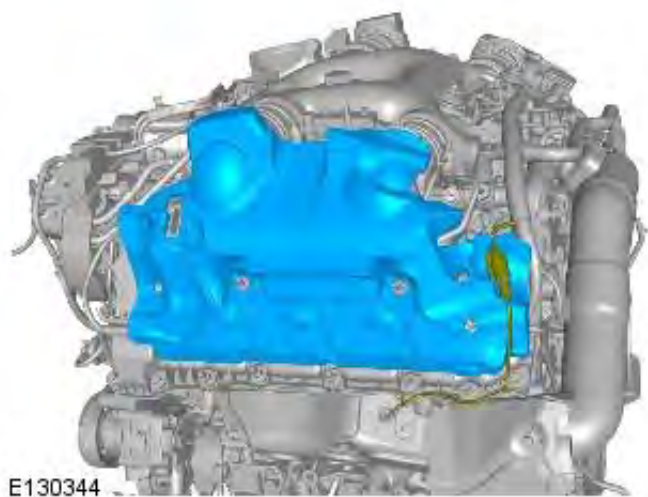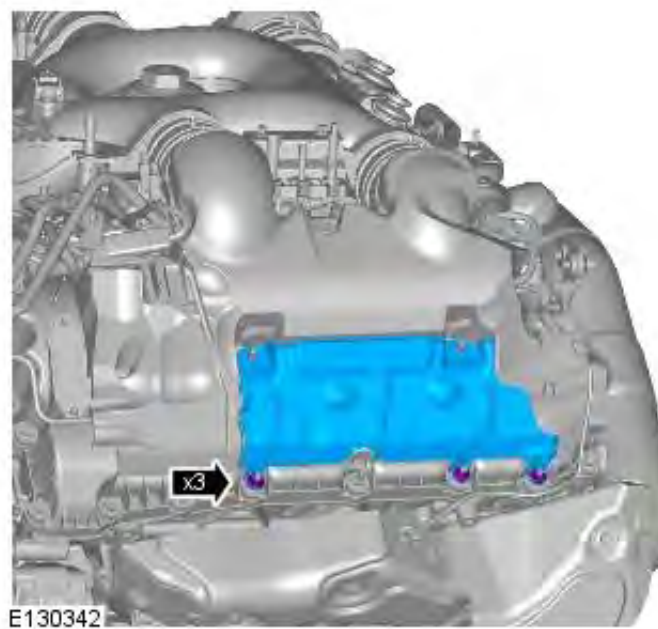23. 扭矩: 10 Nm


24. 扭矩: 6 Nm

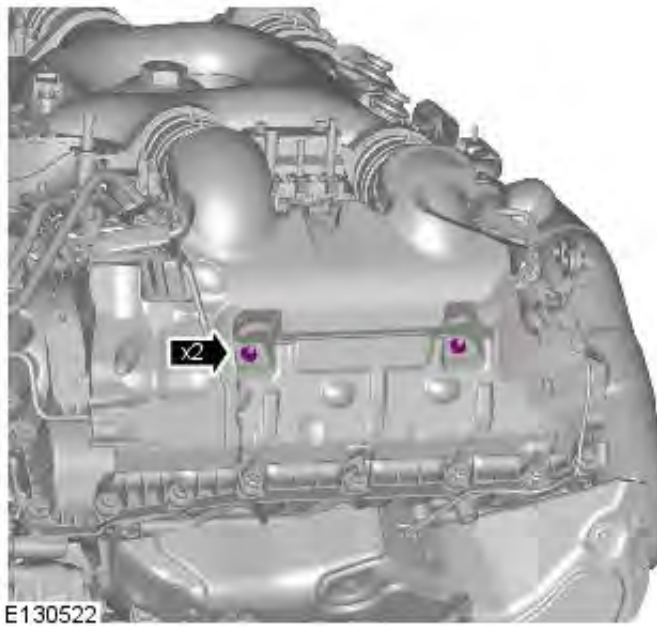


25. 扭矩: 10 Nm

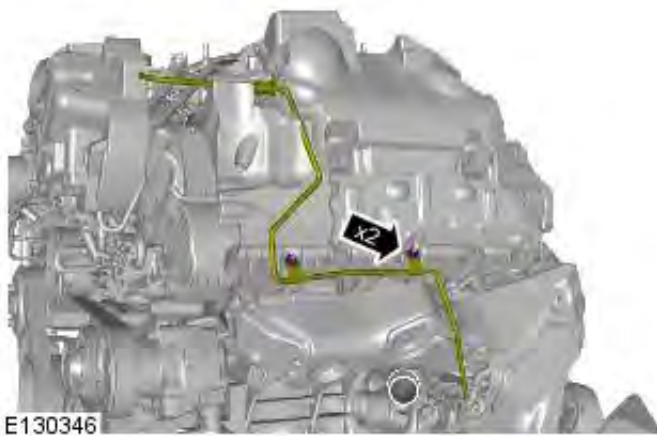


26.

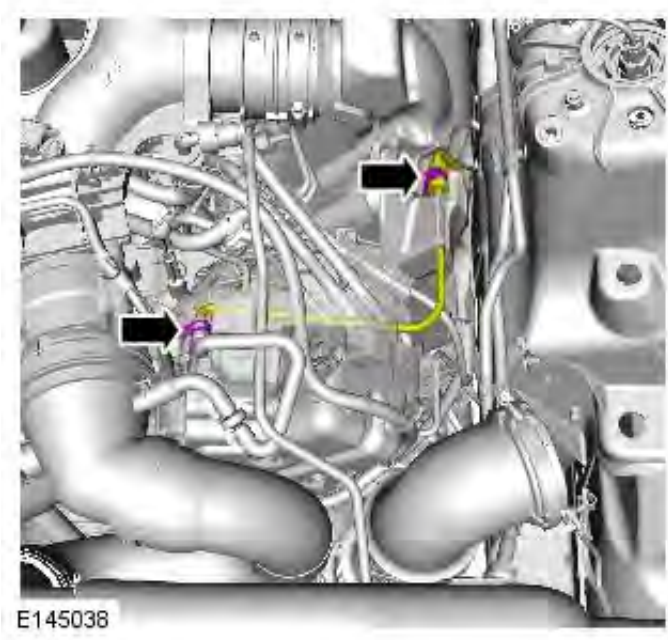

27.

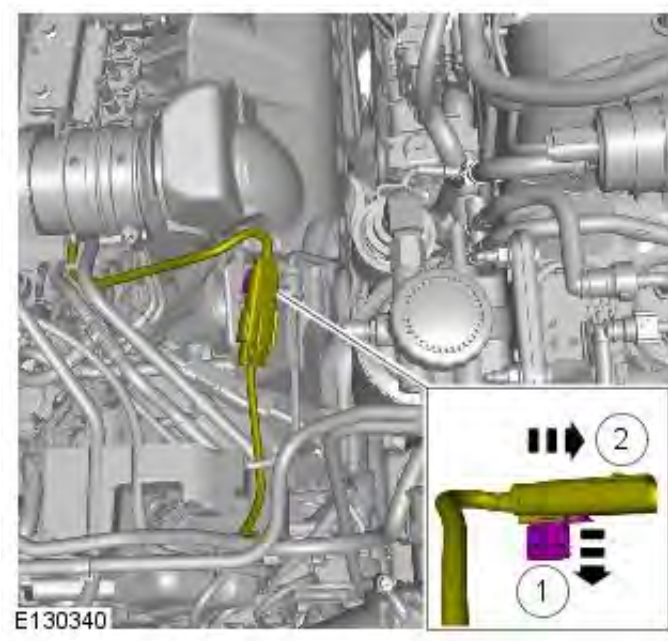

28.

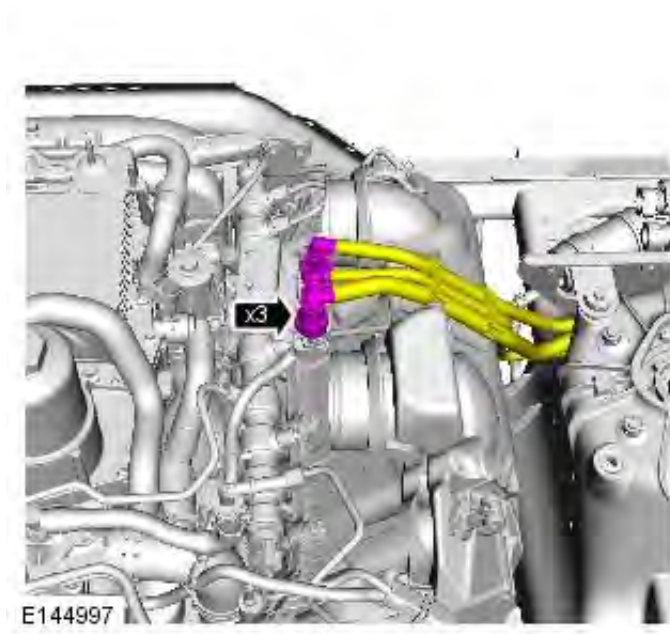

29. 参阅: [进气歧管充气室](#) (303-01E 发动机 - TDV8 4.4 升柴油机, 拆卸和安装).

30. 参阅: [燃油滤清器元件](#) (310-01D 油箱和管线 - TDV8 4.4 升柴油机, 拆卸和安装).

31. 参阅: [左侧空气滤清器](#) (303-12E 进气分配和过滤 - TDV8 4.4 升柴油机, 拆卸和安装).

32. 连接蓄电池接地电缆。

参阅: [规格](#) (414-00 蓄电池和充电系统 - 一般信息, 规格).

33. 参阅: [高压燃油系统放气](#) (310-00 燃油系统- 一般信息, 一般步骤).