

发动机点火 - **V8 5.0** 升汽油机 / **V8** 机械增压型 **5.0** 升汽油机 - 火花塞
拆卸和安装

专用工具




拆卸


 注意： 本程序中的拆除步骤可能包含安装细节。

1. 参阅： Engine Cover - V8 5.0L Petrol/V8 S/C 5.0L Petrol (501-05, 拆卸和安装)。


2.

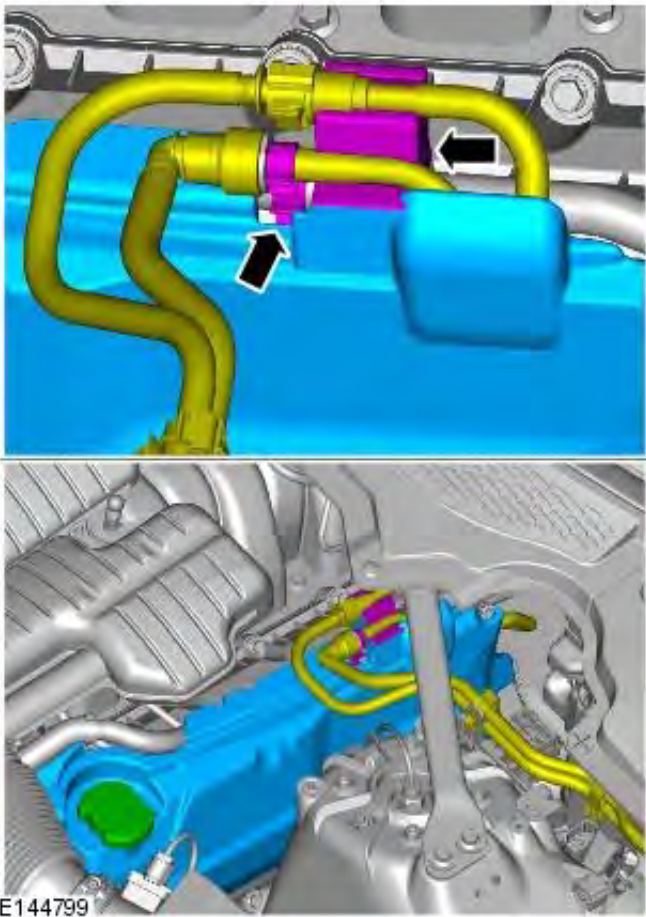

3. 扭矩： 7 Nm

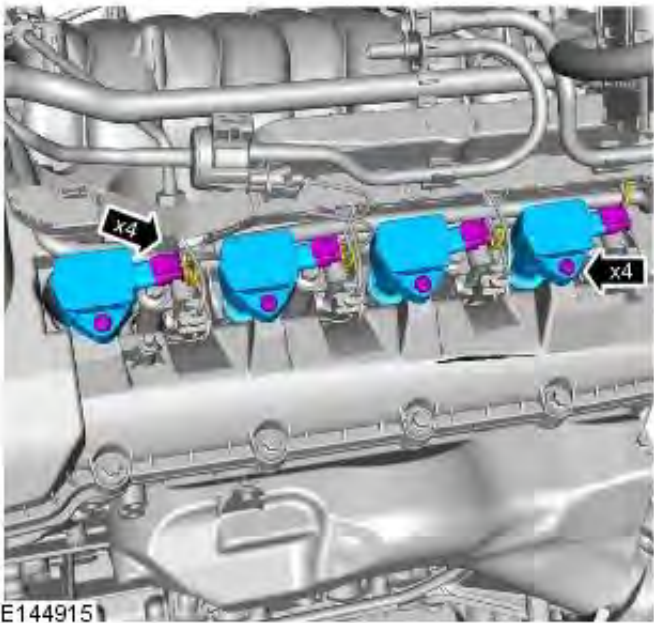


E144915

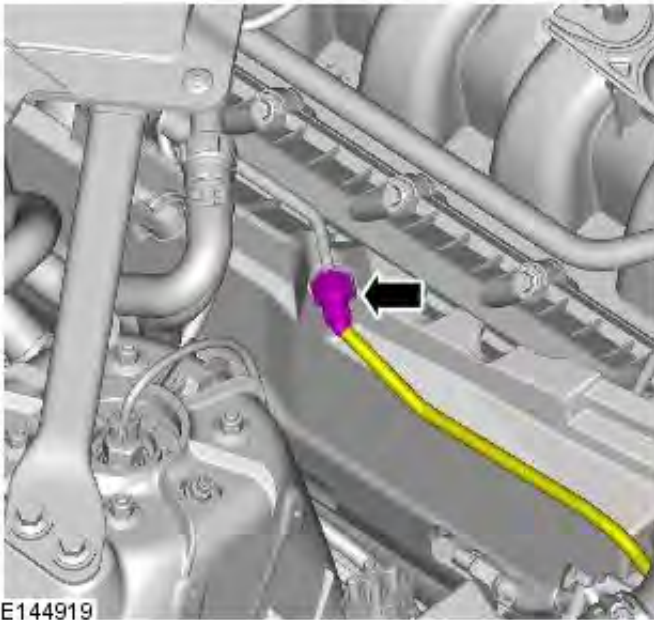

E144919



4.

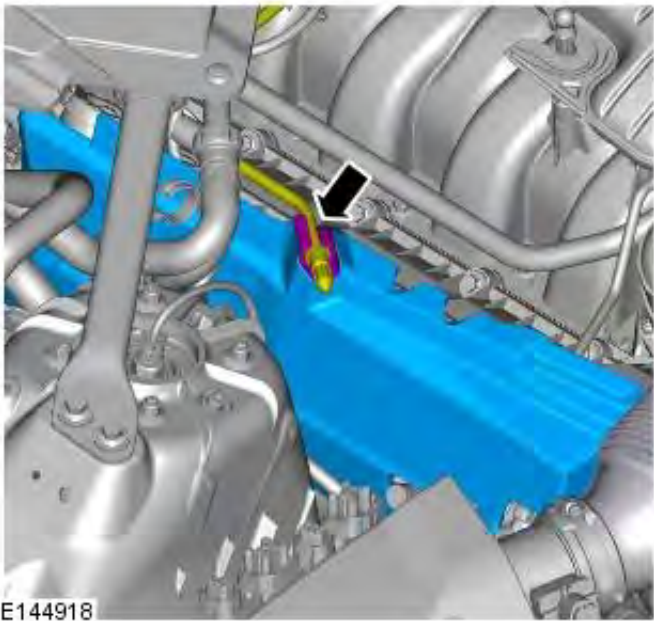


E144918

5.

6.

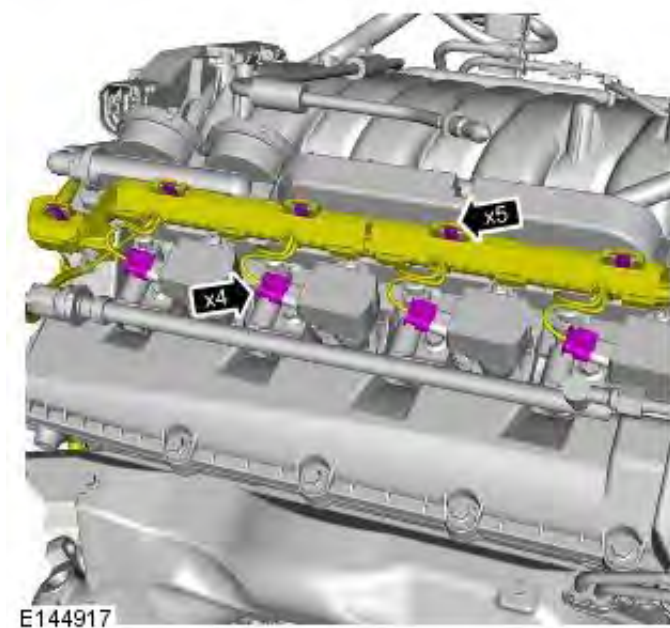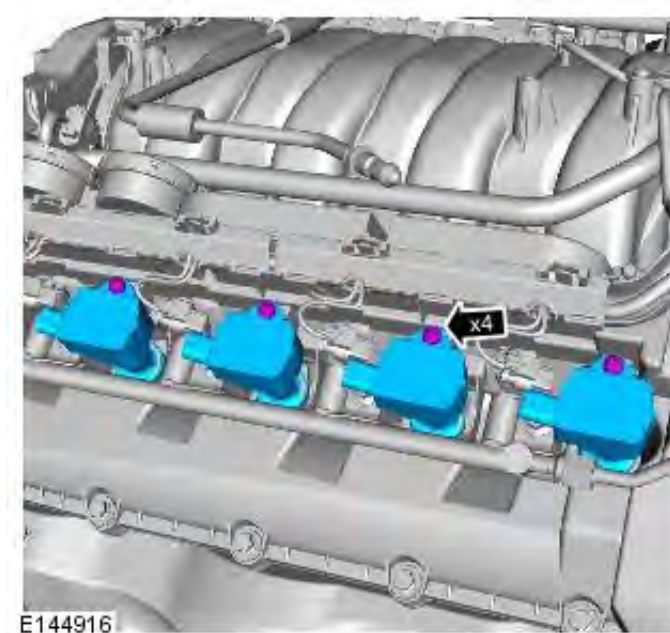7. 扭矩: 7 Nm8.  注意: 必须在两侧执行该步骤。专用工具: 303-1450扭矩: 20 Nm

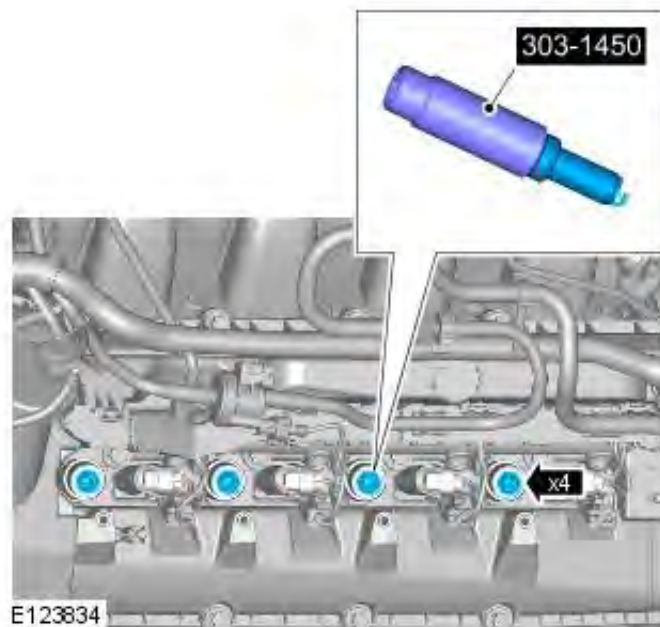

安装

1. 反向操作拆除步骤即可安装。