






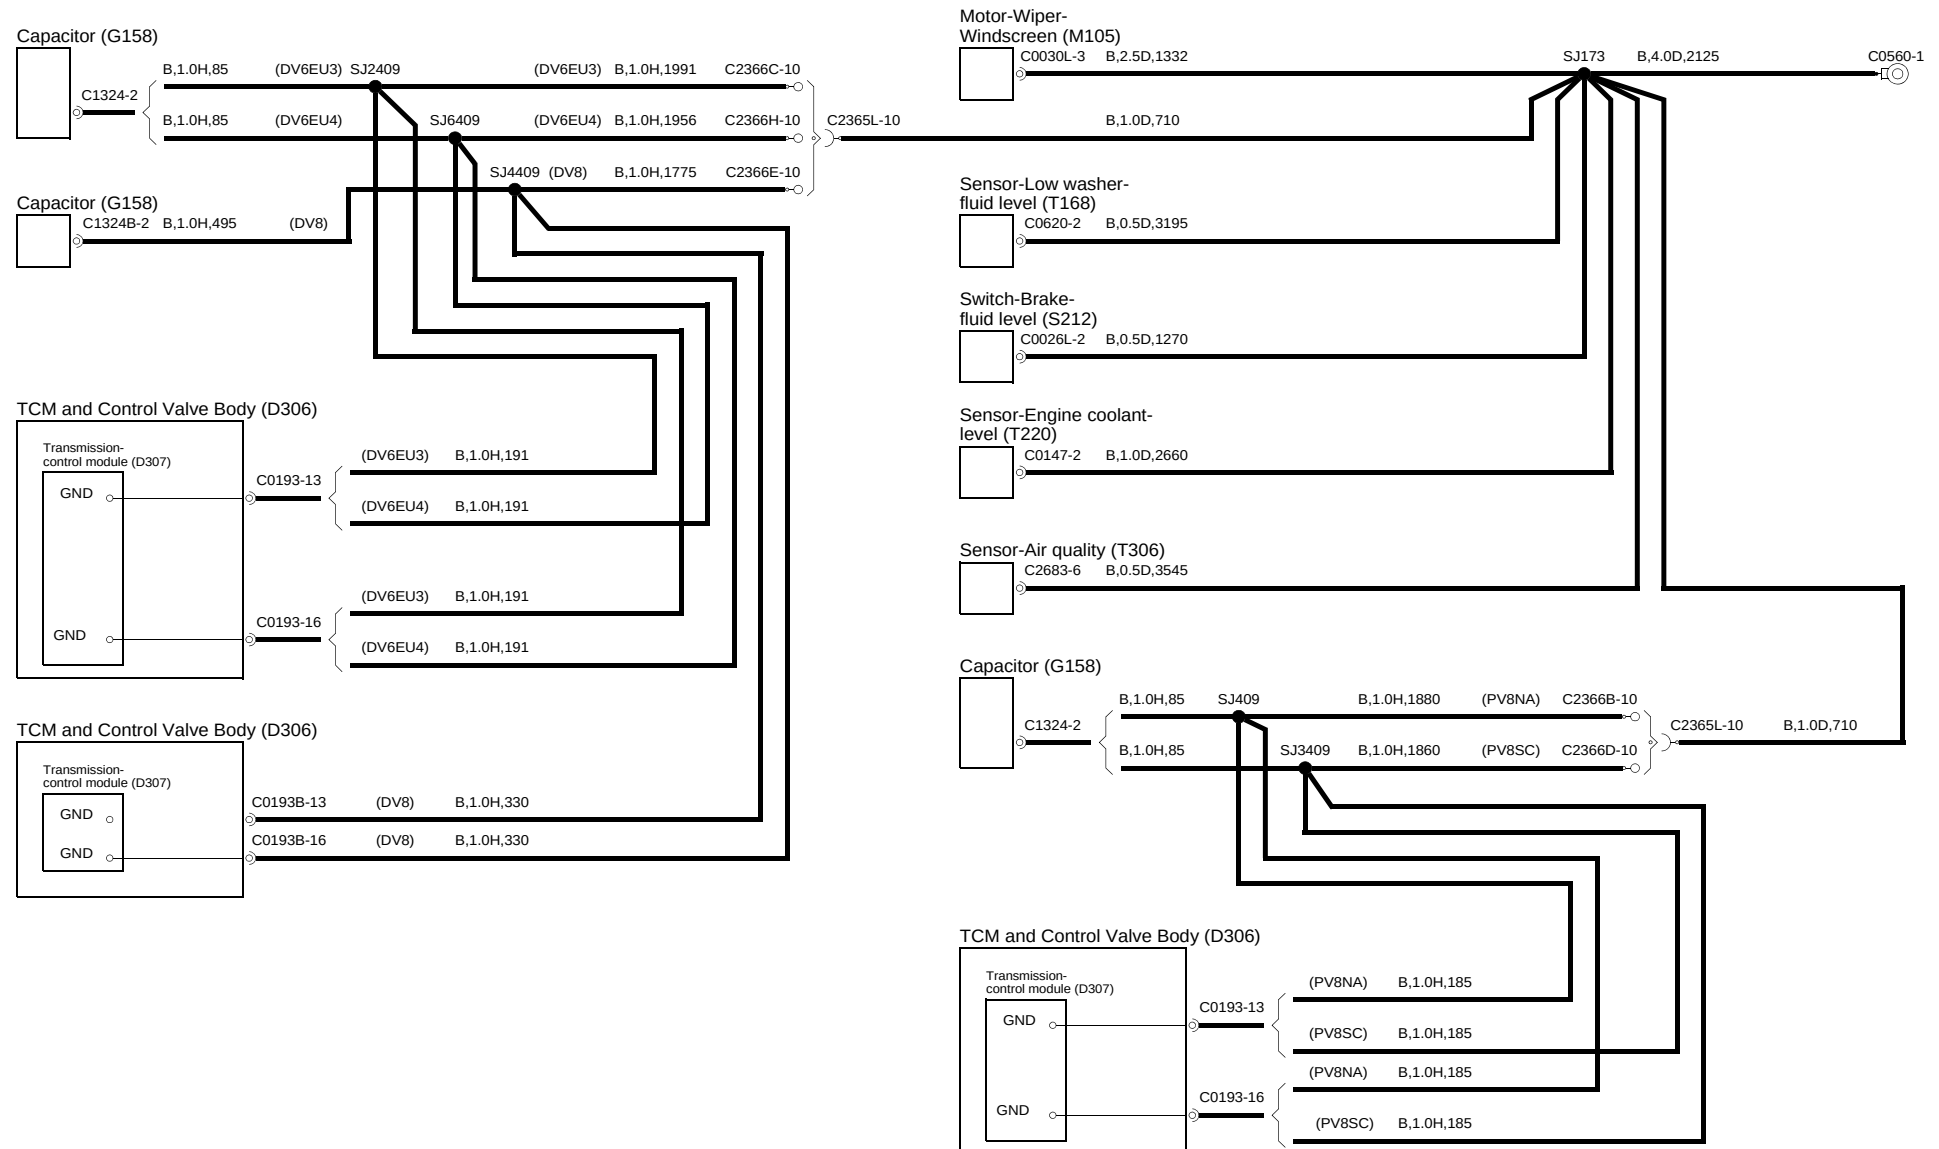


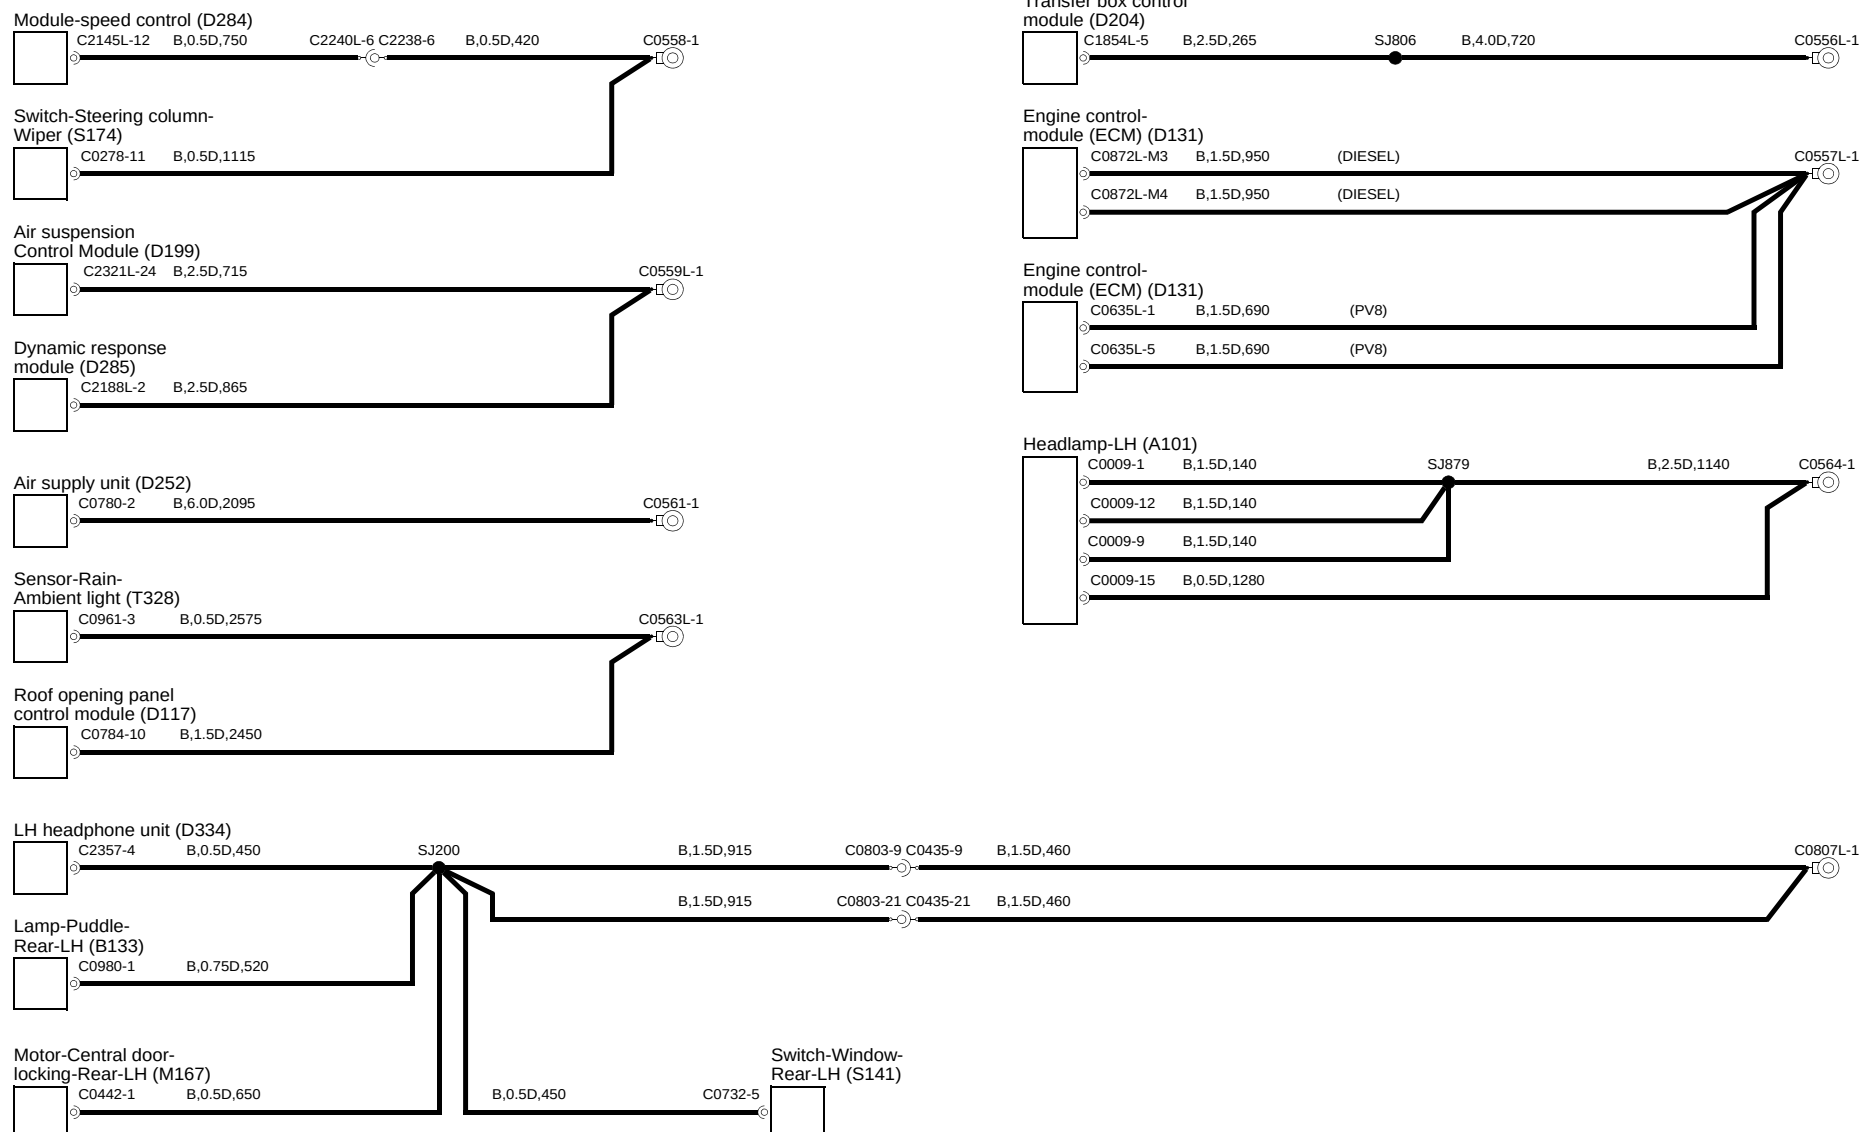


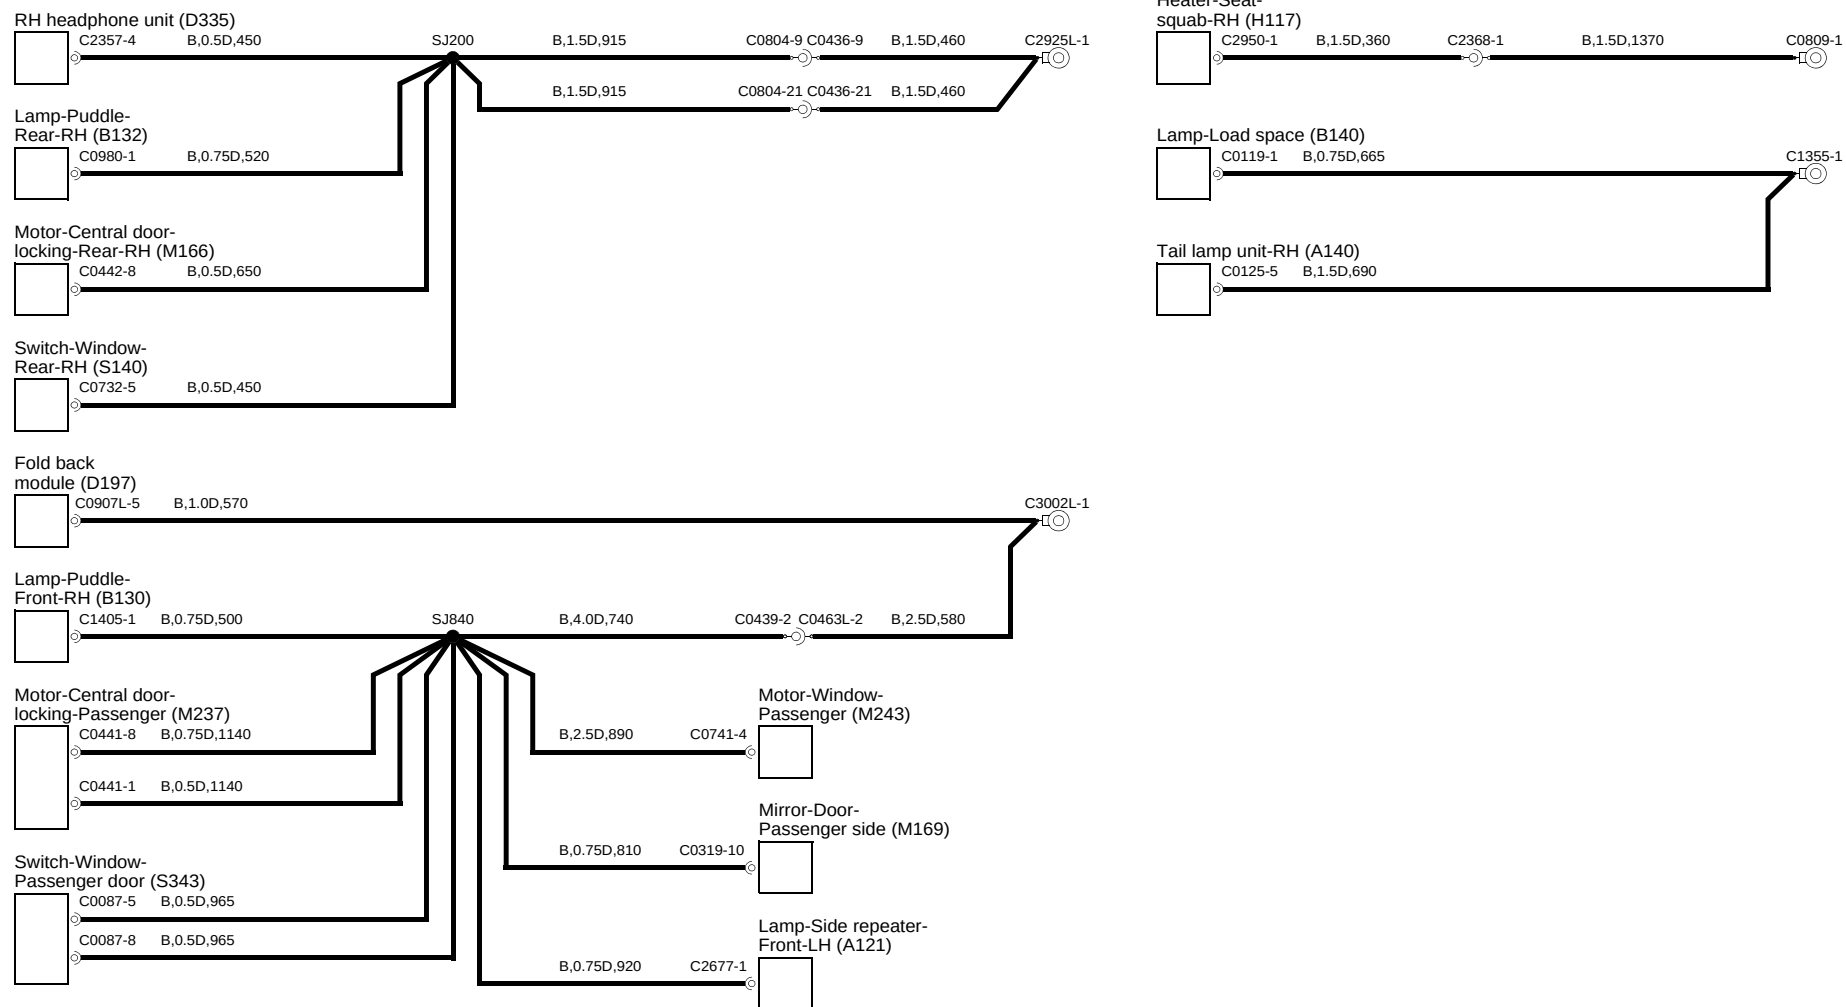


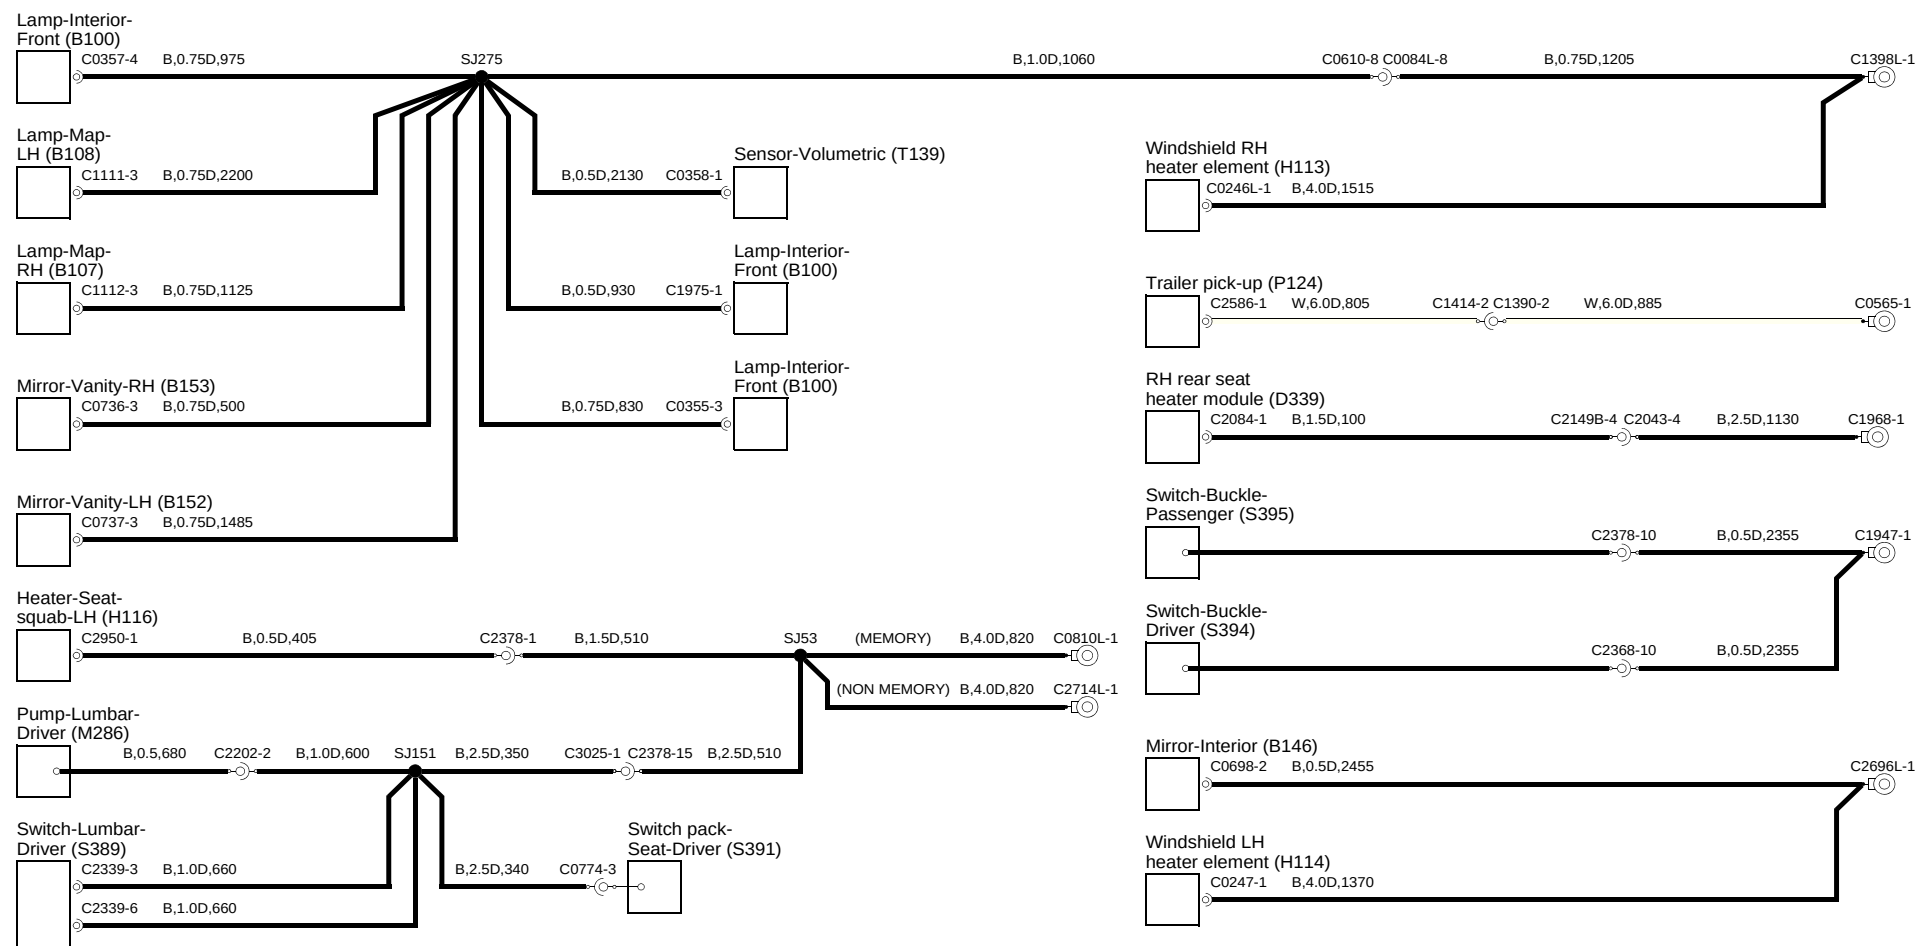


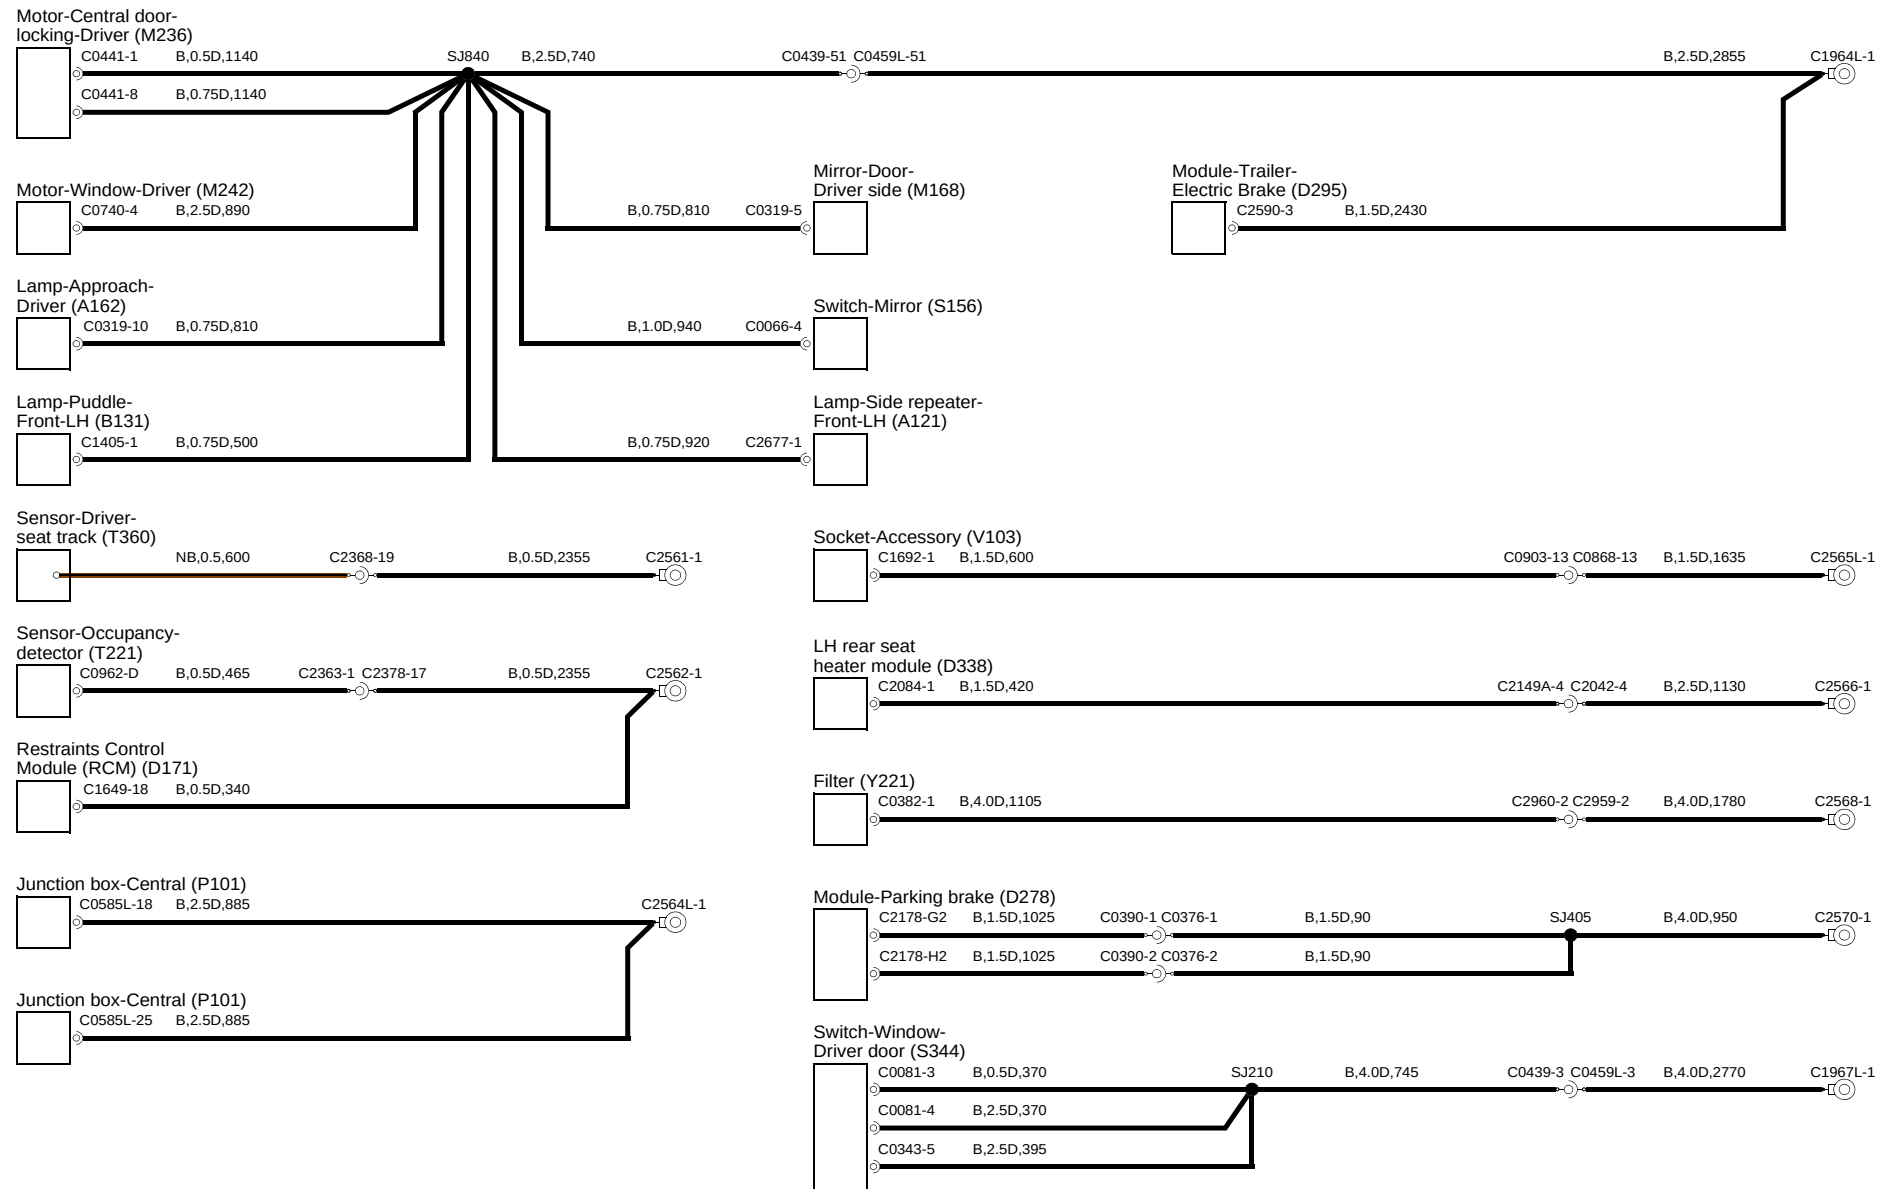



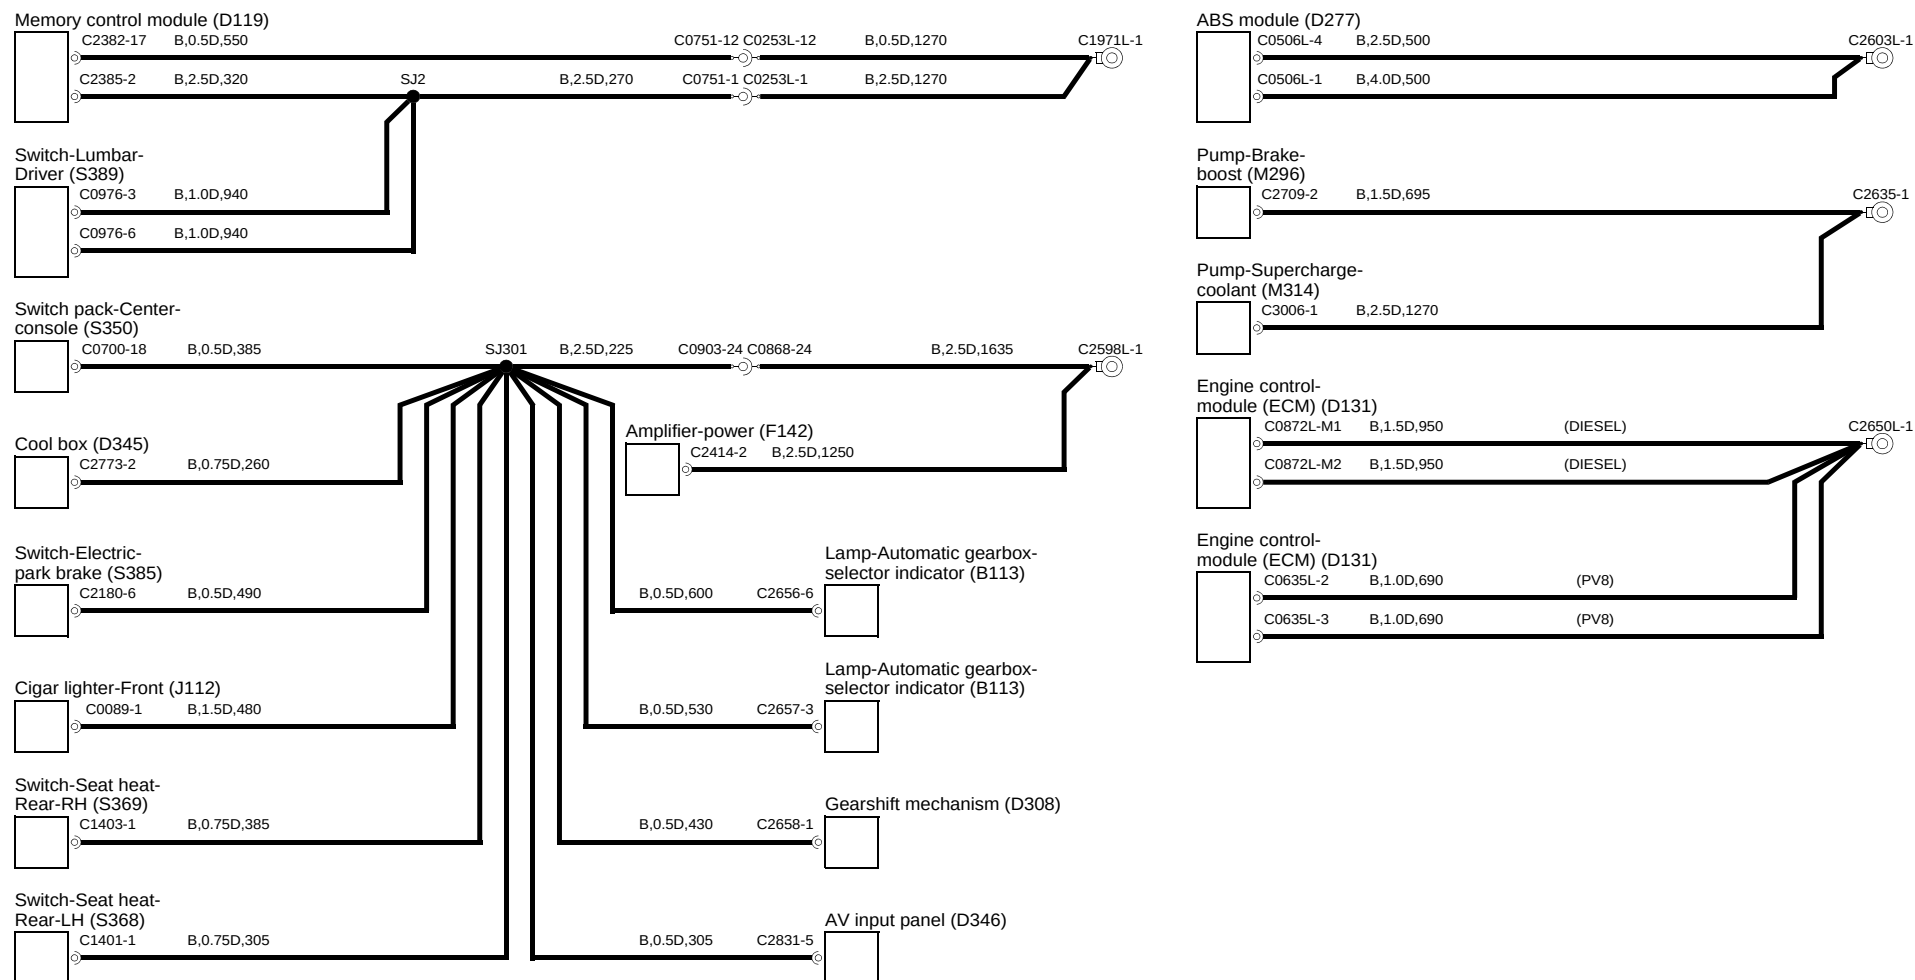


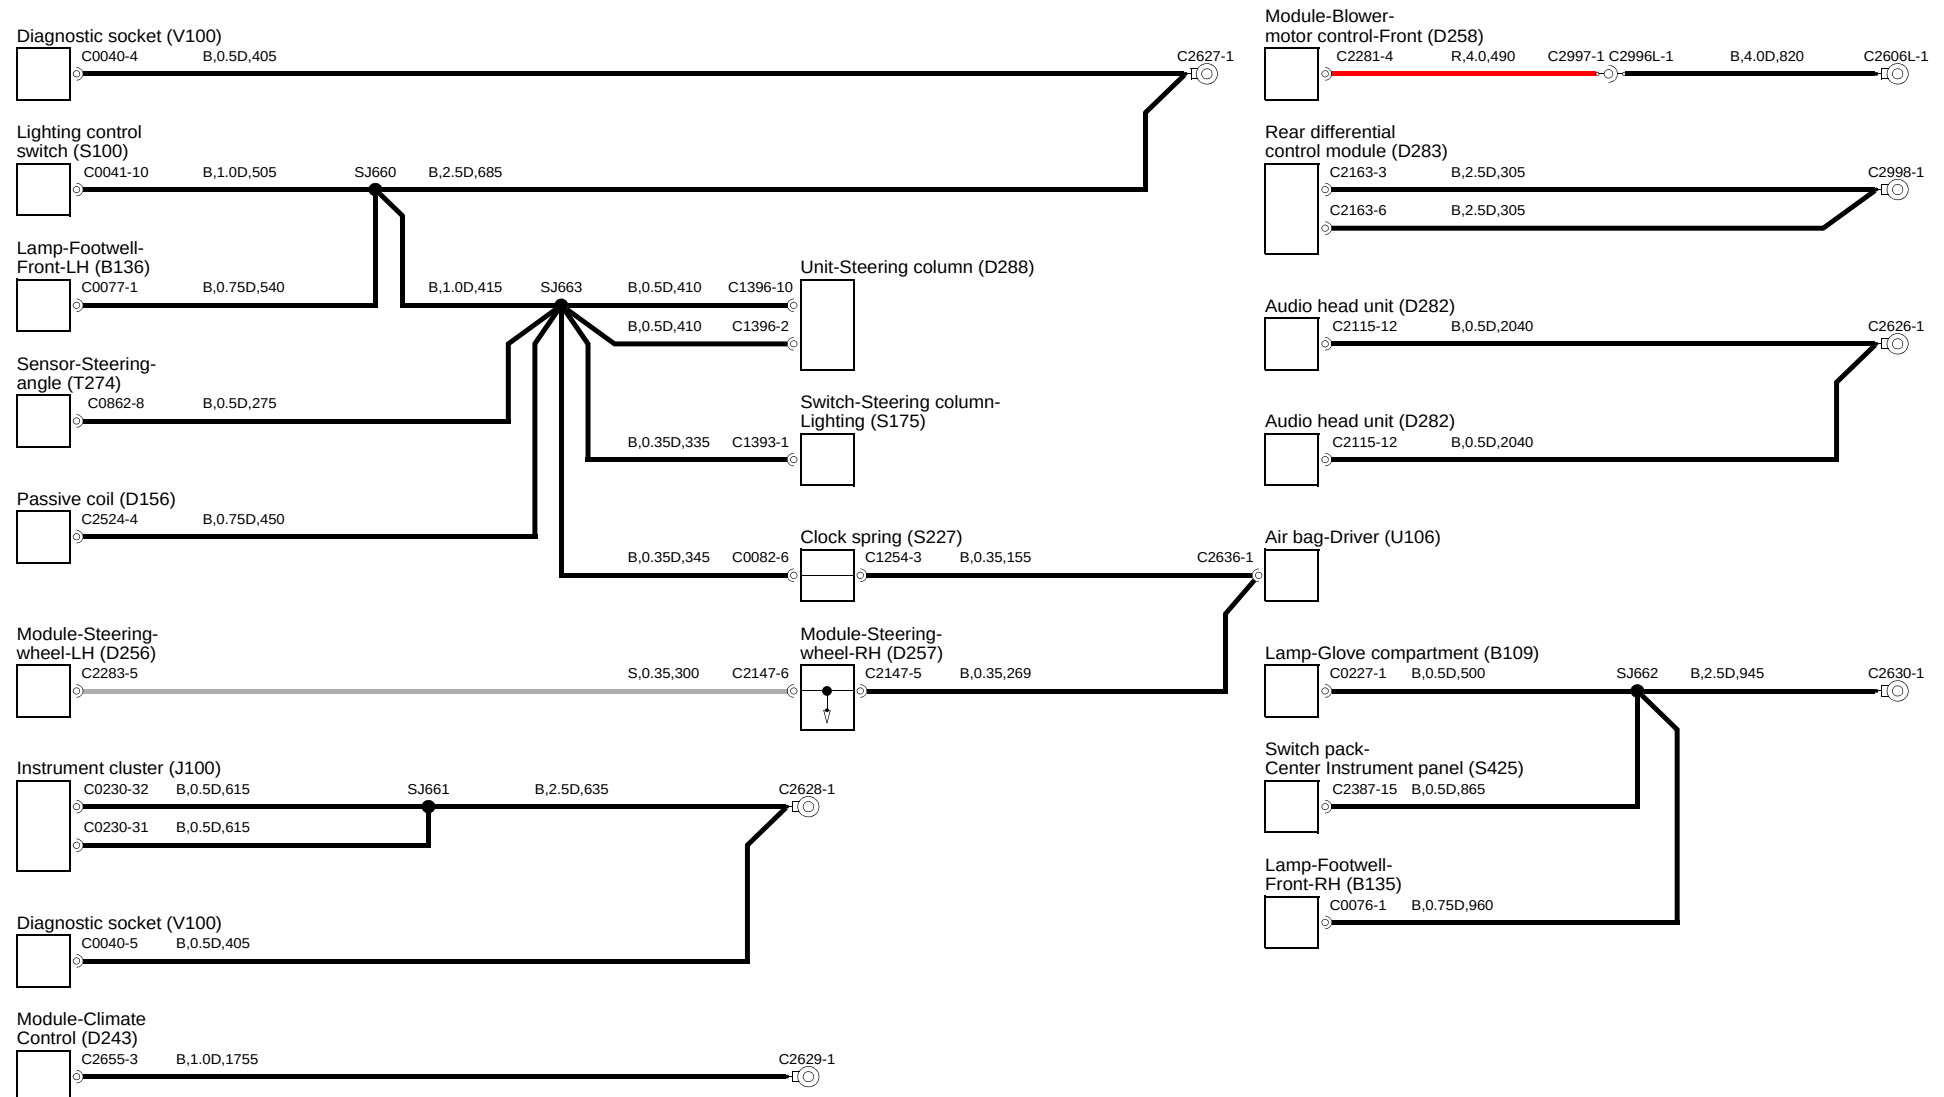

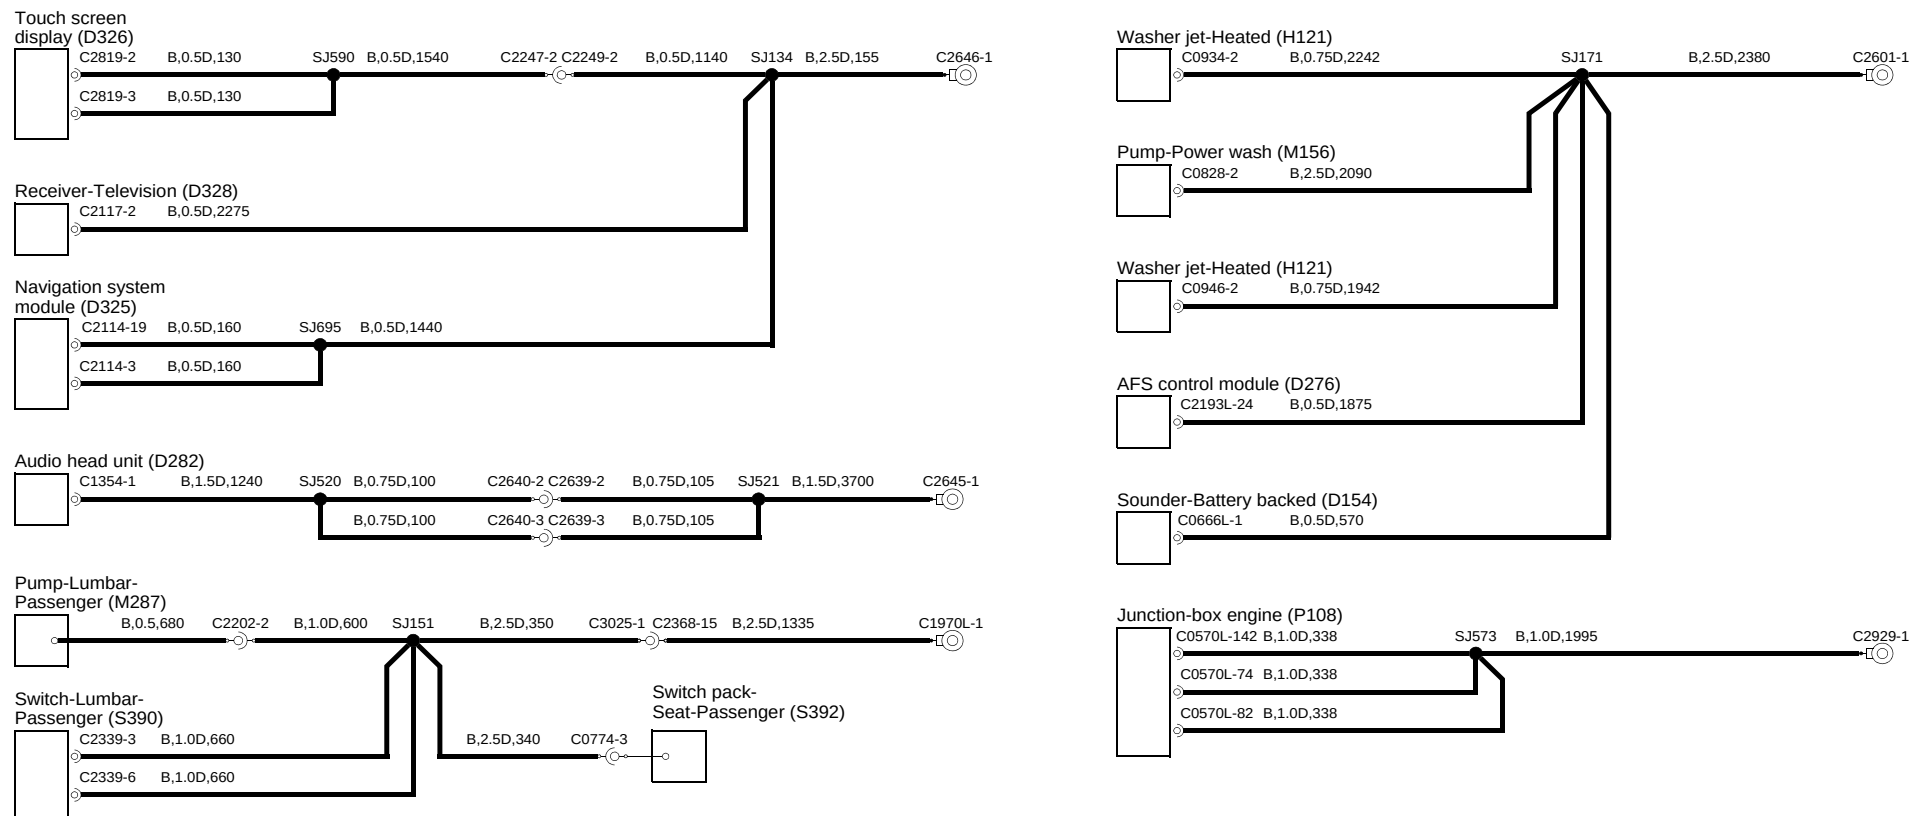

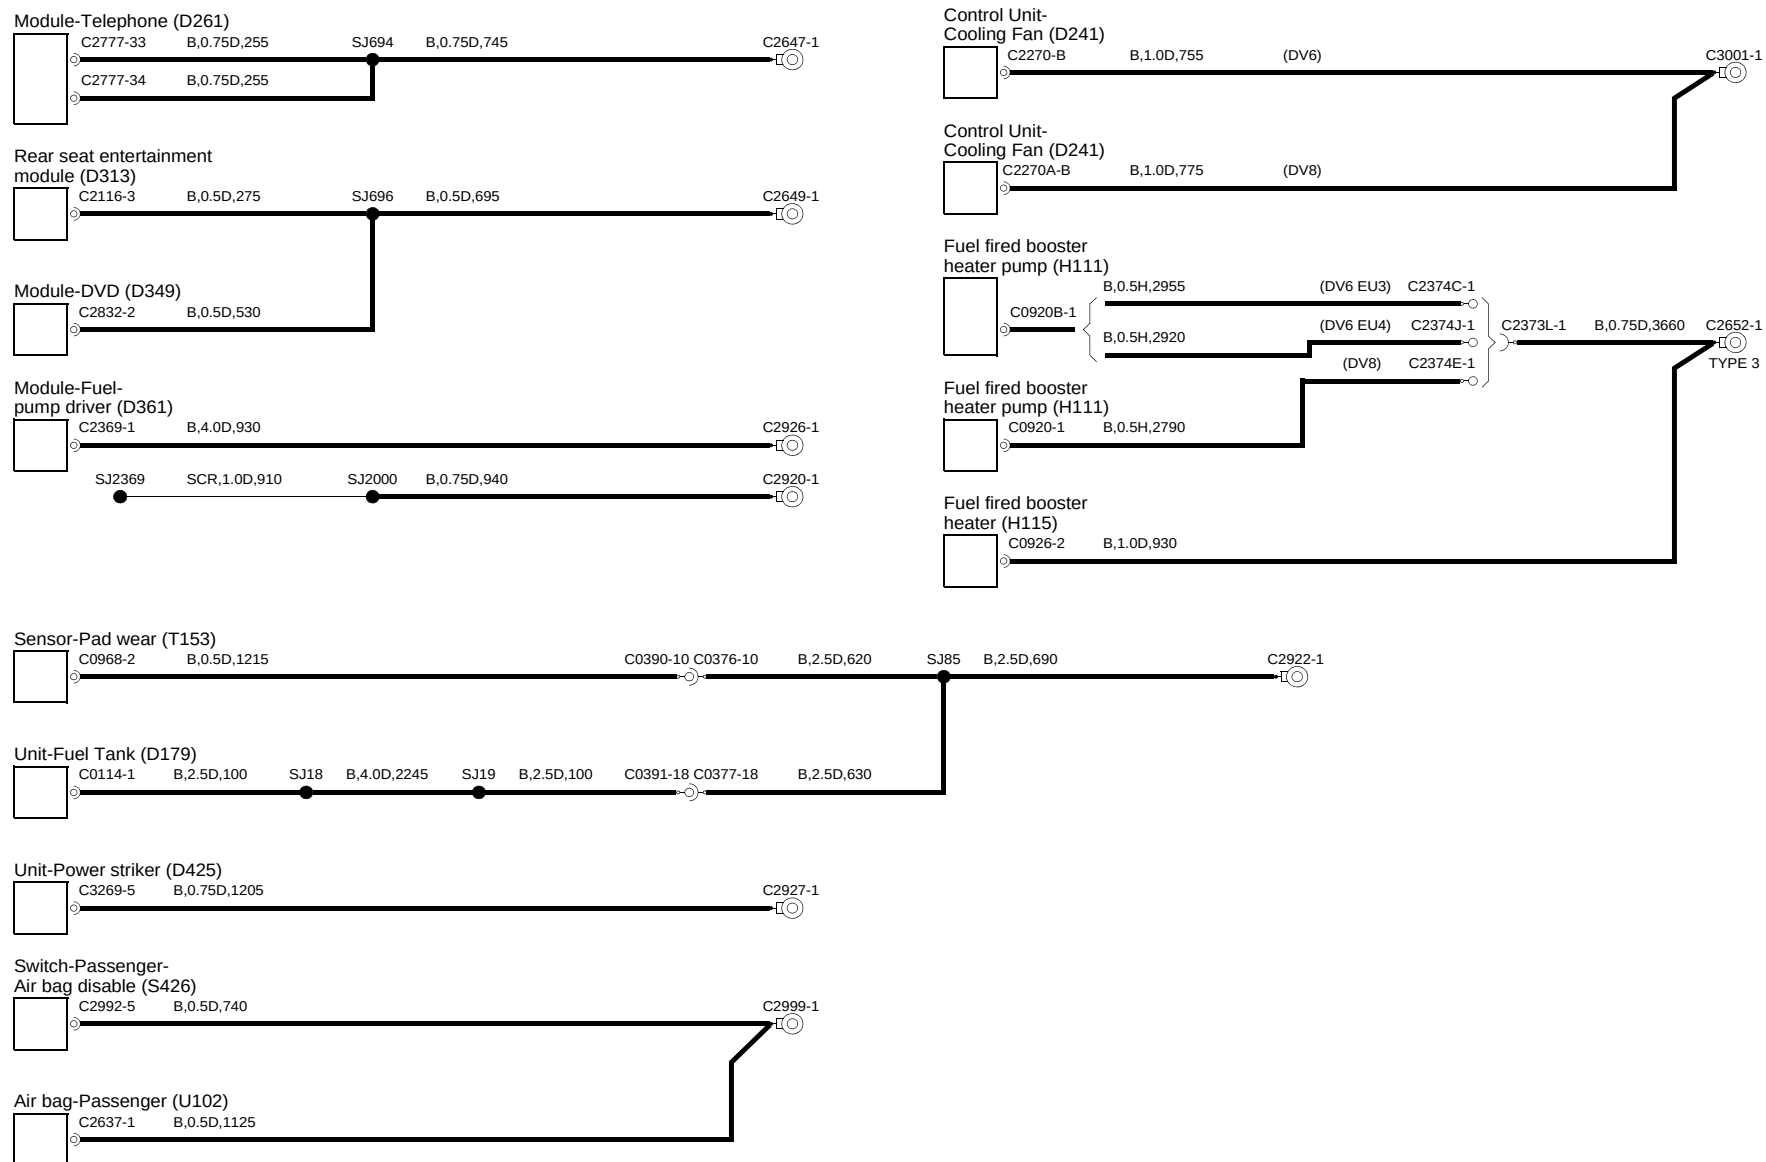

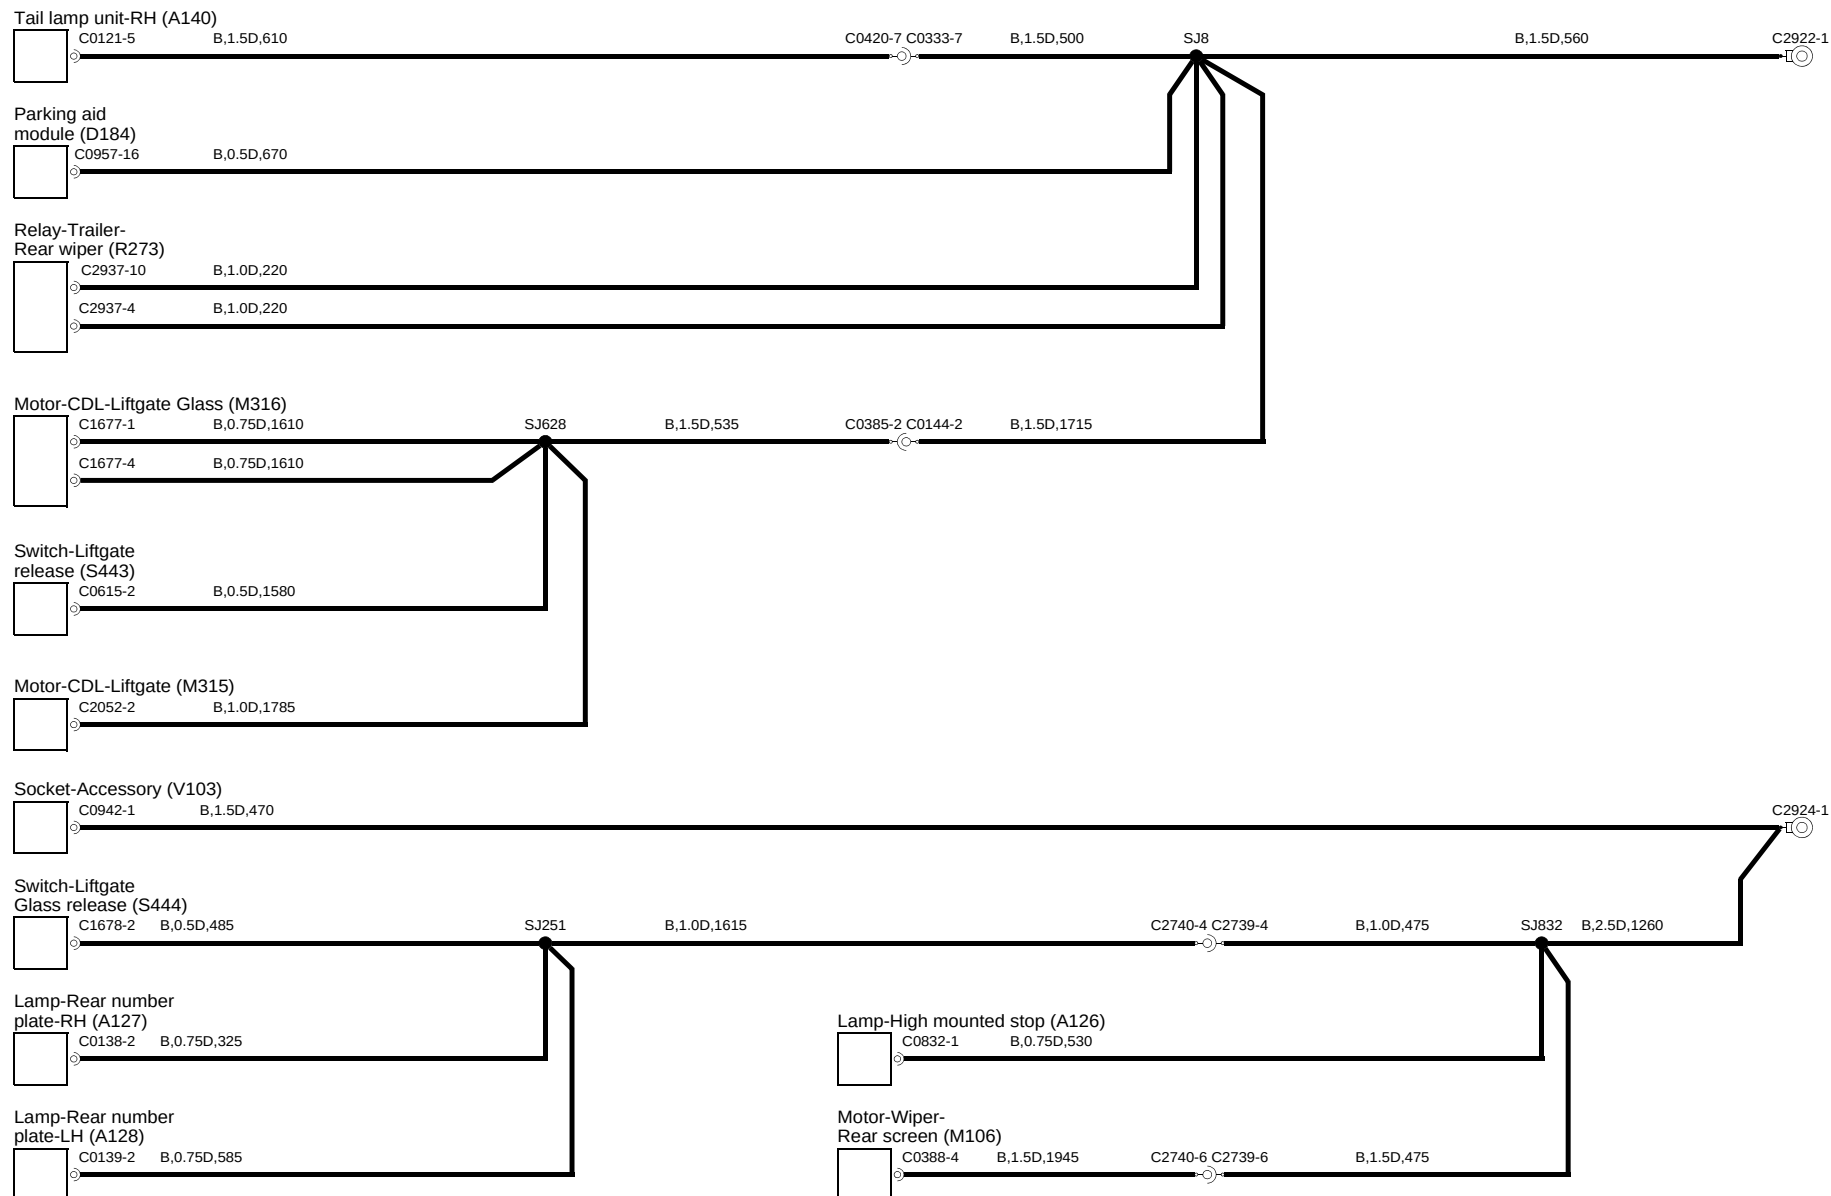


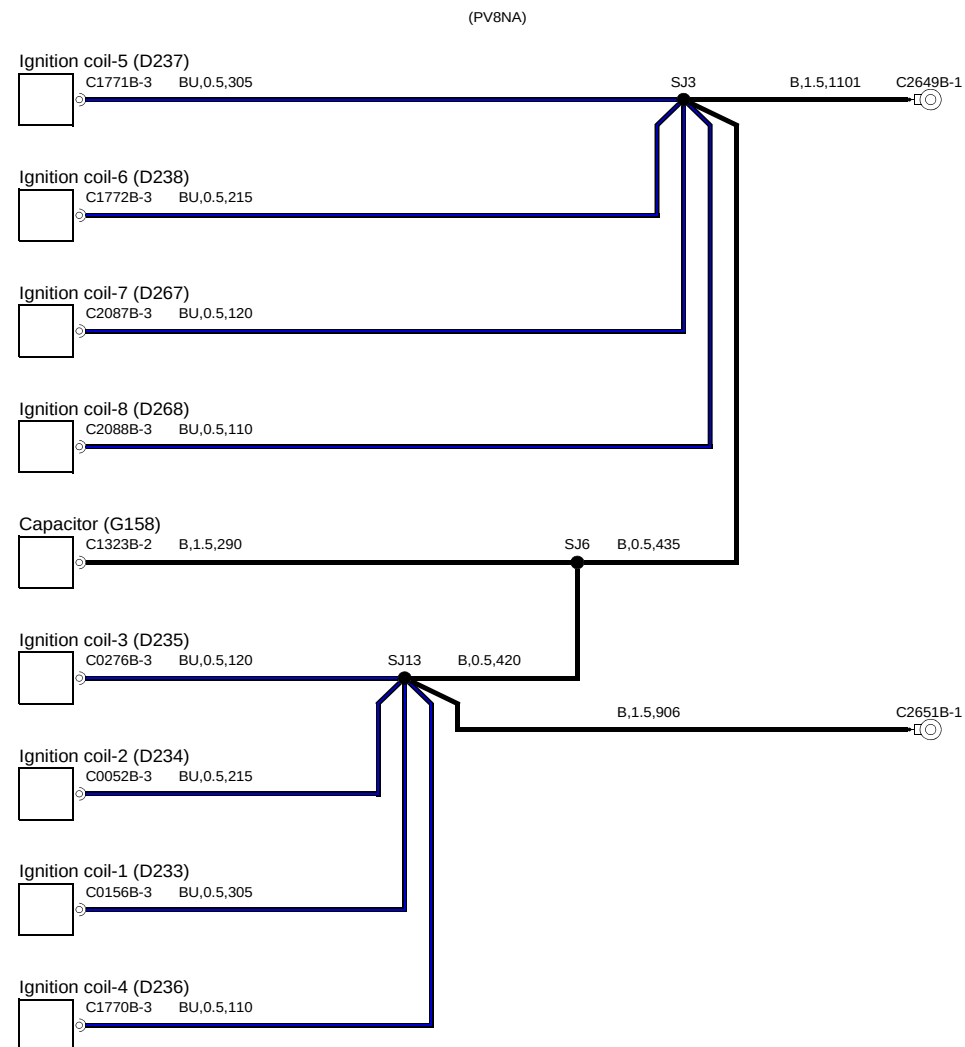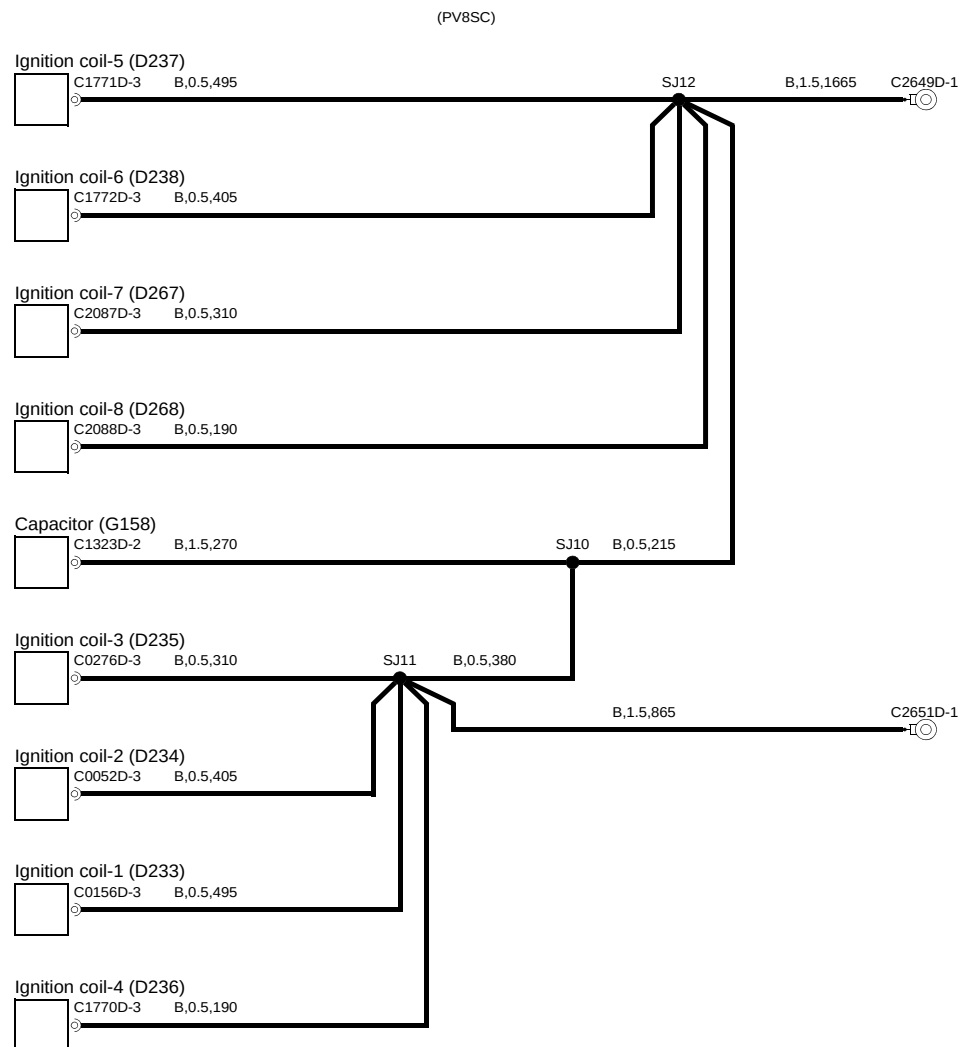

Fuel fired booster
heater (H115)



 
Trailer pick-up (P124)




Sensor-Adaptive-
cruise control (T350)



 Lamp-Fog-
Front-LH (A109)




Lamp-Fog-
Front-RH (A108)

 


Switch-Bonnet (S224)




Headlamp-RH (A100)

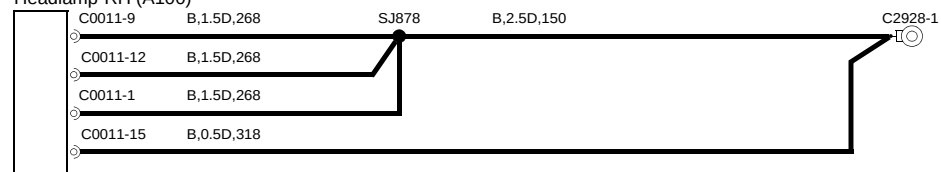

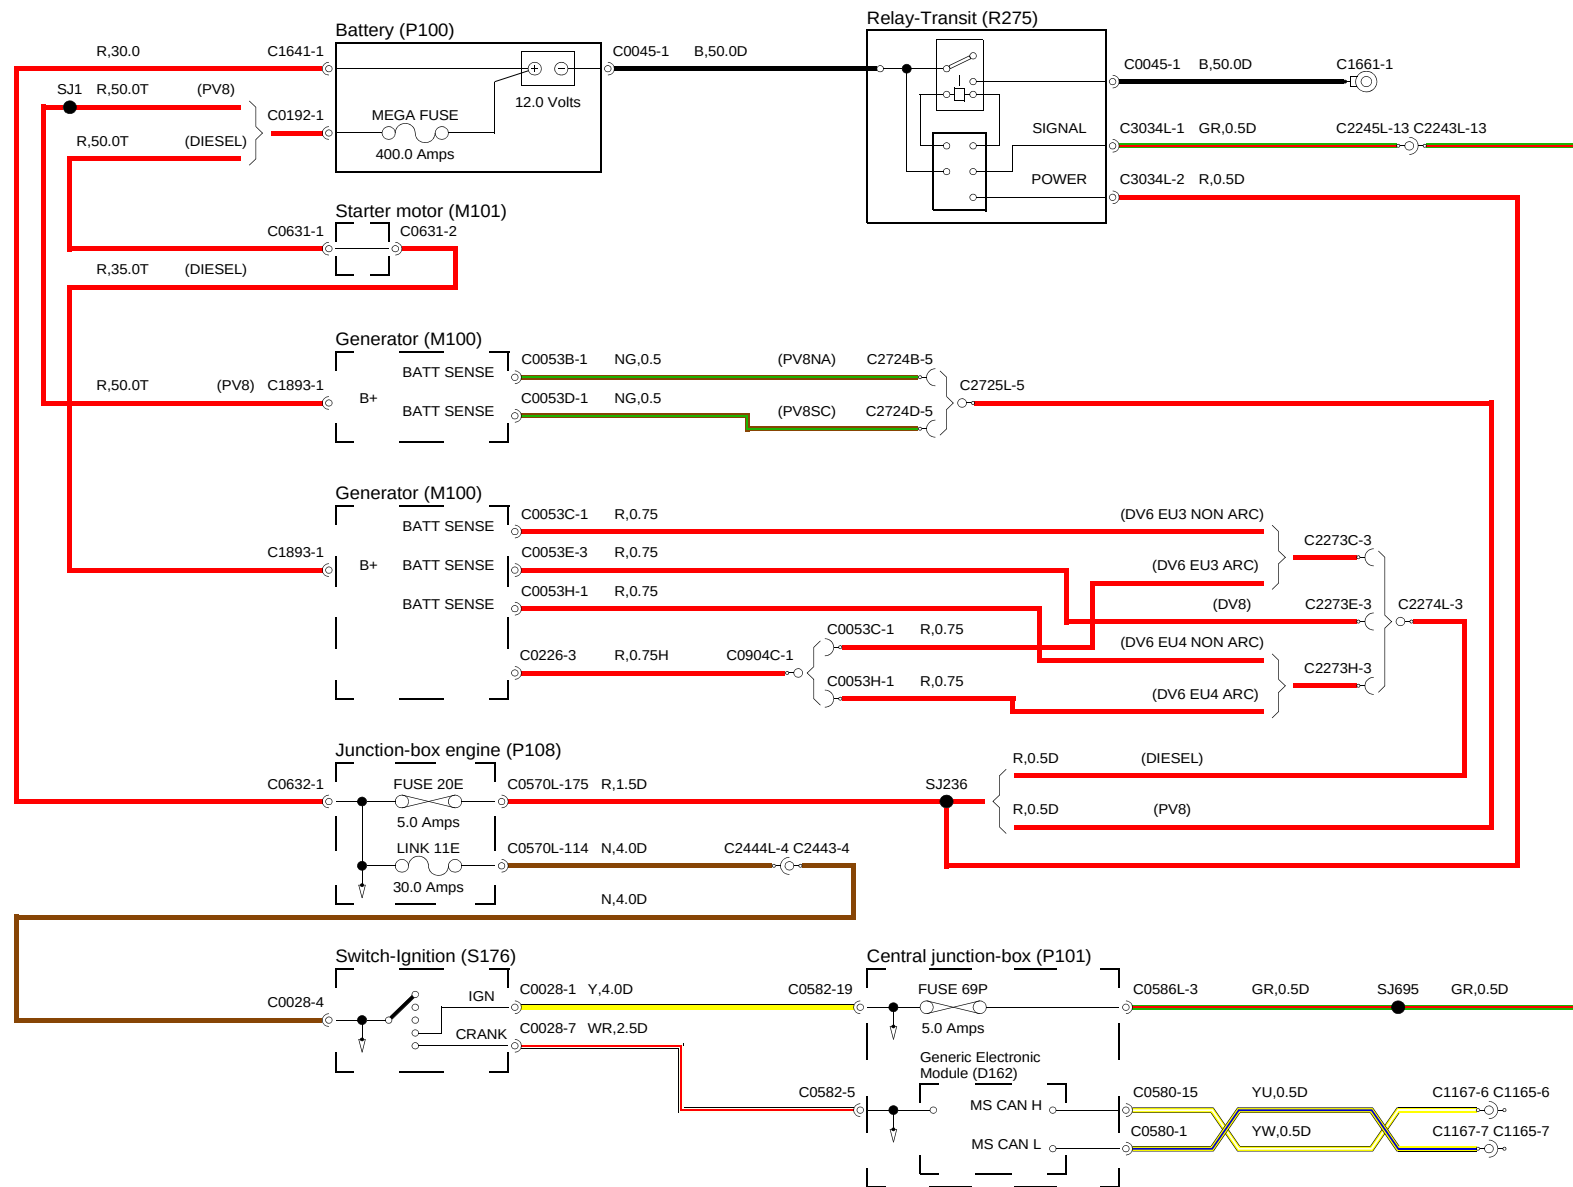


SJ3 (GW) MAIN

Junction box-Central (P101)

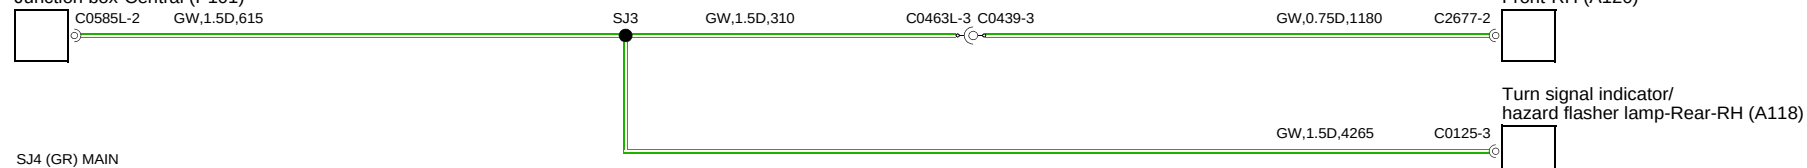

SJ4 (GR) MAIN


Junction box-Central (P101)

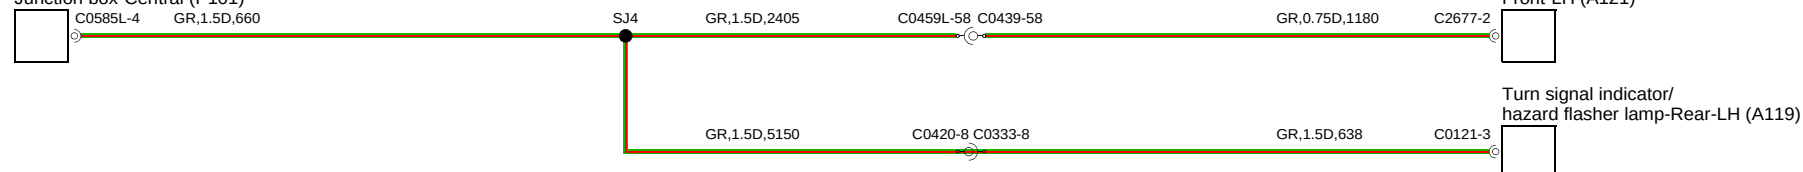

SJ5 (RU) DV6 EU3 ENGINE

SJ5 (RU) DV6 EU4 ENGINE

Junction-box engine (P108)




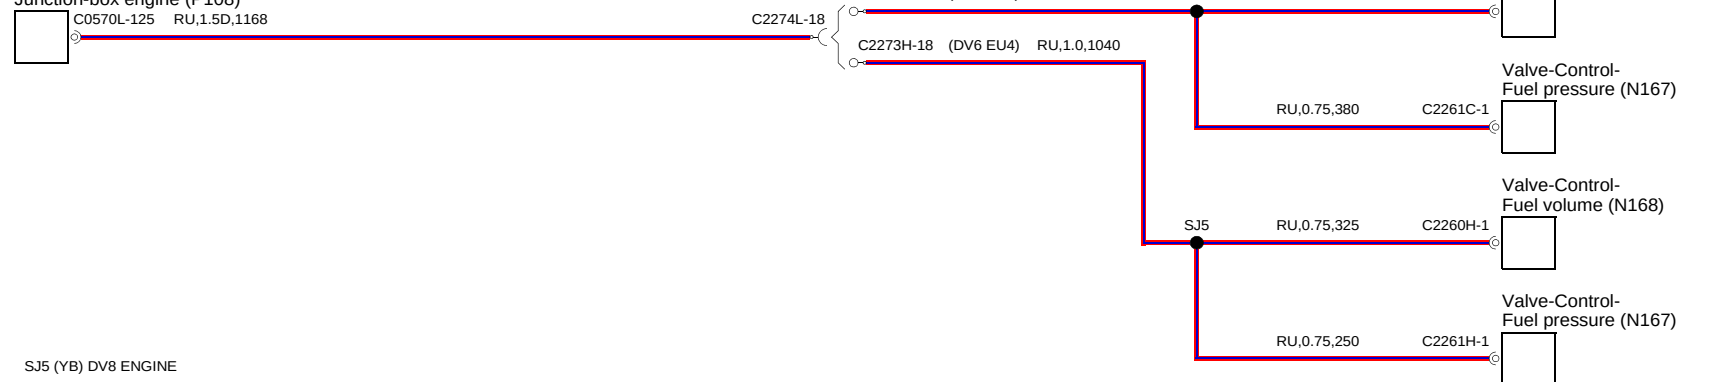



SJ5 (YB) DV8 ENGINE

Engine control-module (ECM) (D131)




SJ7 (GN) MAIN

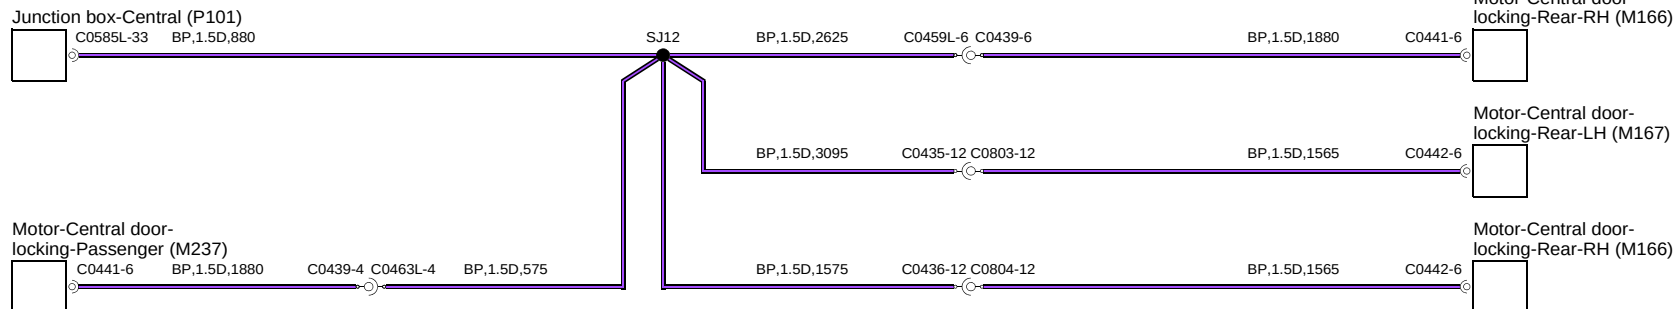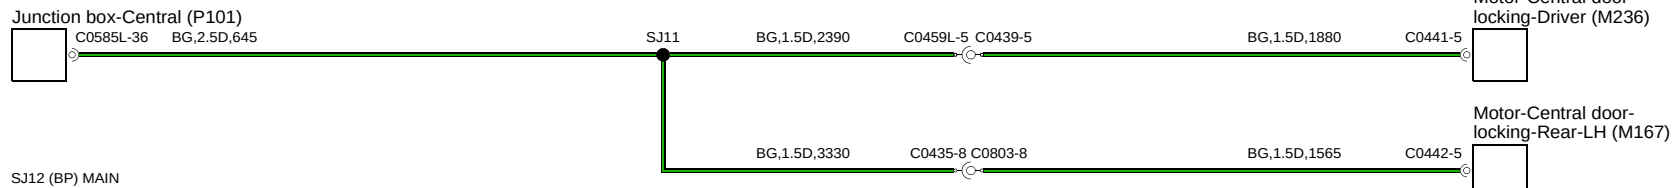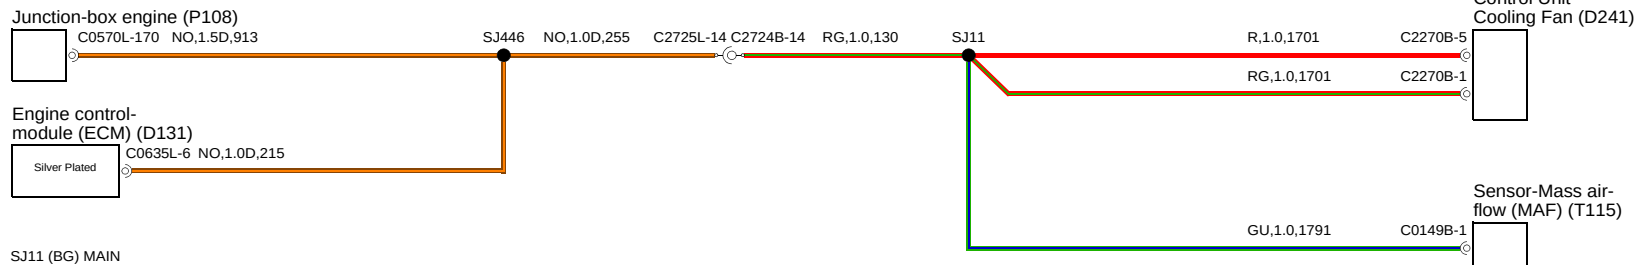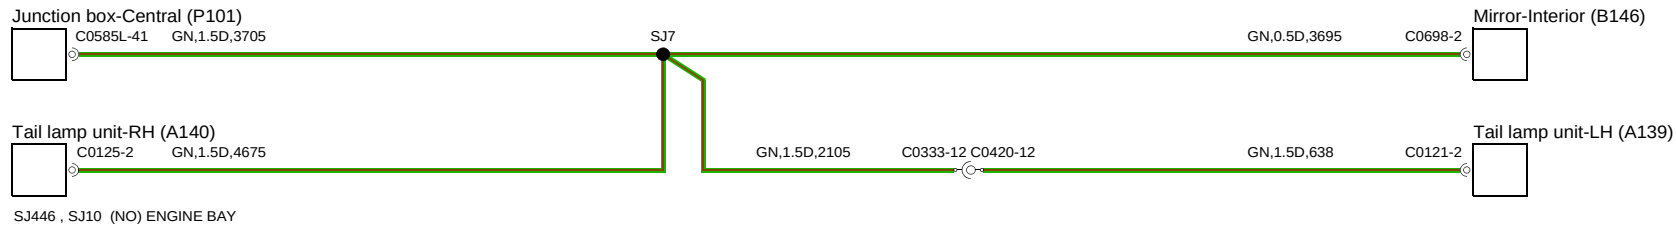


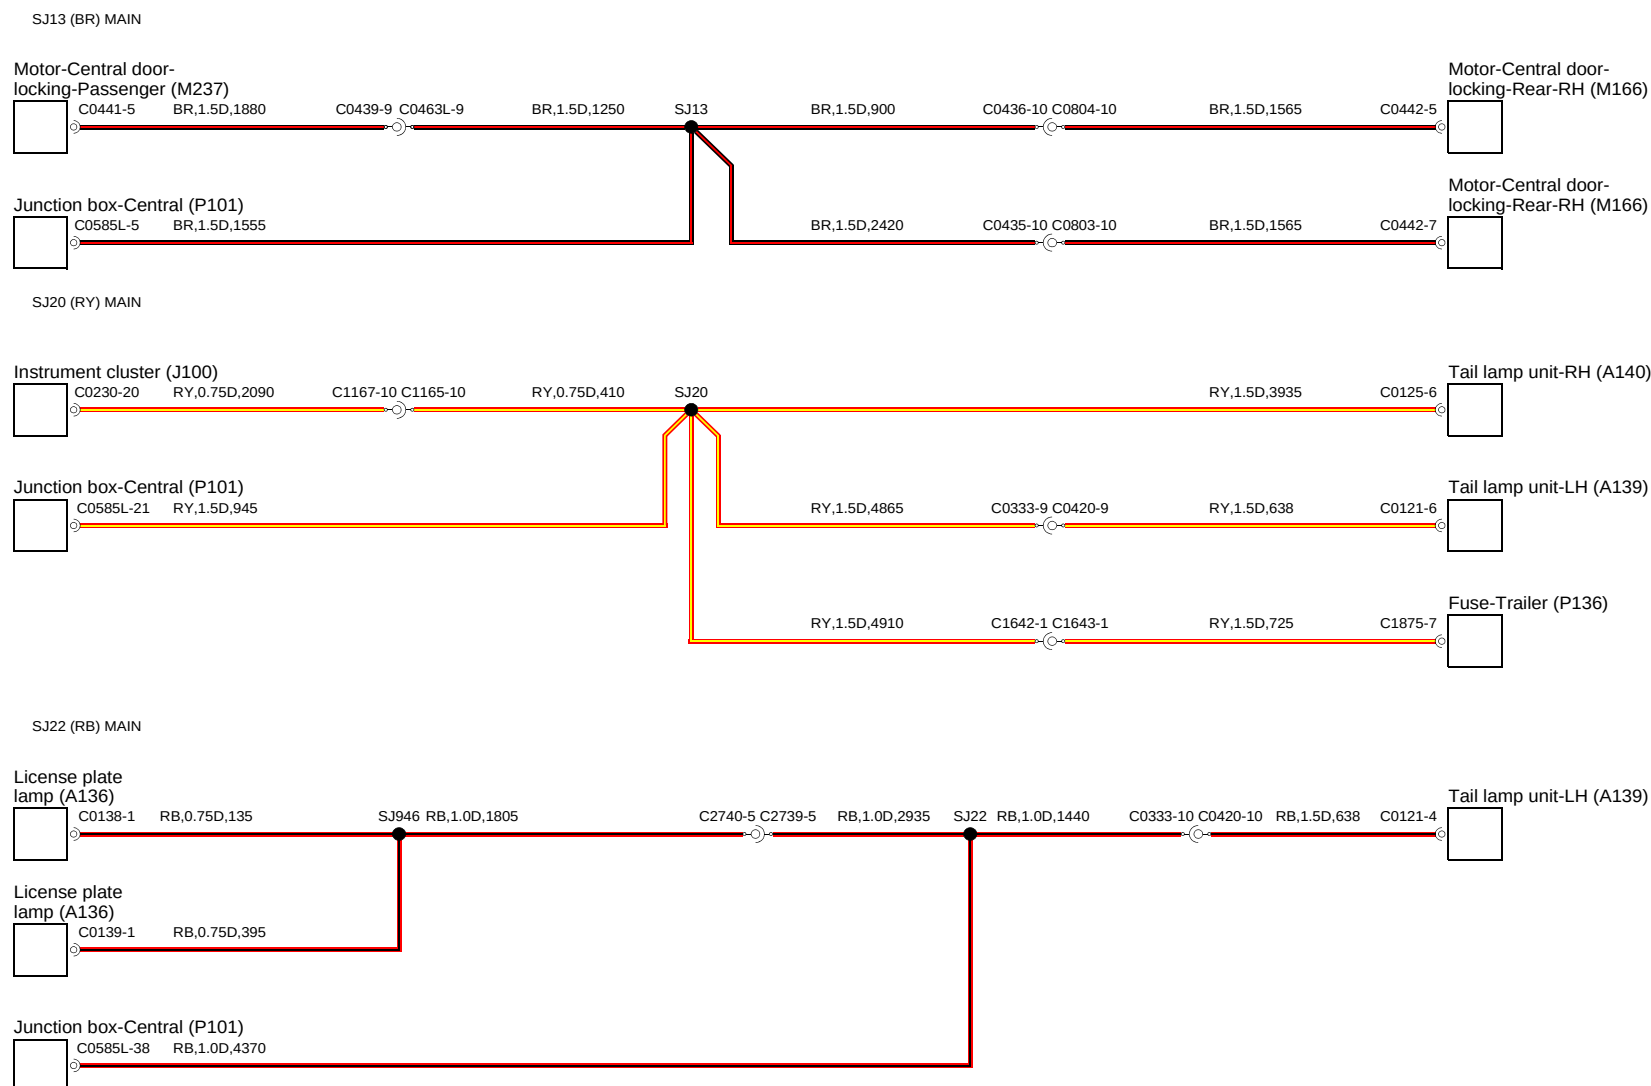


SJ111 (LGW) SEAT SJ23 (LGW) MAIN

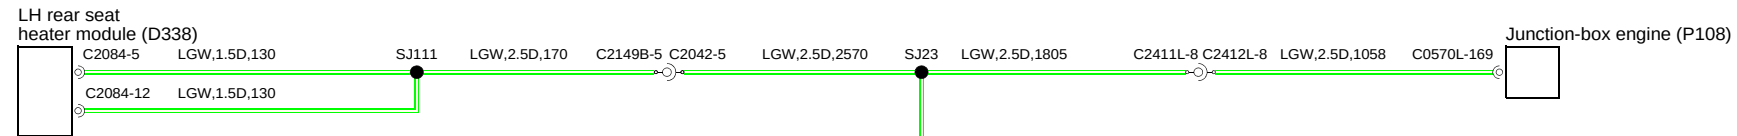

SJ111 (LGW) SEAT

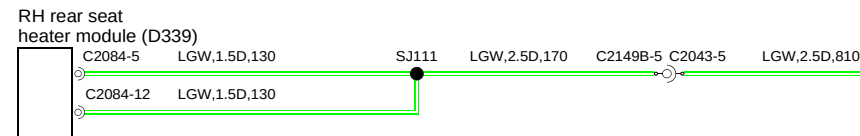


SJ27 (YR) MAIN

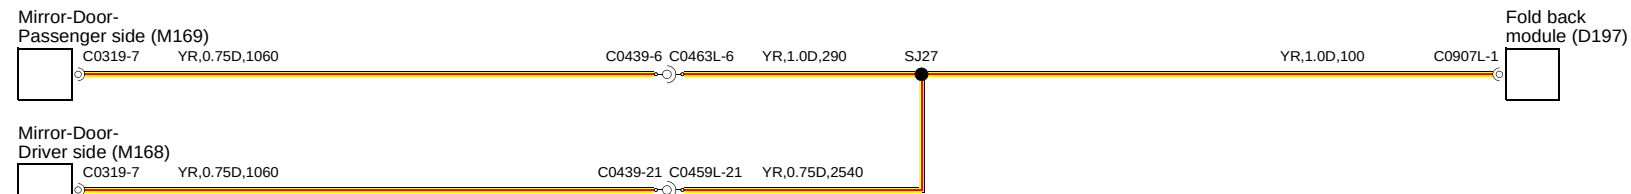


SJ28 (SK) MAIN




SJ29 (R) MAIN

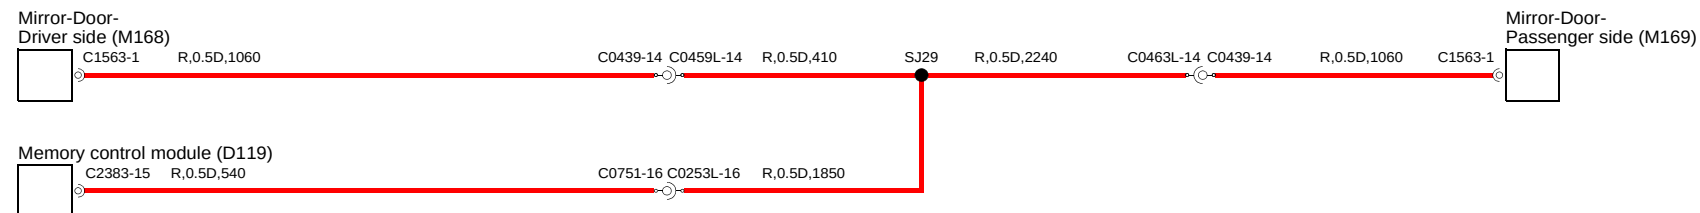


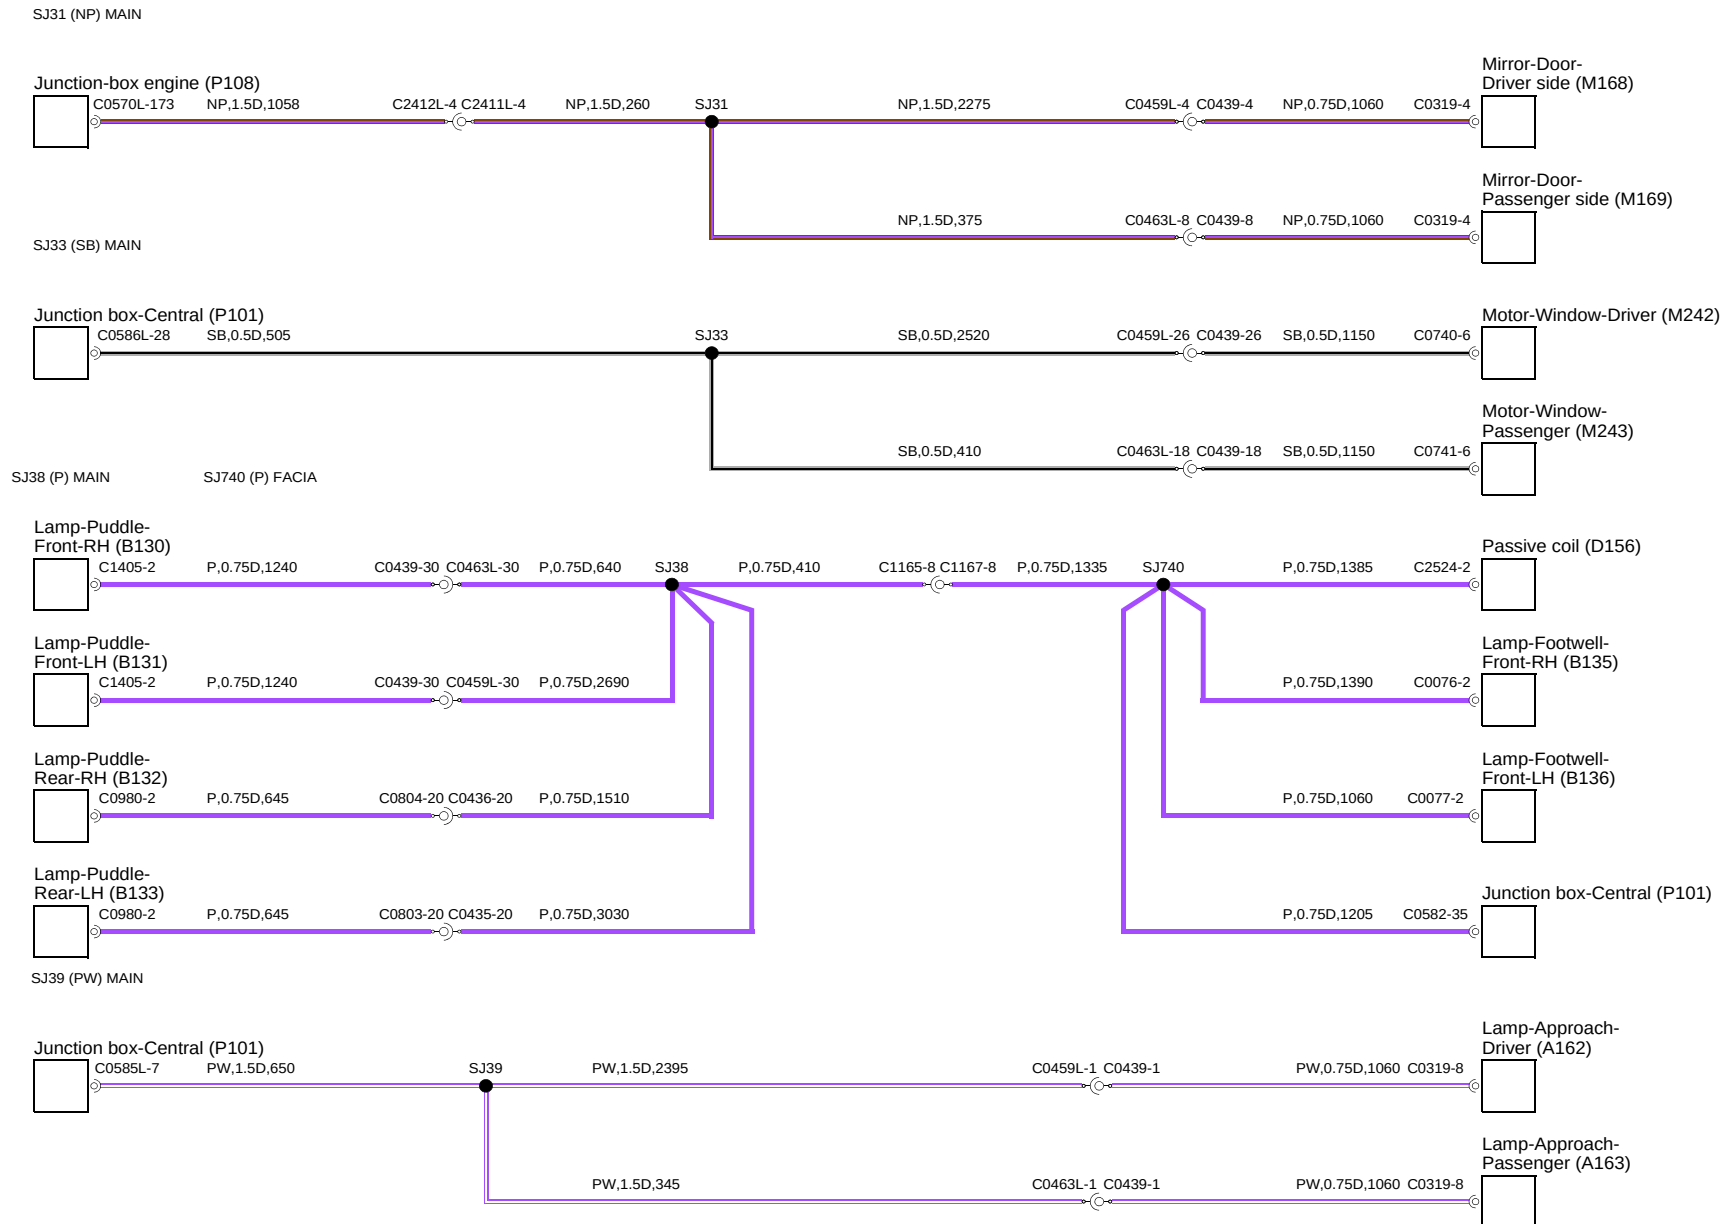


SJ45 (R) MAIN

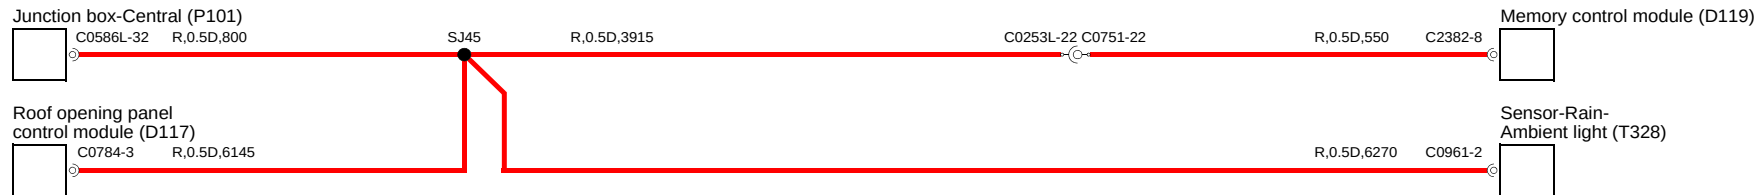

SJ46 (YU) MAIN

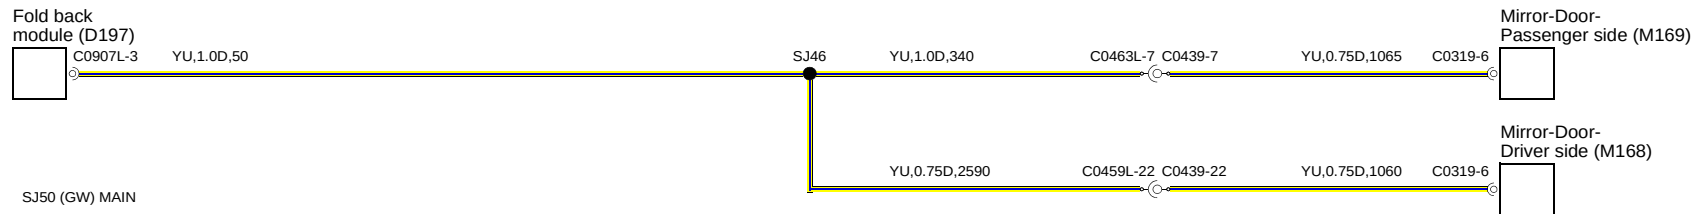



SJ50 (GW) MAIN

 



SJ667 (R) MAIN

SJ105 (R) FACIA

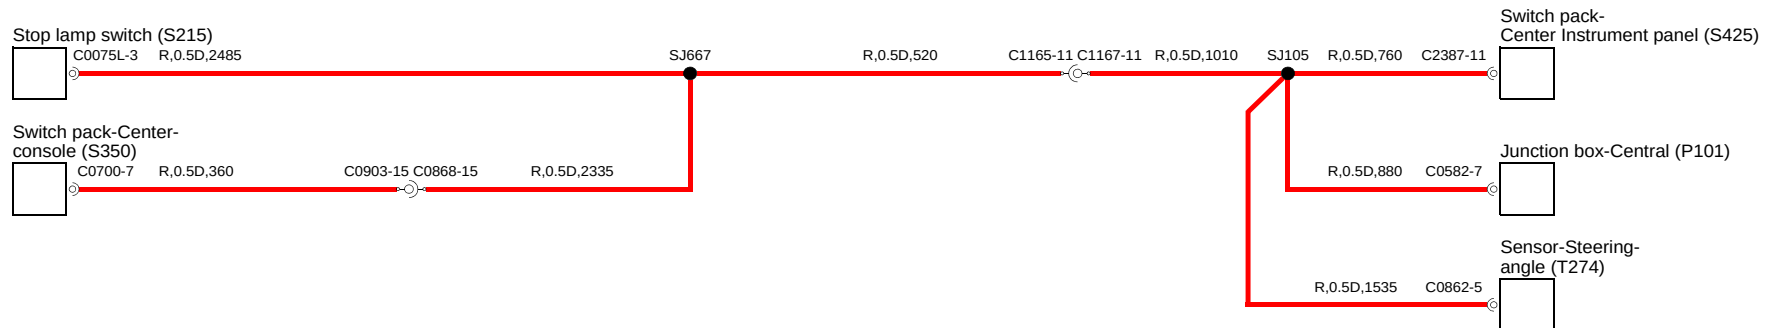


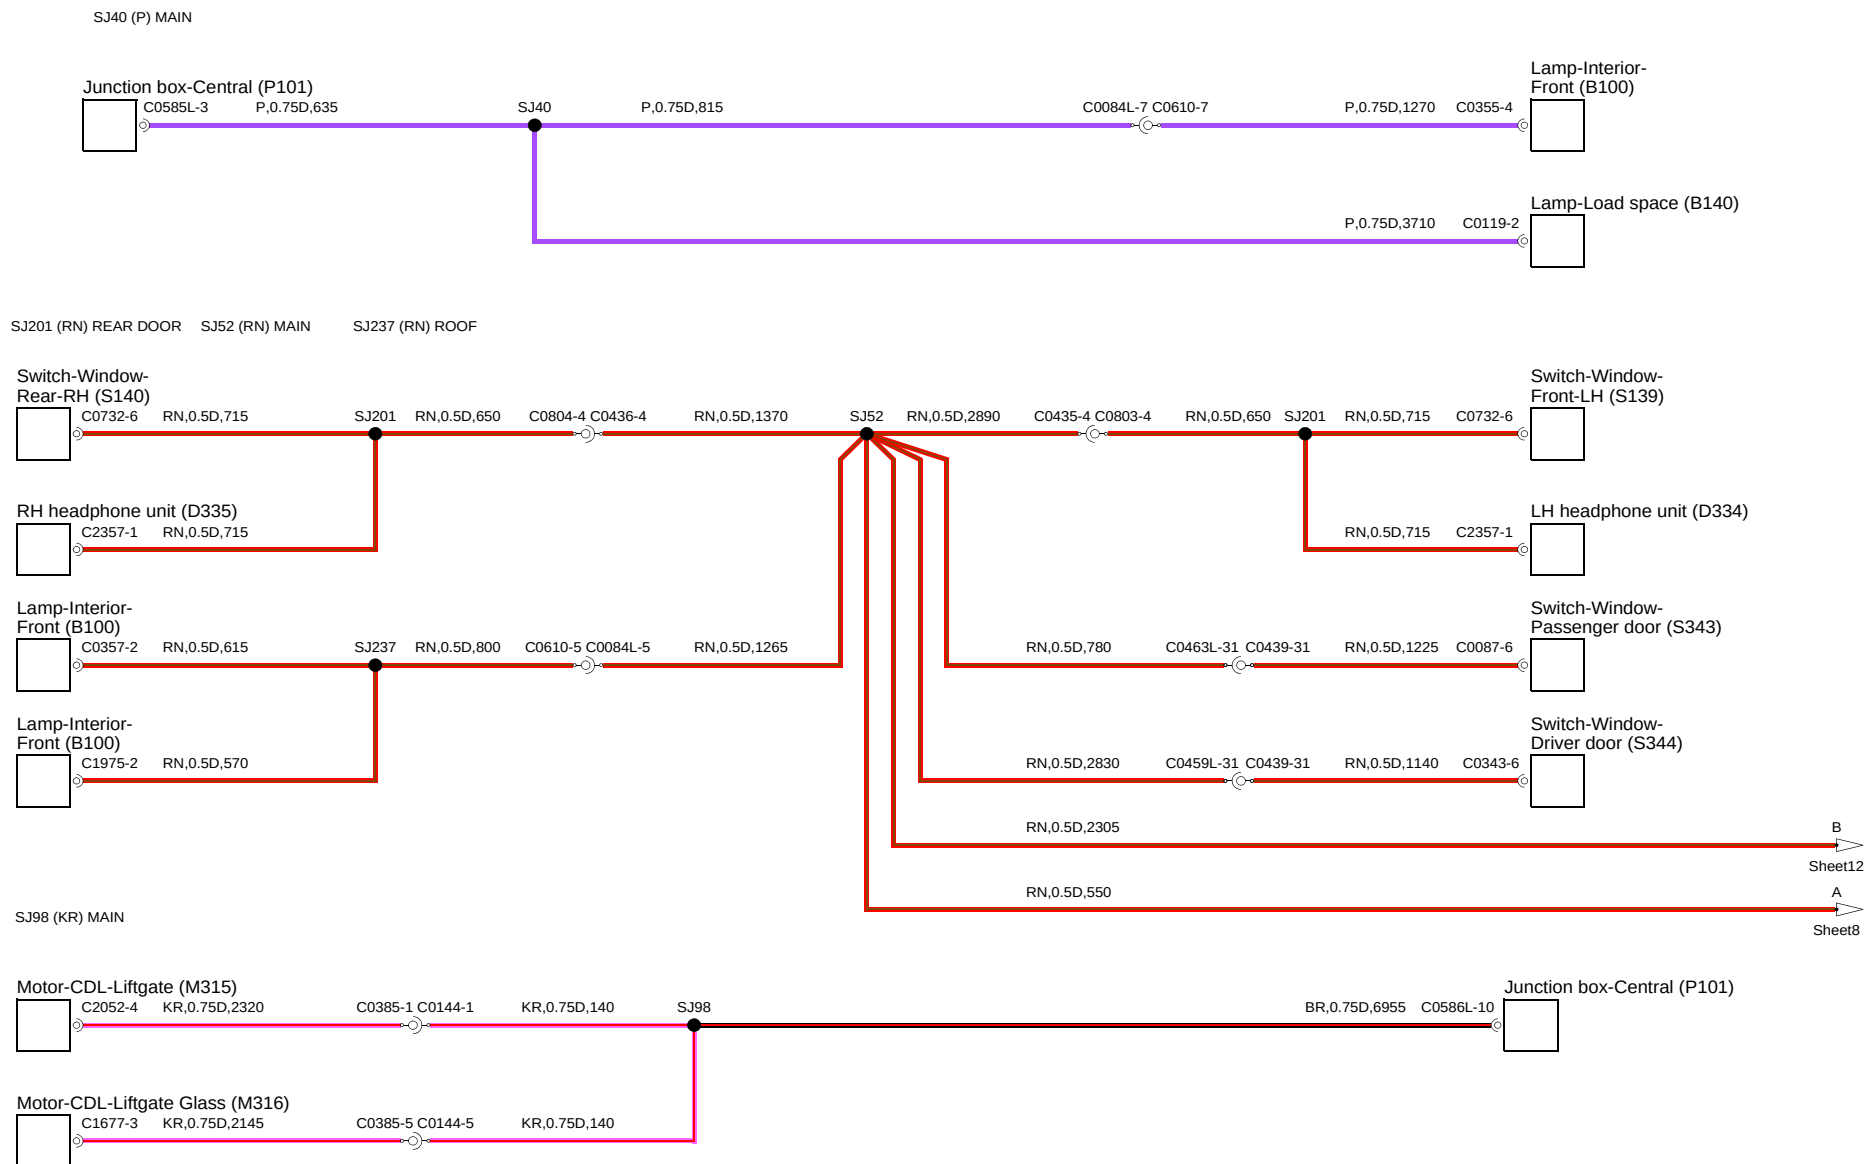

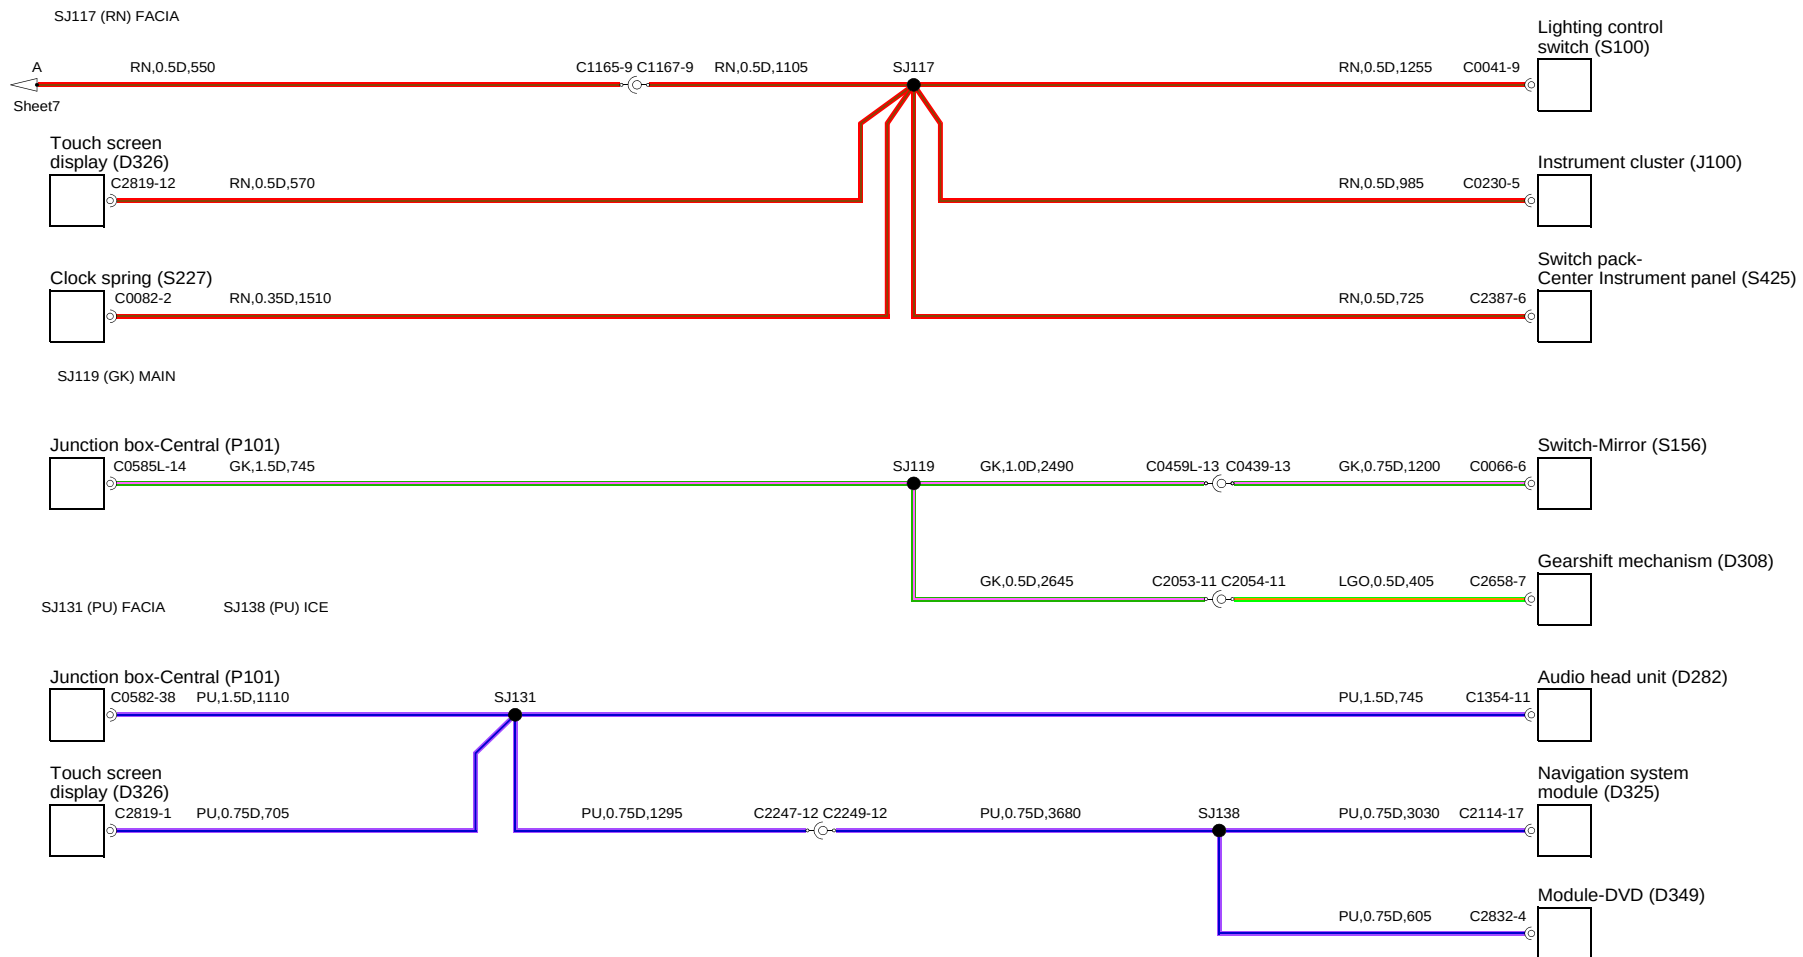


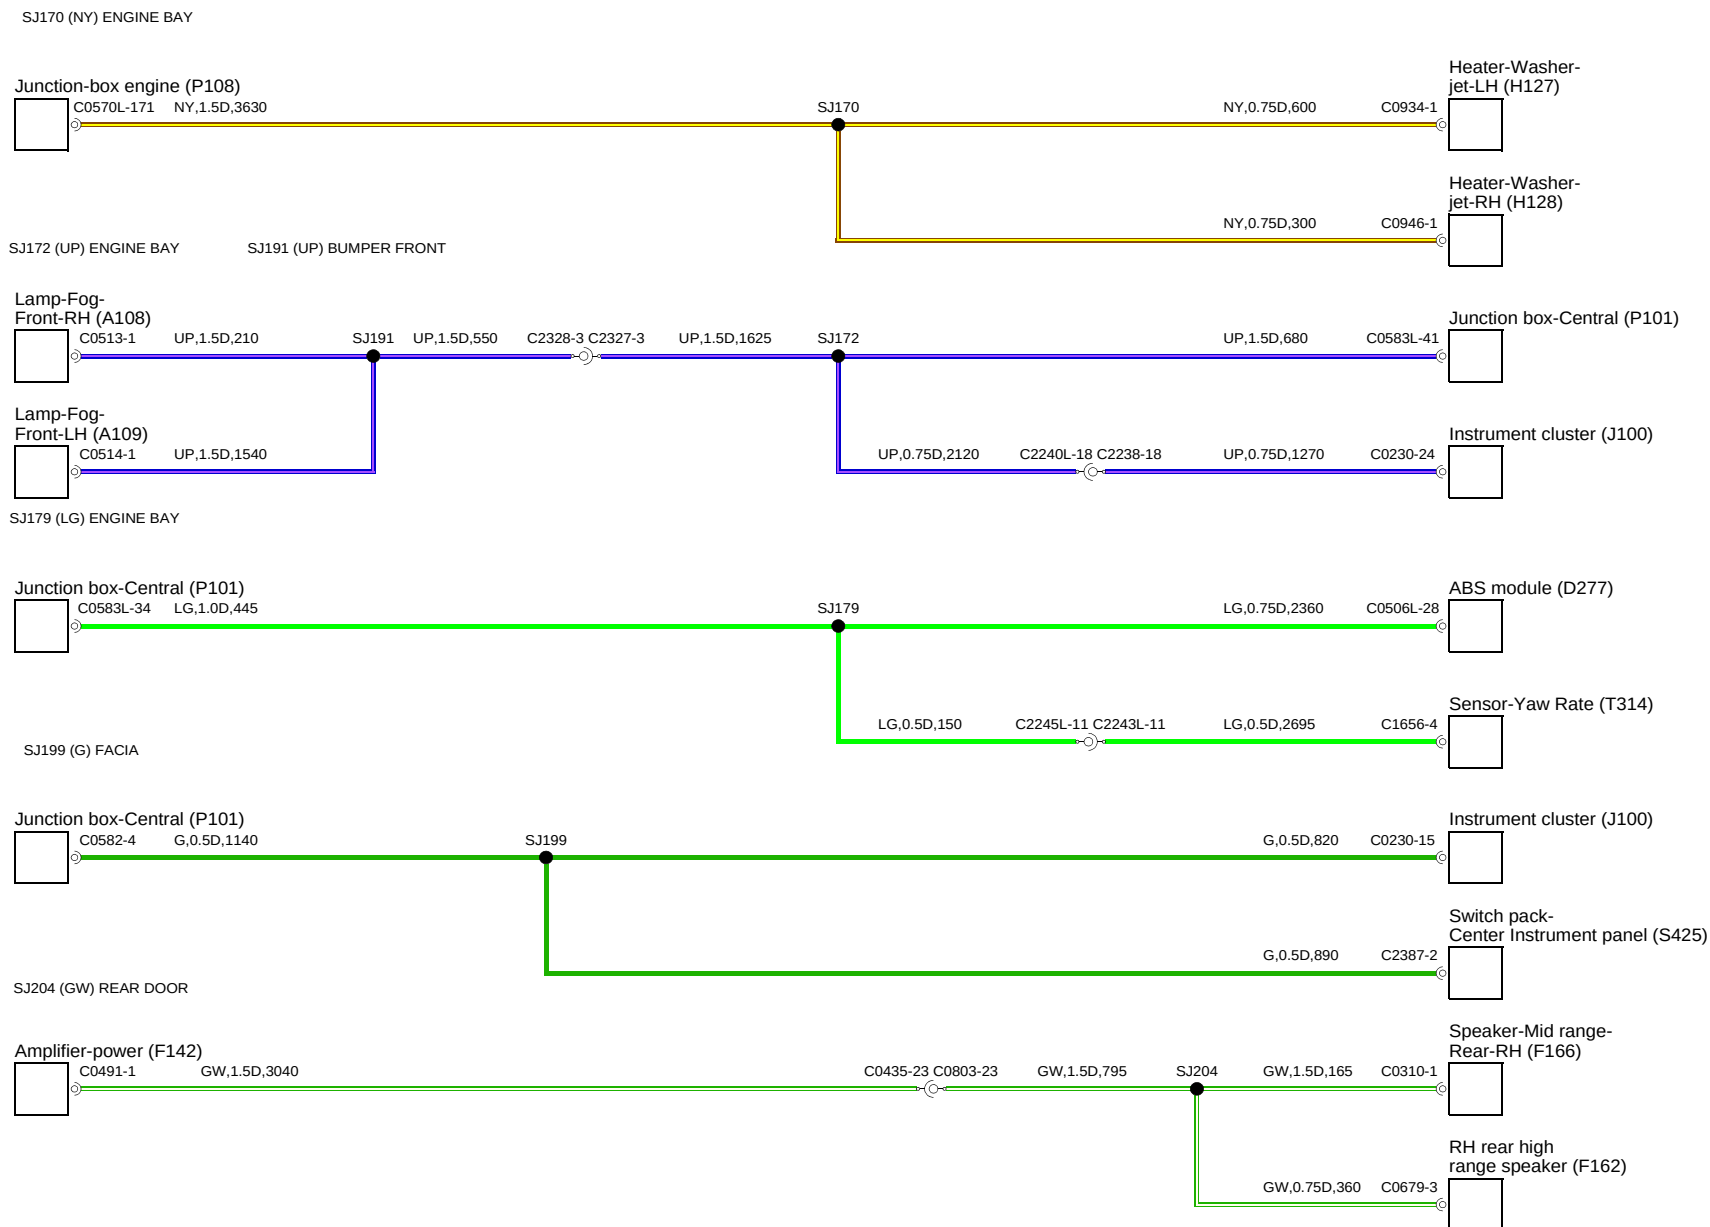


SJ204 (GW) REAR DOOR

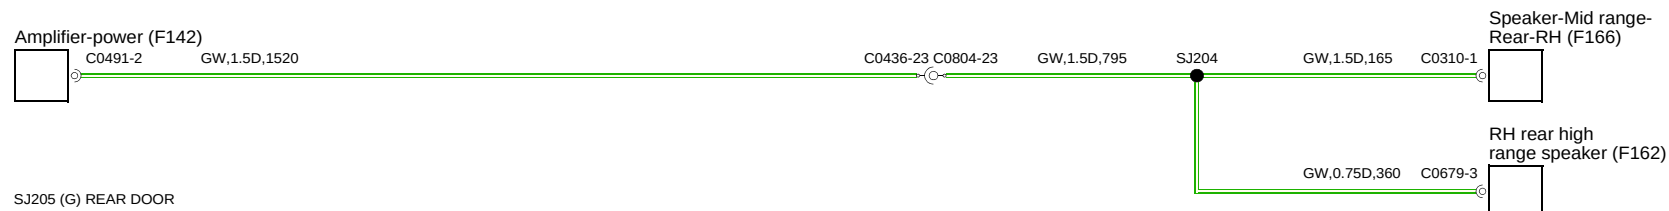


SJ205 (G) REAR DOOR

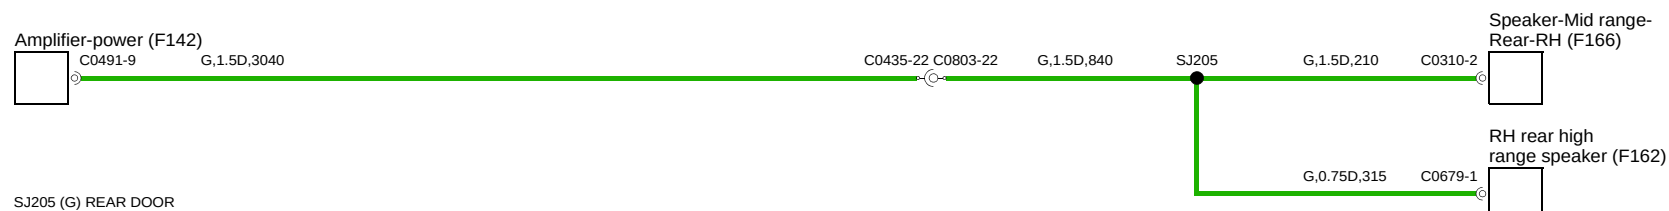


SJ205 (G) REAR DOOR

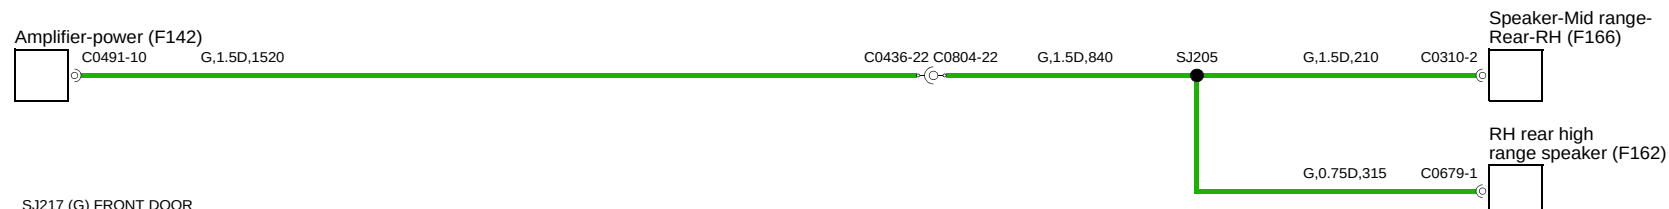


SJ217 (G) FRONT DOOR

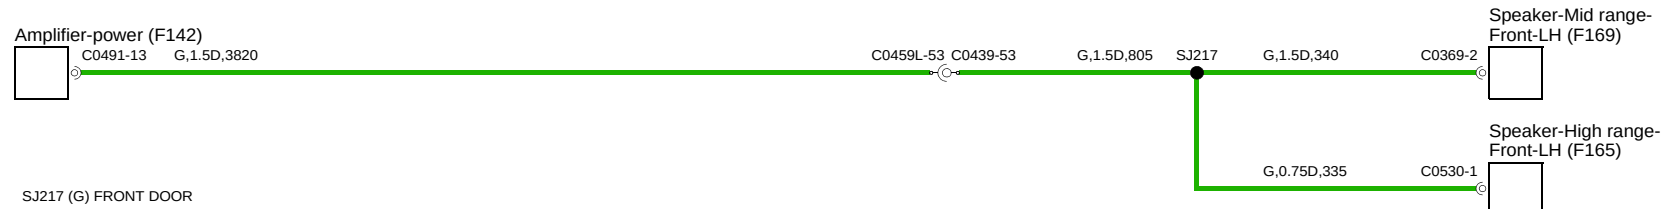


SJ217 (G) FRONT DOOR

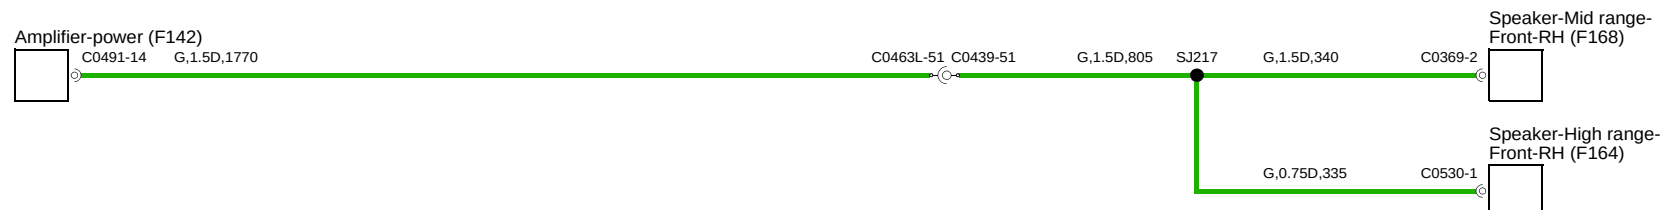


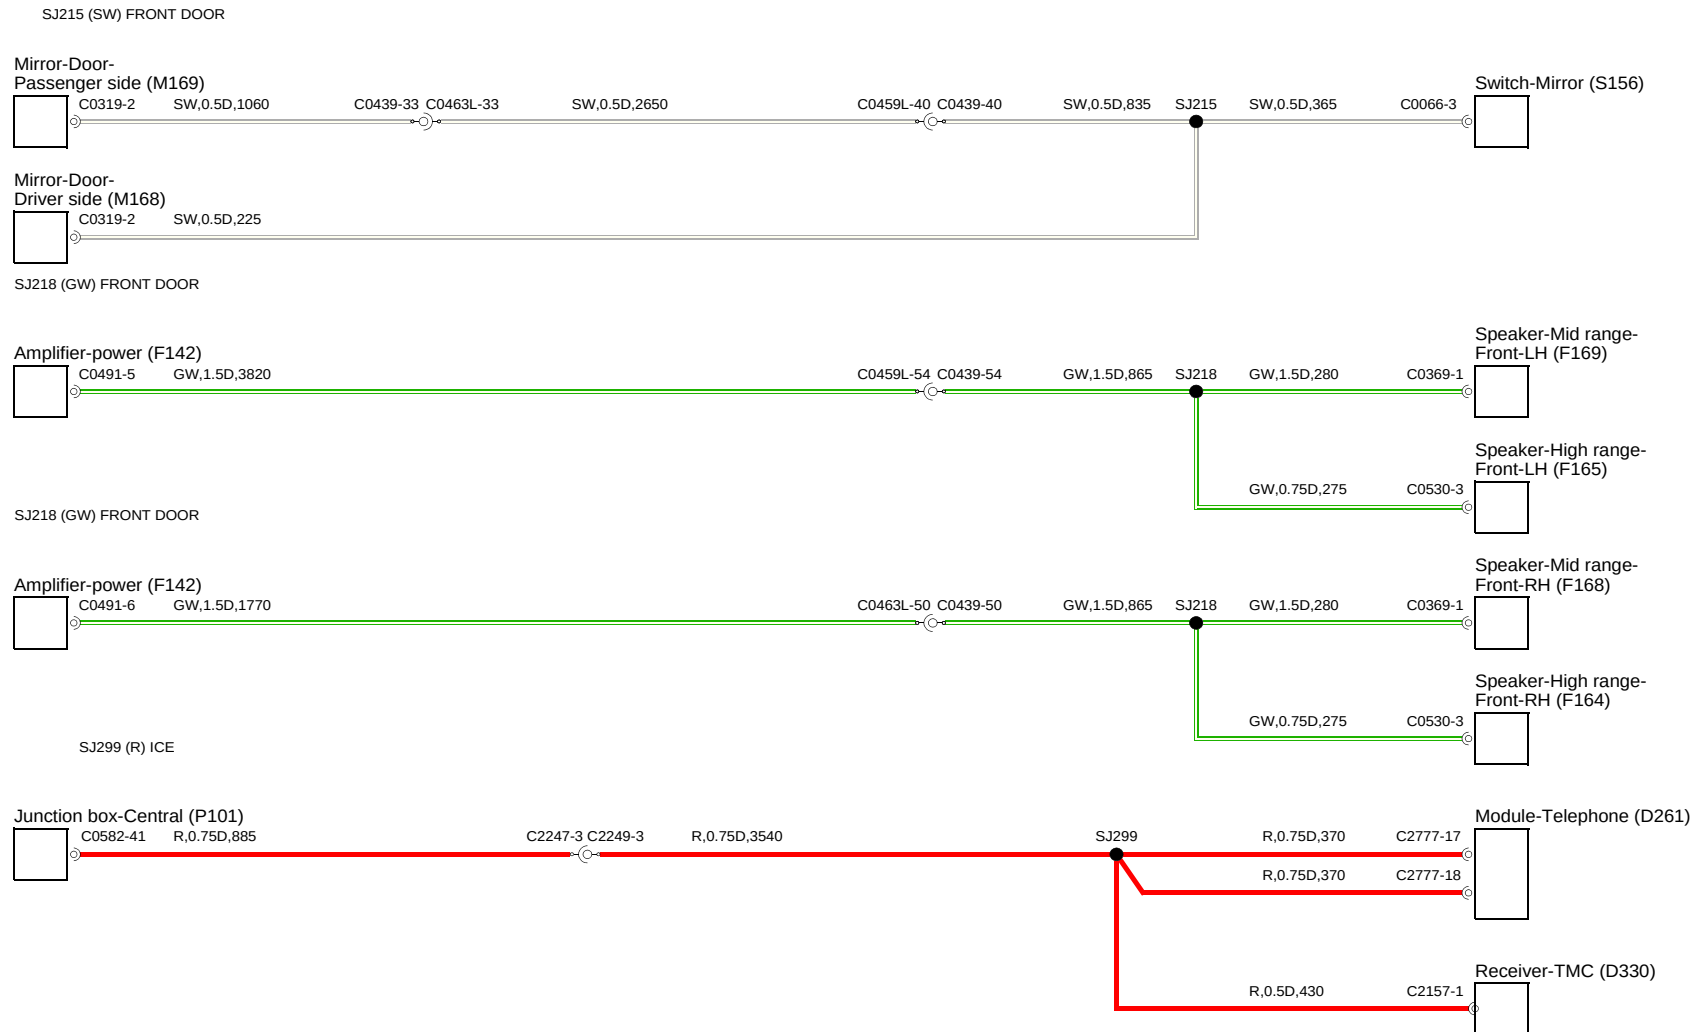


SJ14 (LGW) MAIN SJ234 (LGW) ROOF

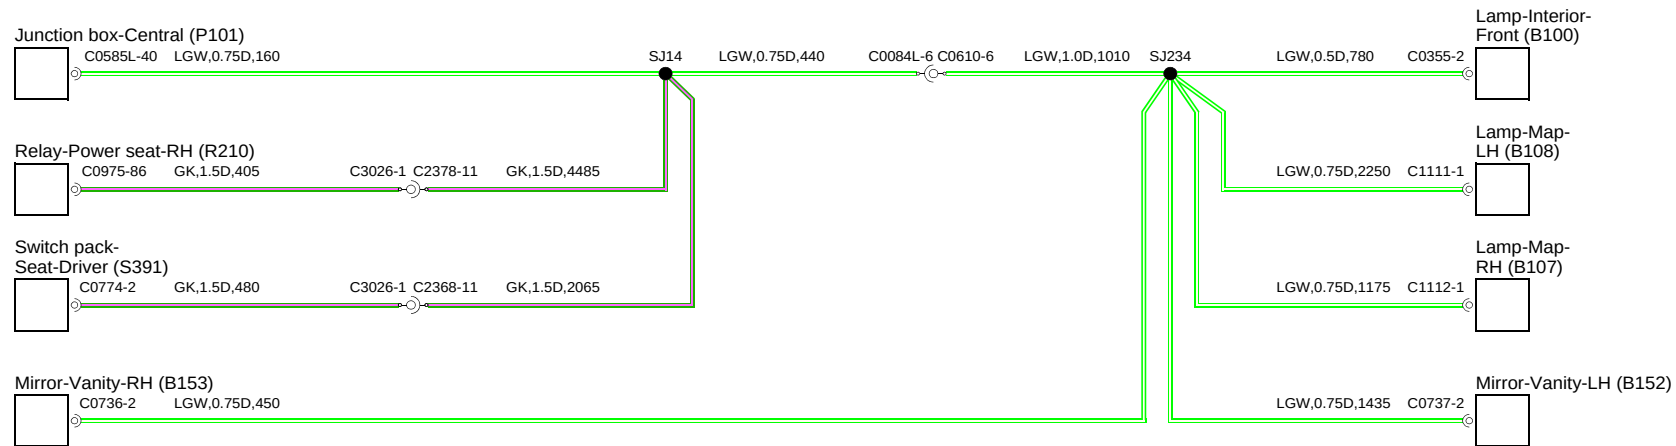


SJ300 (RN) CONSOLE

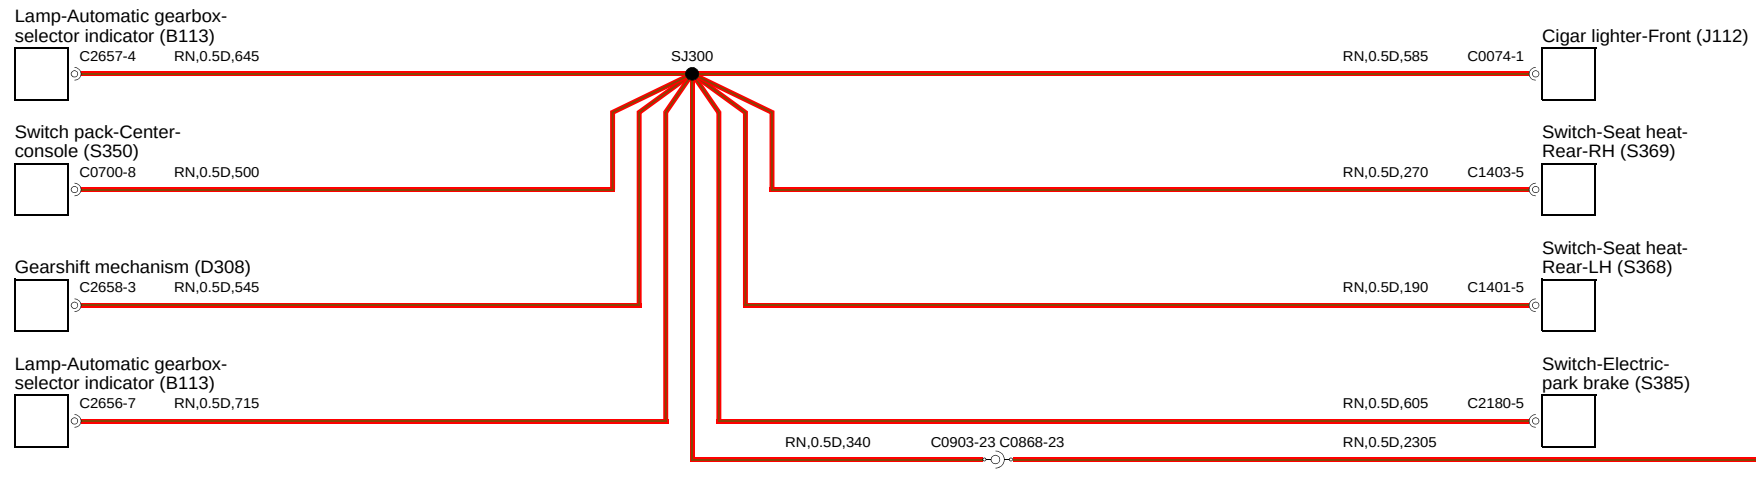


B
Sheet7

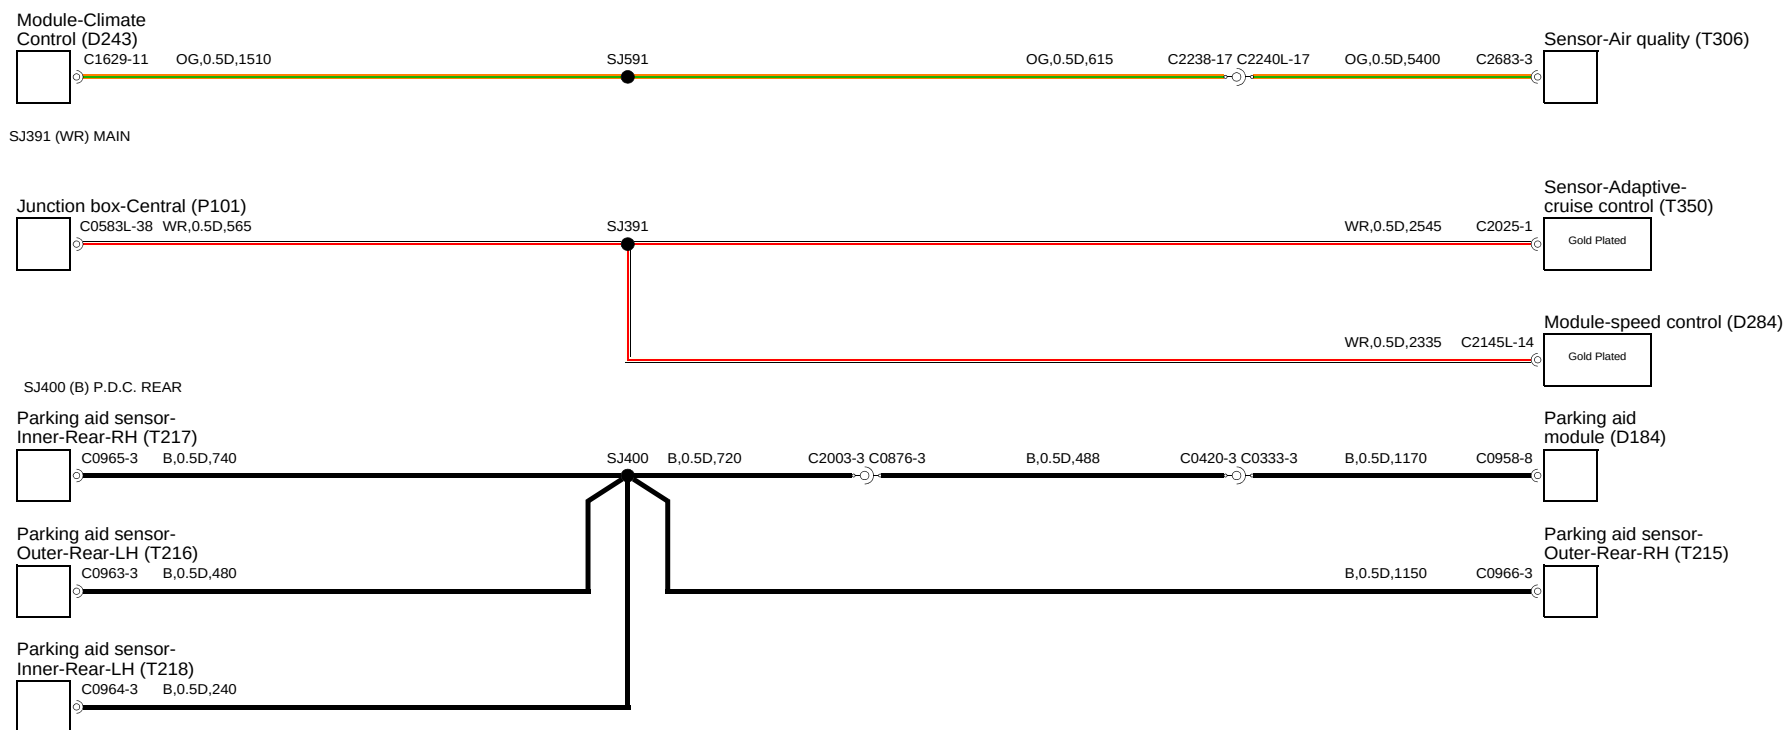


SJ401 (N) P.D.C. REAR

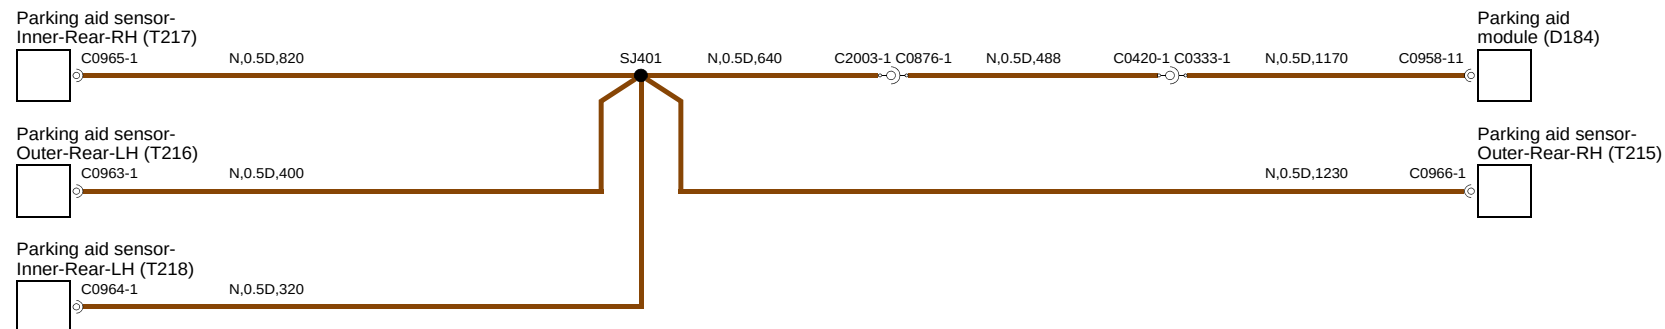

SJ402 (N) FRONT BUMPER

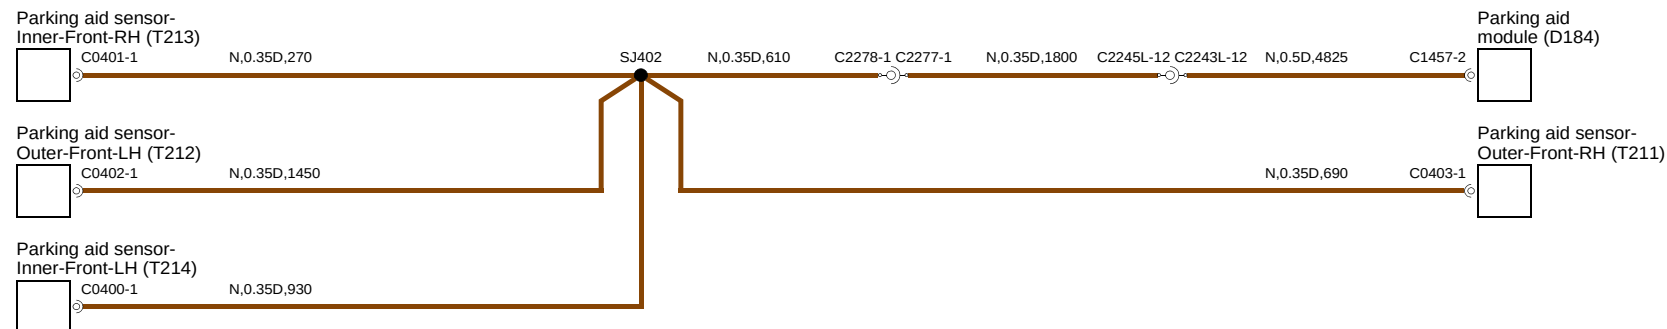

SJ403 (B) FRONT BUMPER

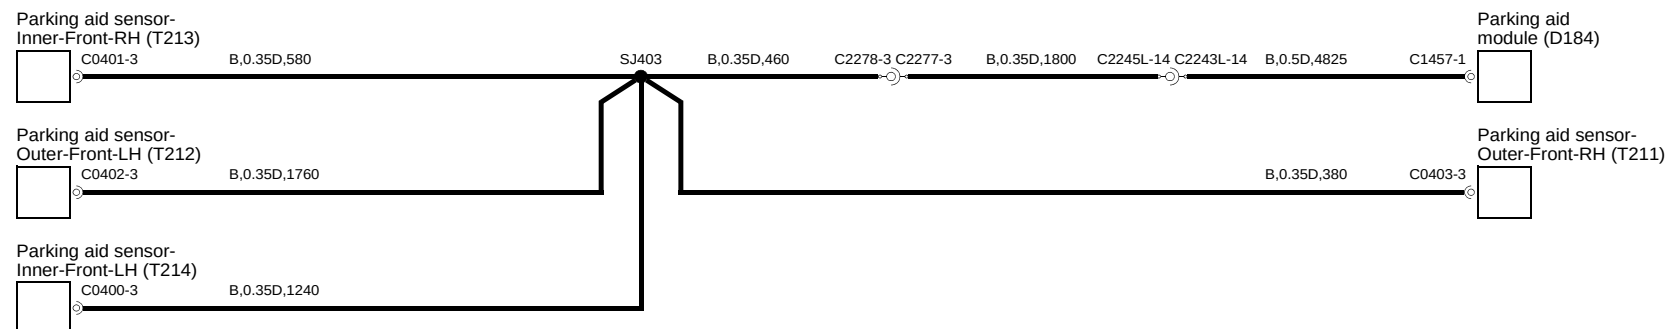

Junction-box engine (P108)

C0570L-181 GY,6.0D,4068 C2528-2 C2527-2 GY,6.0D,4585 SJ406 GY,1.5D,530 C2178-G4 C2178-H4

Module-Parking brake (D278)

Junction-box engine (P108)

C0570L-180 PY,1.5D,918

C2365L-1

C2366D-1 (PV8NA) PY,1.0H,1830 SJ3410 PY,1.0H,115 C1324-1

C2366C-1 (DIESEL) PY,1.0H,1955 SJ2410 PY,1.0H,121

Capacitor (G158)

PY,1.0H,155

PY,1.0H,155

PY,1.0H,155

TCM and Control Valve Body (D306)

C0193-14 Silver Plated

SJ415 (WG) ENGINE BAY

The diagram illustrates the wiring for three components:

- Junction box-Central (P101)**: Connected via C0584L-16 (WG, 0.5D, 290) to a junction point.
- Motor-Wiper-Windscreen (M105)**: Connected via C0030L-1 (WG, 0.5D, 1792) to the same junction point.
- Sensor-Rain-Ambient light (T328)**: The junction point connects to SJ415 (WG, 0.5D, 390), which then connects through C2412L-6 and C2411L-6 to WLJ (0.5D, 6730), and finally through C0961-1 to the sensor unit.

The diagram illustrates the wiring for the AFS control module (D276). It shows two main power sources: Headlamp-RH (A100) and Headlamp-LH (A101). The Headlamp-RH (A100) is connected to the AFS control module (D276) via a red wire labeled C0011-13, with a resistance of R,0.35D,1783. The Headlamp-LH (A101) is connected to the AFS control module (D276) via a red wire labeled C0009-13, with a resistance of R,0.35D,3520. Both wires converge at a junction point labeled S3442. From this junction, a single red wire labeled C2193L-5, with a resistance of R,0.35D,555, leads to the AFS control module (D276).

SJ444 (NK) TRANSMISSION AUTO

Sensor-Heated oxygen-
(HO2S)-Rear-RH (T184)

C0642-1 NK,1.5H,1540

SJ444

NK,2.5H,975

C2366B-18

C2365L-18

NK,1.5D,918

C0570L-124

Junction-box engine (P108)

Sensor-Heated oxygen-
(HO2S)-Rear-LH (T185)

NK,1.5H,1025

C0643-1

SJ445 (NK) ENGINE-BAY

Junction-box engine (P108)

C0570L-172 NK,2.5D,1093

SJ445

NK,1.5D,75

C2725L-18

C2724B-18

WG,1.5,1715

C0644B-1

Sensor-Heated oxygen-
(HO2S)-Front-LH (T183)

NK,1.5D,75

C2724B-17

C2725L-17

WG,1.5,1560

C0645B-1

Sensor-Heated oxygen-
(HO2S)-Front-RH (T182)

SJ450 (NK) ENGINE BAY SJ7 (GU, B, WU) ENGINE SJ1 (WU) ENGINE

Junction-box engine (P108)

C0570L-121 NK,1.5D,893

SJ450

NK,0.5D,2770

C2025-5

Sensor-Adaptive-
cruise control (T350)

Gold Plated

Fan-Cooling-E box (M208)

C0646L-2 NK,0.75D,510

NK,0.5D,2110

C2145L-15

Module-speed control (D284)

Gold Plated

NK,1.5D,275

C2725L-8

C2724B-8

GU,1.0,860

SJ7

WU,1.0,611

SJ1

WU,1.0,120

C0177B-5

Modulator valve-EGR (D214)

WU,1.0,120


C0177B-2


Purge control valve (N119)

B,1.0,350


C0152B-2

SJ489 (NB) ENGINE BAY

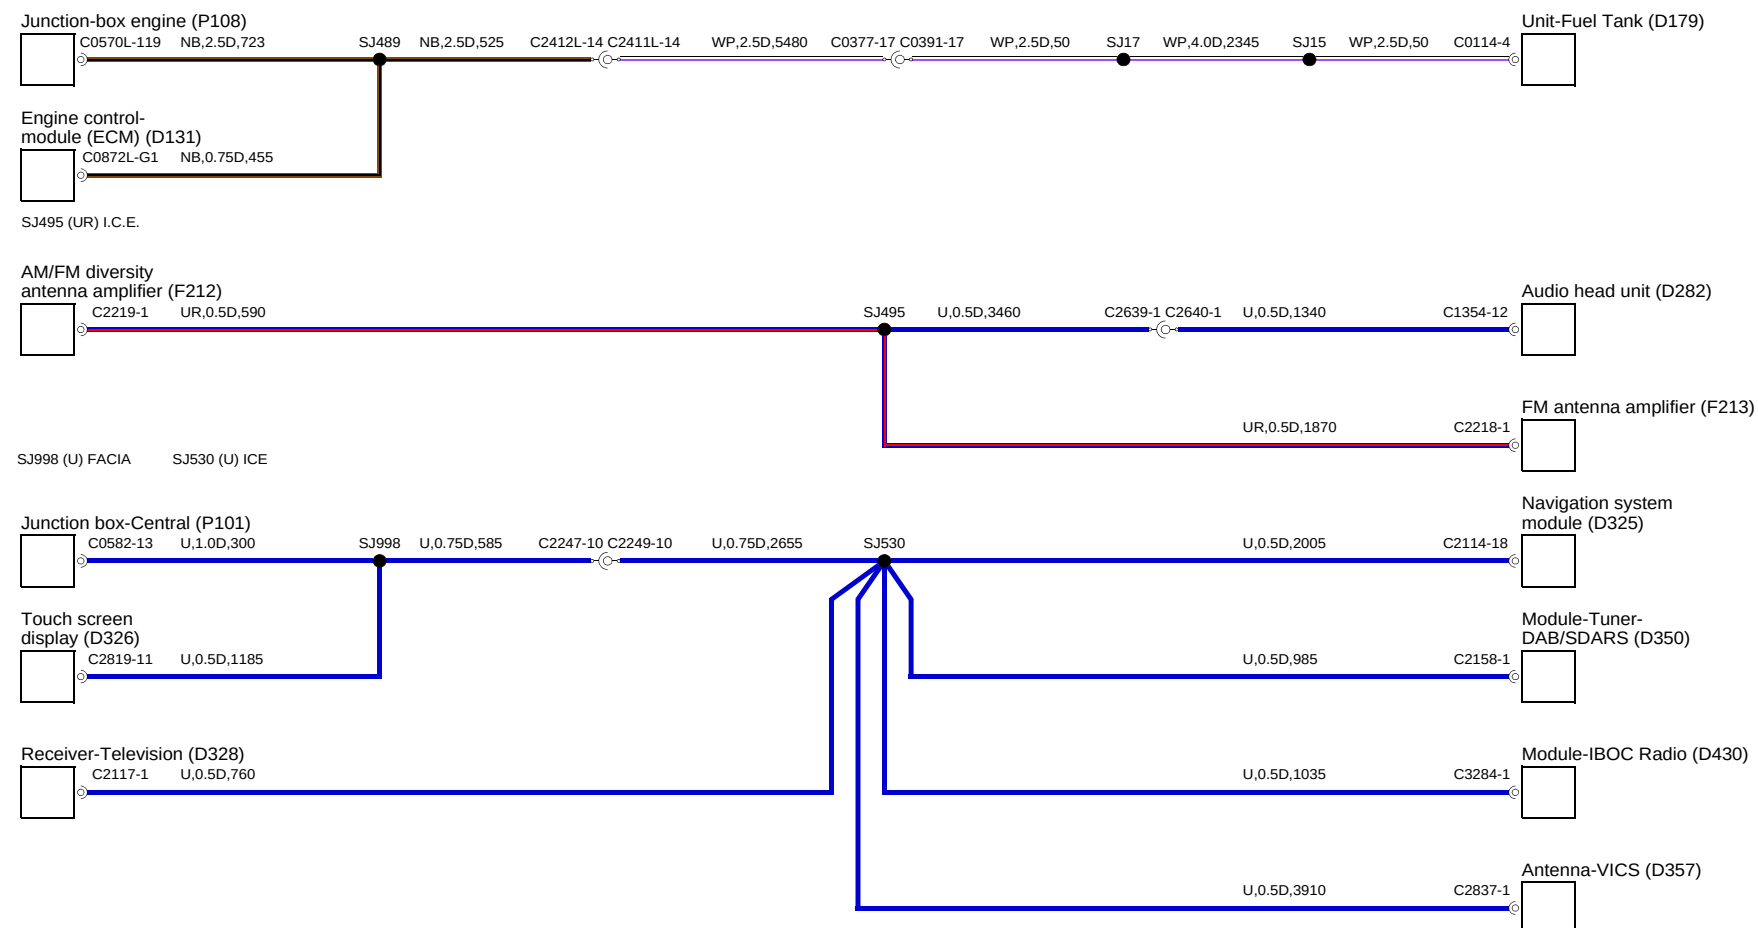

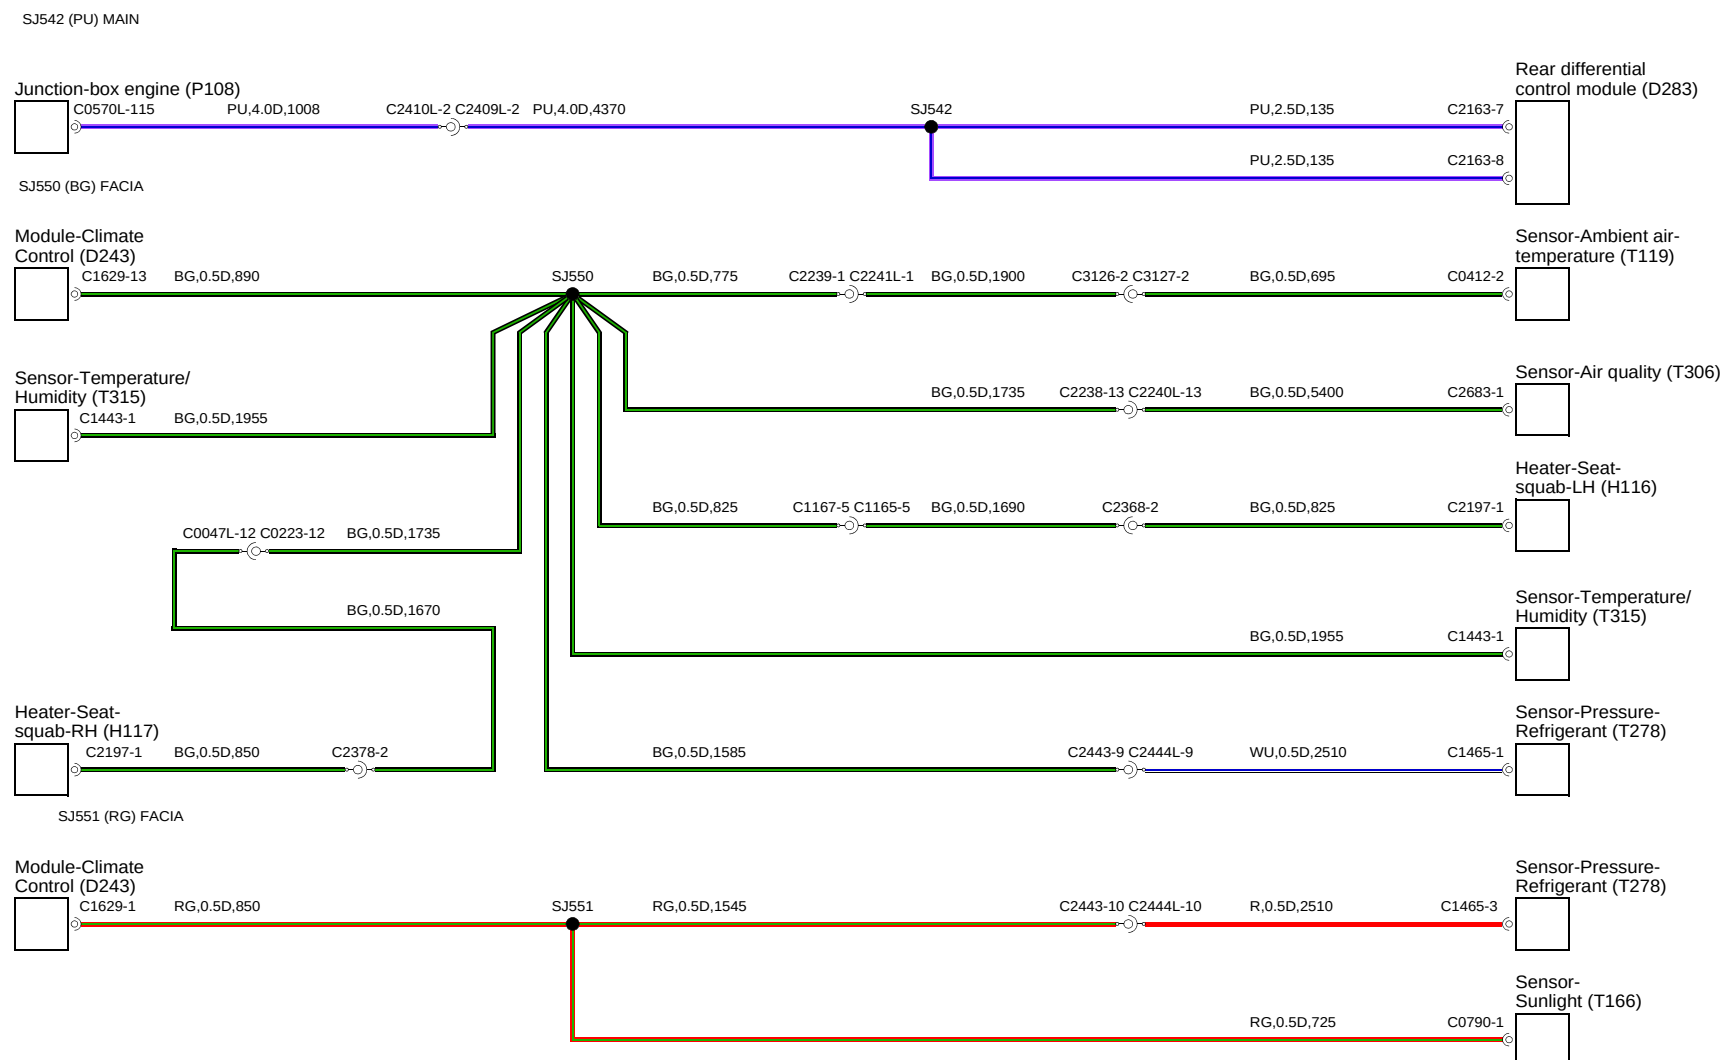


SJ559 (RU) ENGINE BAY

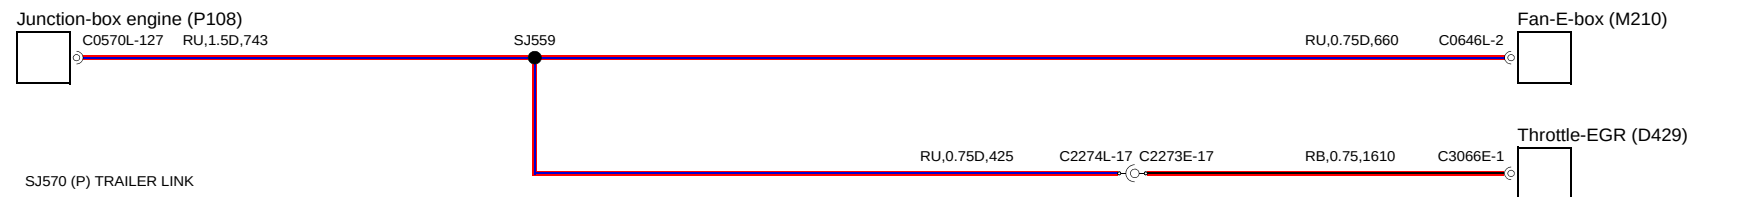


Fuse-Trailer (P136)



SJ571 (RO) TRAILER LINK

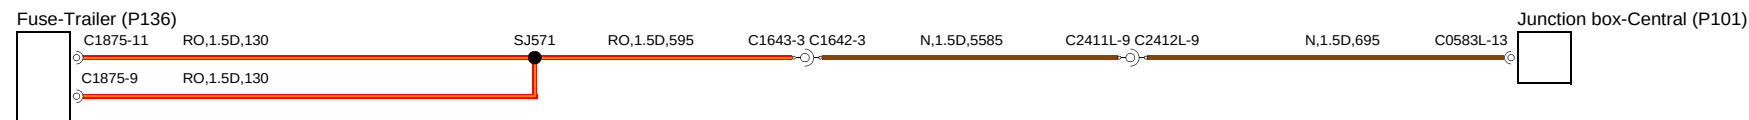


SJ572 (NR) ENGINE BAY

 

SJ574 (LG) ENGINE BAY




SJ592 (GO) ENGINE BAY

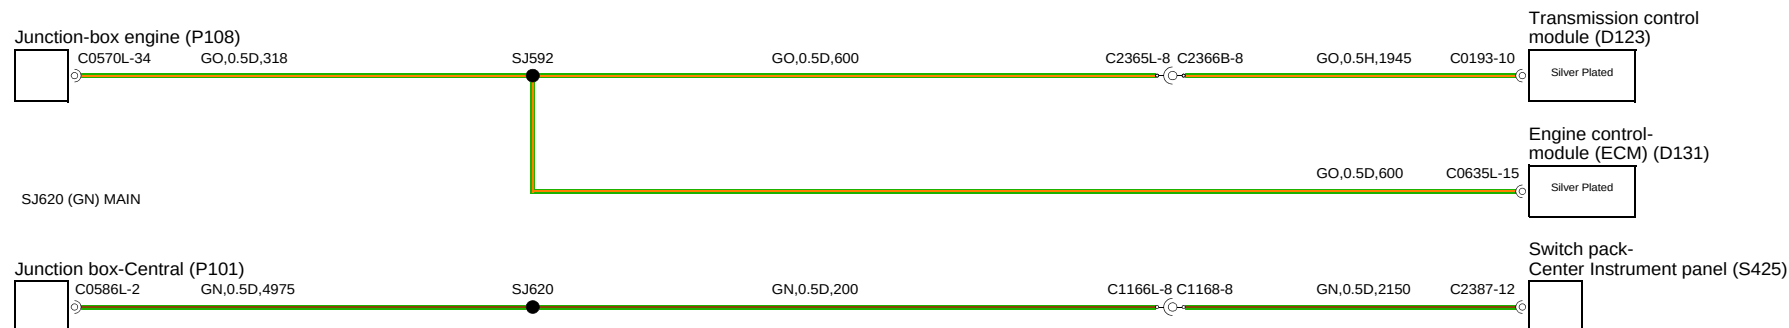


SJ630 (BN) ENGINE BAY




SJ670 (BG) MAIN

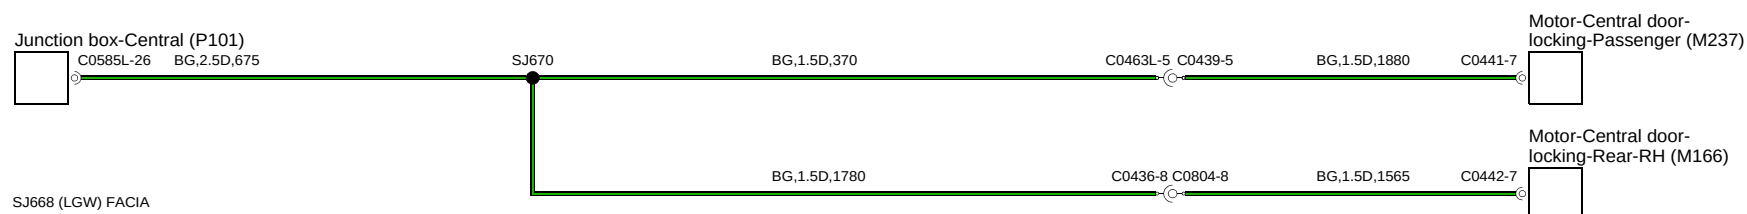


SJ668 (LGW) FACIA

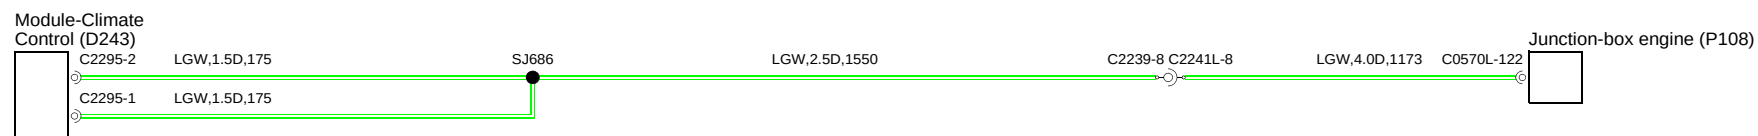


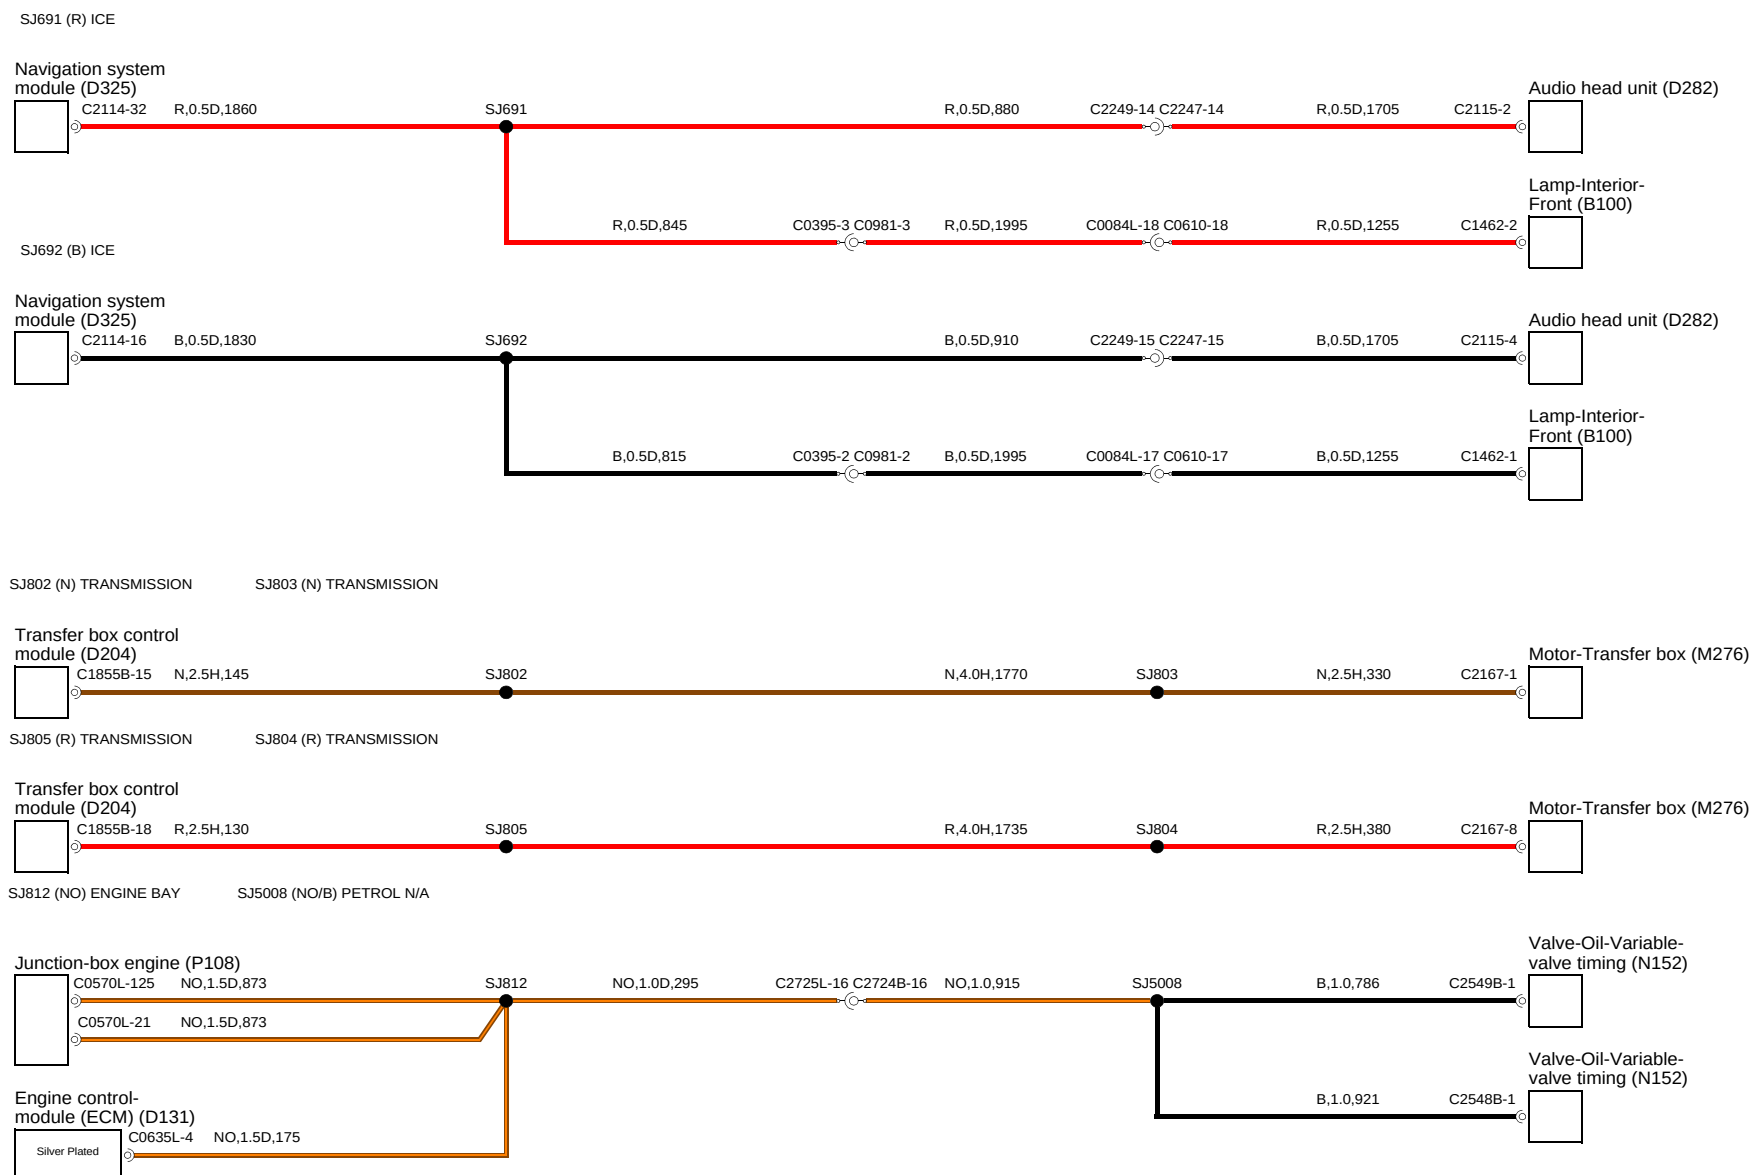

SJ6 (GP) MAIN SJ882 (GP) ENGINE BAY SJ813 (GP) ENGINE BAY

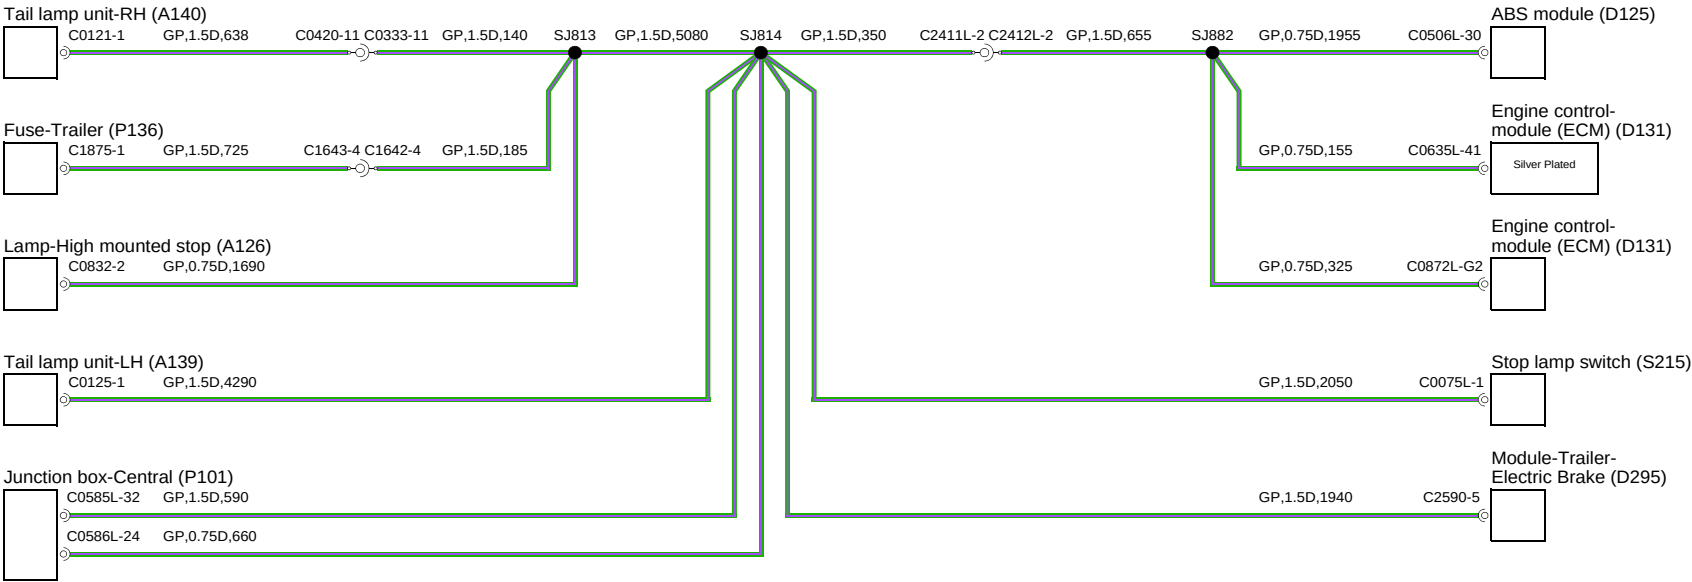

SJ923 (PU) ENGINE BAY

 

SJ901 (YB) ENGINE BAY

Junction-box engine (P108)

C0570L-4 YB,4.0D,2248

SJ901

YB,1.5D,100

C2582-1 C2584-1

GO,1.5,405

C0476-1

Glow plug (T171)

SJ902 (YB) ENGINE BAY

YB,1.5D,100

C2582-2 C2584-2

GR,1.5,305

C0477-1

Glow plug (T171)

Junction-box engine (P108)

C0570L-5 Y,4.0D,2058

SJ902

YB,1.5D,290

C2582-3 C2584-3

GU,1.5,335

C0478-1

Glow plug (T171)

YB,1.5D,100

C2581-3 C2583-3

GU,1.5,400

C1501-1

Glow plug (T171)

SJ902 (YB) ENGINE BAY

Junction-box engine (P108)

C0570L-52 YB,4.0D,2008

SJ180

YB,1.5D,150

C2581-1 C2583-1

GO,1.5,350

C0479-1

Glow plug (T171)

YB,1.5D,150

C2581-2 C2583-2

GR,1.5,300

C1500-1

Glow plug (T171)

SJ970 (R) ENGINE BAY

SJ971 (R) MAIN

Junction box-Central (P101)

C0583L-39 R,1.0D,435

SJ970

R,1.0D,340

C2412L-5 C2411L-5

R,1.0D,3495

SJ971

R,1.0D,1725

C0868-8 C0903-8

R,0.75D,360

C0700-20

Switch pack-Center-console (S350)

Transfer box control module (D204)


C1854L-3 R,1.0D,675

R,1.0D,1195


C2163-4

Differential lock unit (D150)


SJ971 (US) ENGINE BAY

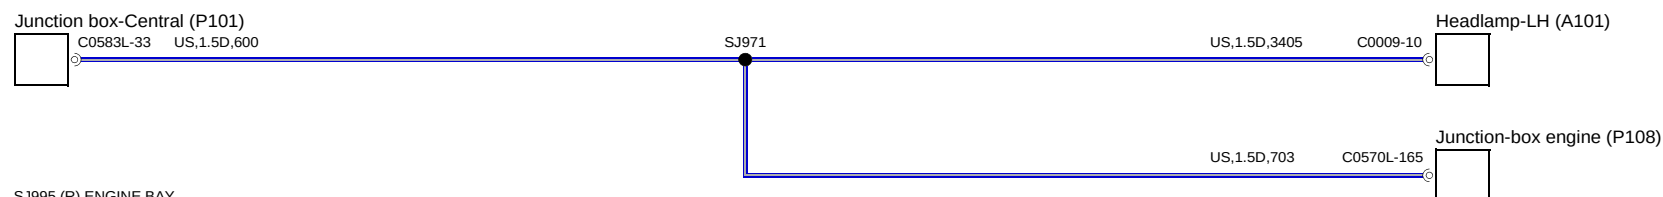


SJ995 (R) ENGINE BAY

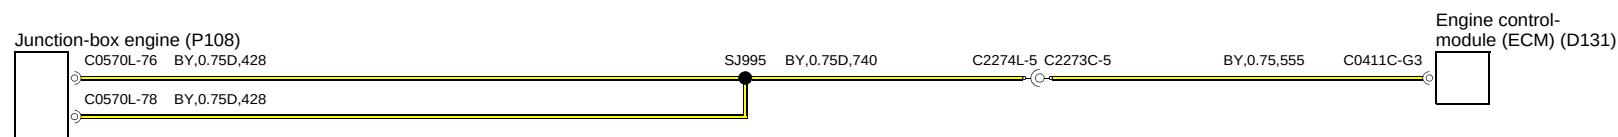

SJ998 (R) CONSOLE

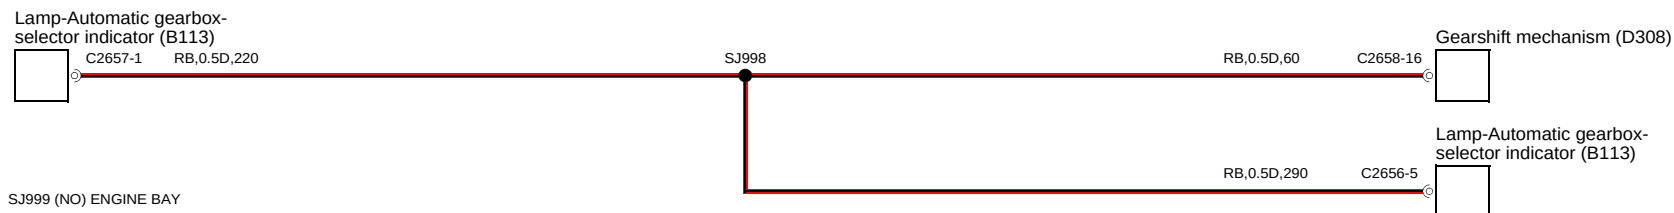

SJ999 (NO) ENGINE BAY

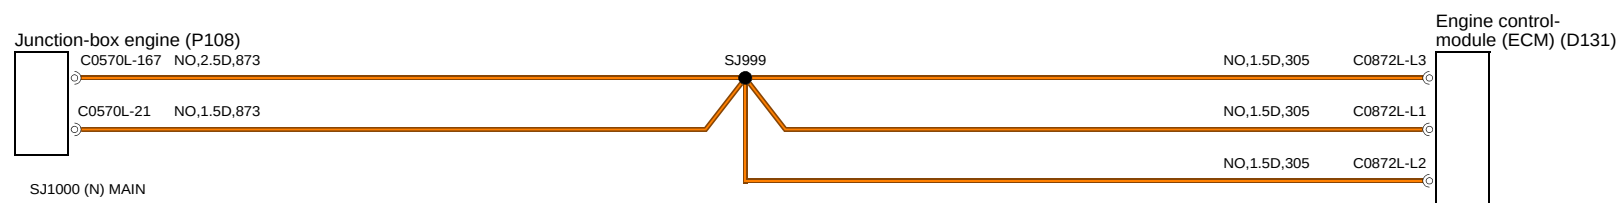

SJ1000 (N) MAIN

