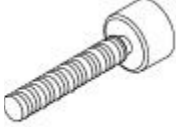
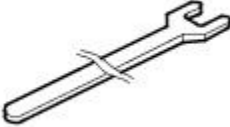


已发布: 04-七月-2013

自动变速器/驱动桥 - 车辆配备: **8HP70 8 速自动变速器 (AWD — 全驱) - 变速器 V6 S/C 3.0 升汽油机/V8 机械增压型 5.0 升汽油机**
拆卸

专用工具

 100-012 E54135	100-012 滑锤
 100-012-01	100-012-01 滑锤适配器
 303-1069 E53727	303-1069 Adapter, Wrench
 303-1142 E46076	303-1142 粘滞接口扳手
 303-1143 E55382	303-1143 粘滞接口固定工具
 308-375	308-375 拆卸器, 输入和输出密封件

注意:



各说明中可能会出现某些差异，但基本信息始终是正确的。



为清晰起见，某些图示中可能没有显示变速器。


1. 断开蓄电池接地电缆的连接。

参阅: Specifications (414-01, 规格).


2. 参阅: [空气滤清器出口管-T型连接器](#) (303-12C 进气分配和过滤 - V8 机械增压型 5.0 升汽油机, 拆卸和安装).

- 3.

- 专用工具: [303-1143](#)
- 专用工具: [303-1142](#)
- 扭矩: 65 Nm

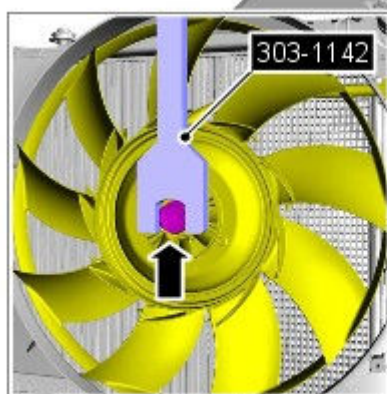

E143622


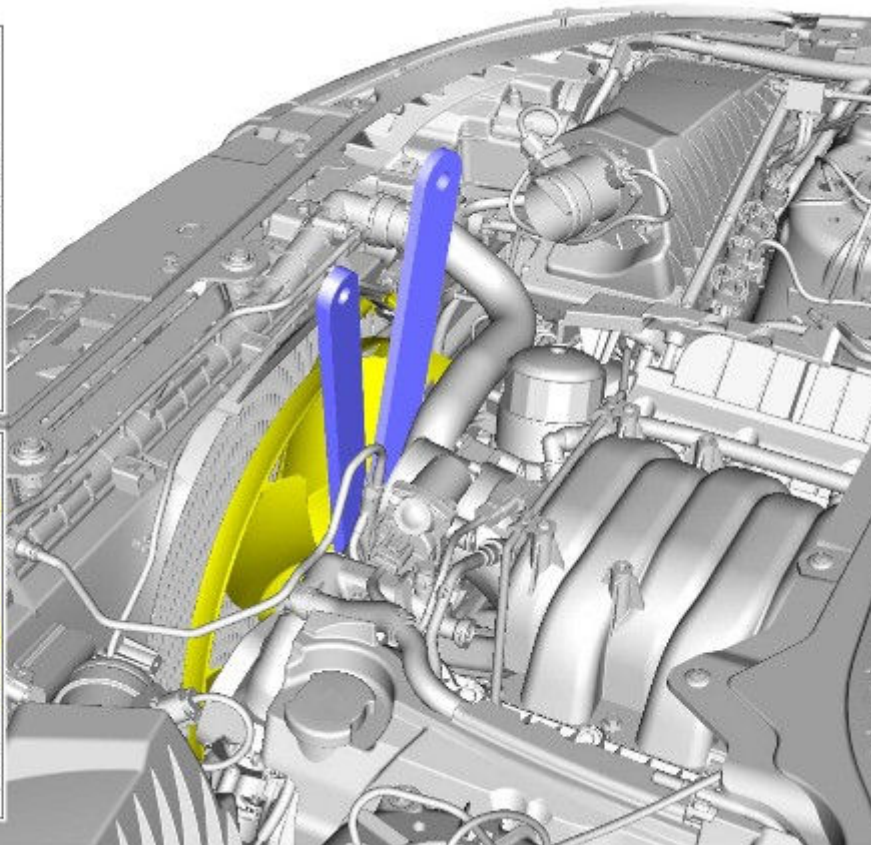


4. 参阅: Front Driveshaft - V8 5.0L Petrol/V8 S/C 5.0L Petrol (205-01, 拆卸和安装).

5. 参阅: Rear Driveshaft - V8 5.0L Petrol/V8 S/C 5.0L Petrol (205-01, 拆卸和安装).



- 6.

- 使用 2 条电缆扎带固定。

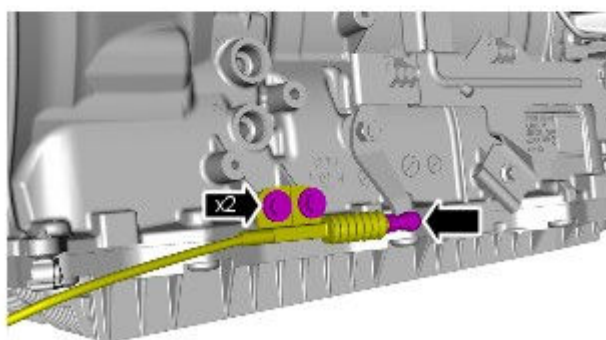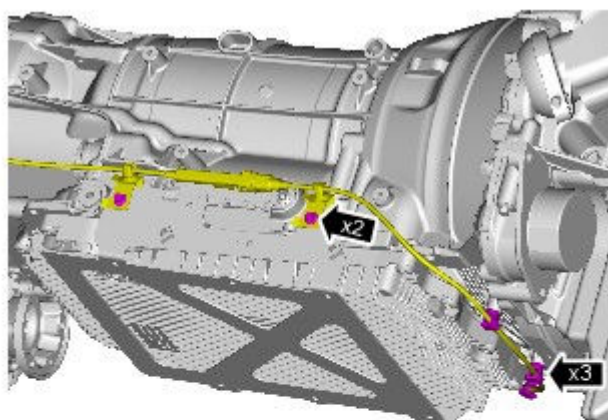


E150358

7.

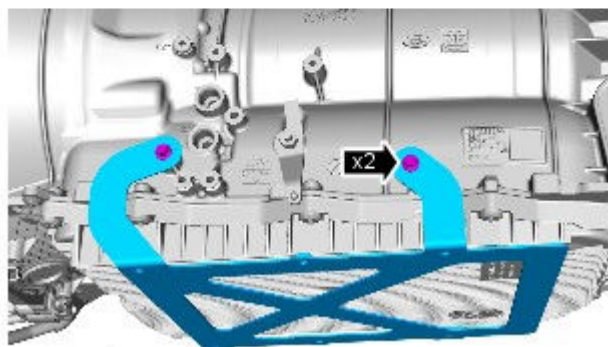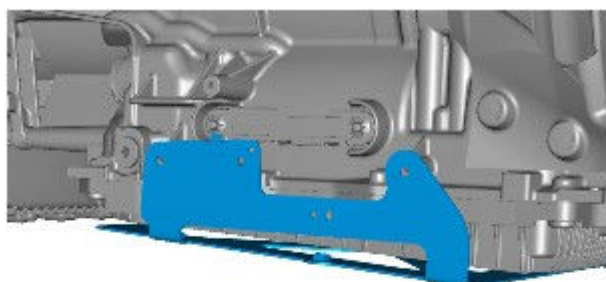


E146881

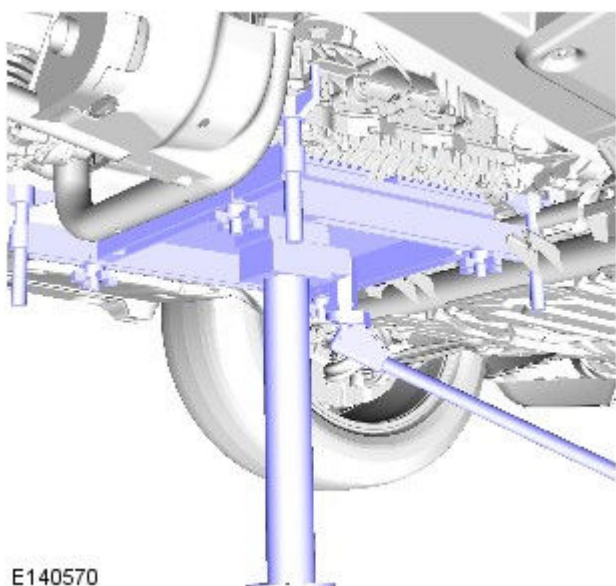


E140570

8.  注意：使用合适的变速器千斤顶，支承差速器箱。

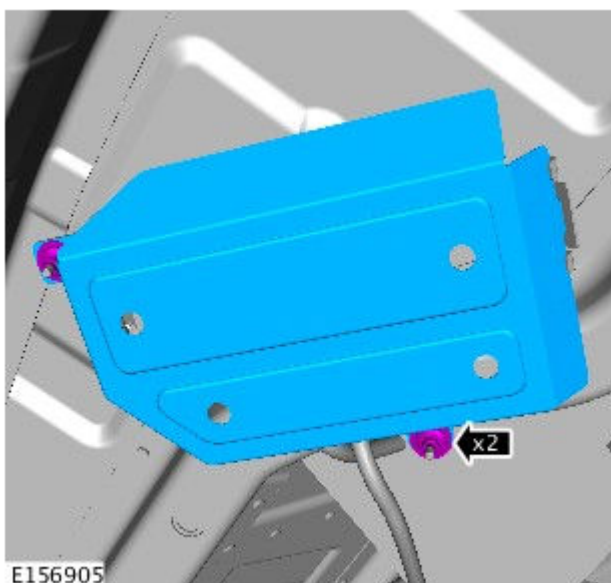


E156905

9.

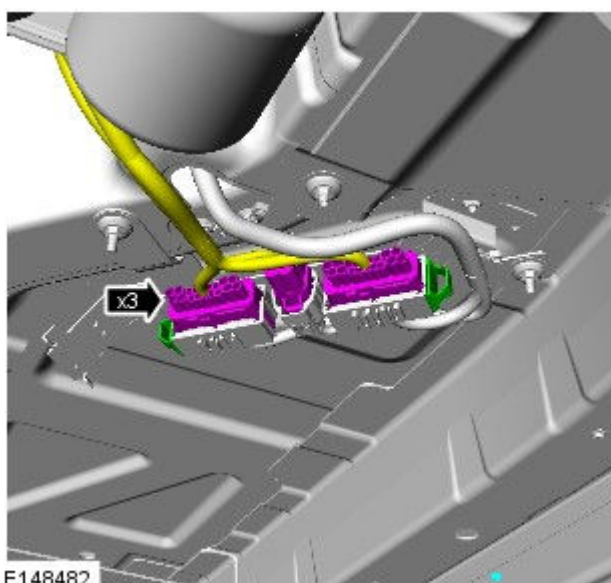


E148482


10.

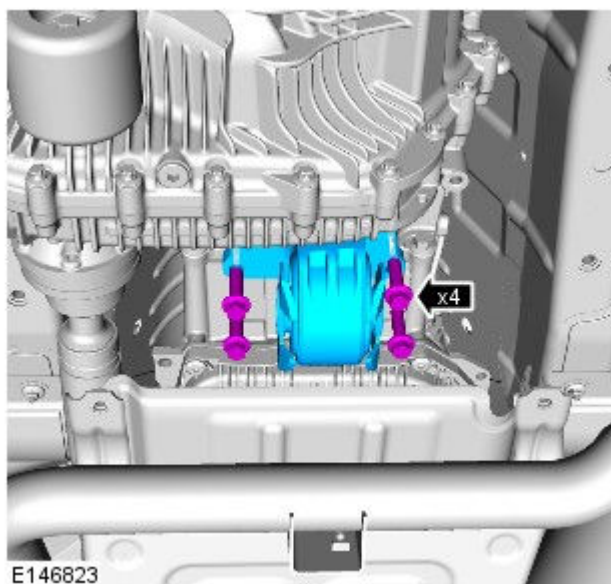

11.

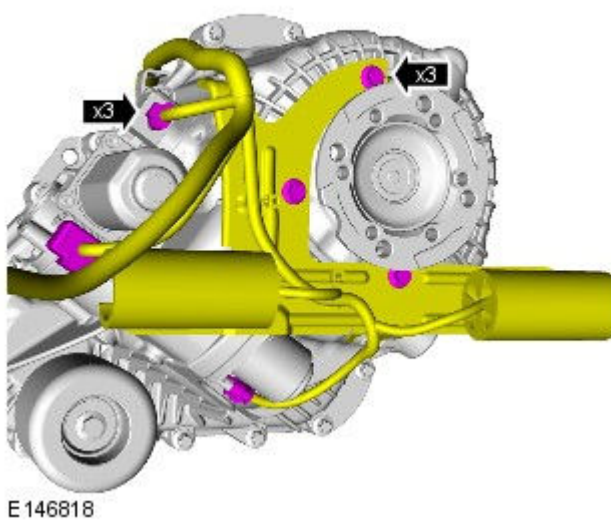

12.

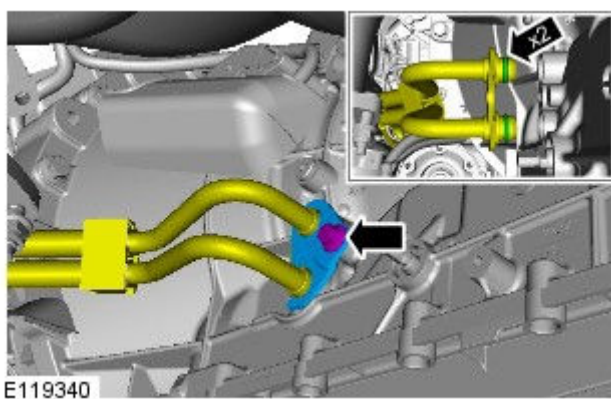

13. 小心:





准备好收集漏出的液体。




确保所有开口密封完好。 使用新的塞盖。

- 丢弃 O 形密封圈。

14.

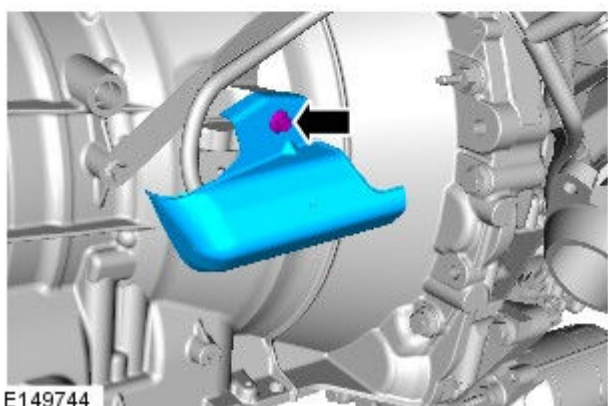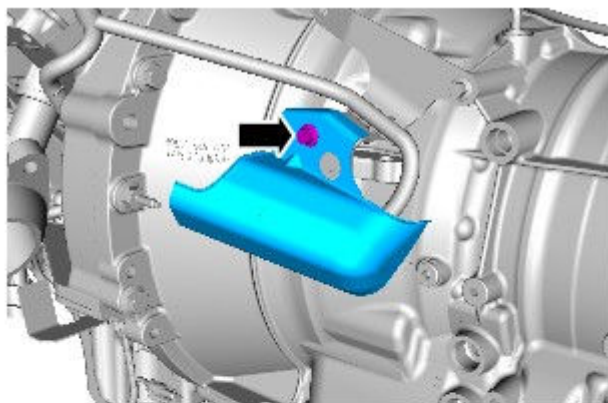



E149744

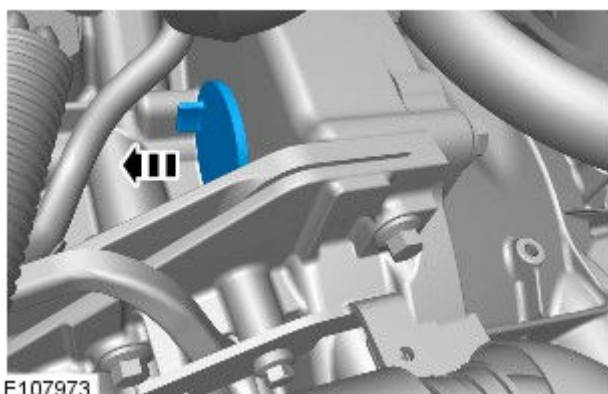

E107973


15.

16.  小心: 仅顺时针旋转曲轴。

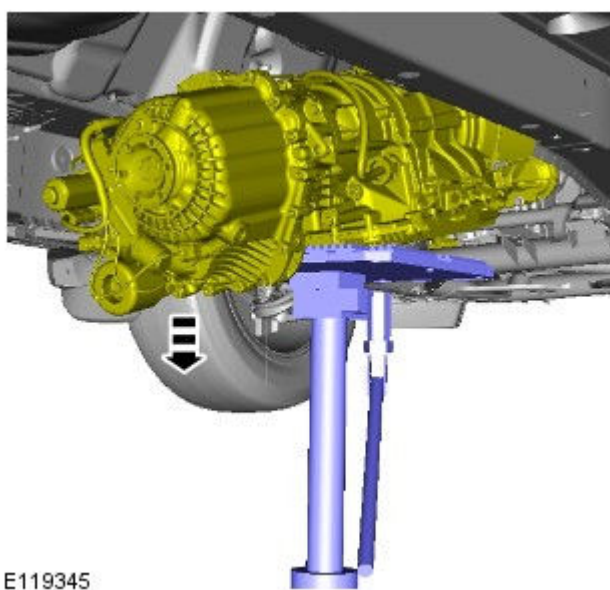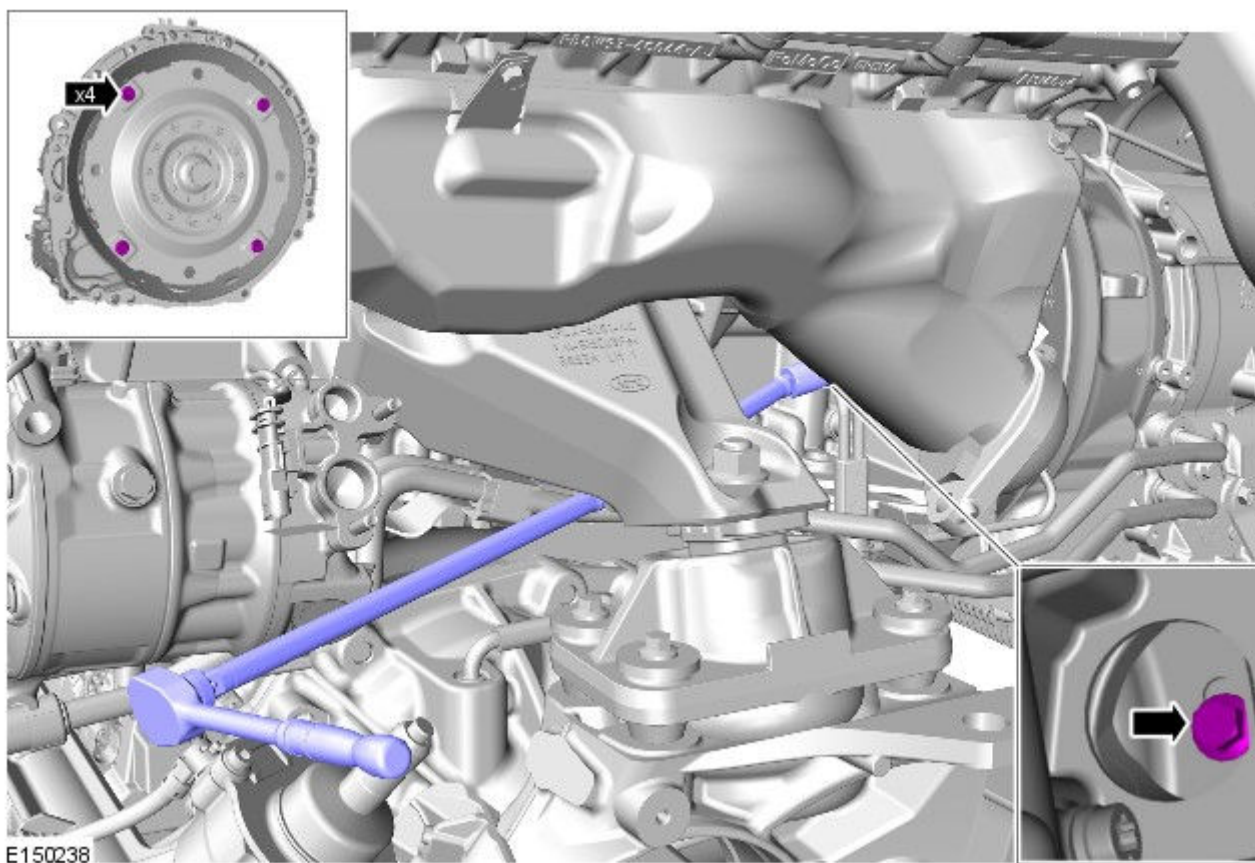


17.  警告： 请确保使用合适的固定带固定变速器。
降低变速箱后部，以便维修。

18.

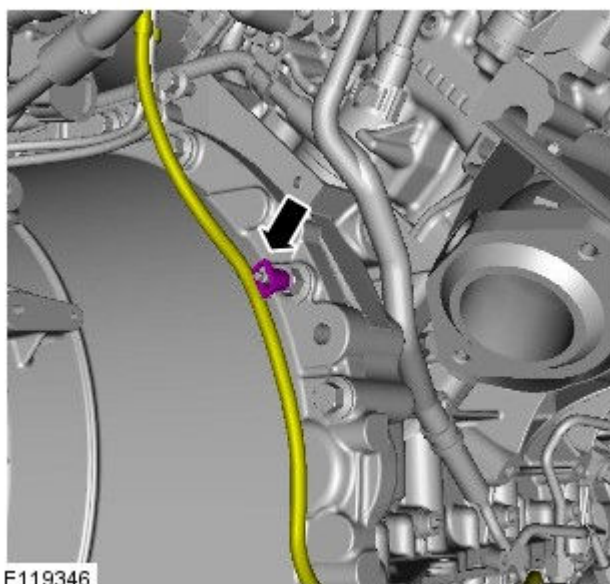


E119346

19.

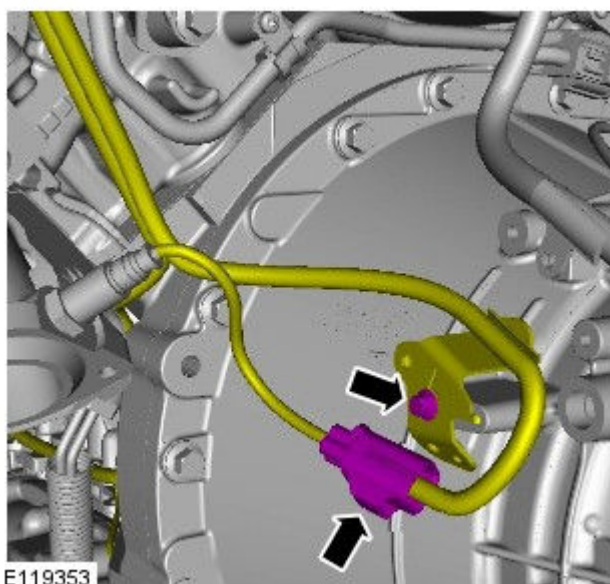


E119353



20.

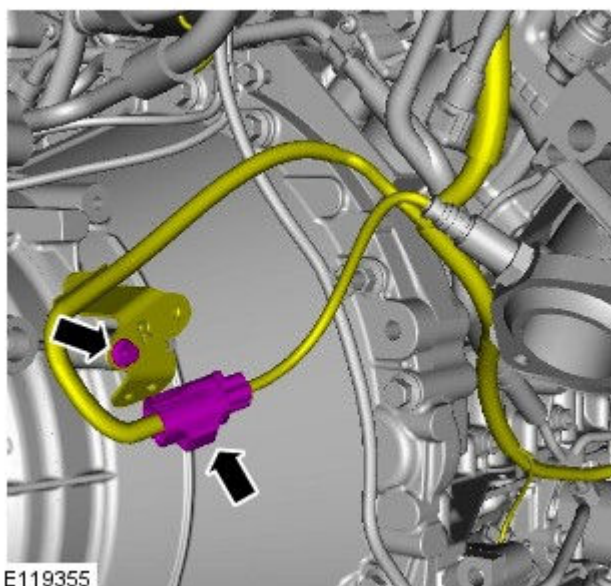

21.

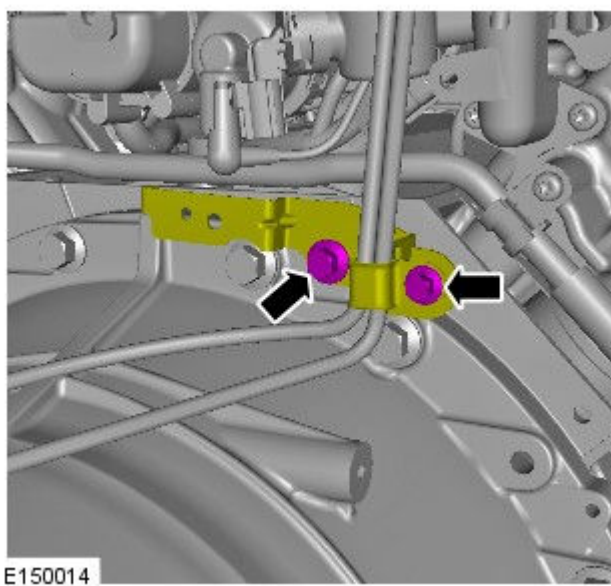

22.

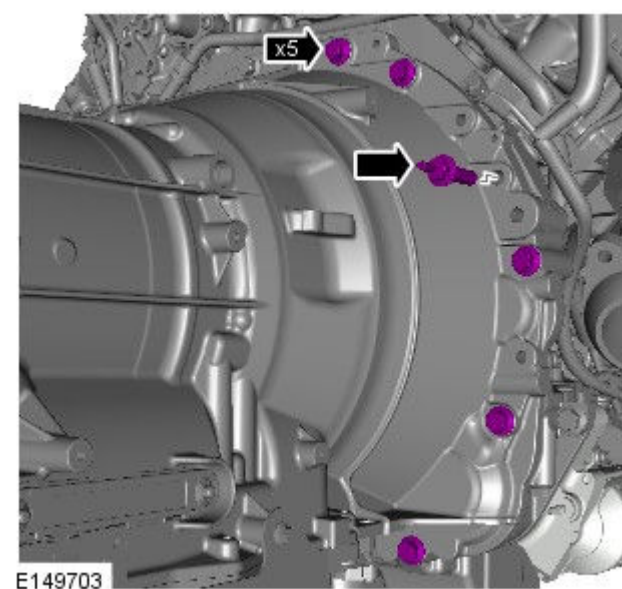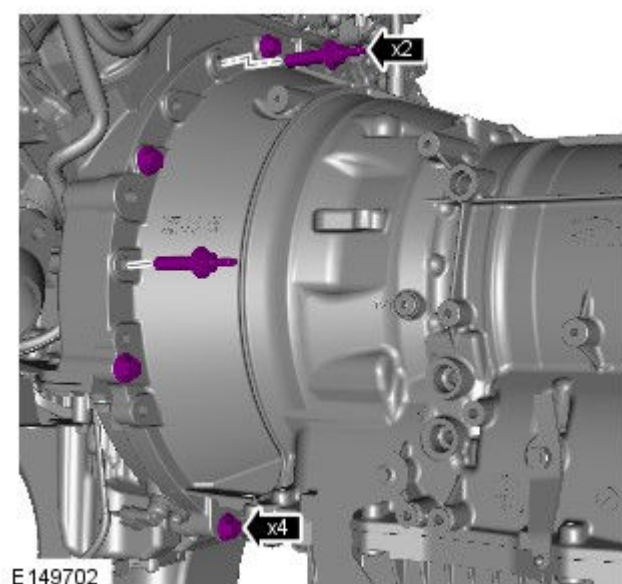


23.

24.  警告：本步骤需要另一技术员协助完成。


 小心：确保变矩器与变速器仍然连接在一起。

 注意：使用合适的电缆捆扎带将变矩器固定到变速器。

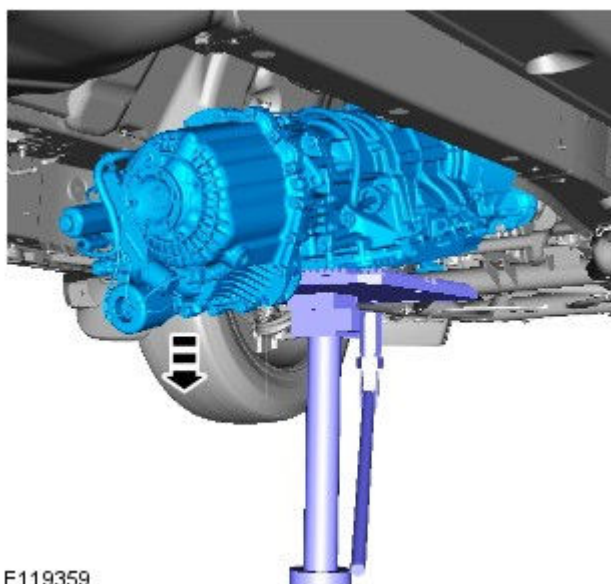


E119359

25.  注意：如果拆除部件仅仅为了检修其他部位，切勿进一步拆卸。

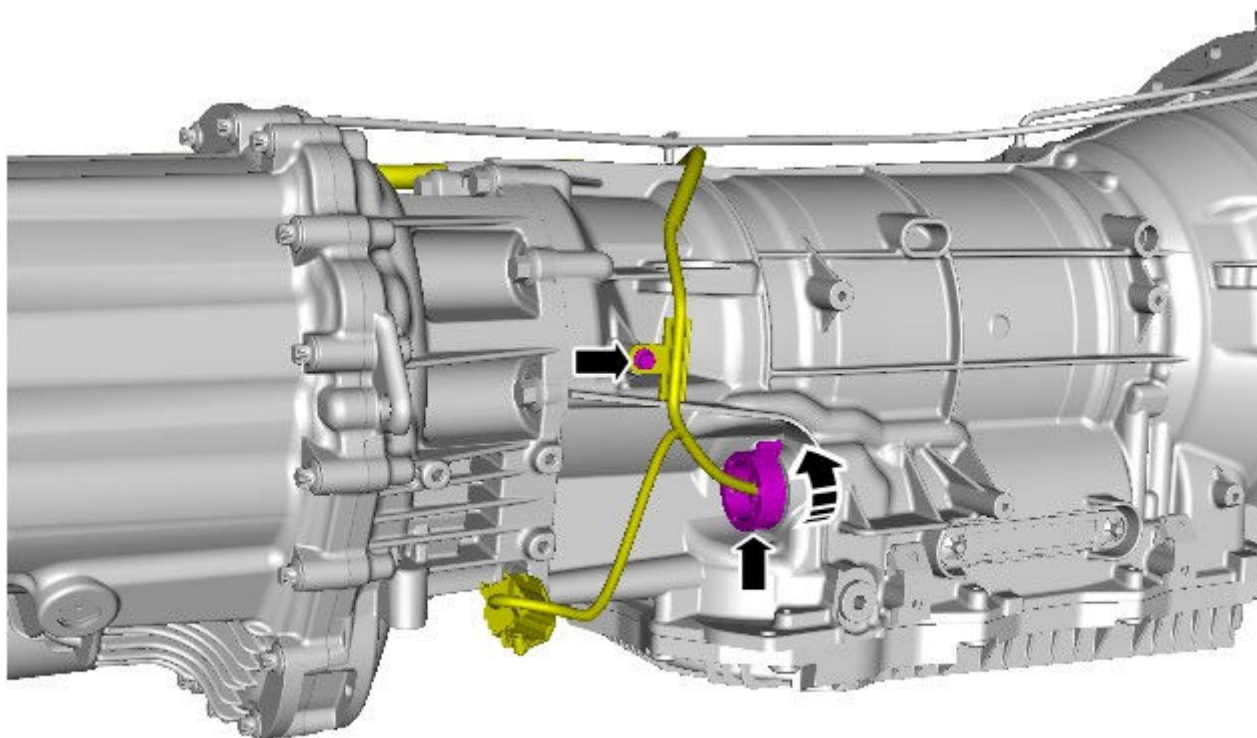


E149706


- 26.

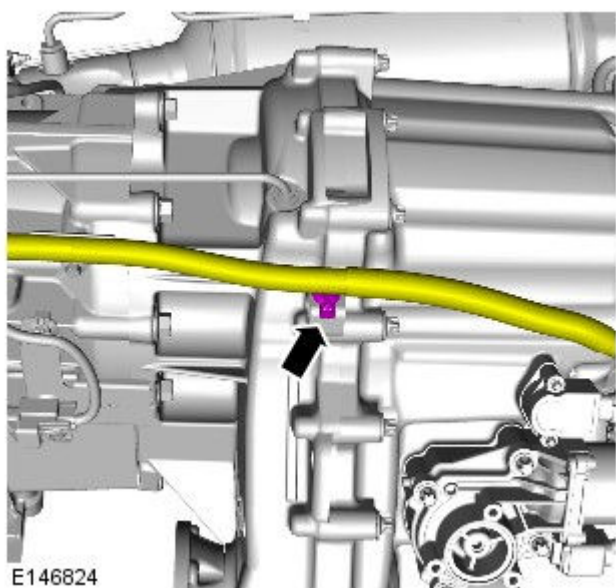


27.

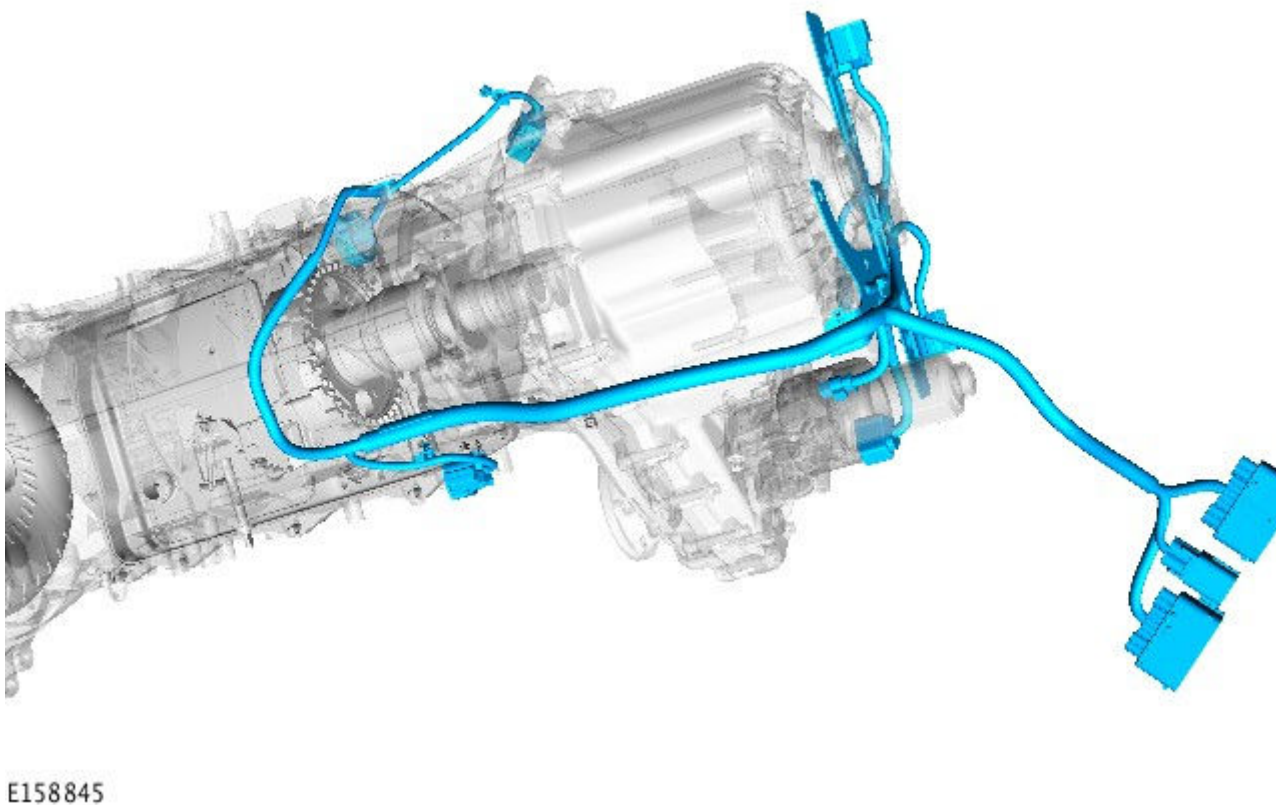



28.  小心: 务必封塞任何敞开的接头, 避免污染。

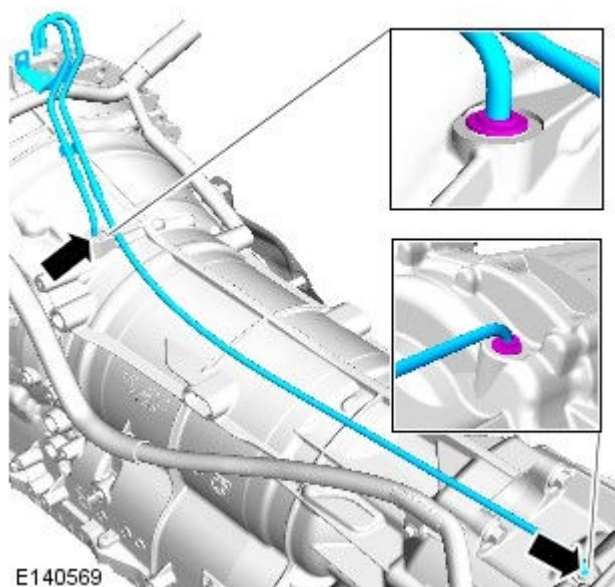

29.

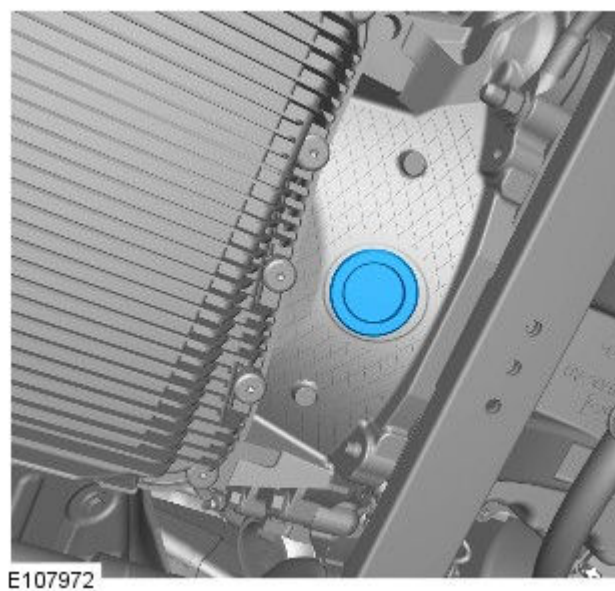

30. 专用工具: [303-1069](#)

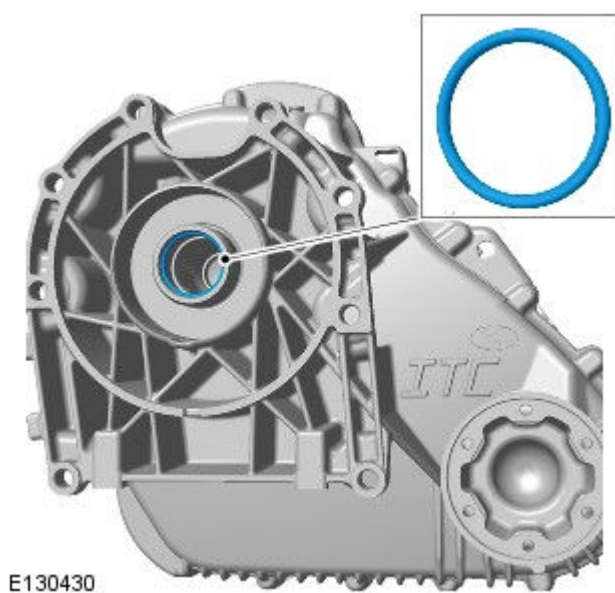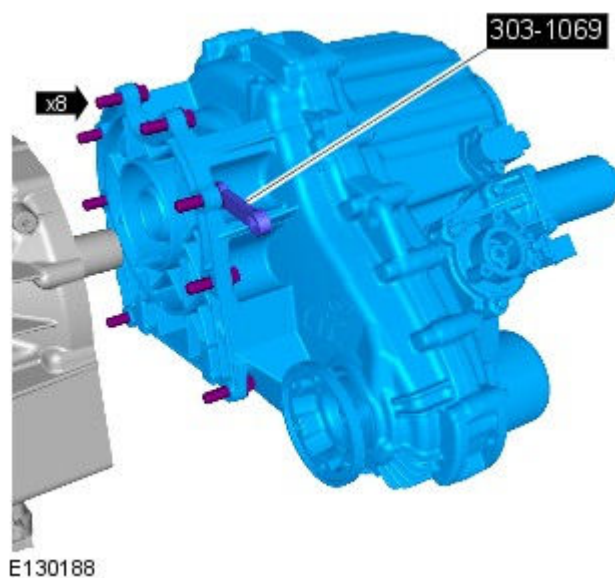


31.  小心：如果要安装新的分动箱，切勿执行此步骤。

32. 小心：

 必须小心，避免损坏油封通风调节装置和运转表面。

 拆除之前，请记下部件的安装位置。

- 专用工具: [100-012](#), [100-012-01](#), [308-375](#)

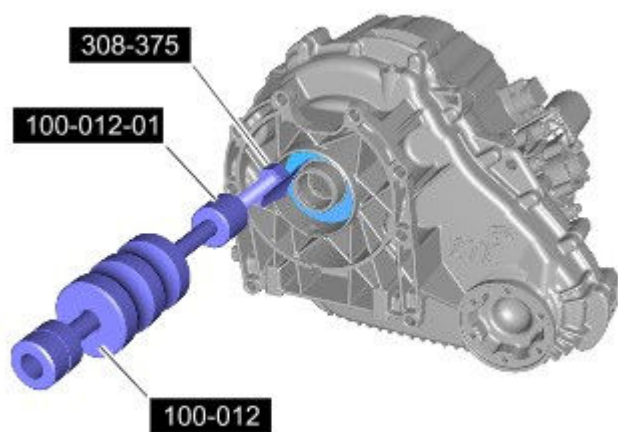

E131138