

已发布: 14-五月-2013

自动空调系统 - 空调(A/C)压缩机 V6 S/C 3.0 升汽油机 拆卸和安装

拆卸

注意:



本程序中的拆除步骤可能包含安装步骤。




各说明中可能出现某些差异, 但基本信息始终是正确的。




为清晰起见, 图中没有显示发动机。


1. 参阅: [规格 \(414-00 蓄电池和充电系统 - 一般信息, 规格\)](#).
2. 参阅: [空调\(A/C\)系统恢复、评估和充电 \(412-00 温度控制系统 - 常规信息, 一般步骤\)](#).
3. 参阅: [冷却风扇 \(303-03B 发动机冷却 - V6 S/C 3.0 升汽油机, 拆卸和安装\)](#).

4.

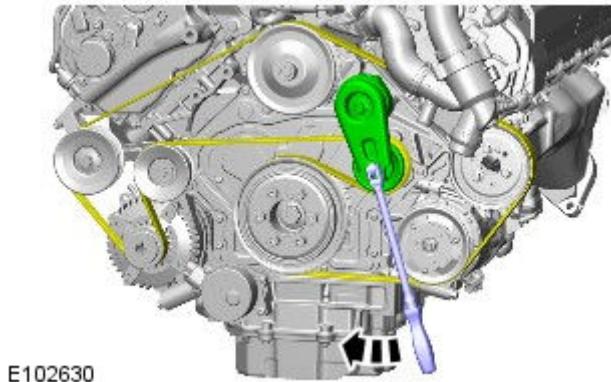

5. 扭矩: 40 Nm

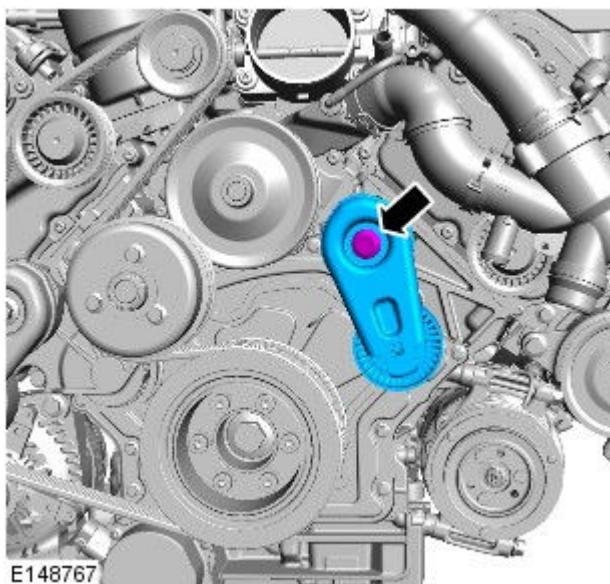

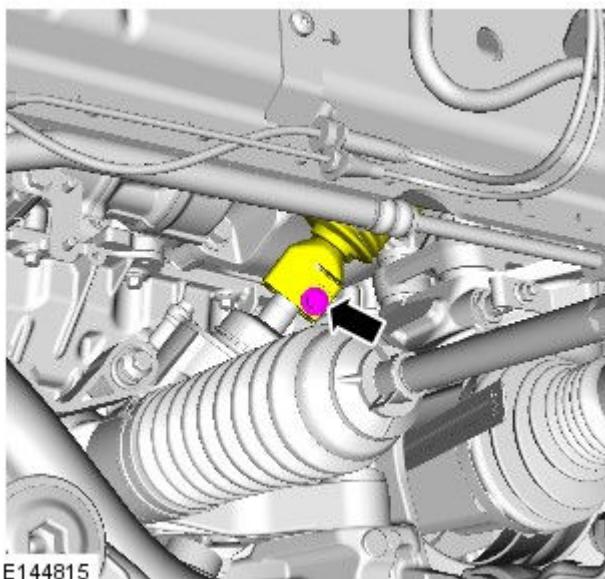


6. 小心: 安装一个新螺栓。

注意:




扭矩: 30 Nm

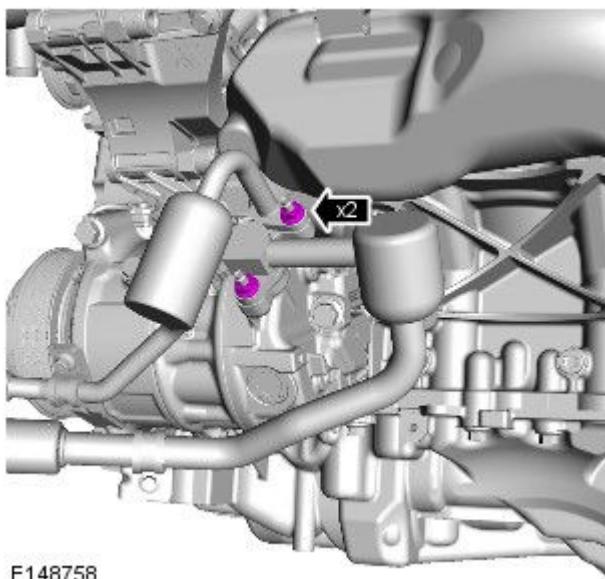

7. 小心:





扭矩: 18 Nm

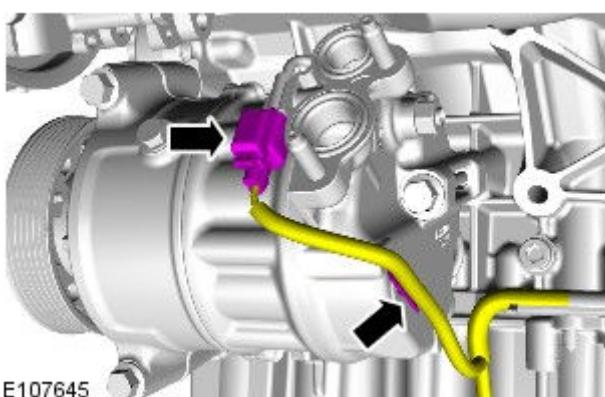


8.

9. 扭矩: 25 Nm

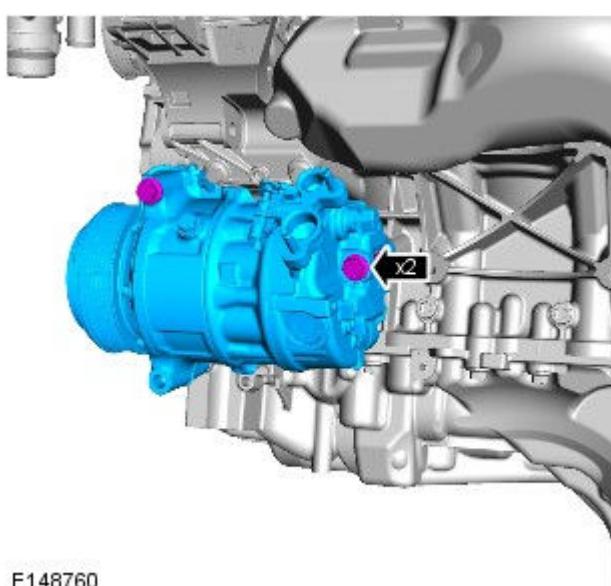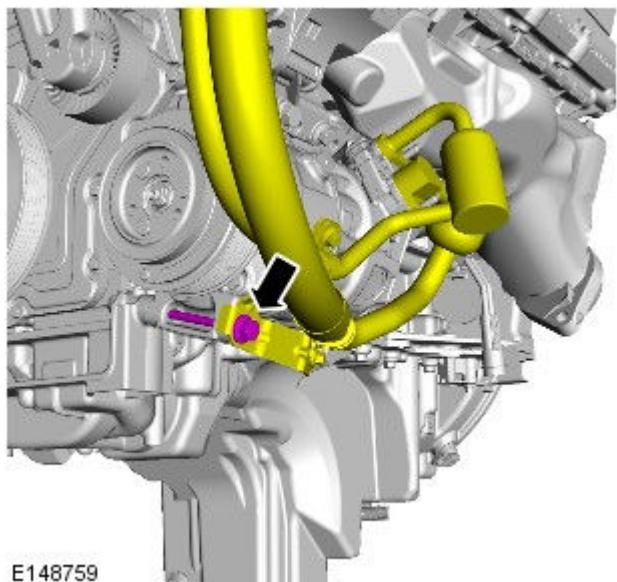

11.

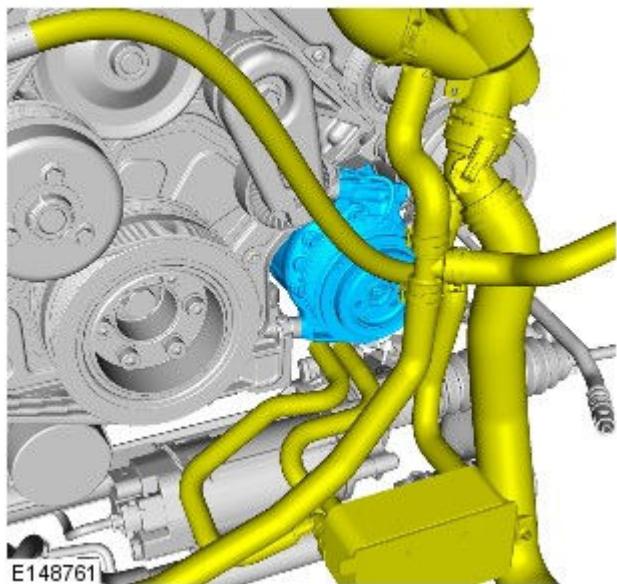

安装

1. 反向操作拆除步骤即可安装。