

已发布: 18-三月-2013

辅助气候控制 - 燃油燃烧式辅助加热器控制模块 拆卸和安装



拆卸




注意: 本程序中的拆除步骤可能包含安装细节。

1. 参阅: [燃油式中间加热器](#) (412-02A 辅助气候控制, 拆卸和安装).


- 2.

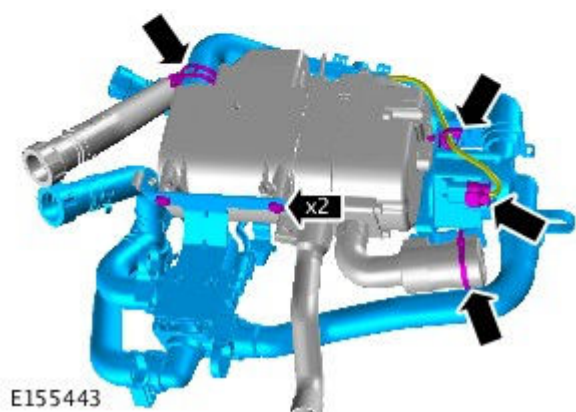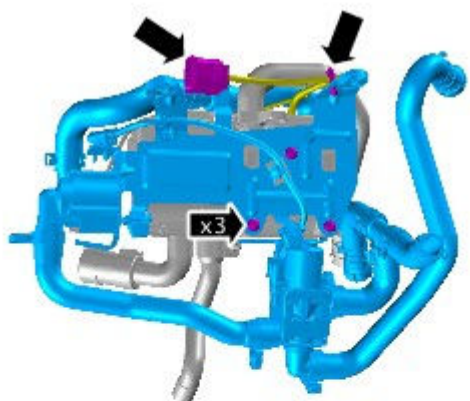

- 3.

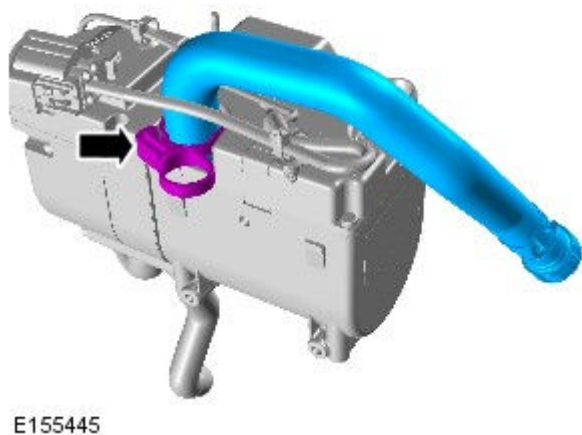

4.

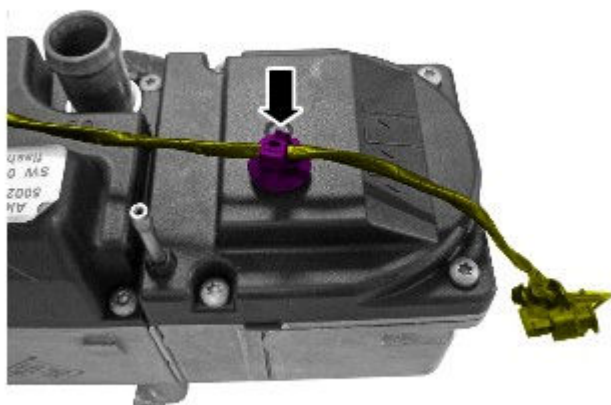


E155478

5.




E155474

6.

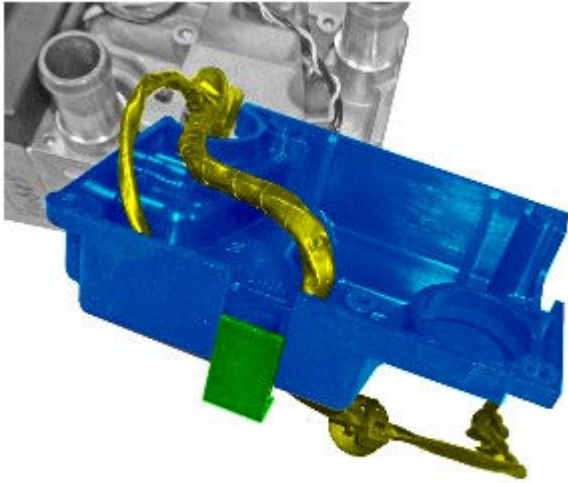

E155477

7.

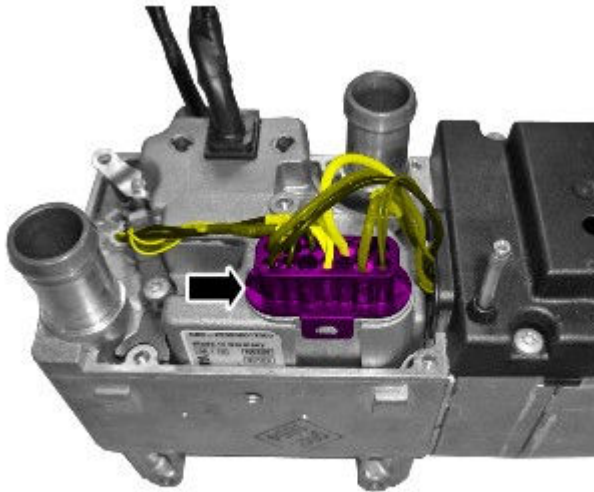

E155475

8.



E155476

安装

1. 反向操作拆除步骤即可安装。