

已发布: 28-八月-2012

蓄电池、座架和电缆 - 辅助蓄电池 拆卸和安装

拆卸





注意: 本程序中的拆除步骤可能包含安装细节。

1. 断开蓄电池接地导线。


参阅: Specifications (414-00, 规格).

- 2.

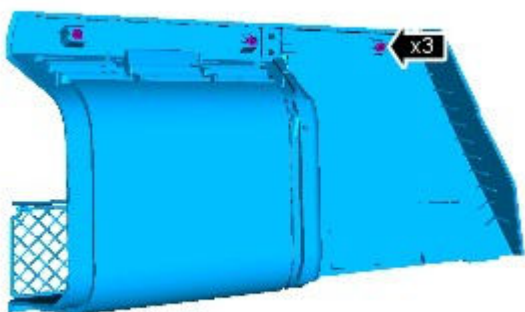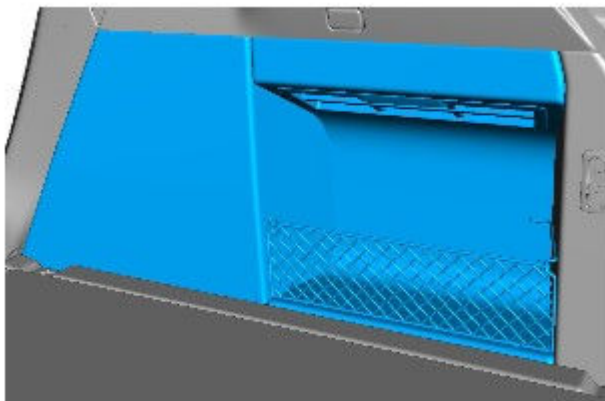


E145529

- 3.

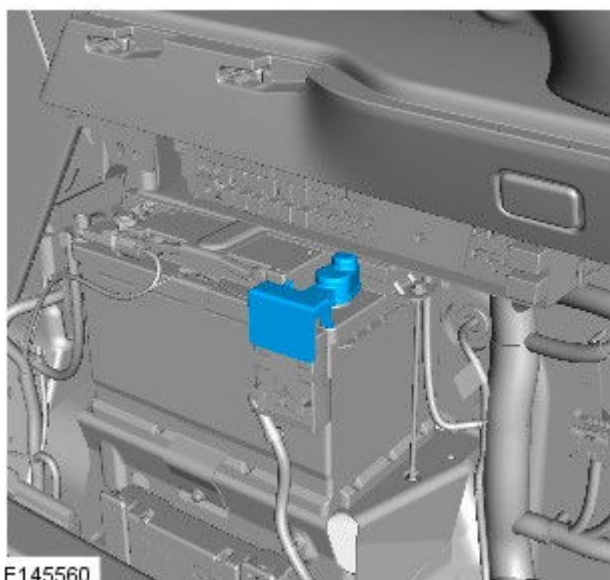


E145560

4. 扭矩: 10 Nm

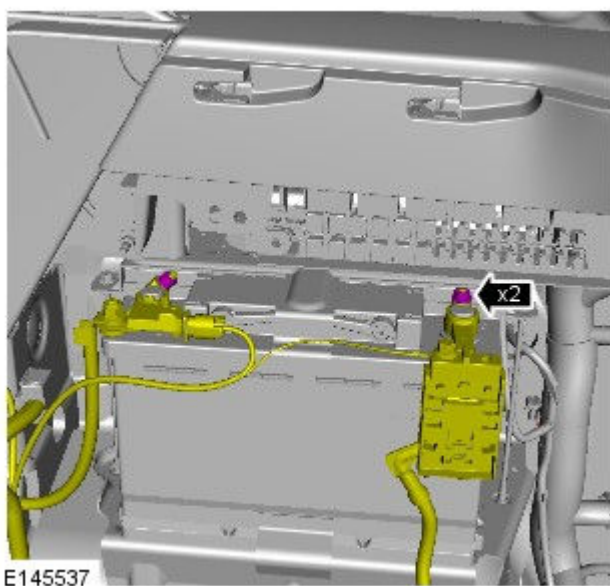

E145537

5. 扭矩: 9 Nm

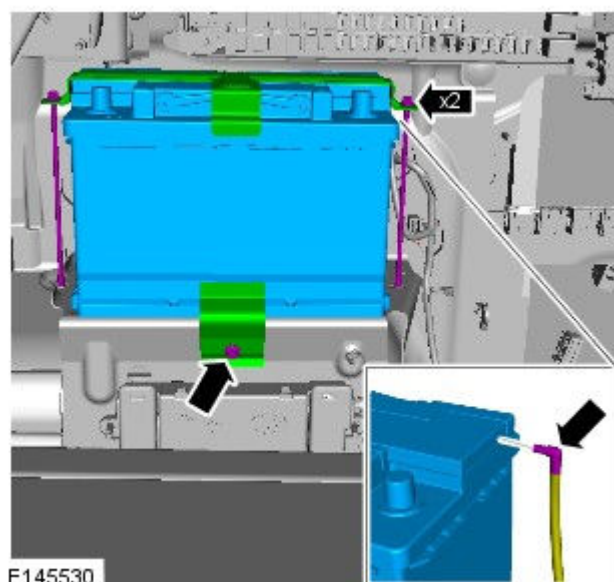

安装

1. 要进行安装, 请反向执行拆卸程序。