

已发布: 24-五月-2013

信息和娱乐系统 - 数字音响模块 车辆配备: 7 座

拆卸和安装

拆卸





注意: 本程序中的拆除步骤可能包含安装细节。


1.



2.  小心: 必须小心避免损坏部件。

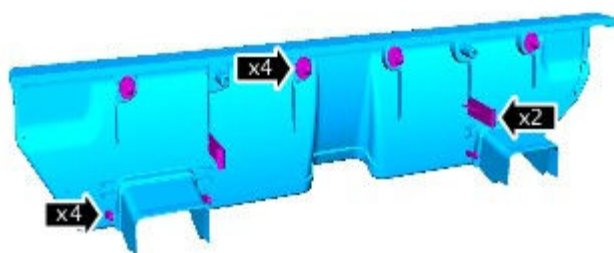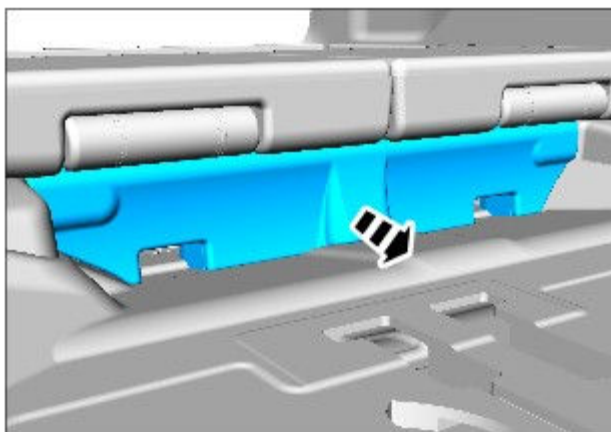


E155790

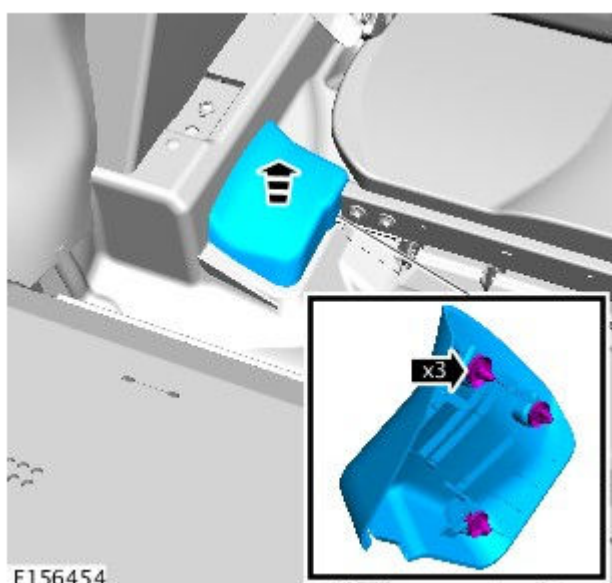

E156454


3.  注意：对另一侧重复该步骤。

4.

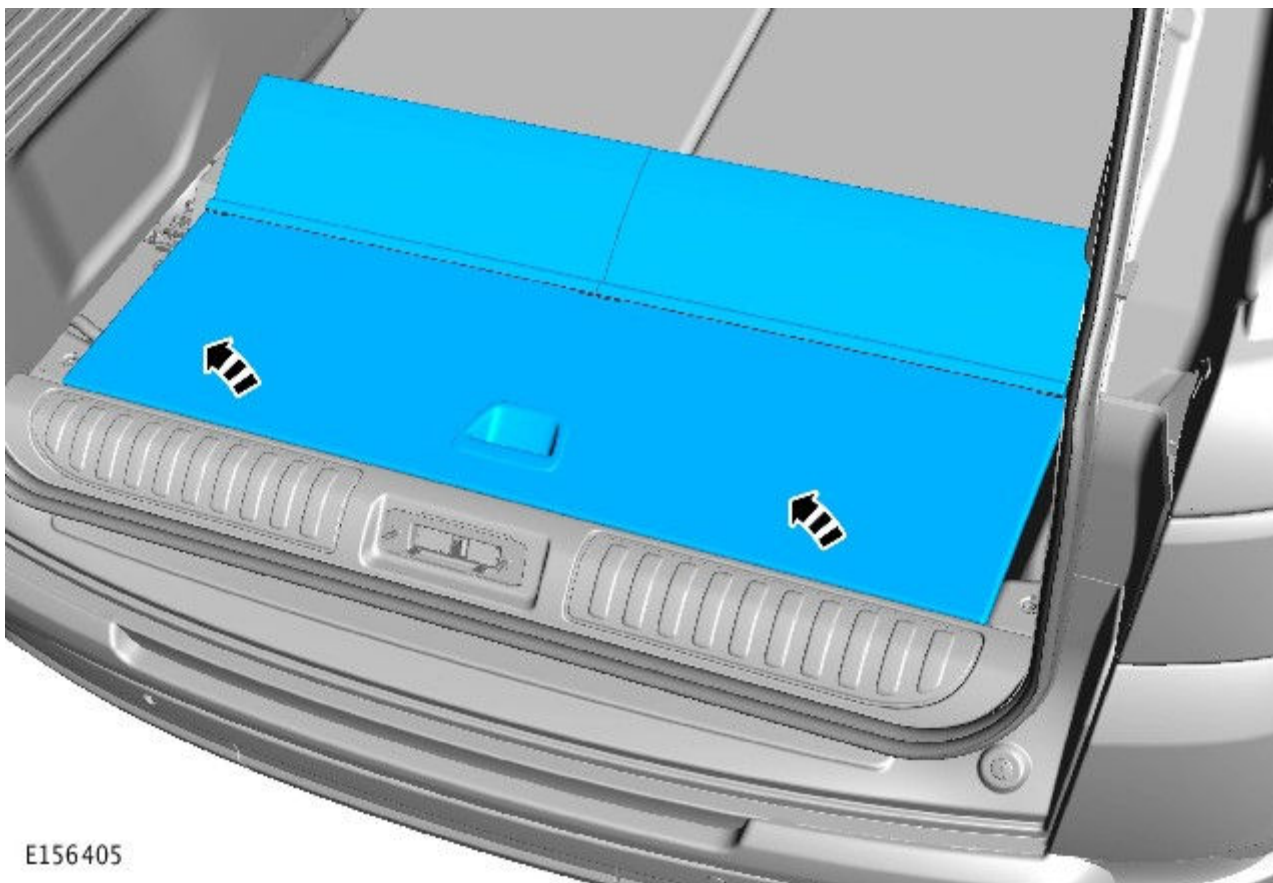


E156405

5.

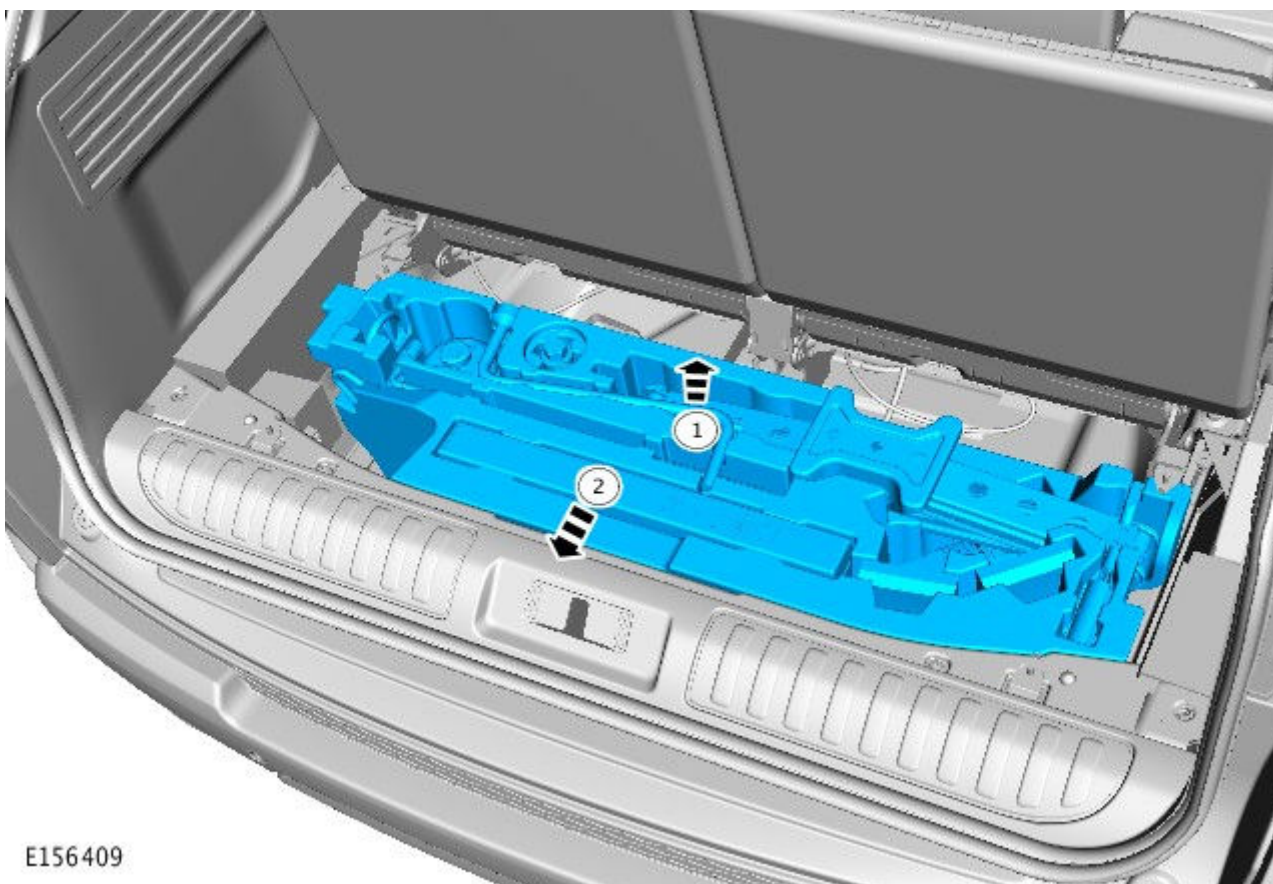


E156409


6. 扭矩: 25 Nm

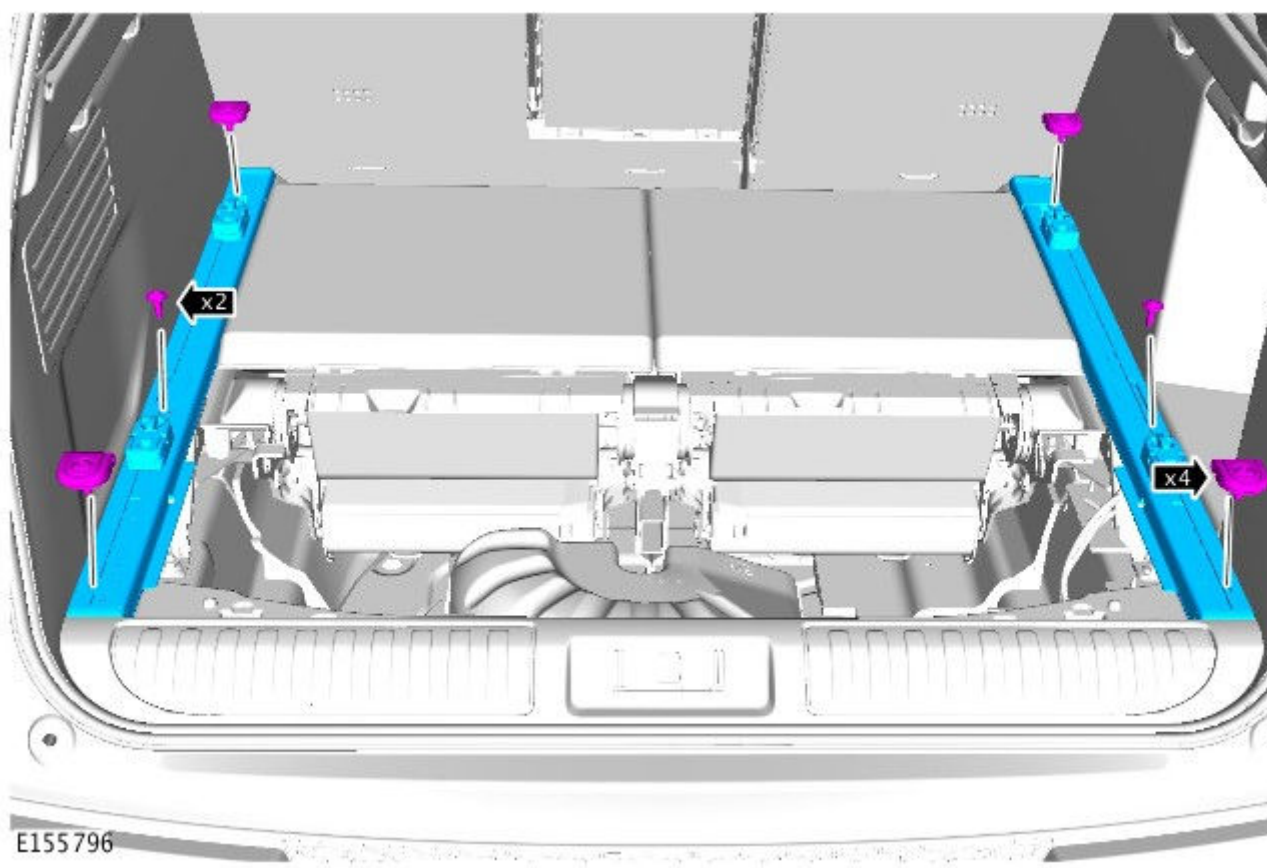


7.

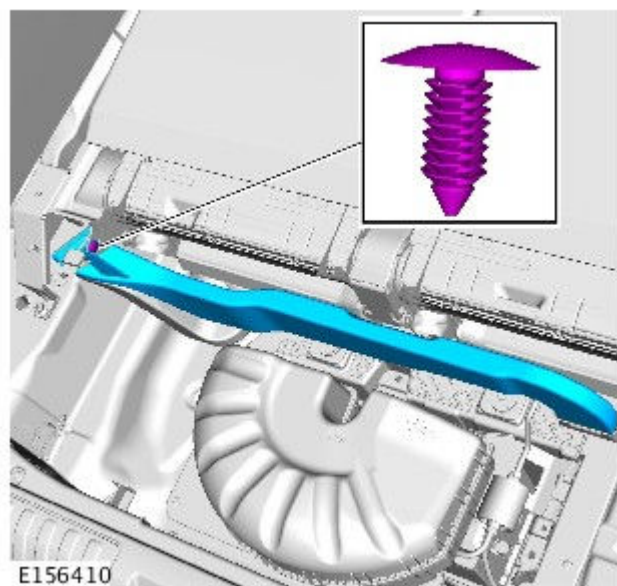


8.

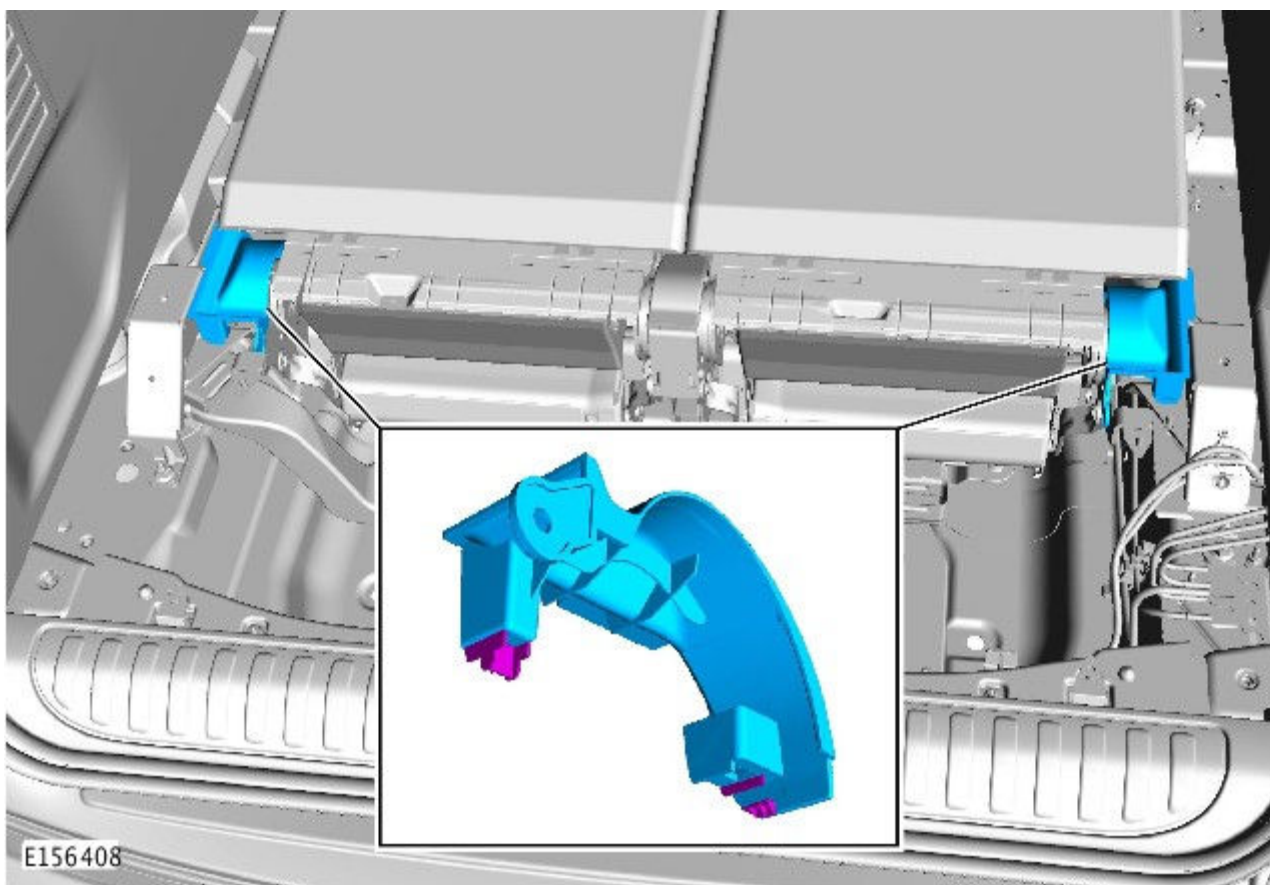


9.

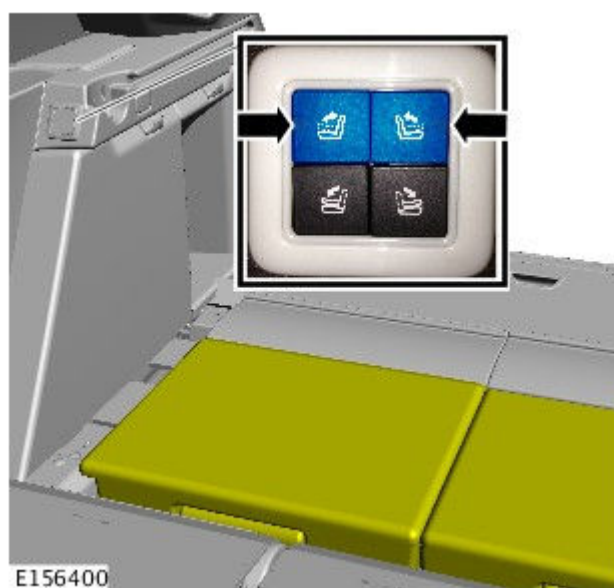

10.  注意: 对另一侧重复该步骤。

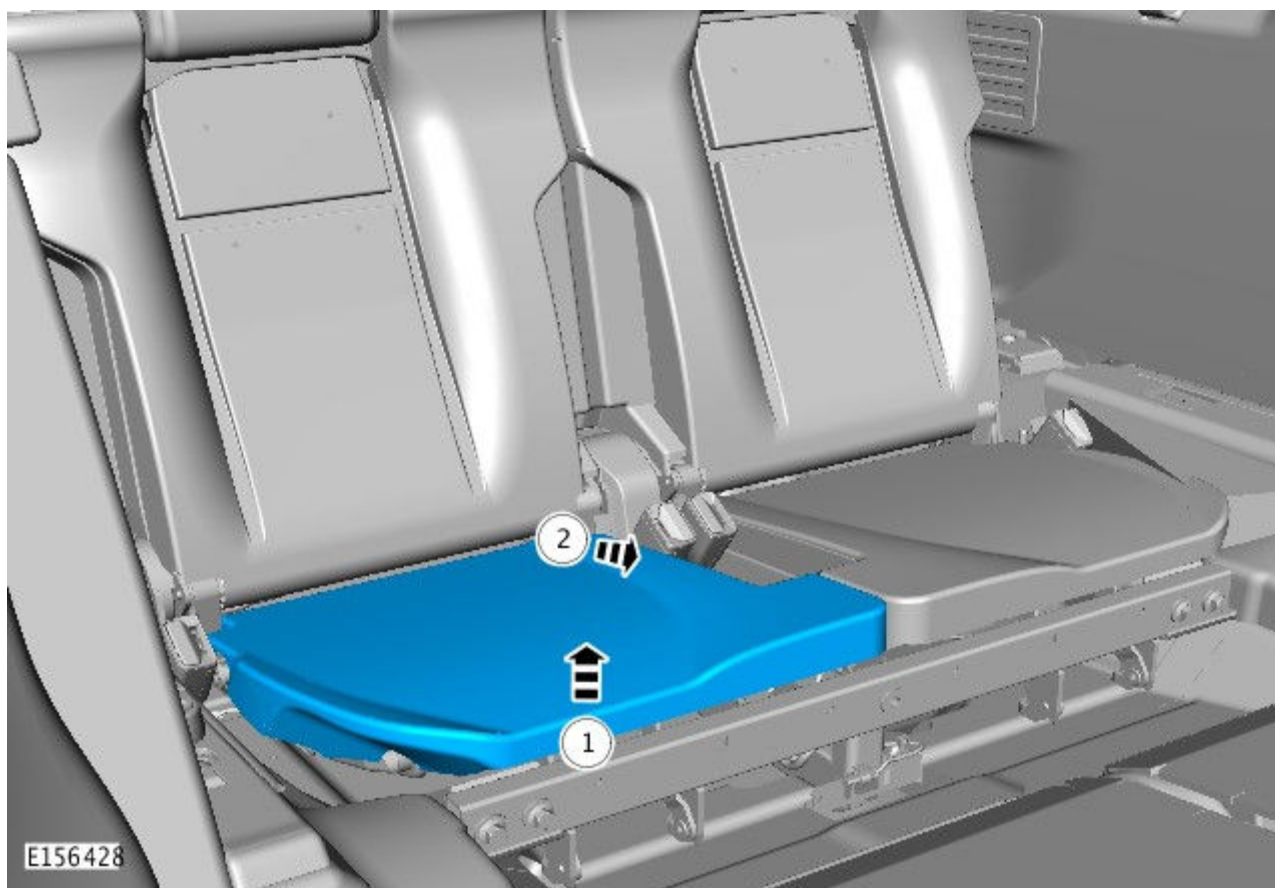

11.

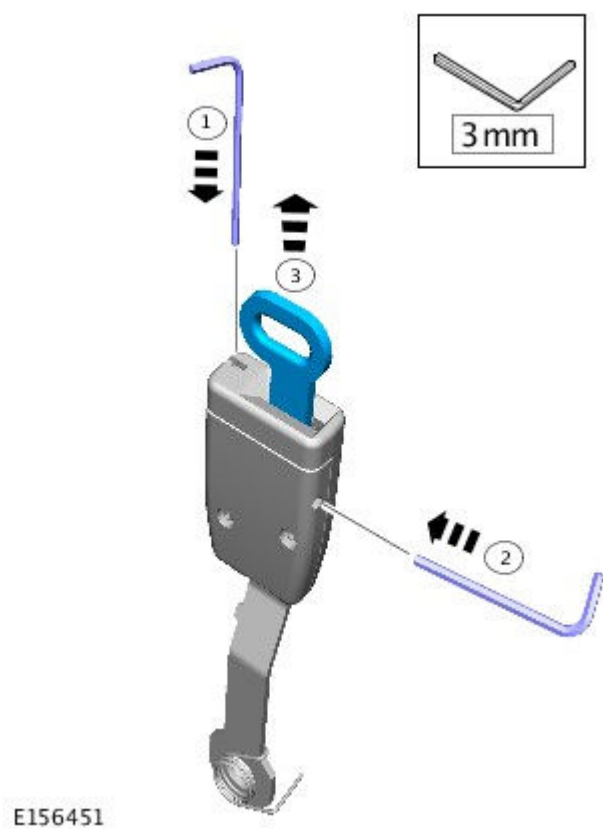


12. 断开蓄电池接地电缆的连接。


参阅: [规格](#) (414-00 蓄电池和充电系统 - 一般信息, 规格).

13.  注意: 丢弃固定螺母。


扭矩: 45 Nm

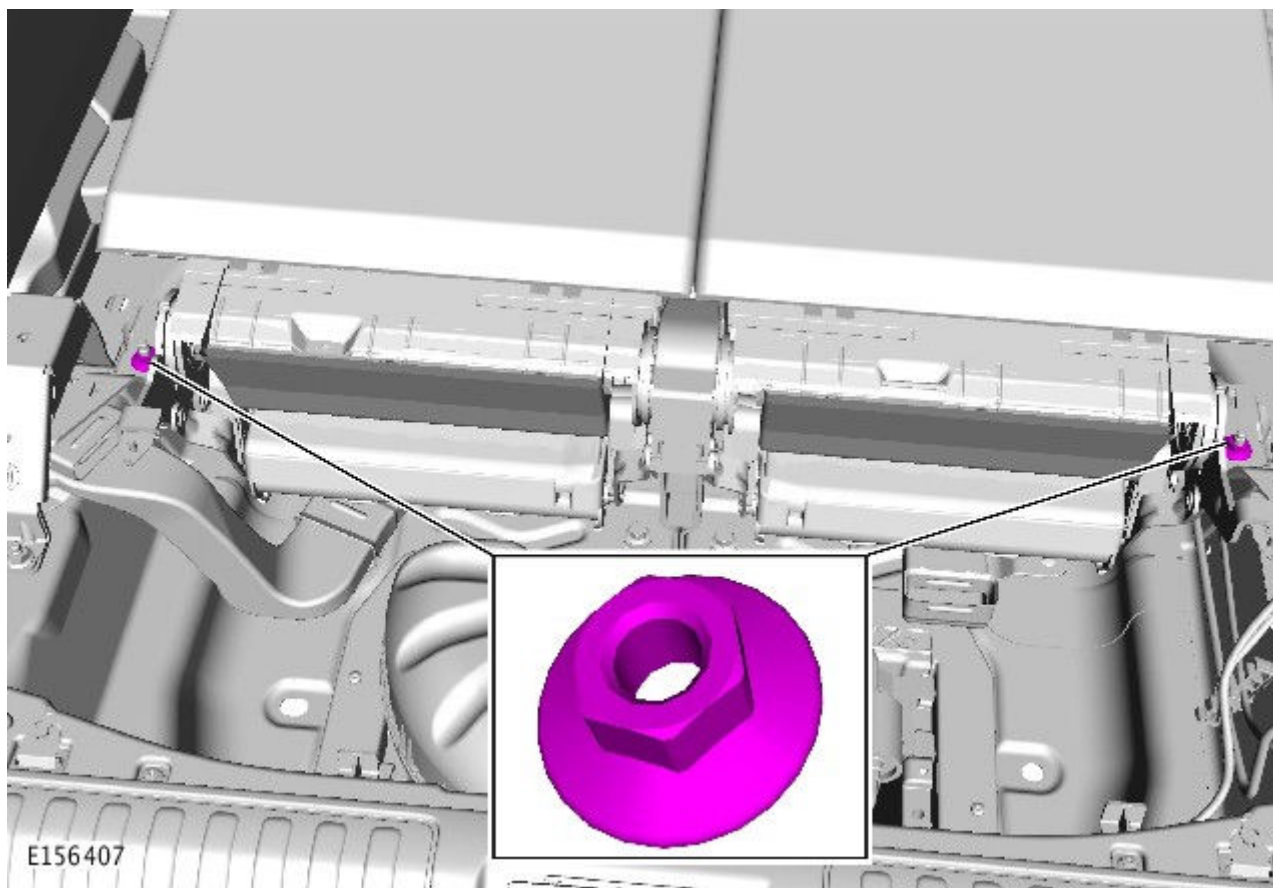

- 14.
- 扭矩: 47 Nm
 - 扭矩: 3 Nm

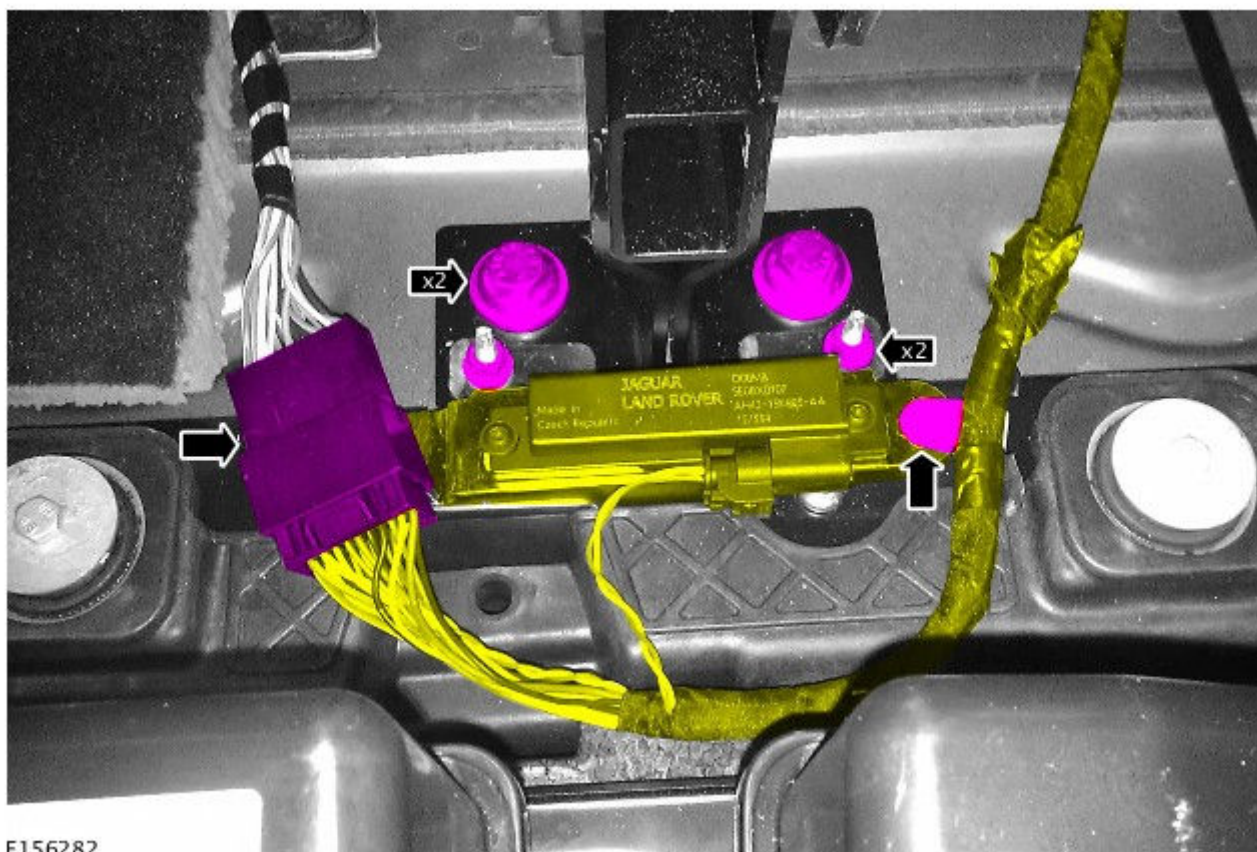


15. 扭矩: 47 Nm

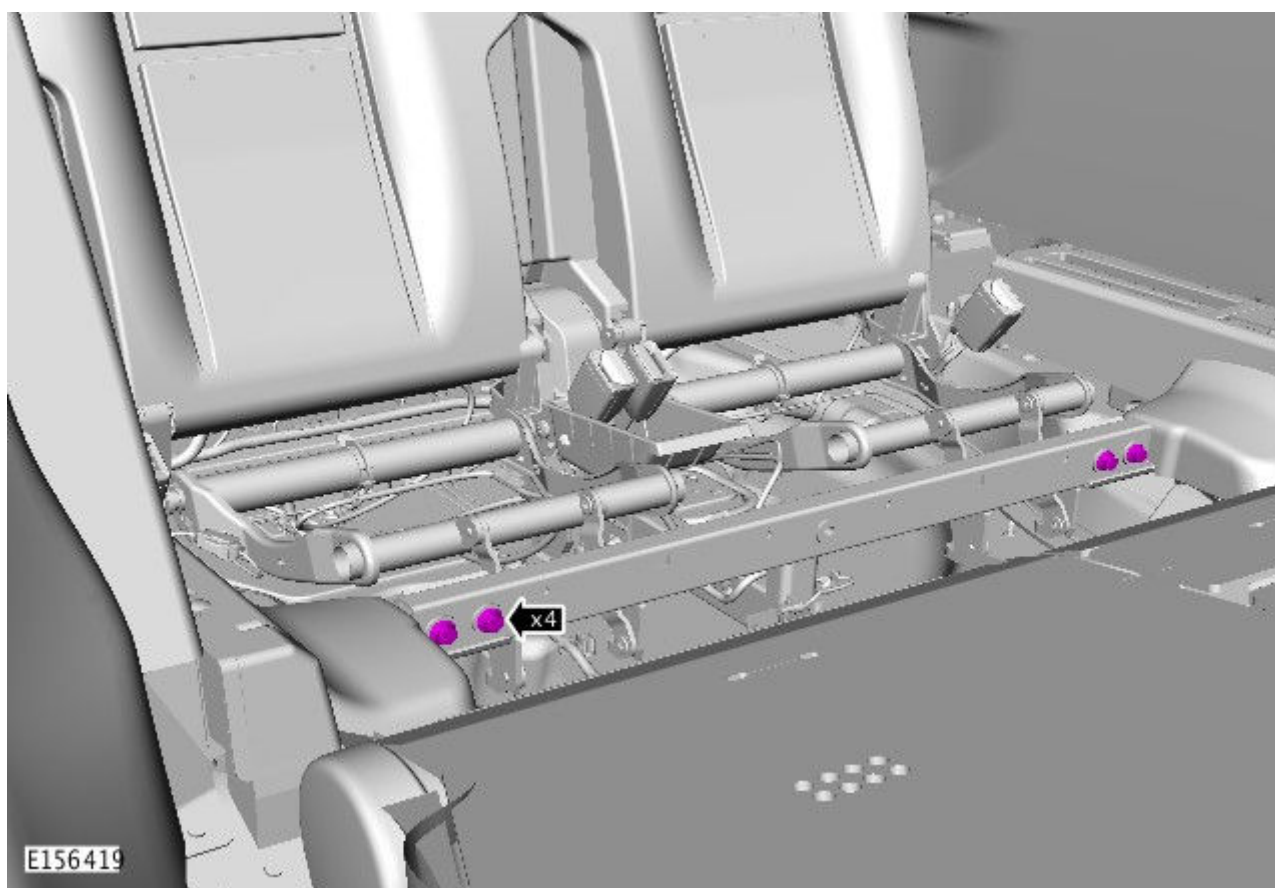


16.  警告: 本步骤需要另一技术员协助完成。

 小心: 必须小心操作, 以避免损坏周围的元件。

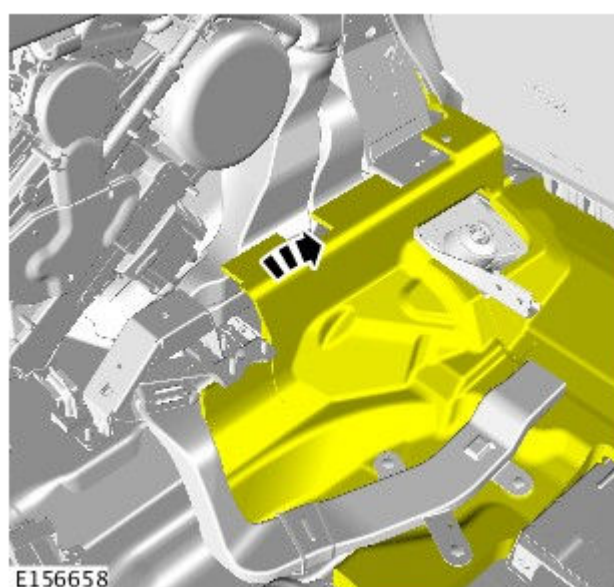


17.


18. 扭矩: 50 Nm

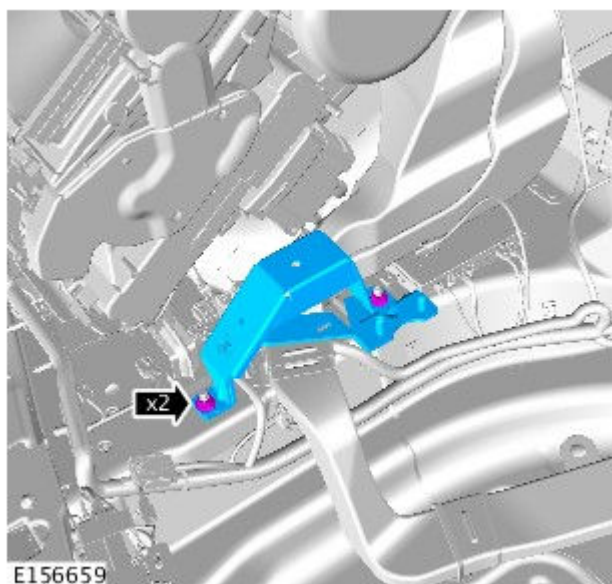


19.

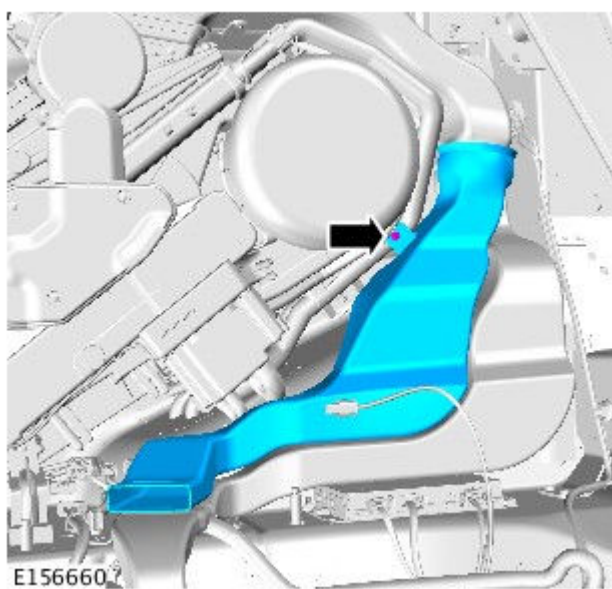

20.

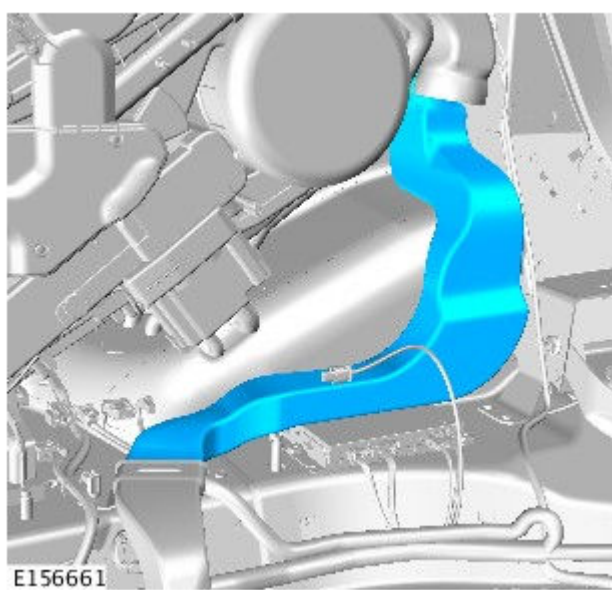

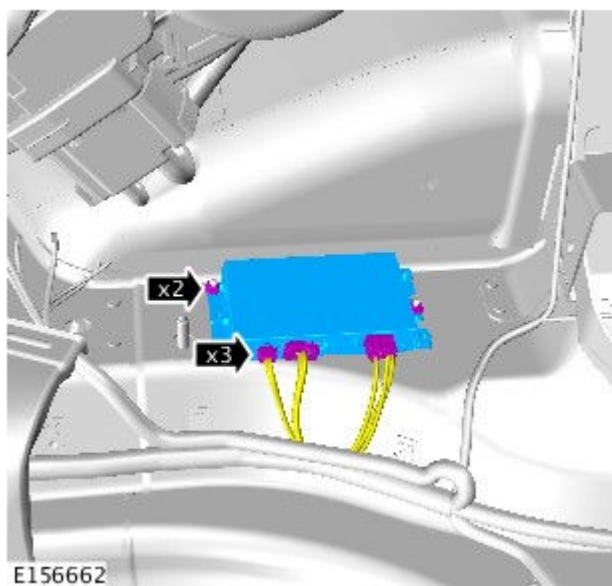

21. 扭矩: 9 Nm

安装

1. 反向操作拆除步骤即可安装。
2. 如已安装新部件, 请使用 Land Rover 许可的诊断设备进行配置。