

已发布: 06-五月-2013

## 外部照明 - 前转向信号灯灯泡

### 拆卸和安装

#### 拆卸

注意:



本程序中的拆除步骤可能包含安装细节。



左侧驾驶如图所示, 右侧驾驶相似。



点火开关必须关闭。


1. 断开蓄电池接地电缆的连接。

参阅: [规格](#) (414-00 蓄电池和充电系统 - 一般信息, 规格)。

2.  警告: 确保采用车轴支架支撑车辆。


抬起并支撑车辆。

- 3.

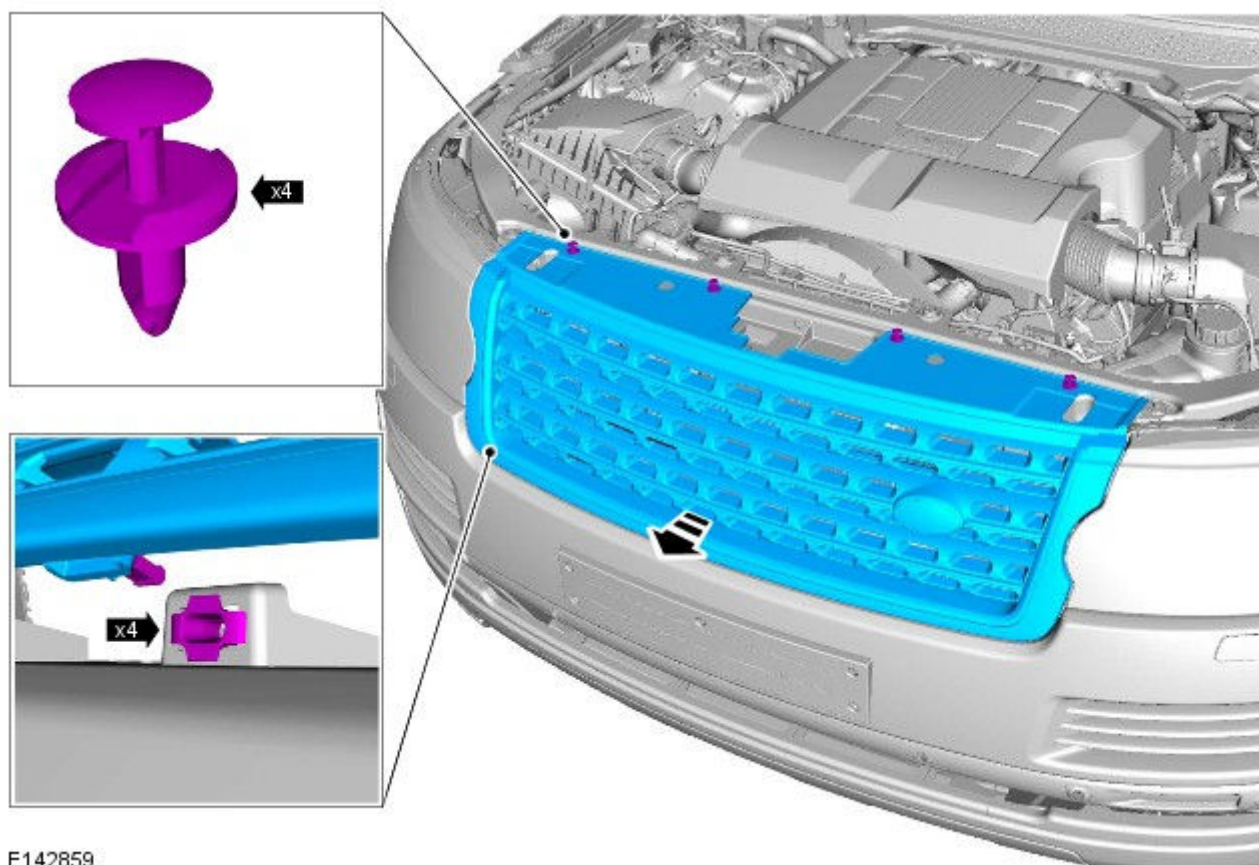


E142859


4. 扭矩: 5 Nm

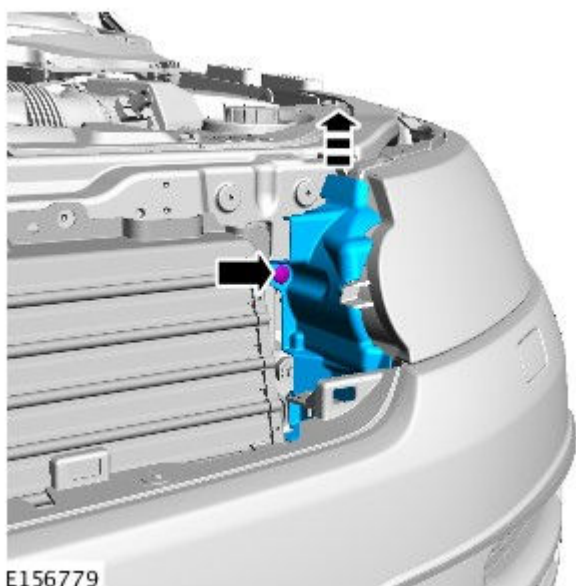


5. 扭矩: 5 Nm

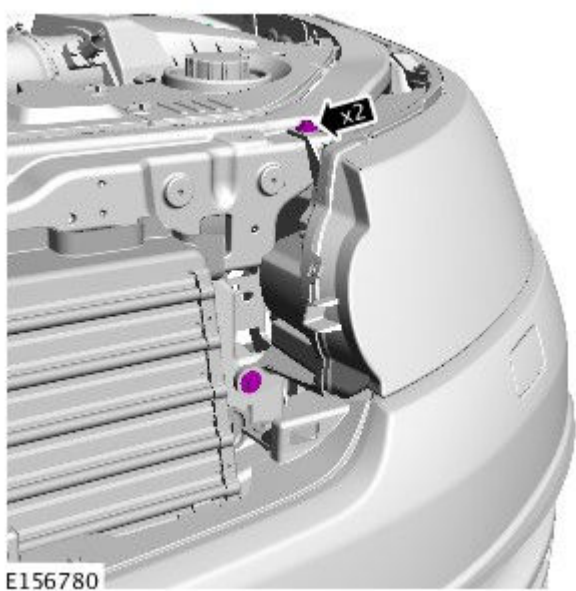


6.

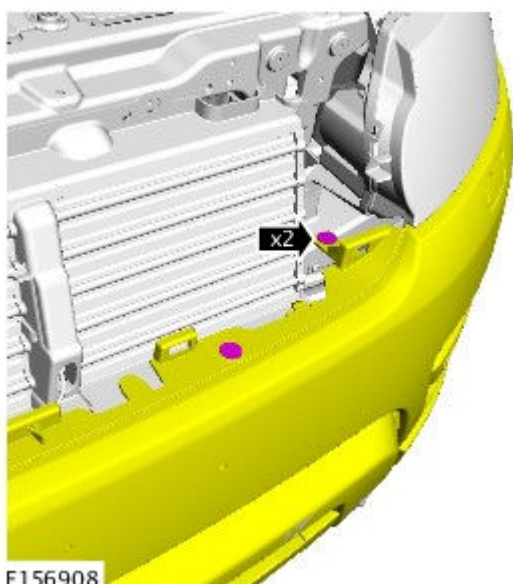


7.

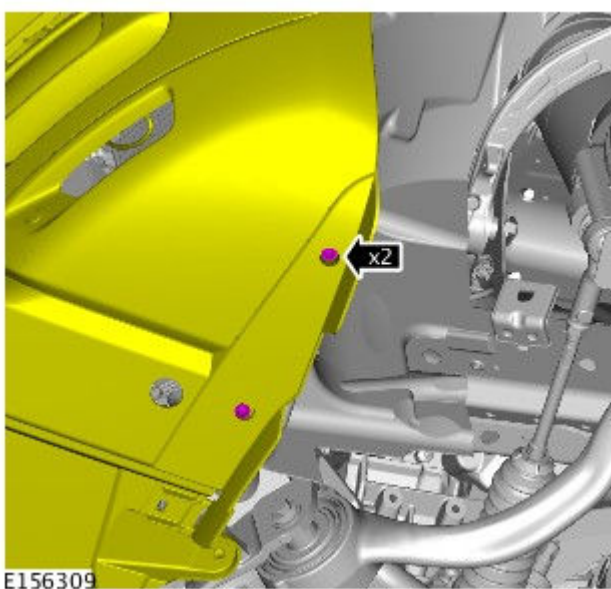


8.

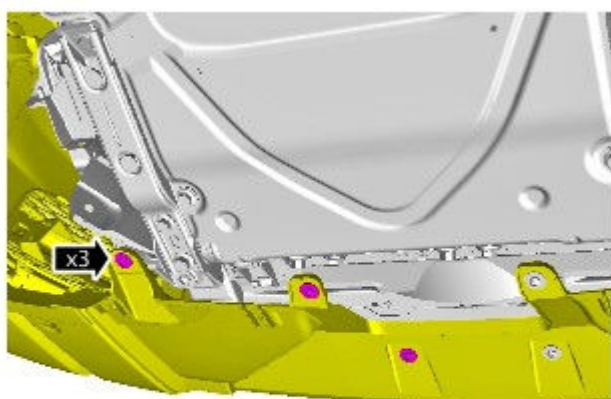

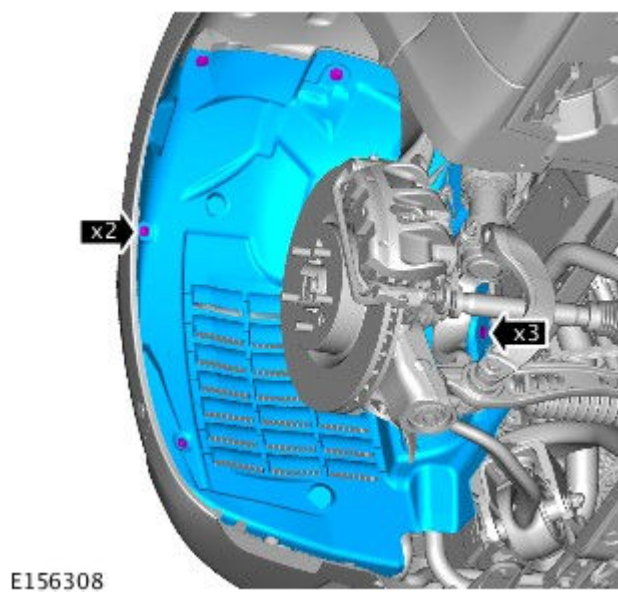


9.

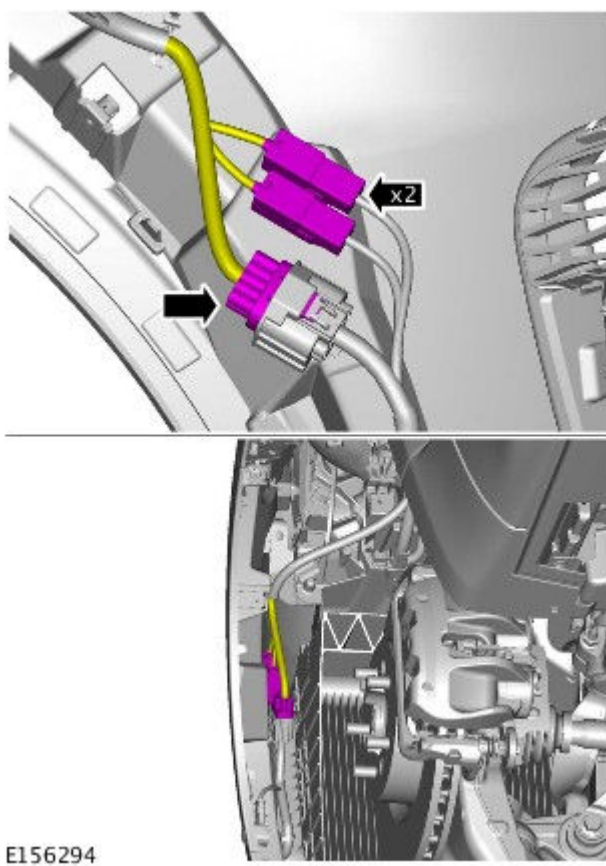

10.

11.

E156782

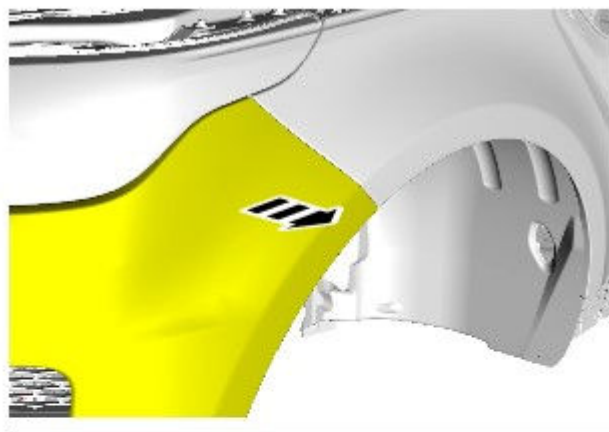

E156781





12. 小心:

 请格外小心以免损坏部件。

 请格外小心以免损坏周围部件。


13.  小心: 请格外小心以免损坏周围部件。



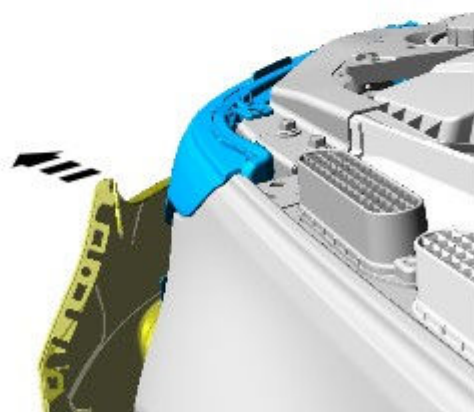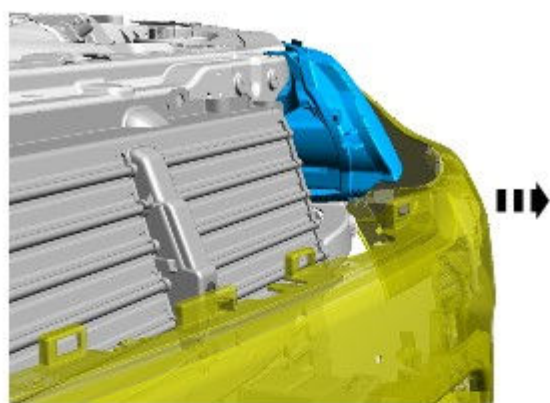


E156783

14. 扭矩: 5 Nm

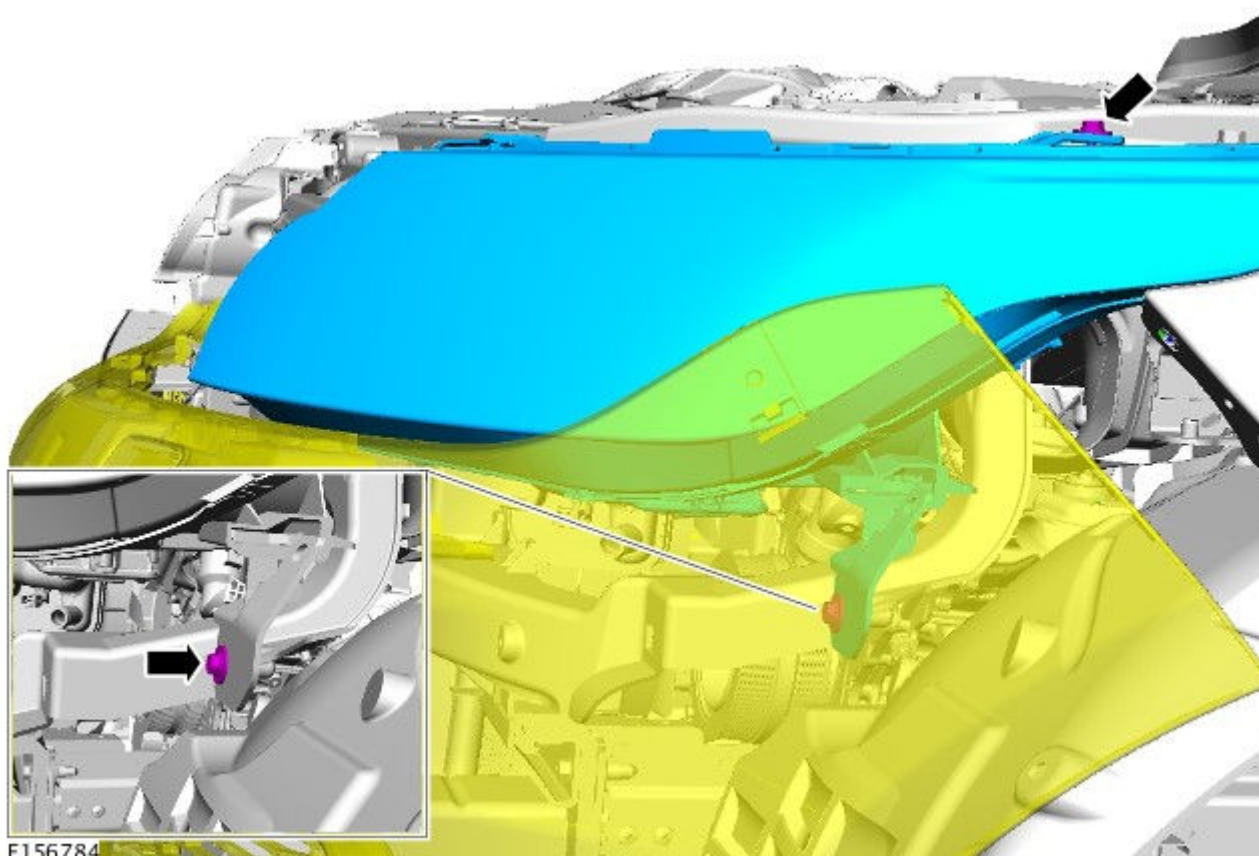


E156784

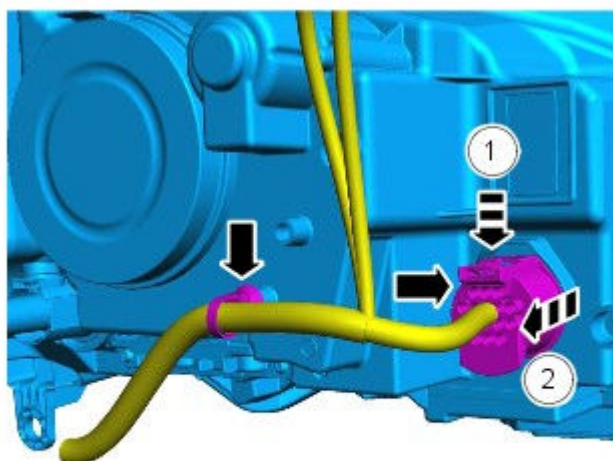

15.

E146807

16.  注意: 如果拆除部件仅仅为了检修其他部位, 切勿进一步拆卸。

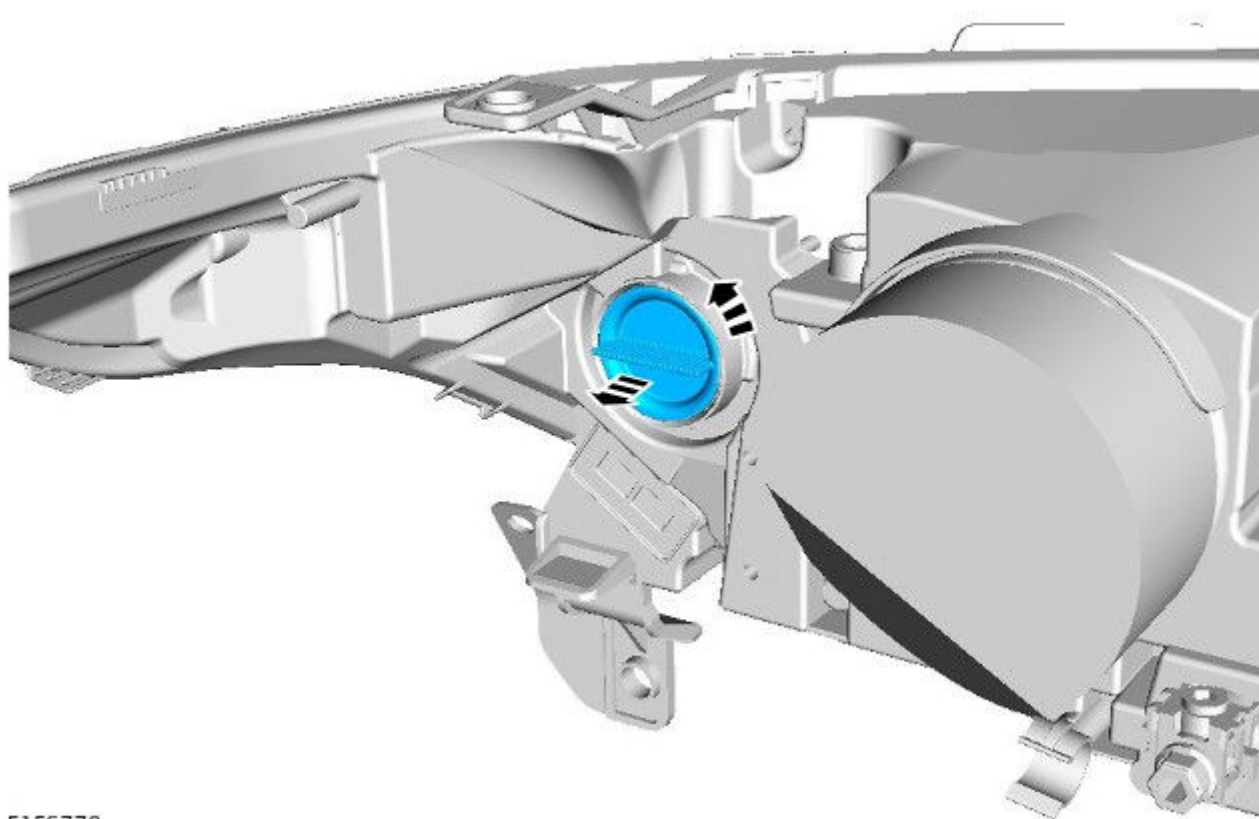

E156778

安装

1. 要进行安装, 请反向执行拆卸程序。
2. 参阅: [头灯调整 \(417-01 外部照明, 一般步骤\)](#)。

