

已发布: 24-五月-2013

玻璃、车架和机械 - 后门窗玻璃 拆卸和安装

拆卸




注意: 本程序中的拆除步骤可能包含安装细节。

1. 参阅: [后门窗调节器电机](#) (501-11 玻璃、车架和机械, 拆卸和安装).


2.

- 将后门玻璃降低至门的底部。

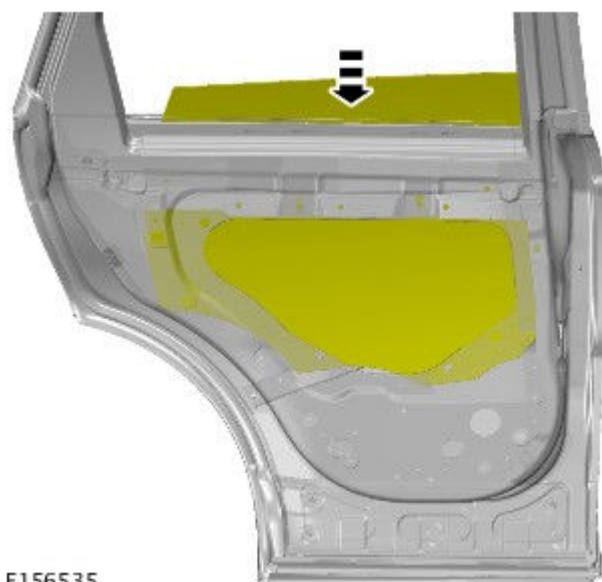

E156535

3.  小心: 请格外小心以免损坏部件。

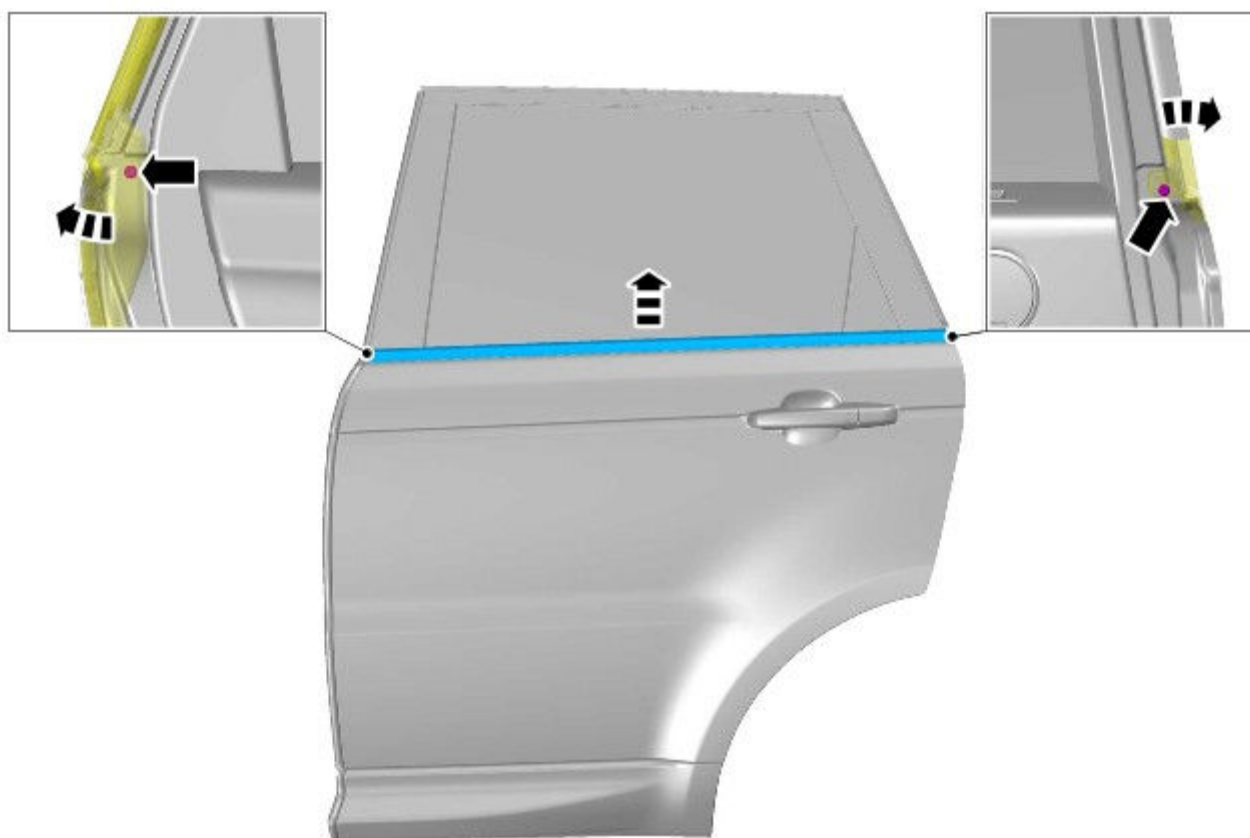


E156541

4.




E156537


5.

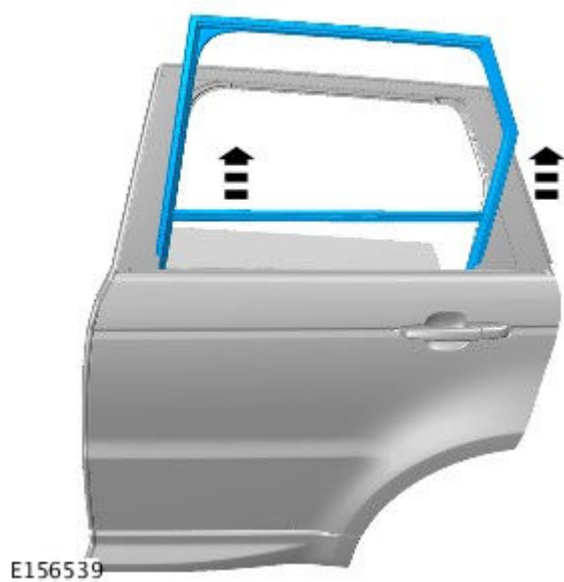

6.

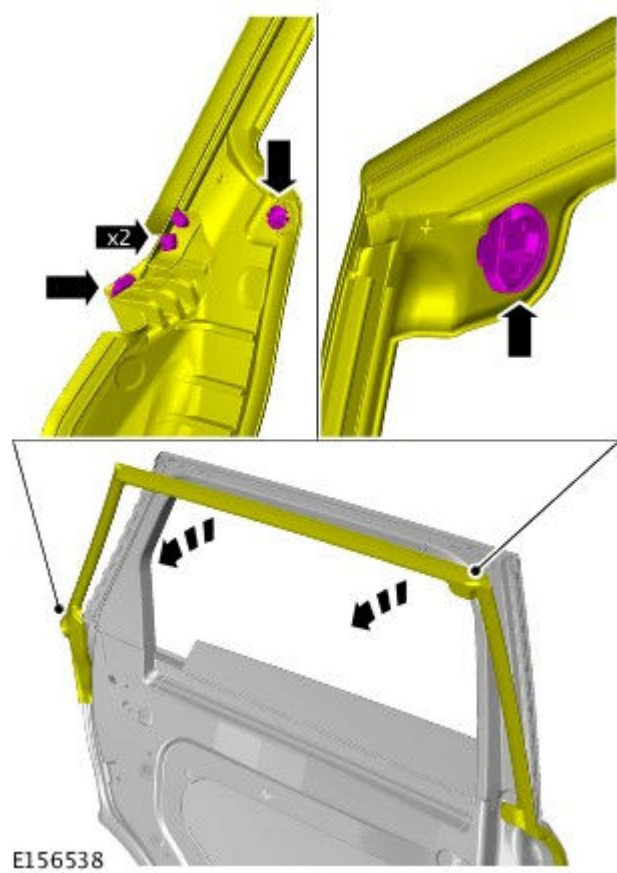


7.  小心：请格外小心以免损坏部件。

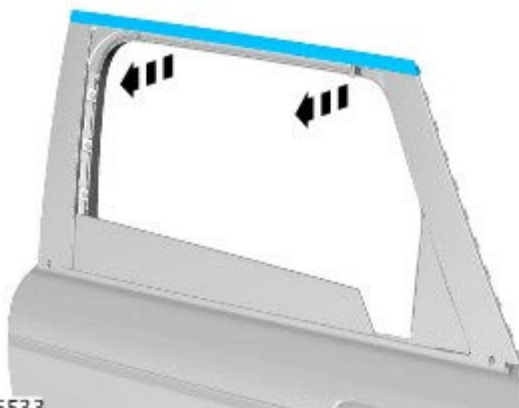


E156533

8. 扭矩: 1,2 Nm

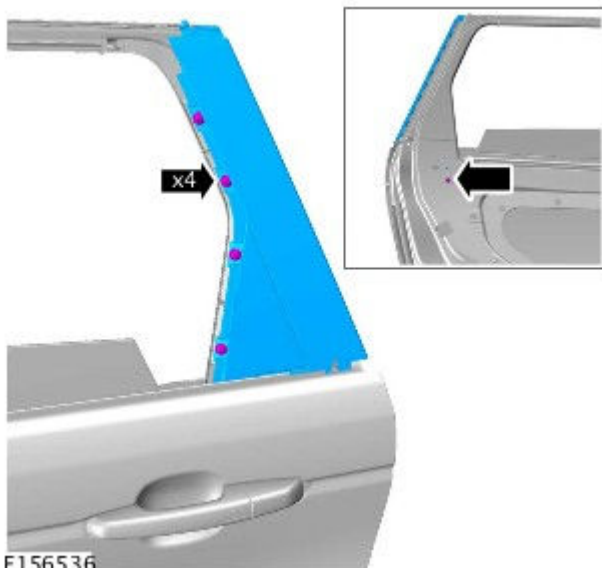

E156536

9.

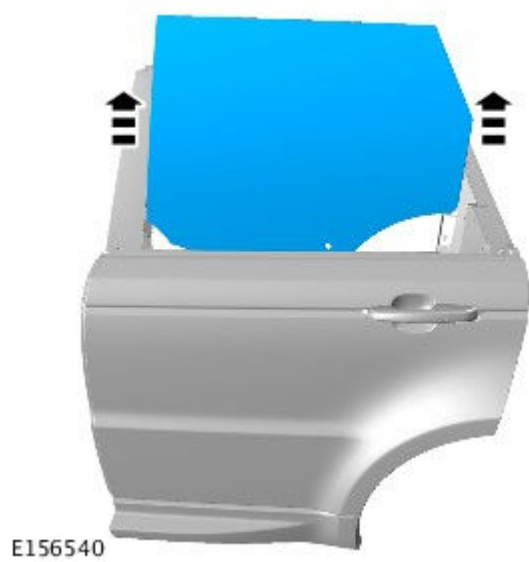

安装

1. 反向操作拆除步骤即可安装。