

已发布： 23-六月-2011

发动机 - TD4 2.2 升柴油机 - 进气歧管

拆卸和安装

拆卸**小心：** 确保所有孔口均已密封。 请采用新的封口盖。

注意： 各图示中可能存在某些差异，但基本信息始终是正确的。

1. 断开蓄电池接地电缆。


参阅： [规格](#) (414-01 蓄电池、座架和电缆, 规格).

2.  **警告：** 确保采用车轴支架支撑好车辆。


举升并支撑好车辆。

3. 参阅： [燃油滤清器](#) (310-01A 油箱和管线 - TD4 2.2 升柴油机, 拆卸和安装).




4.

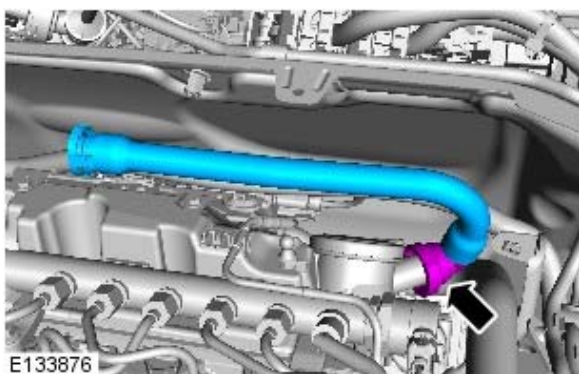

5.  **小心：** 丢弃元件。

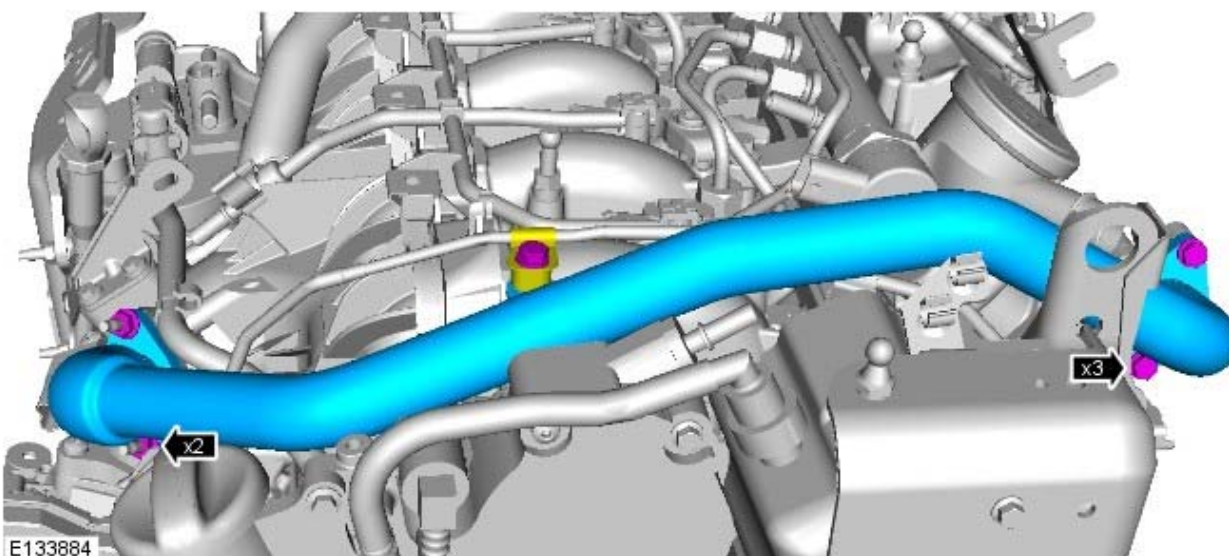


6.

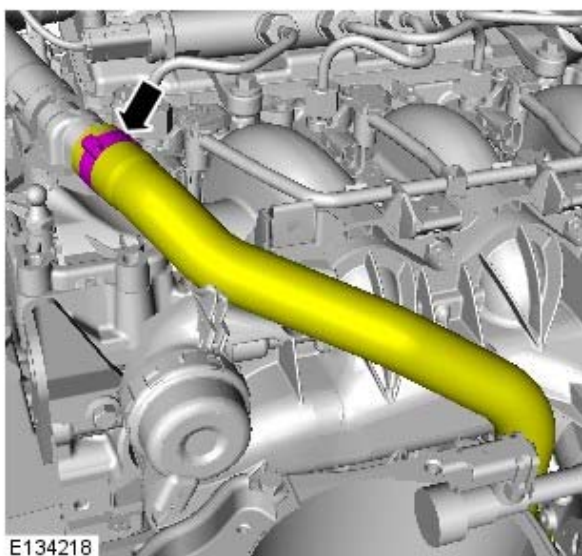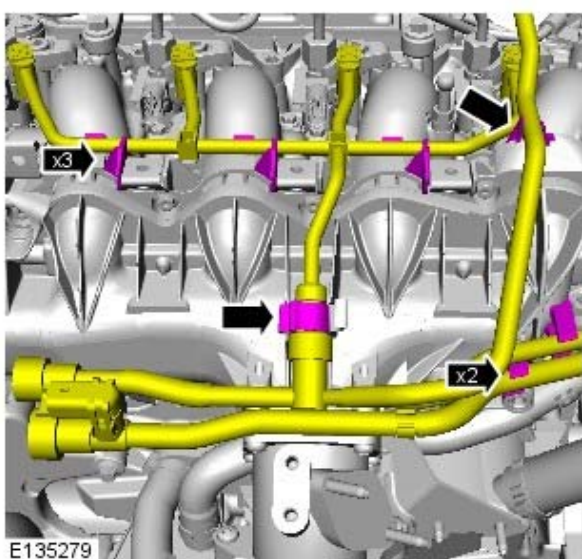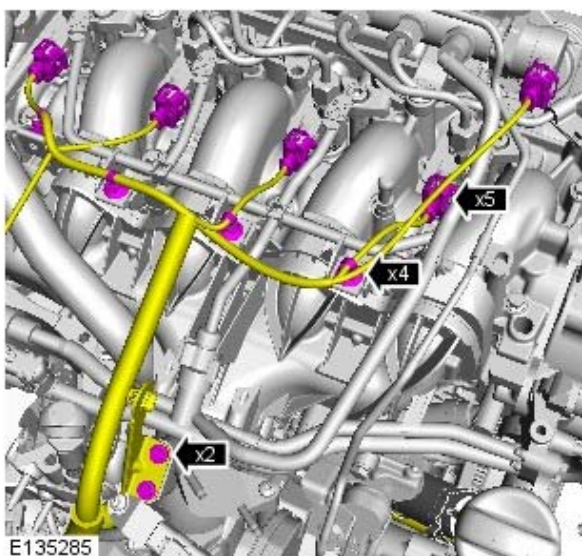


7.

8.  小心： 确保所有孔口均已密封。 请采用新的封口盖。


9.

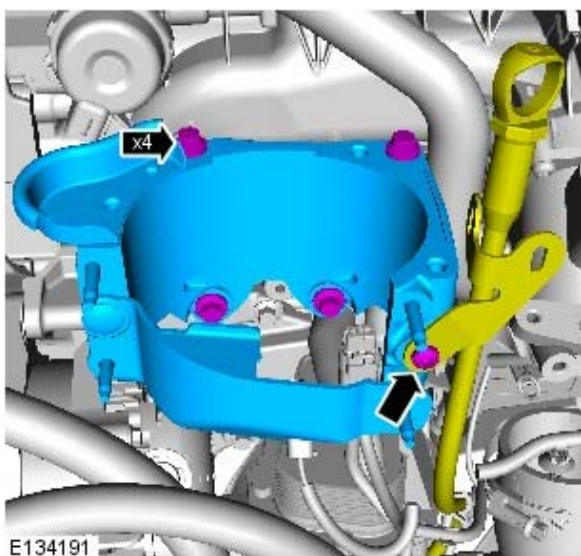


10.

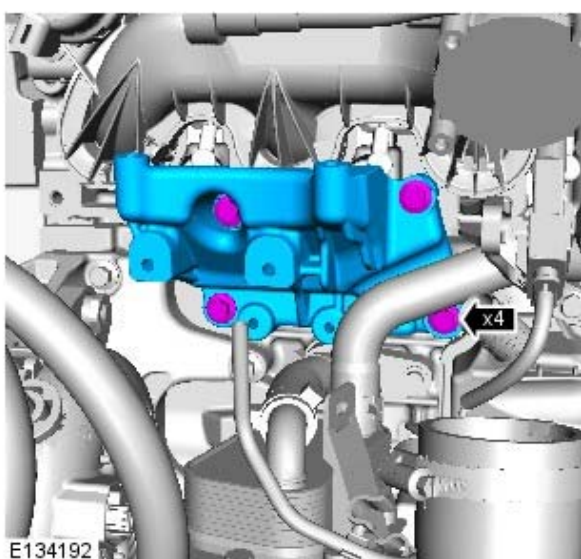


11.

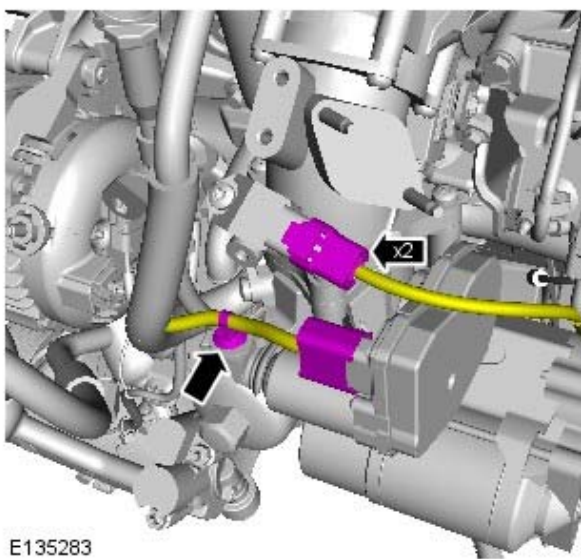


12.

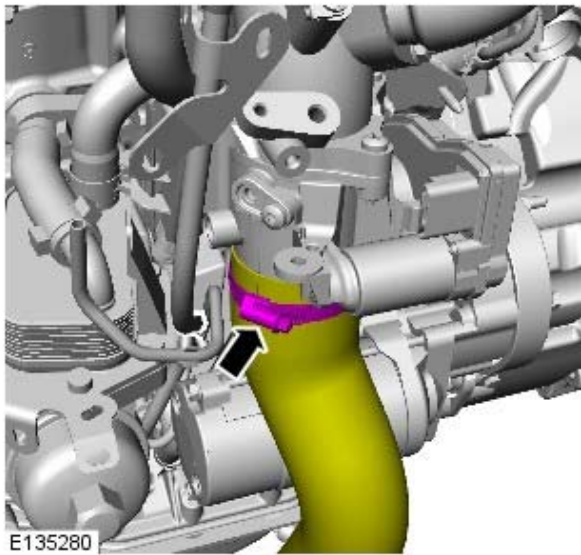


13.

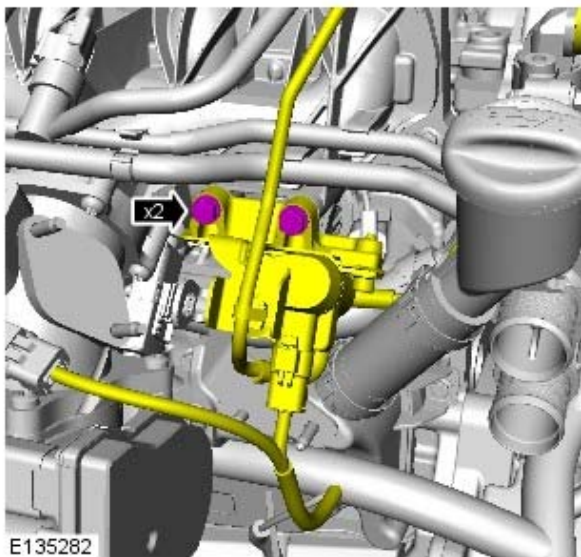


14.

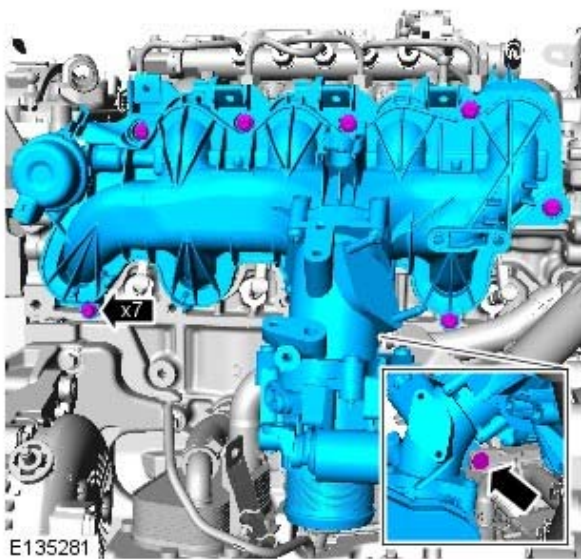

15.

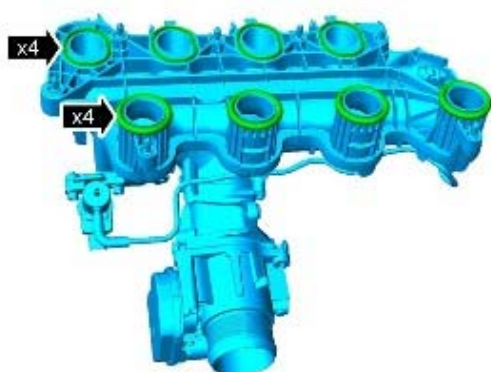


E135286

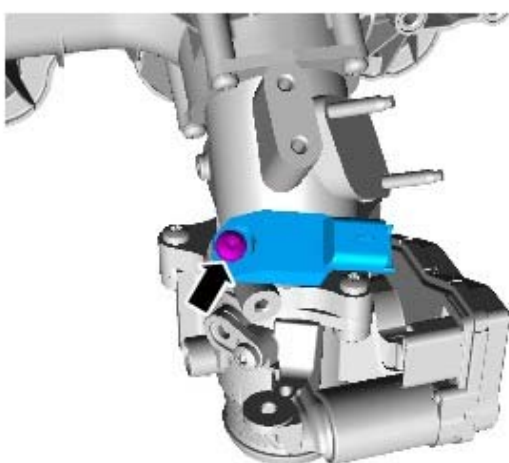

16. 注意：如果卸下元件仅仅为了检修其他部位，切勿进一步拆卸。

E136577

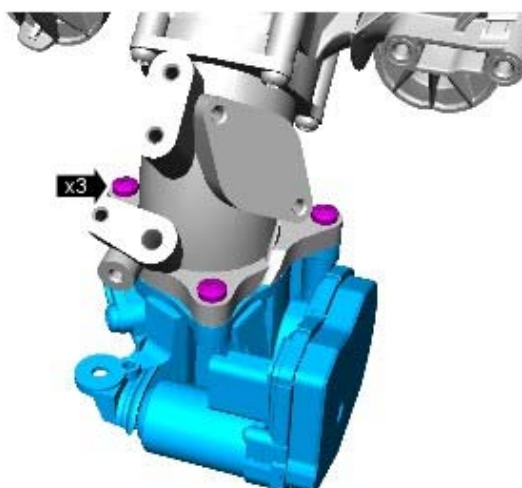


- 17.

E135284


安装

1.  小心：确保接合面干净且没有异物。

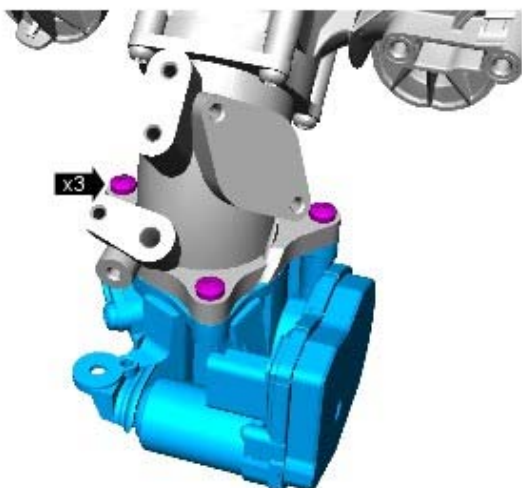


扭矩: 8 Nm

E135284

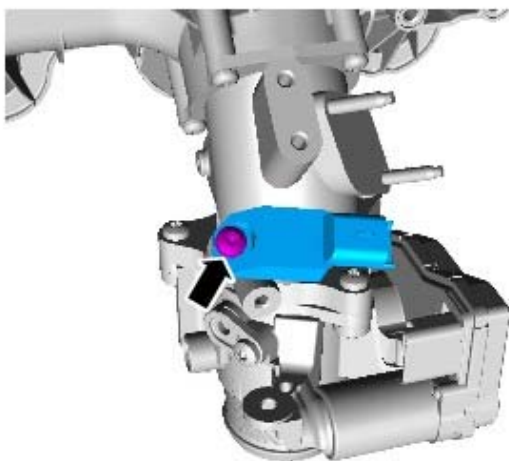

2. 扭矩: 10 Nm

E136577

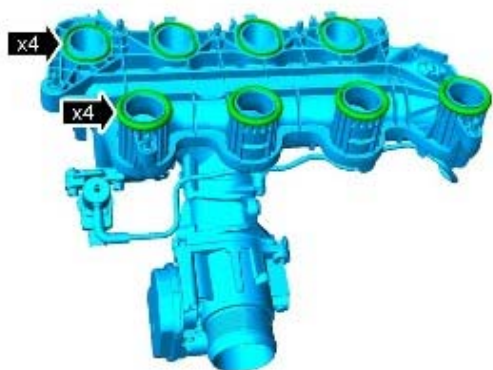


3.

E135286

4. 小心:




按照图示顺序拧紧螺栓。

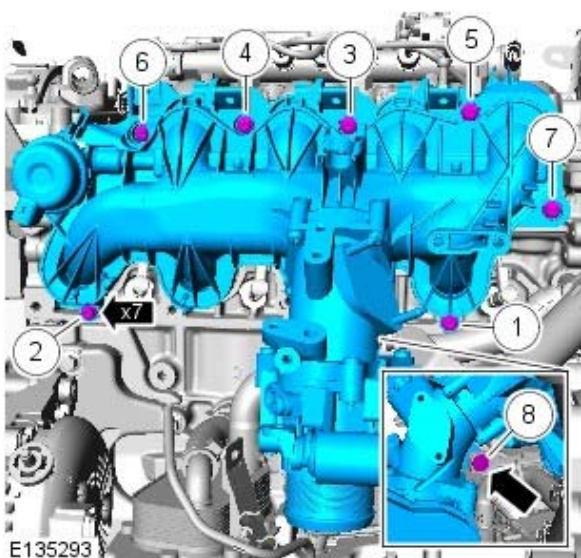


确保接合面干净且没有异物。

扭矩: 9 Nm

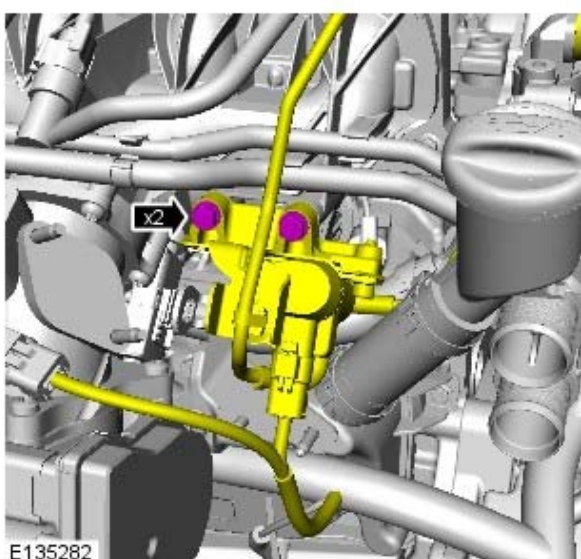


5. 扭矩: 9 Nm

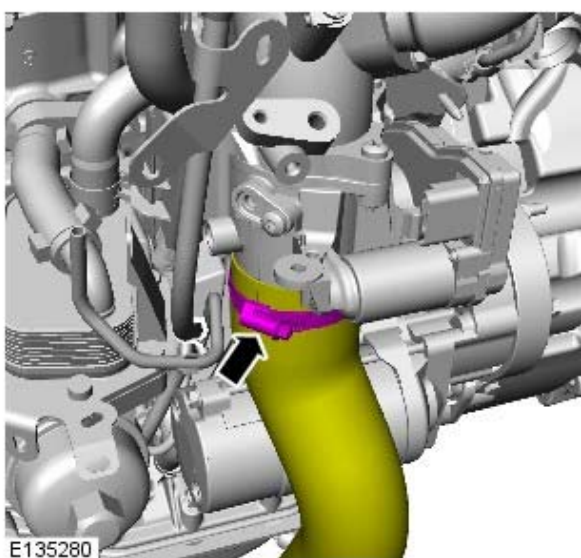


6.

7.

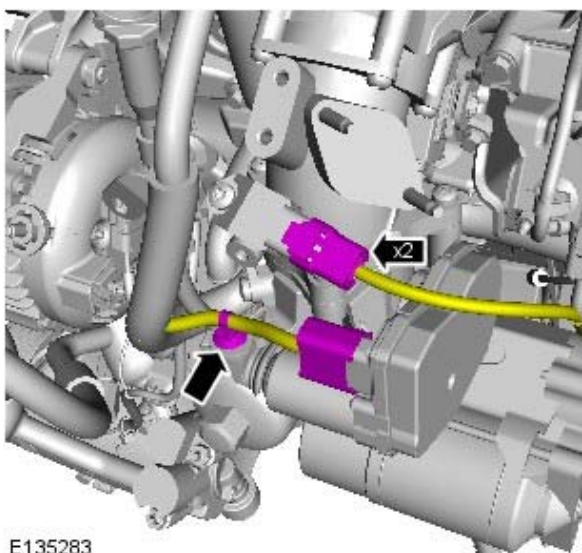


E135283

8. 扭矩: 20 Nm

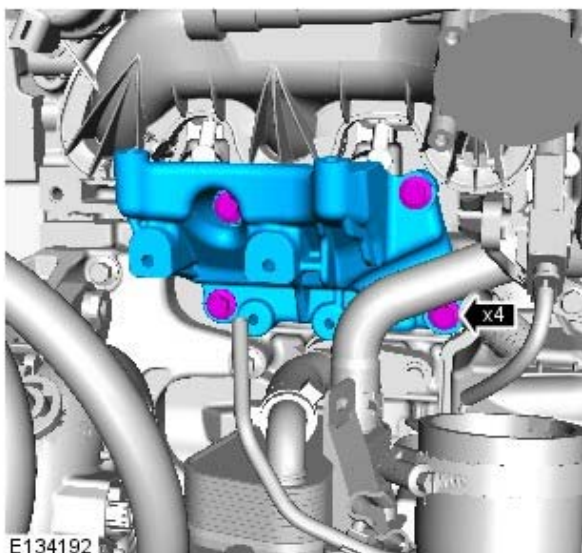


E134192

9. 扭矩:
M8 20 Nm
M6 10 Nm

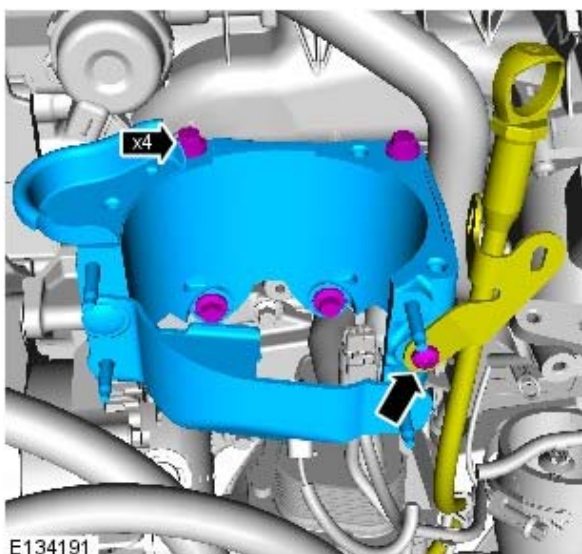

E134191

10. 注意: 安装一个新的固定卡夹。

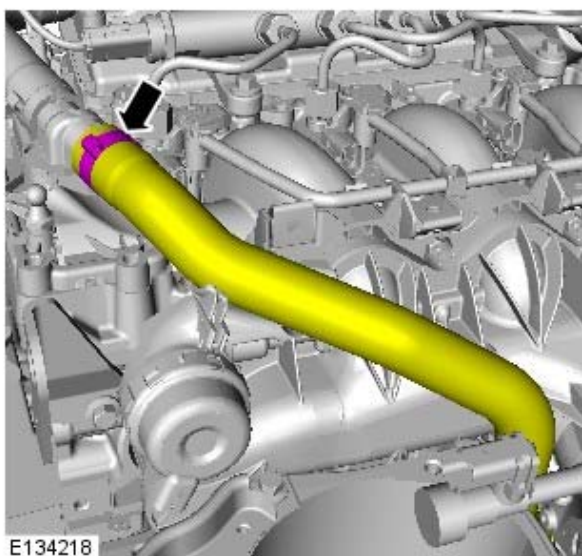

11. 小心:



请确保已安装新的元件。




确保接合面干净且没有异物。

扭矩:


废气再循环 (EGR) 出口管螺栓 10 Nm

废气再循环 (EGR) 出口管螺母 10 Nm


支架螺栓 8 Nm

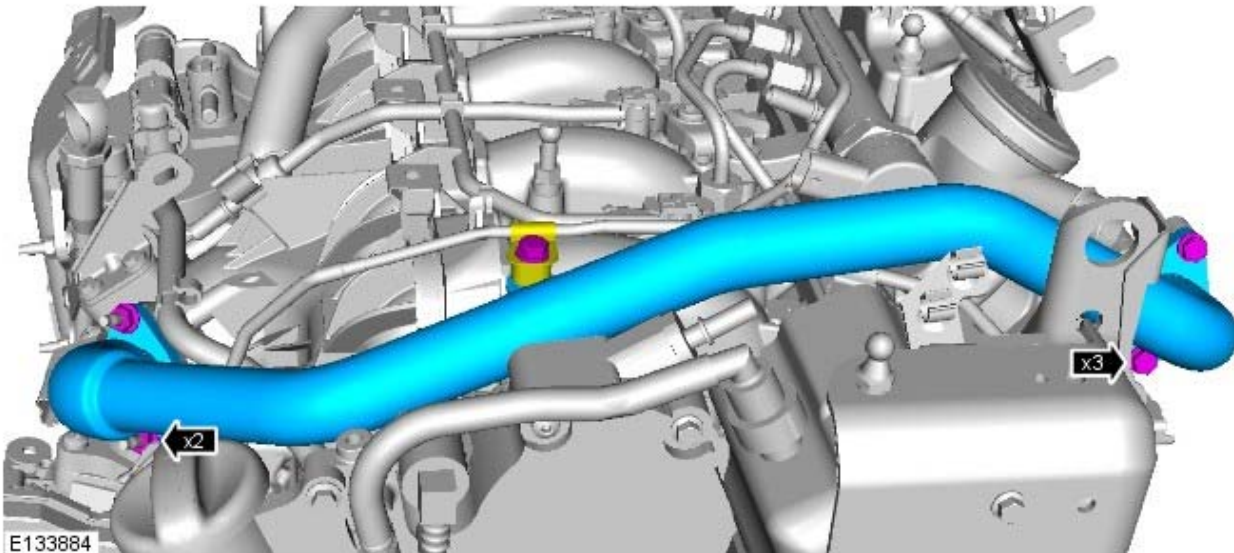


12.

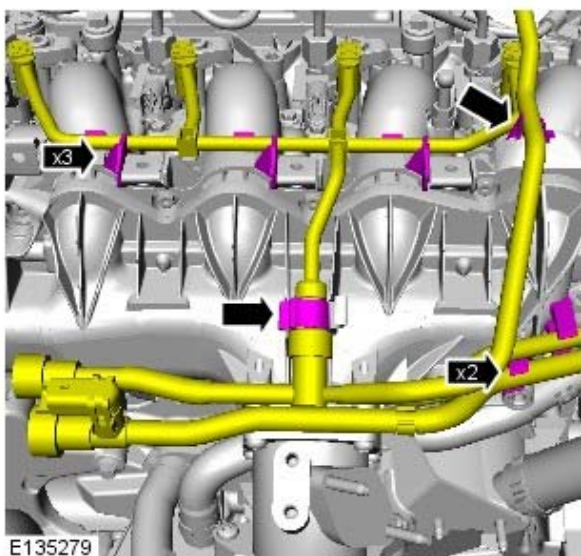

13. 扭矩: 8 Nm

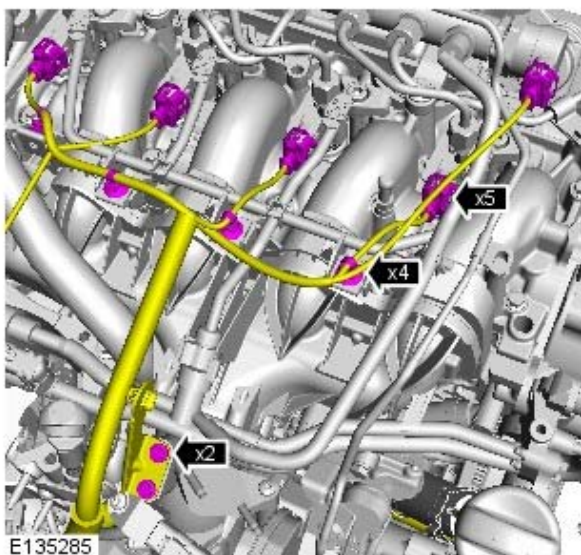

14.

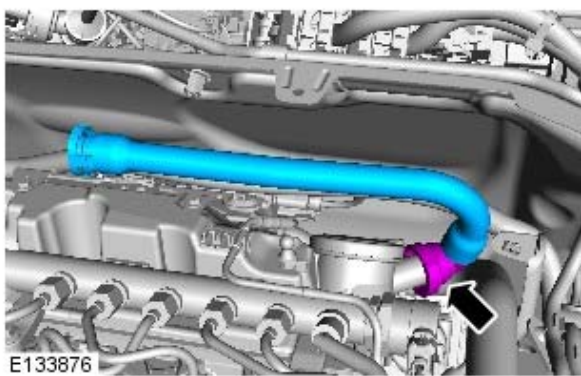

15. 参阅: [燃油滤清器](#) (310-01A 油箱和管线 - TD4 2.2 升柴油机, 拆卸和安装).

16. 连接蓄电池接地电缆。

参阅: [规格](#) (414-01 蓄电池、座架和电缆, 规格).