



G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

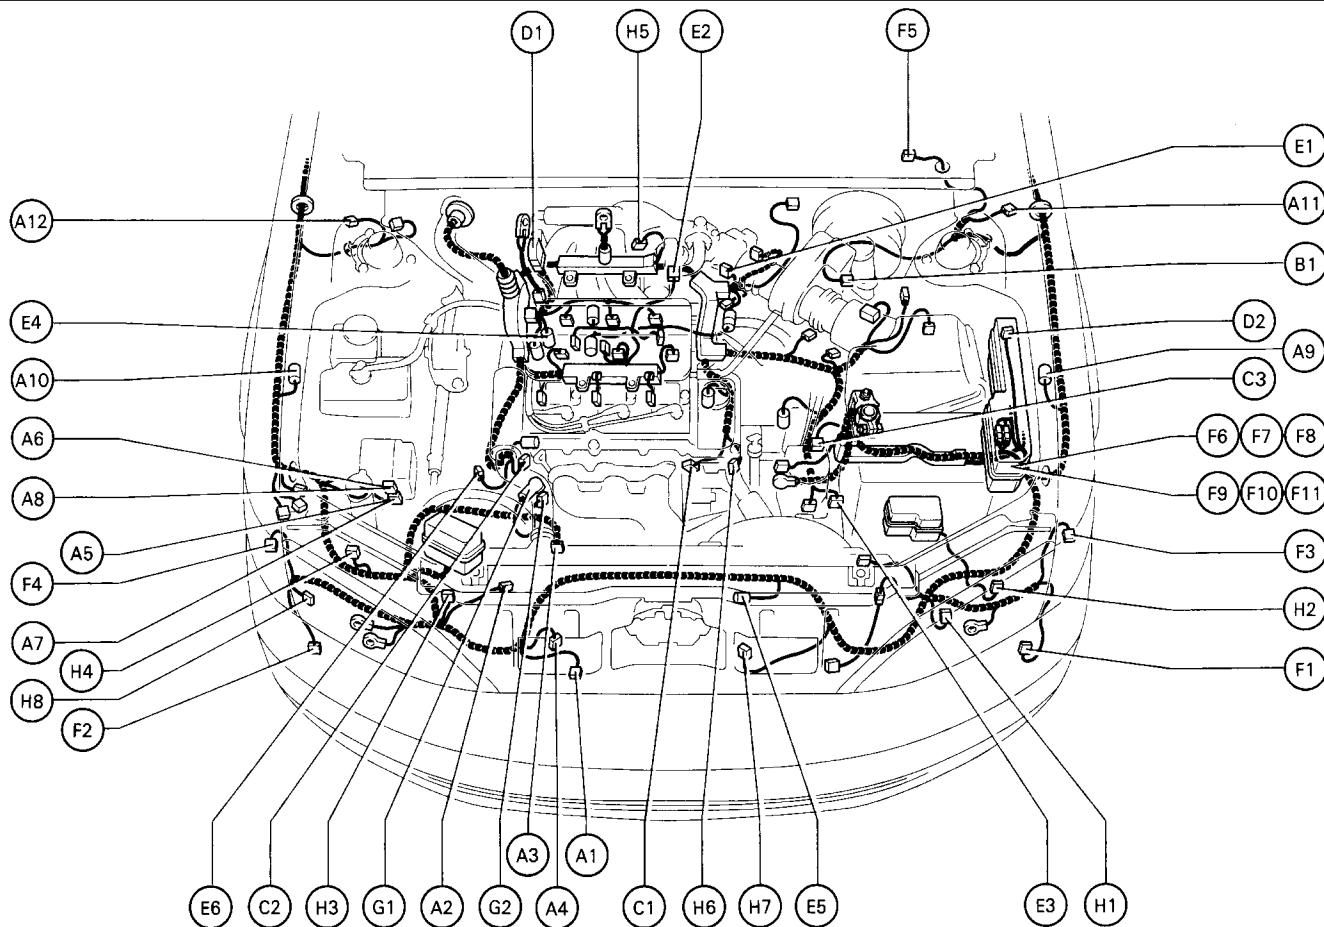

A 1	Ambient Temp. Sensor	F 1	Front Fog Light LH
A 2	A/C Condenser Fan Motor	F 2	Front Fog Light RH
A 3	A/C Magnetic Clutch and Lock Sensor	F 3	Front Turn Signal and Front Parking Light LH
A 4	A/C Triple Pressure SW (A/C Dual and Single Pressure SW)	F 4	Front Turn Signal and Front Parking Light RH
A 5	ABS Actuator	F 5	Front Wiper Motor
A 6	ABS Actuator	F 6	Fusible Link Block
A 7	ABS and Traction Actuator	F 7	Fusible Link Block
A 8	ABS and Traction Actuator	F 8	Fusible Link Block
A 9	ABS Speed Sensor Front LH	F 9	Fusible Link Block
A 10	ABS Speed Sensor Front RH	F 10	Fusible Link Block
A 11	Absorber Control Acuator Front LH	F 11	Fusible Link Block
A 12	Absorber Control Acuator Front RH	G 1	Generator
B 1	Brake Fluid Level Warning SW	G 2	Generator
C 1	Camshaft Position Sensor	H 1	Headlight LH (HI)
C 2	Crankshaft Position Sensor	H 2	Headlight LH (LO)
C 3	Cruise Control Actuator	H 3	Headlight RH (HI)
D 1	Data Link Connector 1	H 4	Headlight RH (LO)
D 2	Diode (A/C)	H 5	Heated Oxygen Sensor (Bank 1 Sensor 1)
E 1	EGR Gas Temp. Sensor	H 6	Heated Oxygen Sensor (Bank 2 Sensor 1)
E 2	EGR Valve Position Sensor	H 7	Horn LH
E 3	Electronically Controlled Transmission Solenoid	H 8	Horn RH
E 4	Engine Coolant Temp. Sensor		
E 5	Engine Hood Courtesy SW		
E 6	Engine Oil Level Warning SW		


Position of Parts in Engine Compartment

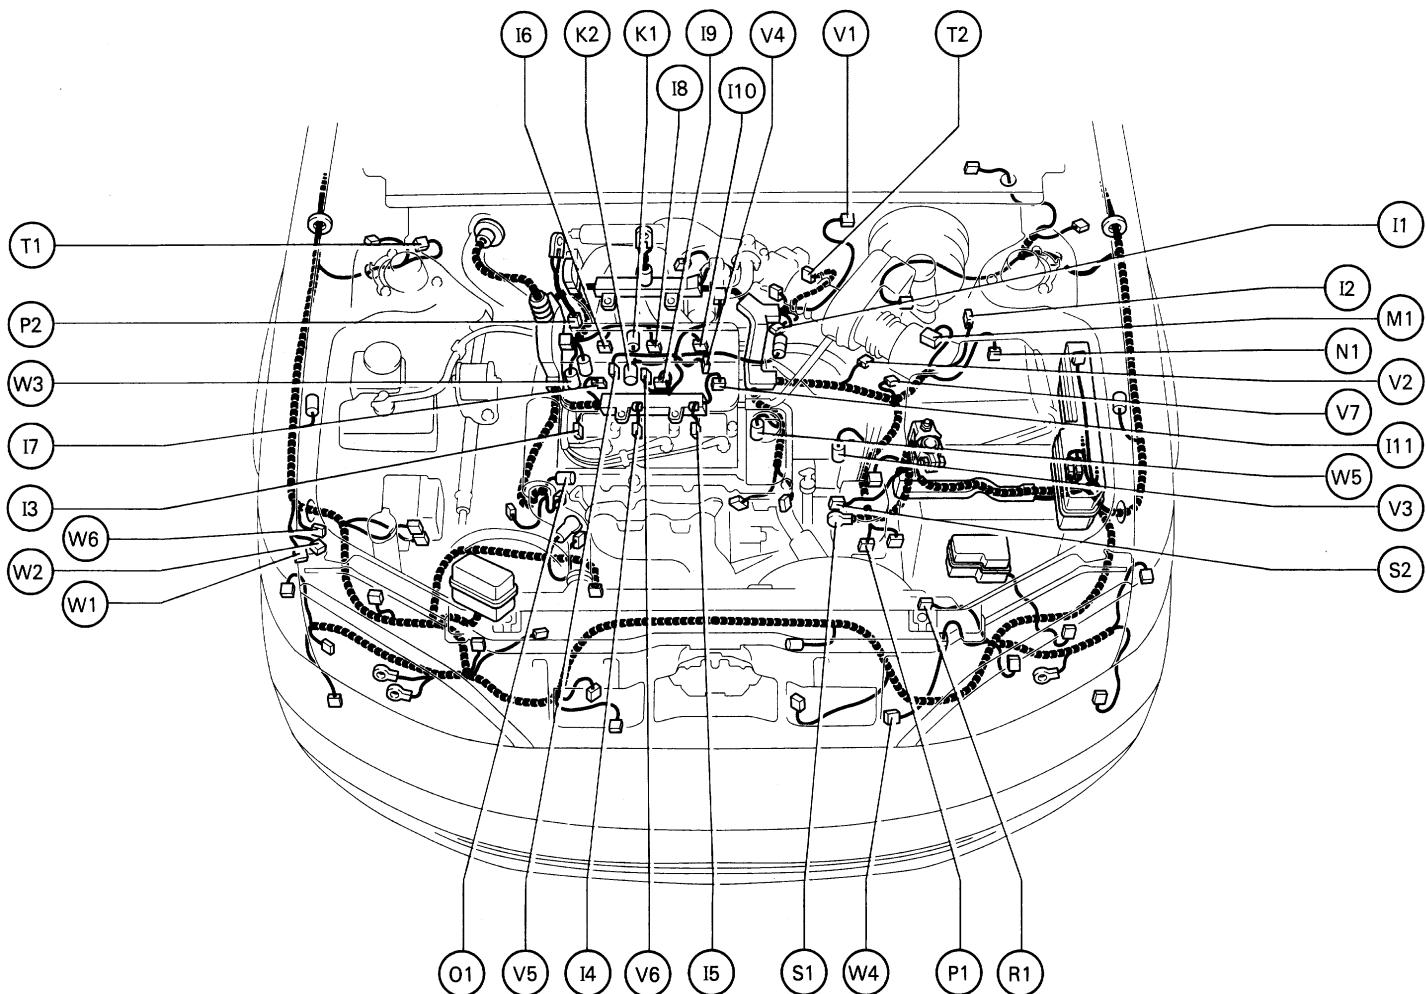

I 1	Idle Air Control Valve	S 1	Starter
I 2	Igniter	S 2	Starter
I 3	Ignition Coil No. 1	T 1	Theft Deterrent Horn
I 4	Ignition Coil No. 2	T 2	Throttle Position Sensor
I 5	Ignition Coil No. 3	V 1	Vapor Pressure Sensor
I 6	Injector No. 1	V 2	Vehicle Speed Sensor (Combination Meter)
I 7	Injector No. 2	V 3	Vehicle Speed Sensor (Electronically Controlled Transmission)
I 8	Injector No. 3	V 4	VSV (EGR)
I 9	Injector No. 4	V 5	VSV (EVAP)
I 10	Injector No. 5	V 6	VSV (Intake Air Control)
I 11	Injector No. 6	V 7	VSV (Vapor Pressure Sensor)
K 1	Knock Sensor 1	W 1	Water Level Warning SW
K 2	Knock Sensor 2	W 2	Washer Motor
M 1	Mass Air Flow Meter	W 3	Water Temp. Sender
N 1	Noise Filter (Ignition)	W 4	Water Temp. SW No.1
O 1	Oil Pressure SW	W 5	Water Temp. SW No.2
P 1	Park/Neutral Position SW, A/T Indicator Light SW and Back-Up Light SW	W 6	Wireless Door Lock Buzzer
P 2	Power Steering Oil Pressure SW		
R 1	Radiator Fan Motor		


G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

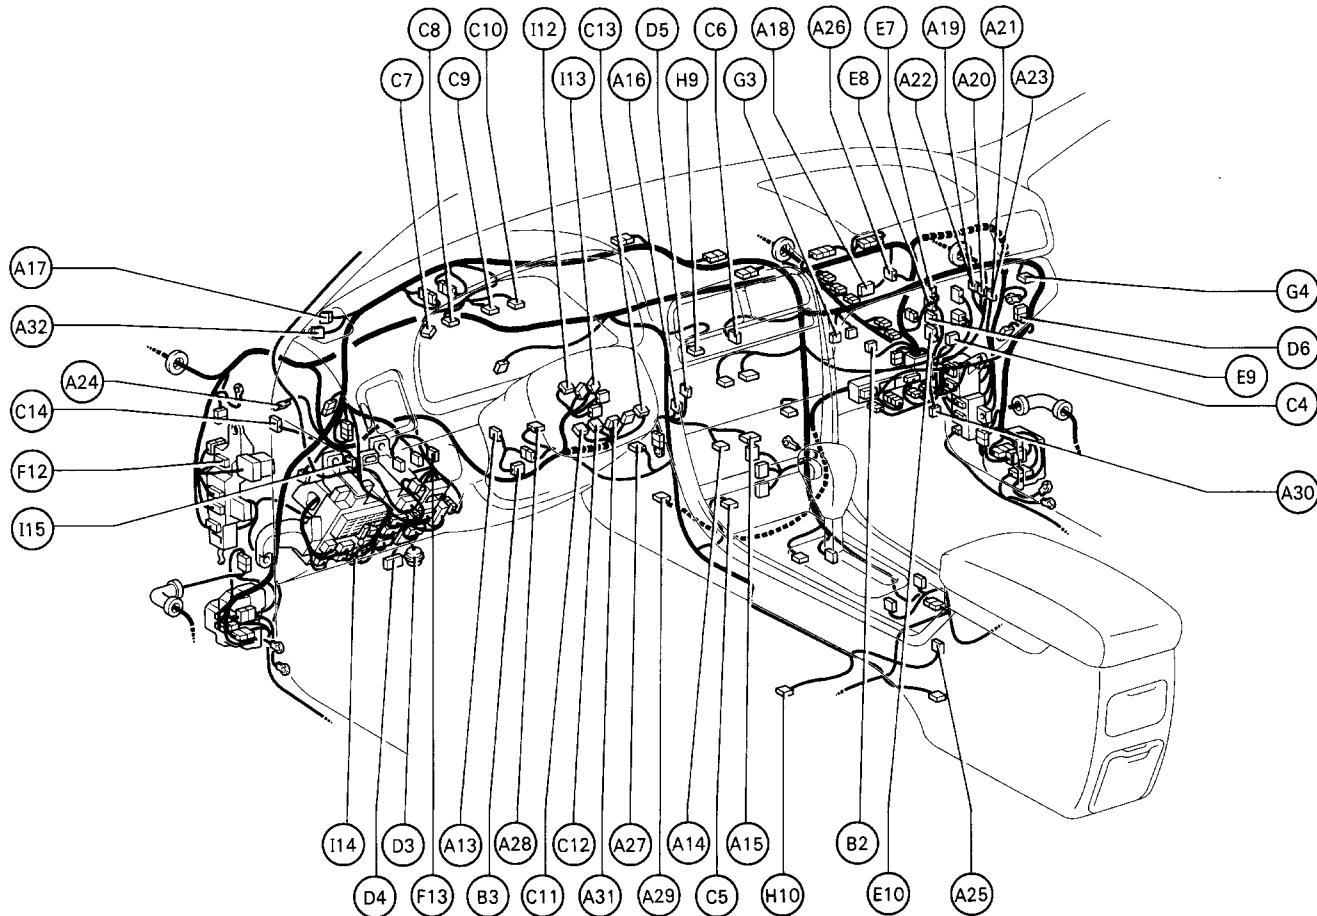

A 13	A/C Blower Motor Linear Controller	C 11	Combination SW
A 14	A/C Control Assembly	C 12	Combination SW
A 15	A/C Control Assembly	C 13	Combination SW
A 16	A/C Room Temp. Sensor	C 14	Cruise Control ECU
A 17	A/C Solar Sensor	D 3	Data Link Connector 2
A 18	A/C Thermistor	D 4	Data Link Connector 3
A 19	ABS and Traction ECU	D 5	Daytime Running Light Relay (Main)
A 20	ABS and Traction ECU	D 6	Diode (Courtesy)
A 21	ABS and Traction ECU	E 7	Engine Control Module
A 22	ABS ECU	E 8	Engine Control Module
A 23	ABS ECU	E 9	Engine Control Module
A 24	Absorber Control ECU	E 10	Engine Control Module
A 25	Absorber Control SW	F 12	Front Fog Light Relay
A 26	Air Inlet Control Servo Motor	F 13	Fuel Lid and Luggage Compartment Door Opener SW
A 27	Air Mix Control Servo Motor	G 3	Generator Box Light
A 28	Air Vent Mode Control Servo Motor	G 4	Generator Box Light SW
A 29	Airbag Sensor Assembly	H 9	Hazard SW
A 30	Airbag Squib (Front Passenger Airbag Assembly)	H 10	Heated Oxygen Sensor (Bank 1 Sensor 2)
A 31	Airbag Squib (Steering Wheel Pad)	I 12	Ignition Key Cylinder Light
A 32	Automatic Light Control Sensor	I 13	Ignition SW
B 2	Blower Motor	I 14	Integration Relay
B 3	Blower Resistor	I 15	Integration Relay
C 4	CD Automatic Changer		
C 5	Cigarette Lighter		
C 6	Clock		
C 7	Combination Meter		
C 8	Combination Meter		
C 9	Combination Meter		
C 10	Combination Meter		


Position of Parts in Instrument Panel

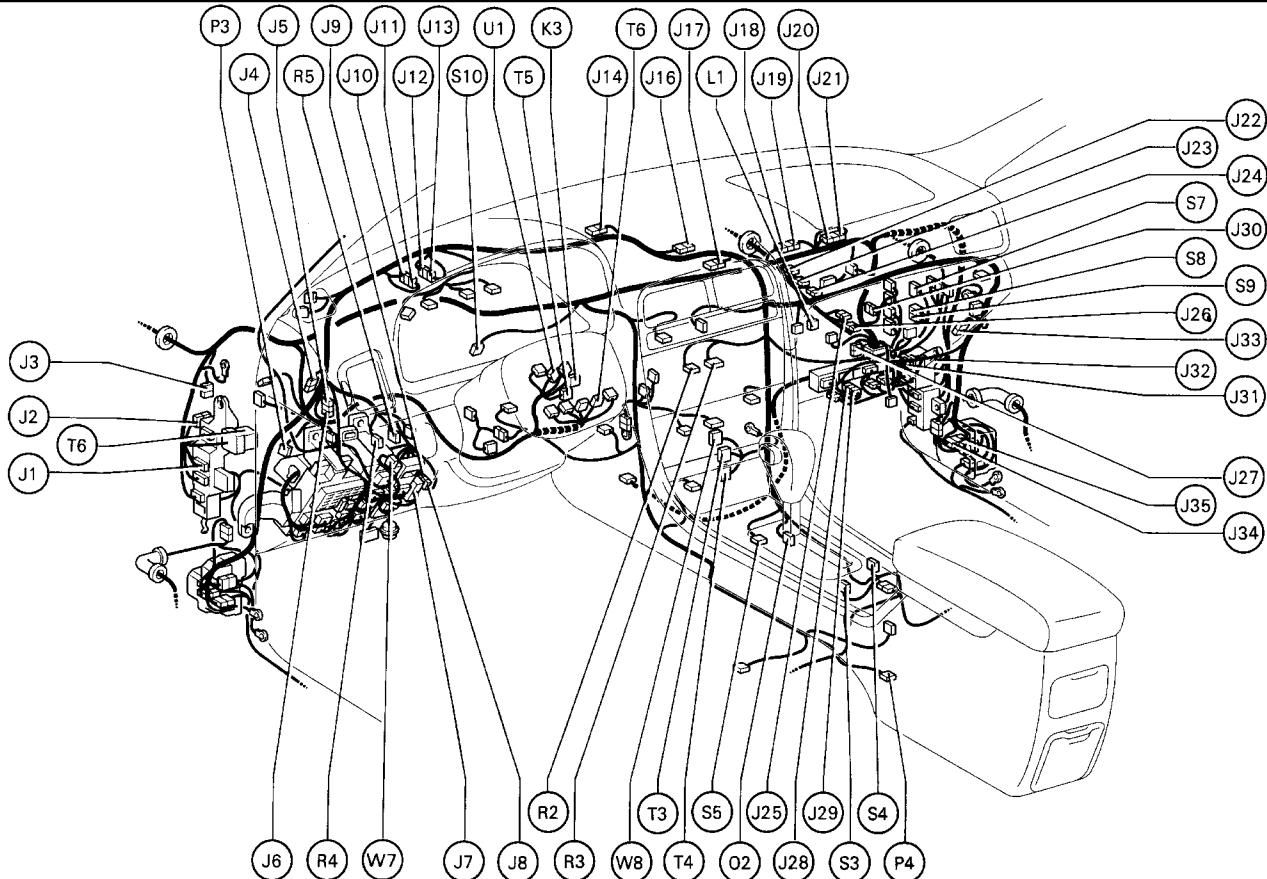

J 1	Junction Connector	K 3	Key Interlock Solenoid
J 2	Junction Connector	L 1	Luggage Compartment Door Opener Main SW
J 3	Junction Connector	O 2	O/D Main SW and A/T Shift Lever Illumination
J 4	Junction Connector	P 3	Parking Brake SW
J 5	Junction Connector	P 4	Power Outlet
J 6	Junction Connector	R 2	Radio and Player
J 7	Junction Connector	R 3	Radio and Player
J 8	Junction Connector	R 4	Remote Control Mirror SW
J 9	Junction Connector	R 5	Rheostat
J 10	Junction Connector	S 3	Seat Heater SW (Driver's Seat)
J 11	Junction Connector	S 4	Seat Heater SW (Front Passenger's Seat)
J 12	Junction Connector	S 5	Shift Lock Control ECU
J 13	Junction Connector	S 6	Steering Sensor
J 14	Junction Connector	S 7	Stereo Component Amplifier
J 15	Junction Connector	S 8	Stereo Component Amplifier
J 16	Junction Connector	S 9	Stereo Component Amplifier
J 17	Junction Connector	S 10	Stop Light SW
J 18	Junction Connector	T 3	Theft Deterrent ECU
J 19	Junction Connector	T 4	Theft Deterrent ECU
J 20	Junction Connector	T 5	TRAC OFF SW
J 21	Junction Connector	T 6	Turn Signal Flasher Relay
J 22	Junction Connector	U 1	Unlock Warning SW (Ignition Key)
J 23	Junction Connector	W 7	Wireless Door Lock Buzzer Volume SW
J 24	Junction Connector	W 8	Wireless Door Lock ECU
J 25	Junction Connector		
J 26	Junction Connector		
J 27	Junction Connector		
J 28	Junction Connector		
J 29	Junction Connector		
J 30	Junction Connector		
J 31	Junction Connector		
J 32	Junction Connector		
J 33	Junction Connector		
J 34	Junction Connector		
J 35	Junction Connector		


G ELECTRICAL WIRING ROUTING

Position of Parts in Body

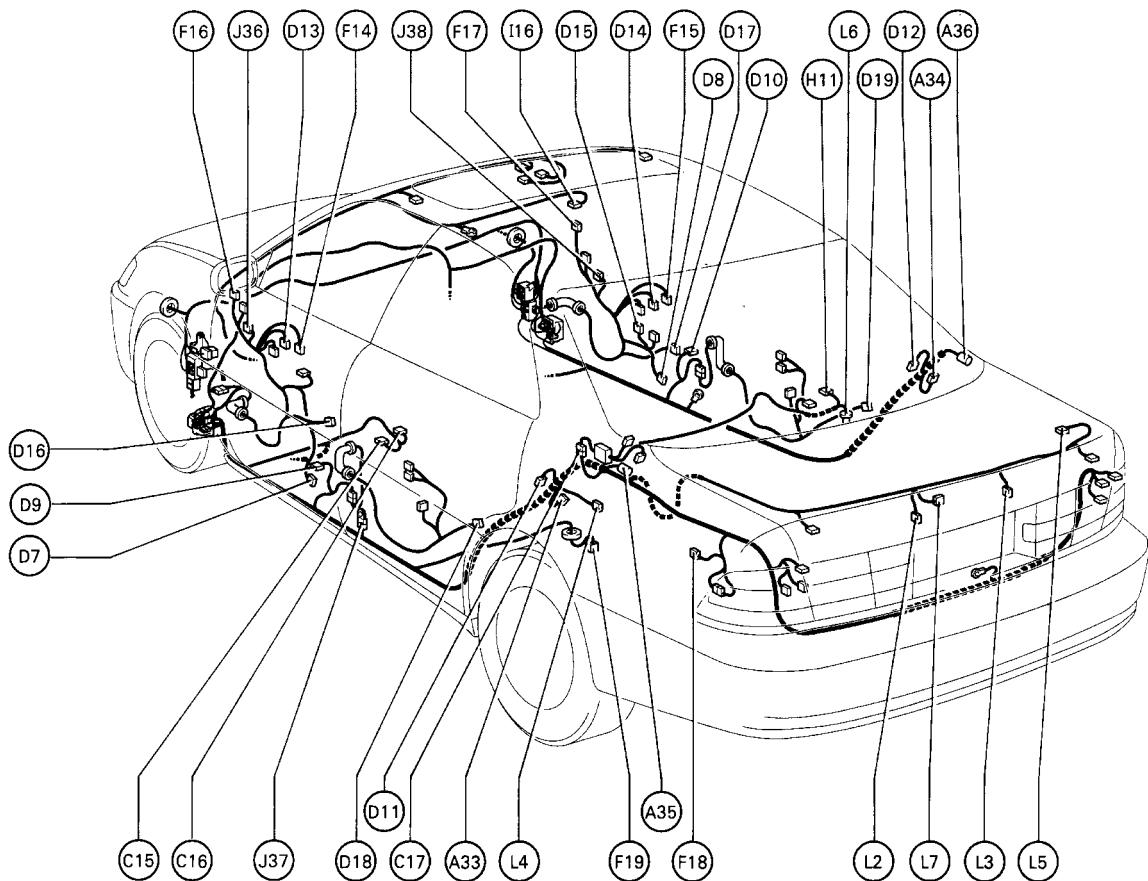

A 33	ABS Speed Sensor Rear LH	F 14	Front Door Speaker LH
A 34	ABS Speed Sensor Rear RH	F 15	Front Door Speaker RH
A 35	Absorber Control Actuator Rear LH	F 16	Front Tweeter Speaker LH
A 36	Absorber Control Actuator Rear RH	F 17	Front Tweeter Speaker RH
C 15	Cellular Phone (Hand Set)	F 18	Fuel Lid Opener Motor
C 16	Cellular Phone (Hand Set)	F 19	Fuel Pump and Fuel Sender
C 17	Choke Coil	H 11	High Mounted Stop Light
D 7	Door Courtesy Light Front LH	I 16	Interior Light
D 8	Door Courtesy Light Front RH	J 36	Junction Connector
D 9	Door Courtesy SW Front LH	J 37	Junction Connector
D 10	Door Courtesy SW Front RH	J 38	Junction Connector
D 11	Door Courtesy SW Rear LH	L 2	License Plate Light LH
D 12	Door Courtesy SW Rear RH	L 3	License Plate Light RH
D 13	Door Key Lock and Unlock SW Front LH	L 4	Light Failure Sensor
D 14	Door Key Lock and Unlock SW Front RH	L 5	Luggage Compartment Key Unlock SW
D 15	Door Lock Control SW Front RH	L 6	Luggage Compartment Light
D 16	Door Lock Motor and Door Unlock Detection SW Front LH	L 7	Luggage Compartment Light SW and Luggage Compartment Door Opener Motor
D 17	Door Lock Motor and Door Unlock Detection SW Front RH		
D 18	Door Lock Motor and Door Unlock Detection SW Rear LH		
D 19	Door Lock Motor and Door Unlock Detection SW Rear RH		


Position of Parts in Body

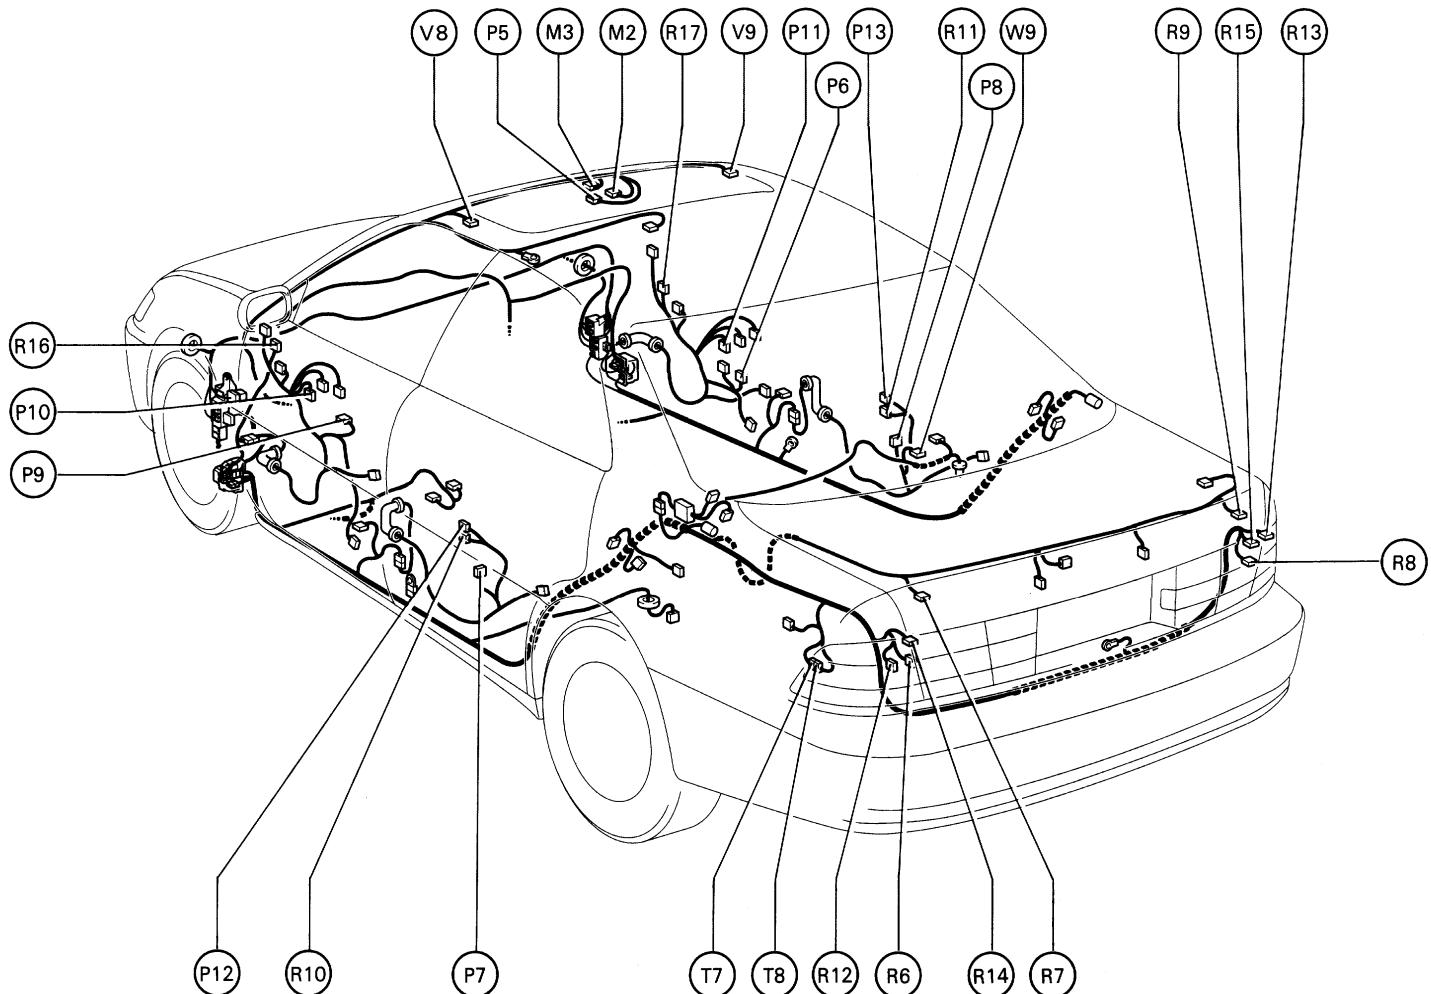

M 2	Moon Roof Control SW and Moon Roof Control Relay	R 10	Rear Door Speaker LH
M 3	Moon Roof Moon and Limit SW	R 11	Rear Door Speaker RH
P 5	Personal Light	R 12	Rear Side Marker Light LH
P 5	Personal Light	R 13	Rear Side Marker Light RH
P 6	Power Window Control SW Front RH	R 14	Rear Turn Signal Light LH
P 7	Power Window Control SW Rear LH	R 15	Rear Turn Signal Light RH
P 8	Power Window Control SW Rear RH	R 16	Remote Control Mirror and Mirror Heater LH
P 9	Power Window Master SW and Door Lock Control SW Front LH	R 17	Remote Control Mirror and Mirror Heater RH
P 10	Power Window Motor Front LH	T 7	Telephone Transceiver and Speaker Relay
P 11	Power Window Motor Front RH	T 8	Telephone Transceiver and Speaker Relay
P 12	Power Window Motor Rear LH	V 8	Vanity Light LH
P 13	Power Window Motor Rear RH	V 9	Vanity Light RH
R 6	Rear Combination Light LH	W 9	Woofer Speaker
R 7	Rear Combination Light LH		
R 8	Rear Combination Light RH		
R 9	Rear Combination Light RH		

G ELECTRICAL WIRING ROUTING

Position of Parts in Seat

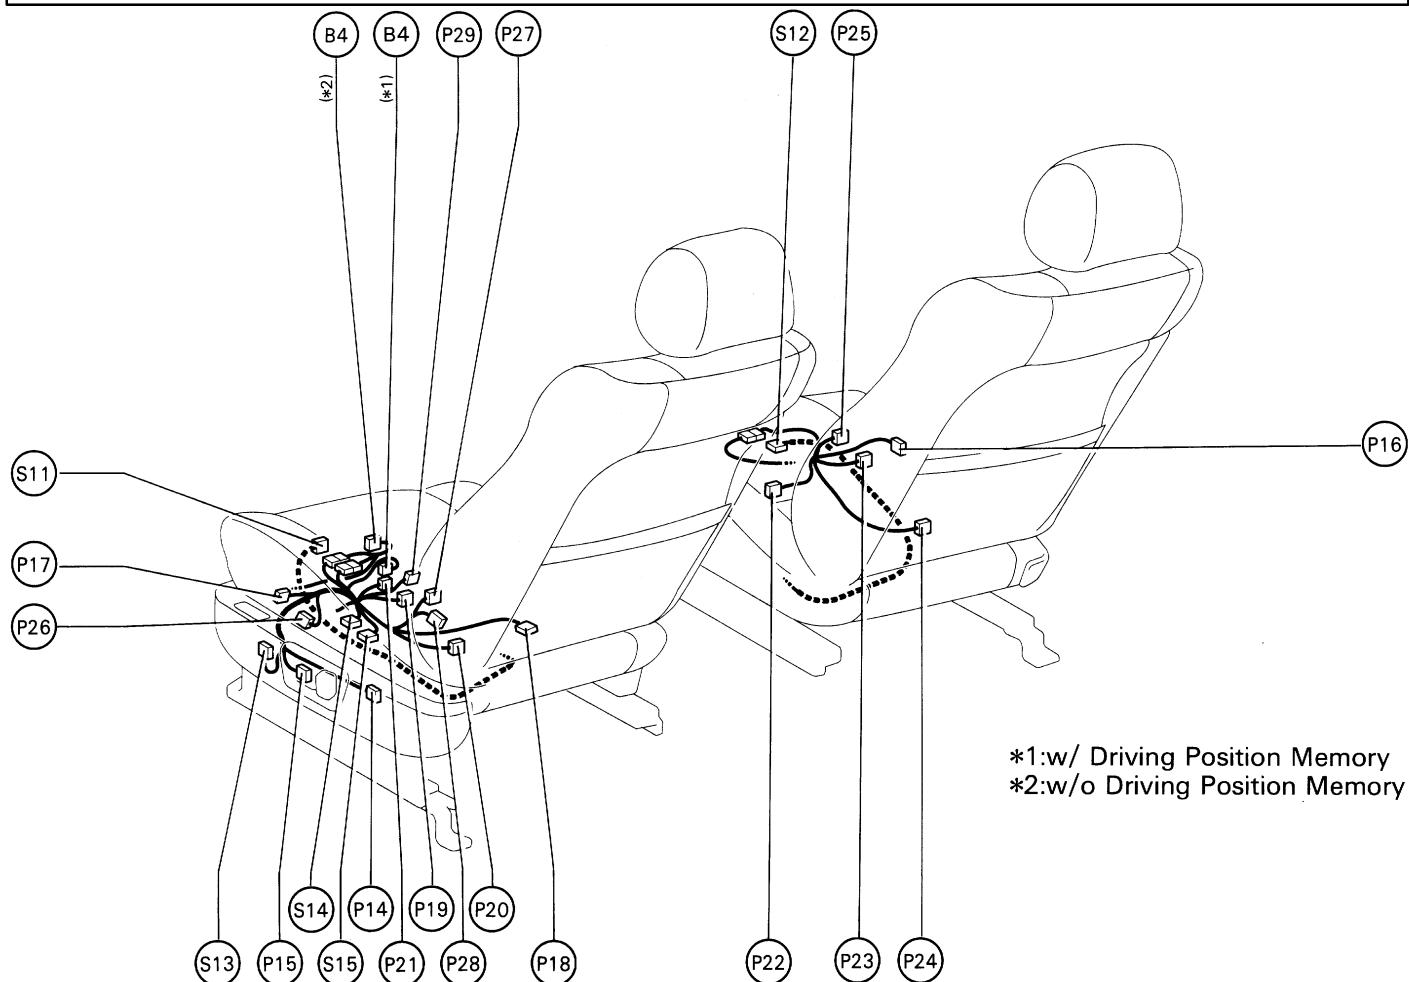


*1:w/ Driving Position Memory
 *2:w/o Driving Position Memory


B 4	Buckle SW	P 26	Power Seat Position Sensor (Driver's Seat Front Vertical Control)
P 14	Power Seat Control SW (Driver's Seat Lumber Support Control)	P 27	Power Seat Position Sensor (Driver's Seat Rear Vertical Control)
P 15	Power Seat Control SW (Driver's Seat)	P 28	Power Seat Position Sensor (Driver's Seat Reclining Control)
P 16	Power Seat Control SW (Front Passenger's Seat)	P 29	Power Seat Position Sensor (Driver's Seat Slide Control)
P 17	Power Seat Motor (Driver's Seat Front Vertical Control)	S 11	Seat Heater (Driver's Seat)
P 18	Power Seat Motor (Driver's Seat Lumber Support Control)	S 12	Seat Heater (Front Passenger's Seat)
P 19	Power Seat Motor (Driver's Seat Rear Vertical Control)	S 13	Seat Memory SW
P 20	Power Seat Motor (Driver's Seat Reclining Control)	S 14	Seat Position Control ECU
P 21	Power Seat Motor (Driver's Seat Slide Control)	S 15	Seat Position Control ECU
P 22	Power Seat Motor (Front Passenger's Seat Front Vertical Control)		
P 23	Power Seat Motor (Front Passenger's Seat Rear Vertical Control)		
P 24	Power Seat Motor (Front Passenger's Seat Reclining Control)		
P 25	Power Seat Motor (Front Passenger's Seat Slide Control)		


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness
▽ : Location of Ground Points

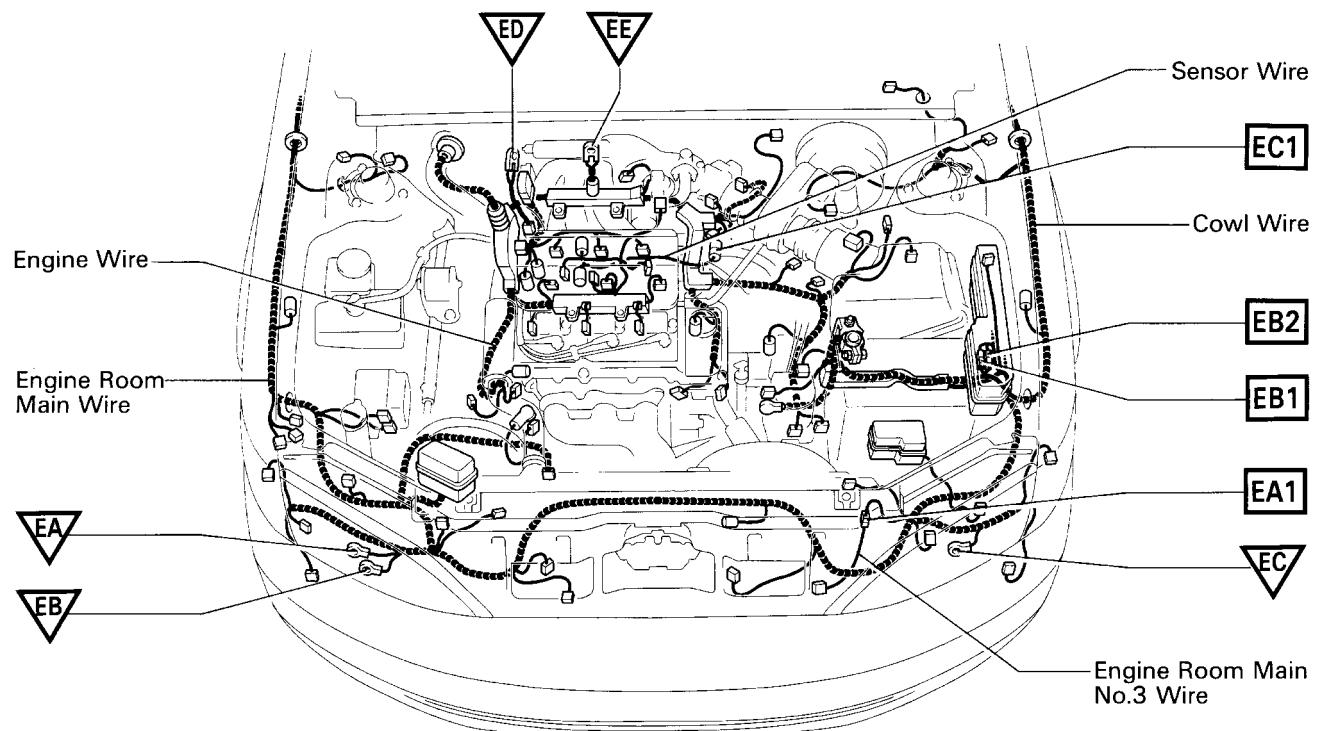

○: Location of Splice Points

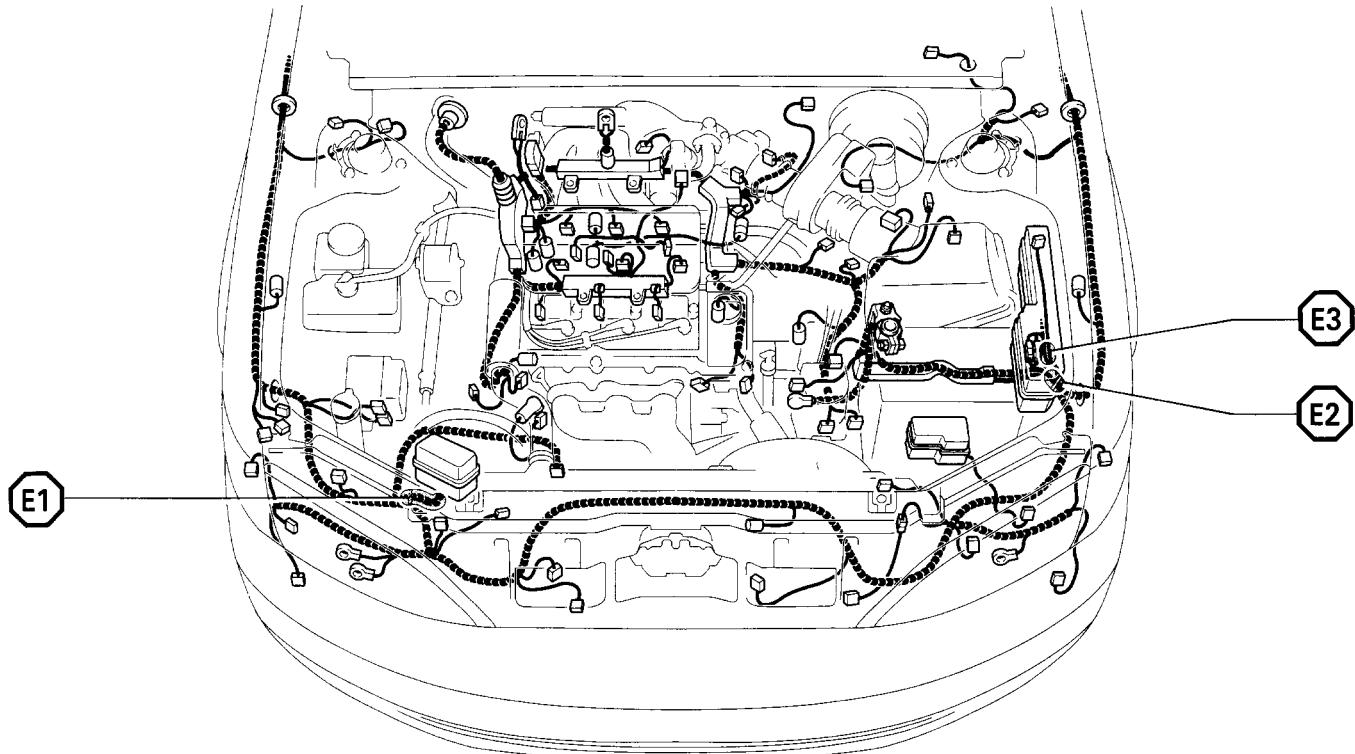


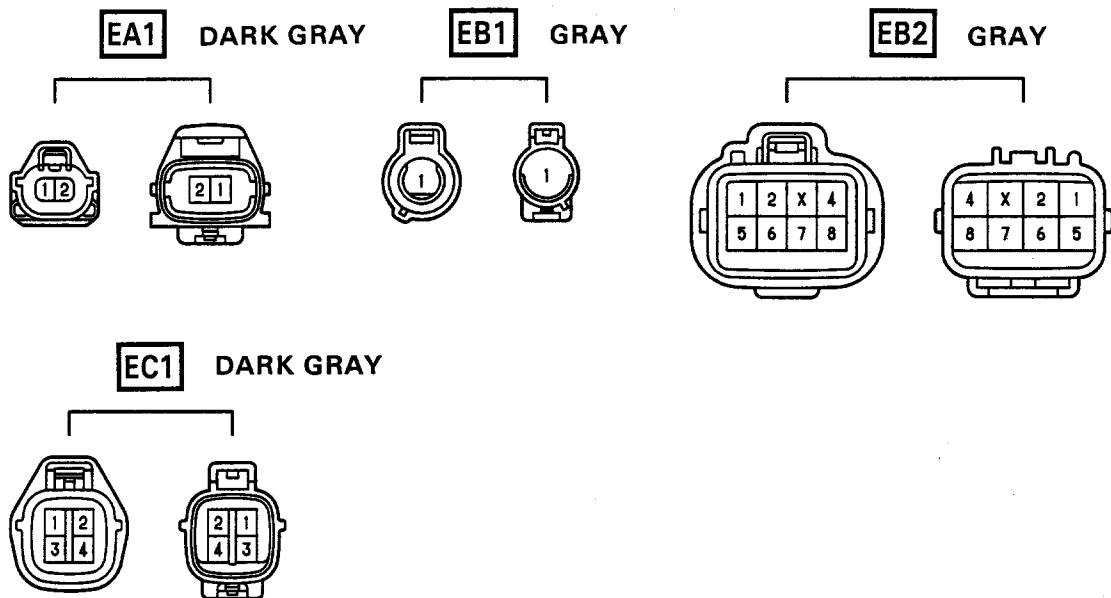


CODE		JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1		ENGINE ROOM MAIN WIRE AND ENGINE ROOM MAIN NO. 3 WIRE (BEHIND HEADLIGHT LH)
EB1		COWL WIRE AND ENGINE ROOM MAIN WIRE (UNDER THE ENGINE ROOM J/B)
EB2		
EC1		ENGINE WIRE AND SENSOR WIRE (LEFT BANK OF THE CYLINDER HEAD)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

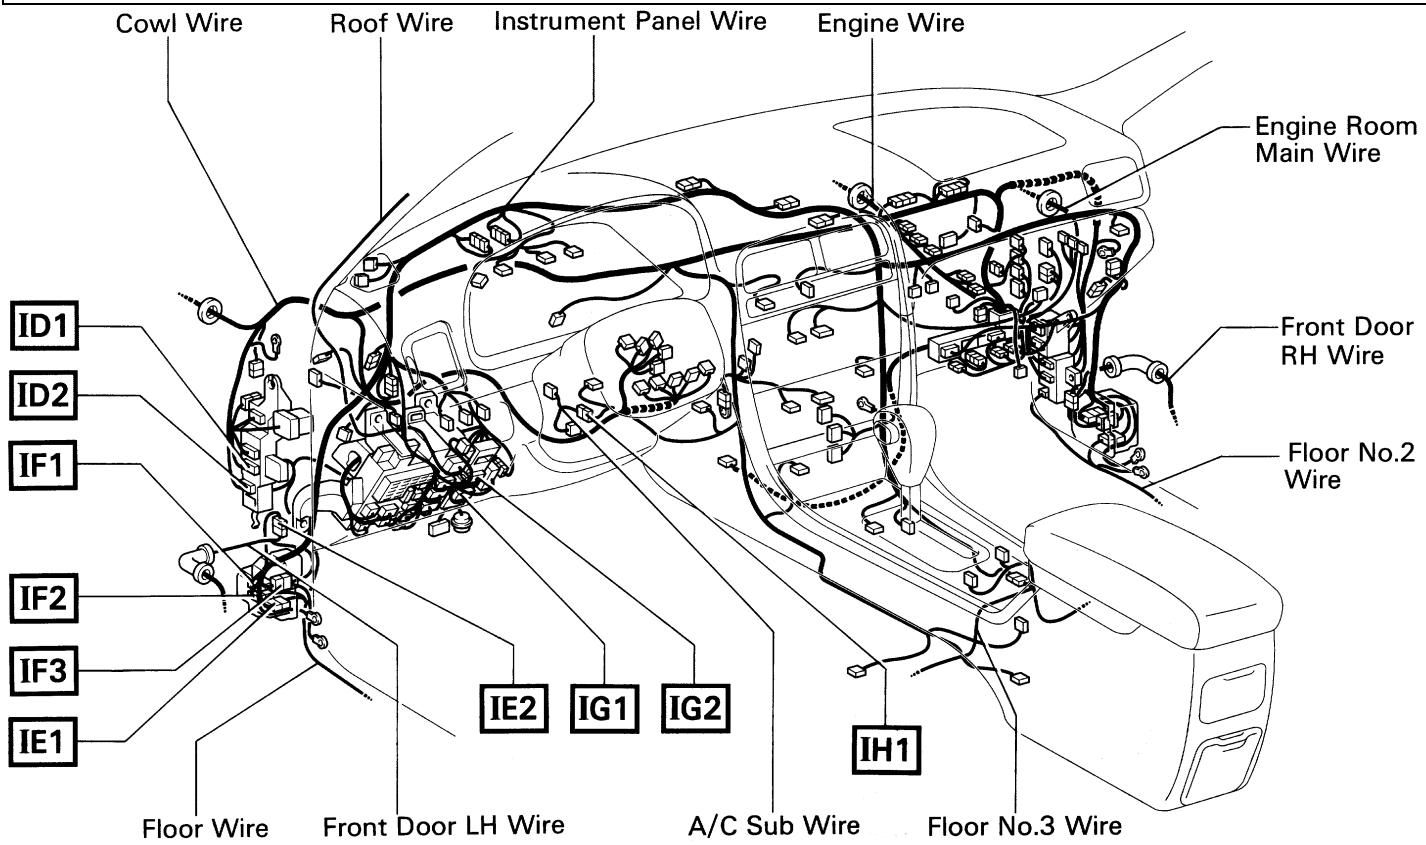

▽ : Location of Ground Points

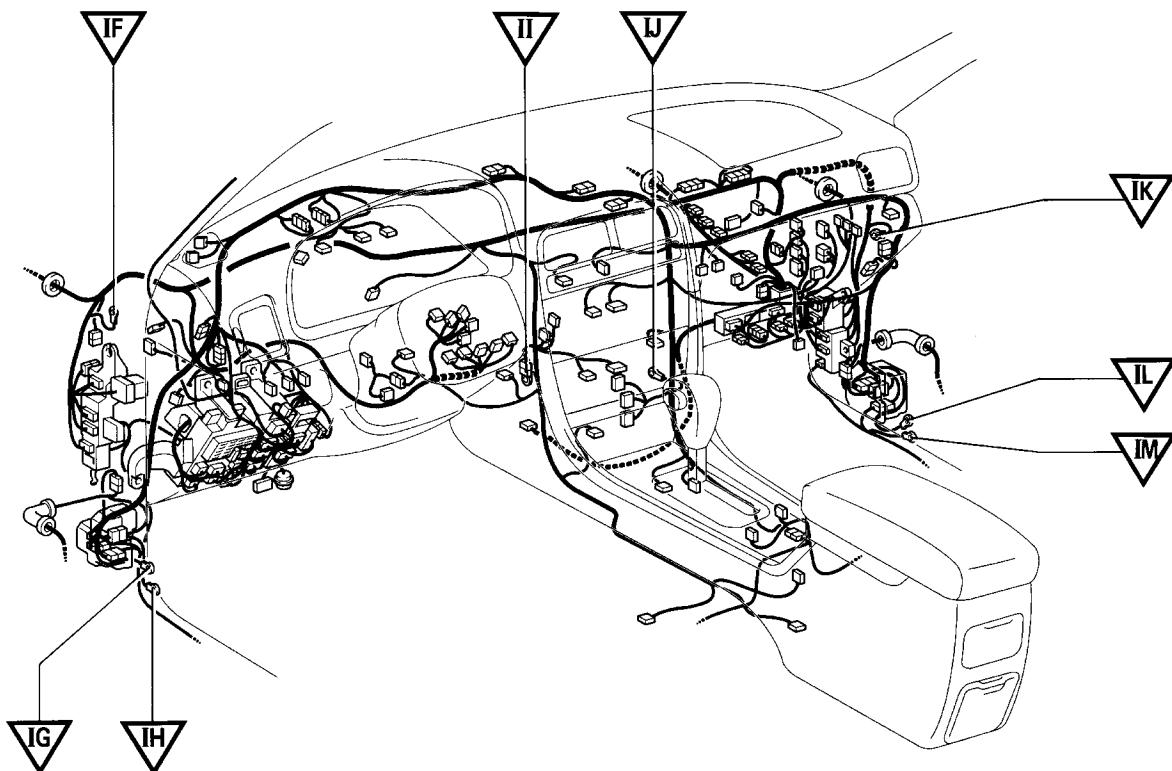


Connector Joining Wire Harness and Wire Harness

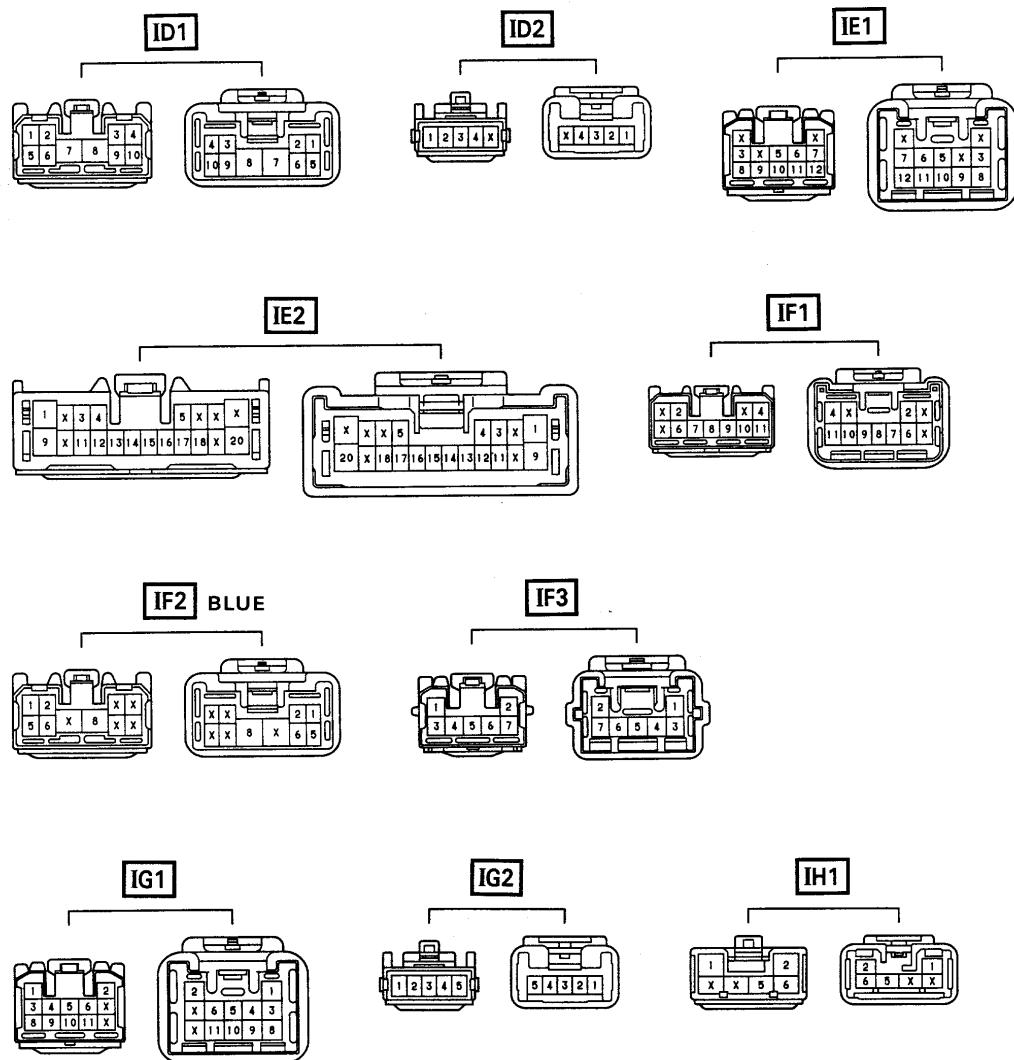


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID1	
ID2	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
IE1	
IE2	FRONT DOOR LH WIRE AND INSTRUMENT PANEL WIRE (LEFT KICK PANEL)
IF1	
IF2	FLOOR WIRE AND INSTRUMENT PANEL WIRE (LEFT KICK PANEL)
IF3	
IG1	
IG2	INSTRUMENT PANEL WIRE AND COWL WIRE (RIGHT SIDE OF INSTRUMENT PANEL J/B)
IH1	COWL WIRE AND A/C SUB WIRE (BEHIND RADIO AND PLAYER)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

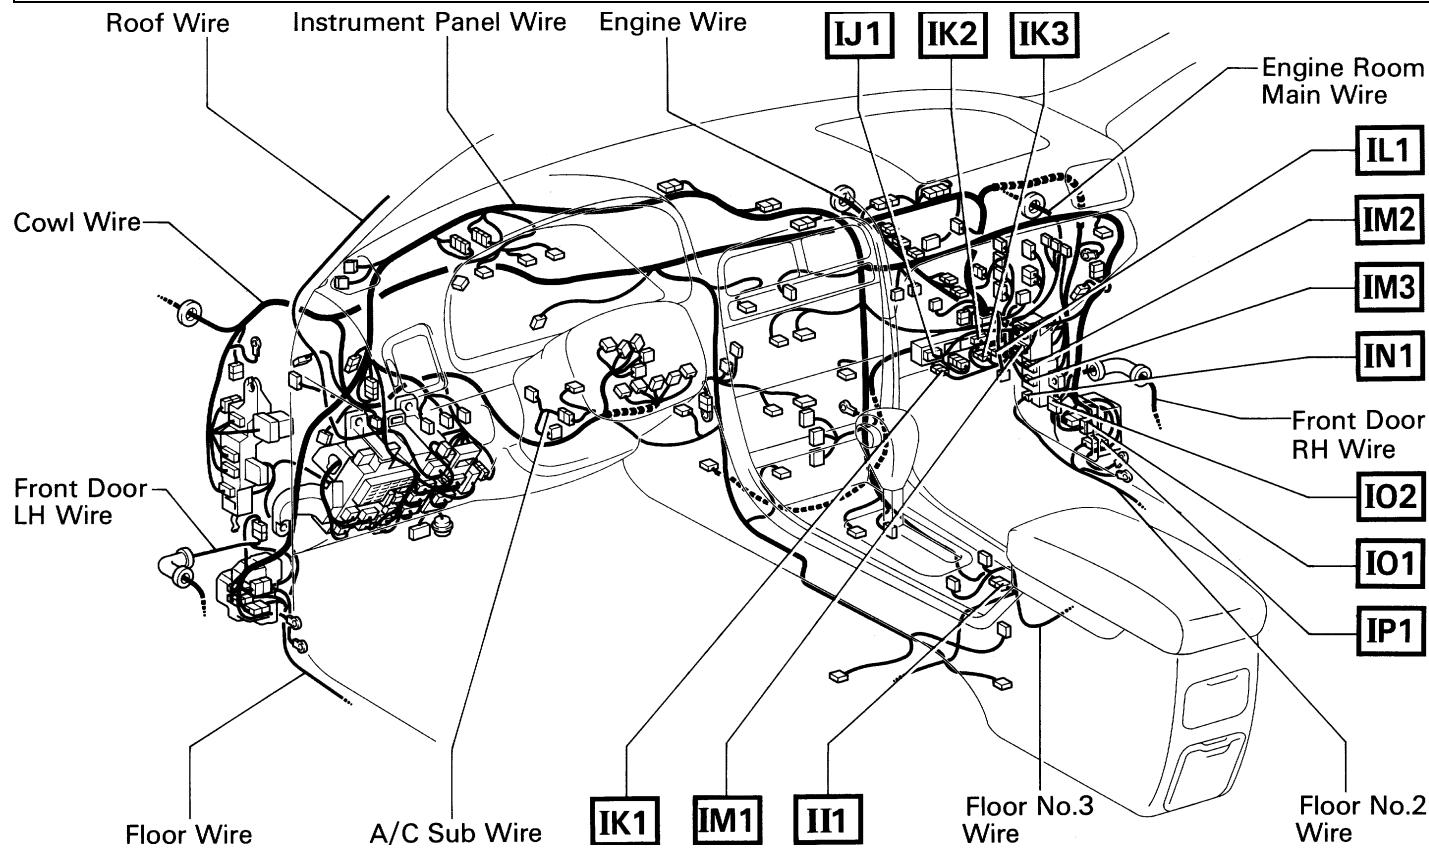

○ : Location of Splice Points

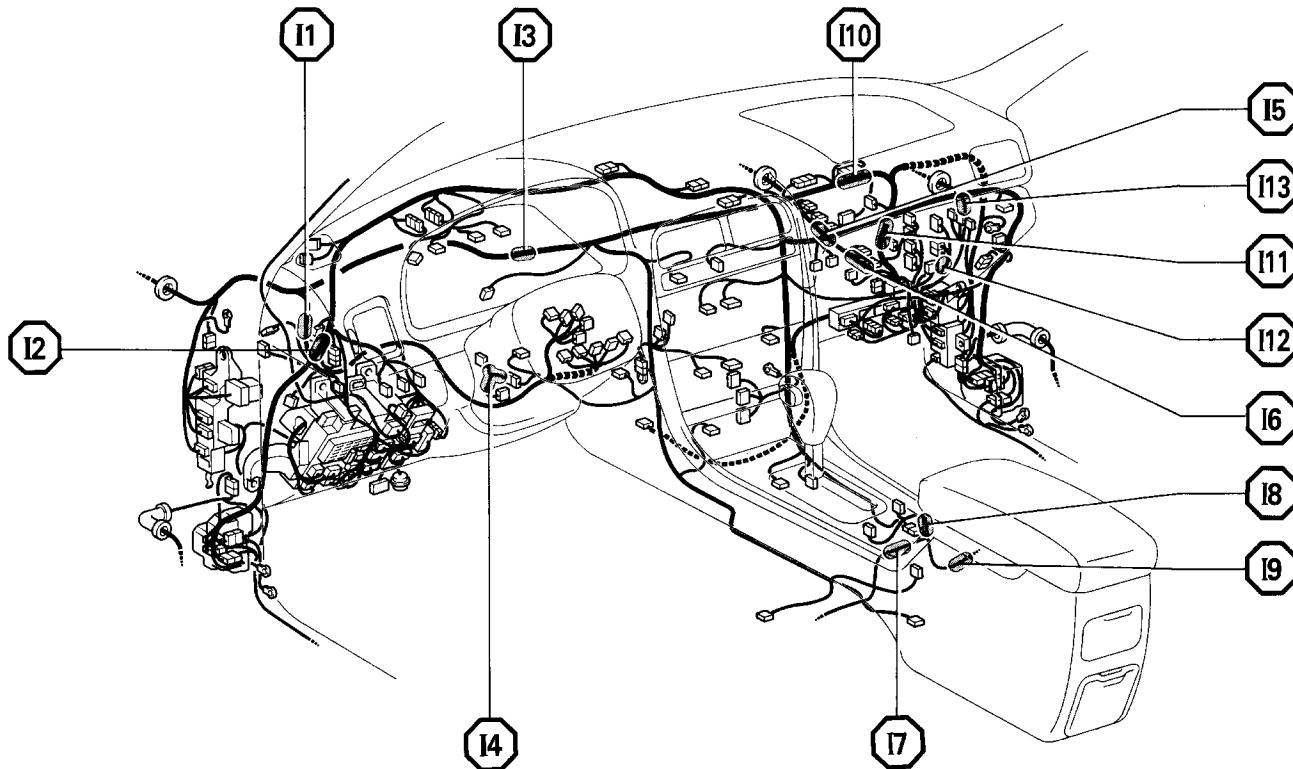

Connector Joining Wire Harness and Wire Harness

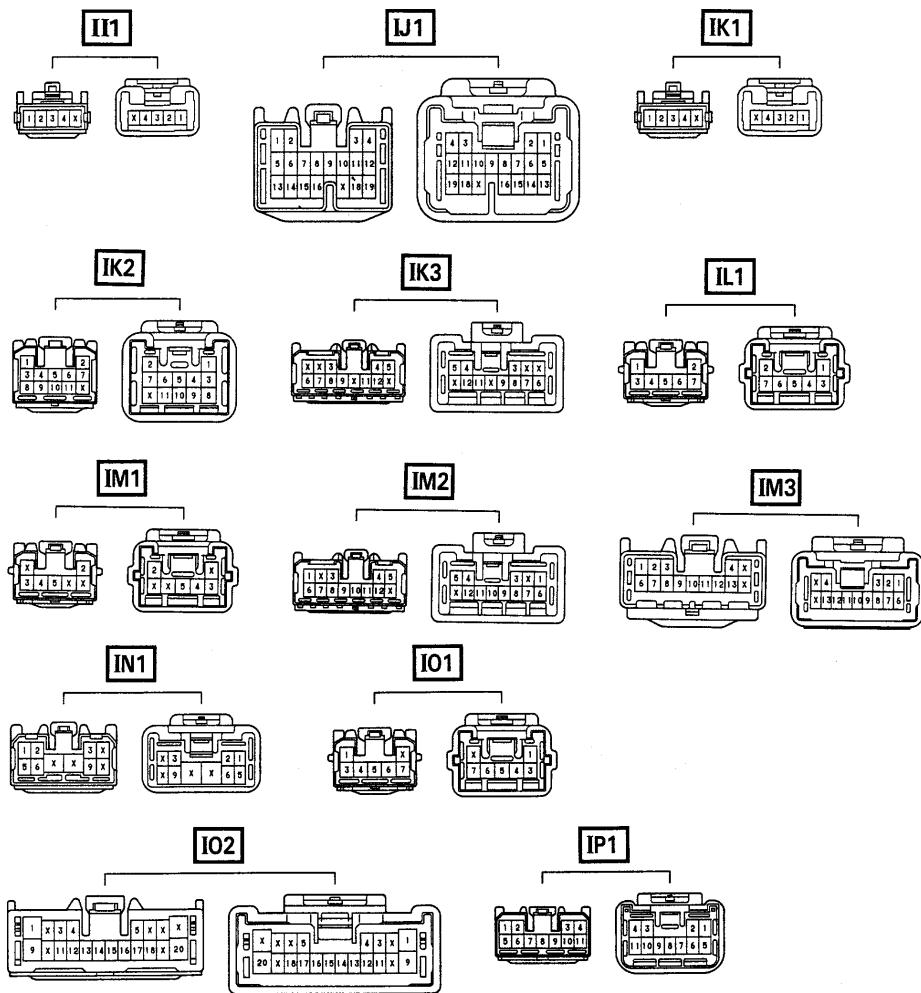


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
II1	FLOOR NO.3 WIRE AND INSTRUMENT PANEL WIRE (UNDER THE CONSOLE BOX)
IJ1	INSTRUMENT PANEL WIRE AND COWL WIRE (UNDER THE GLOVE BOX)
IK1	
IK2	EWNGINE WIRE AND COWL WIRE (UNDER THE GLOVE BOX)
IK3	
IL1	ENGINE WIRE AND INSTRUMENT PANEL WIRE (UNDER THE GLOVE BOX)
IM1	
IM2	ENGINE ROOM MAIN WIRE AND COWL WIRE (RIGHT KICK PANEL)
IM3	
IN1	FLOOR NO. 2 WIRE AND COWL WIRE (RIGHT KICK PANEL)
IO1	FRONT DOOR RH WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)
IO2	
IP1	FRONT NO. 2 WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

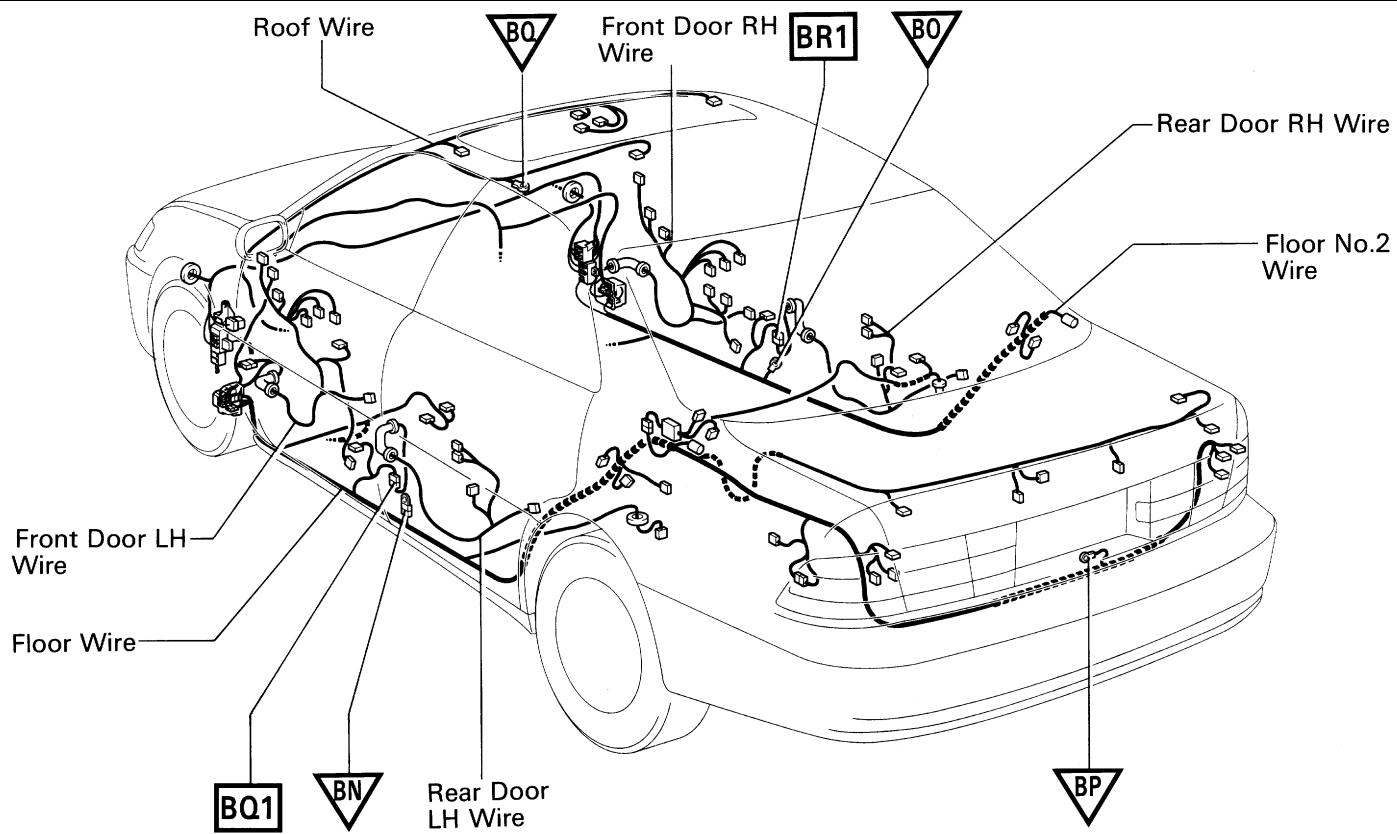

○: Location of Splice Points

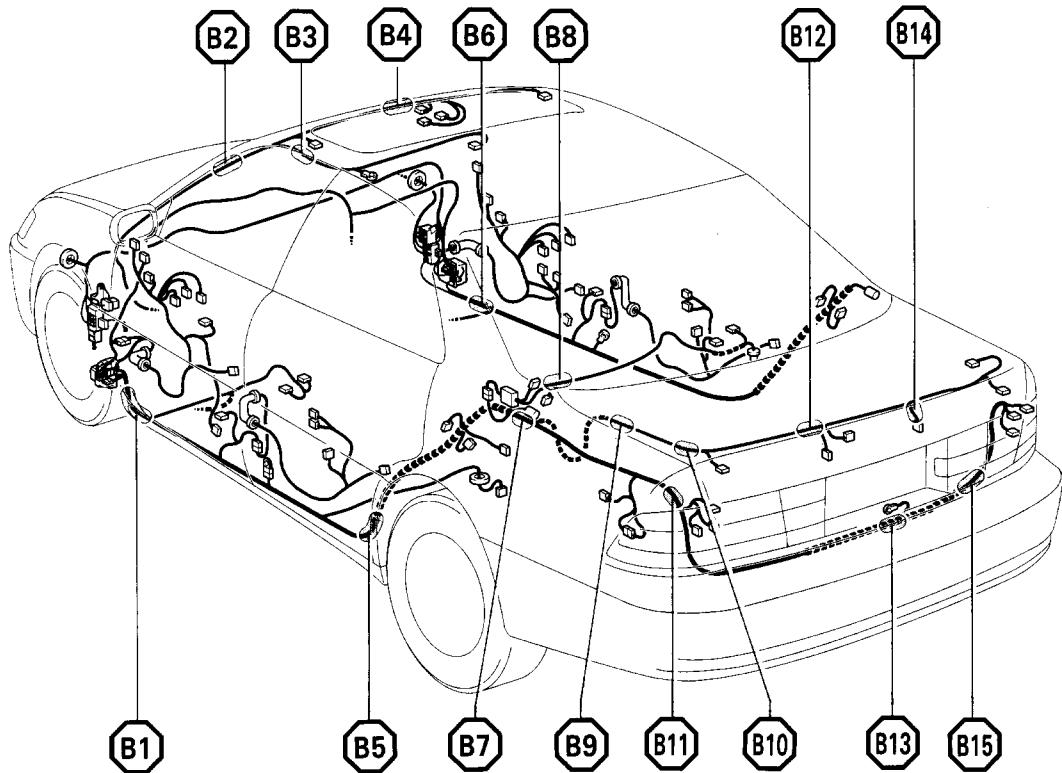


Connector Joining Wire Harness and Wire Harness

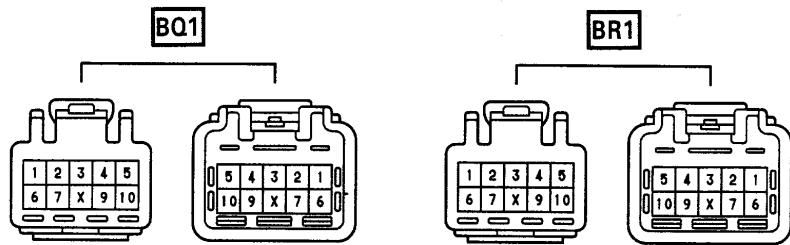


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BQ1	REAR DOOR LH WIRE AND FLOOR WIRE (LEFT CENTER PILLAR)
BR1	REAR DOOR RH WIRE AND FLOOR NO. 2 WIRE (RIGHT CENTER PILLAR)

G ELECTRICAL WIRING ROUTING


: Location of Connector Joining Wire Harness and Wire Harness

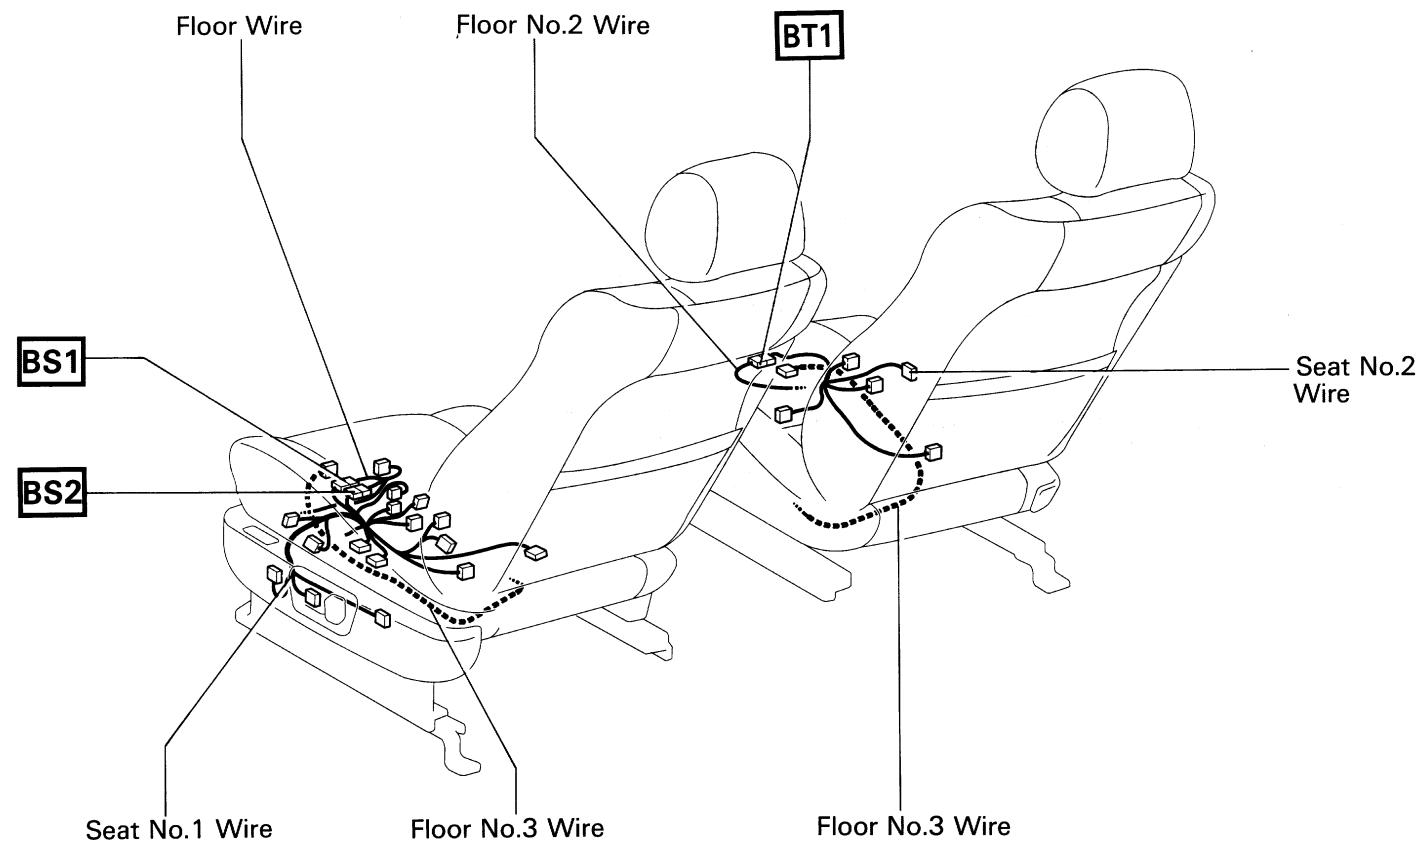

: Location of Splice Point

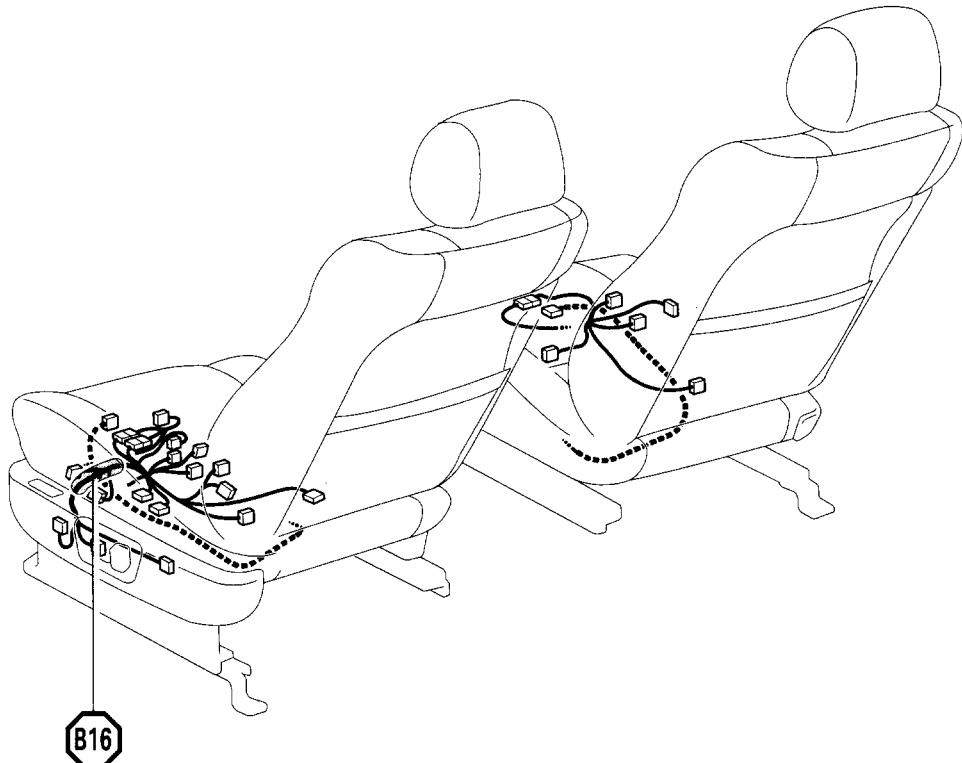

Connector Joining Wire Harness and Wire Harness

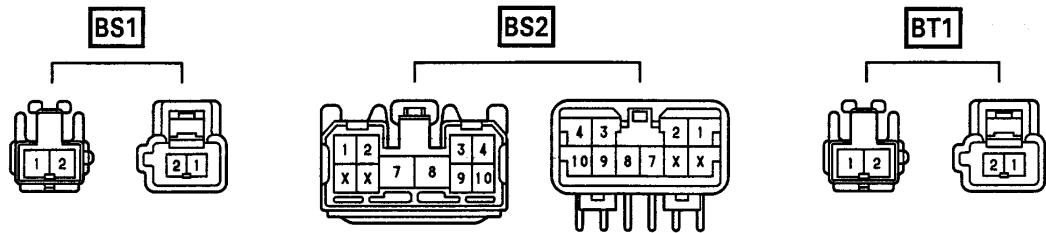

CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BS1	FLOOR WIRE AND SEAT NO.1 WIRE (UNDER THE DRIVER'S SEAT)
BS2	
BT1	FLOOR NO.2 WIRE AND SEAT NO. 2 WIRE (UNDER THE FRONT PASSENGER'S SEAT)