


LOCATION

Engine Room Junction Block

- ECU-B Fuse
- DOME Fuse

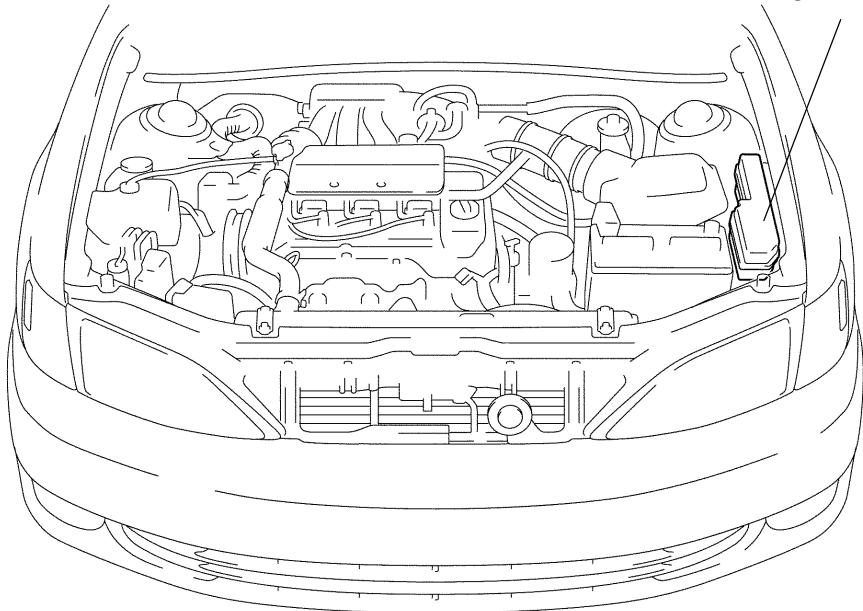

Garage Door Opener Switch
(in visor)

