


CRUISE MAIN Indicator Light Circuit

CIRCUIT DESCRIPTION

When the cruise control main switch is turned ON, CRUISE MAIN indicator light lights up.


WIRING DIAGRAM

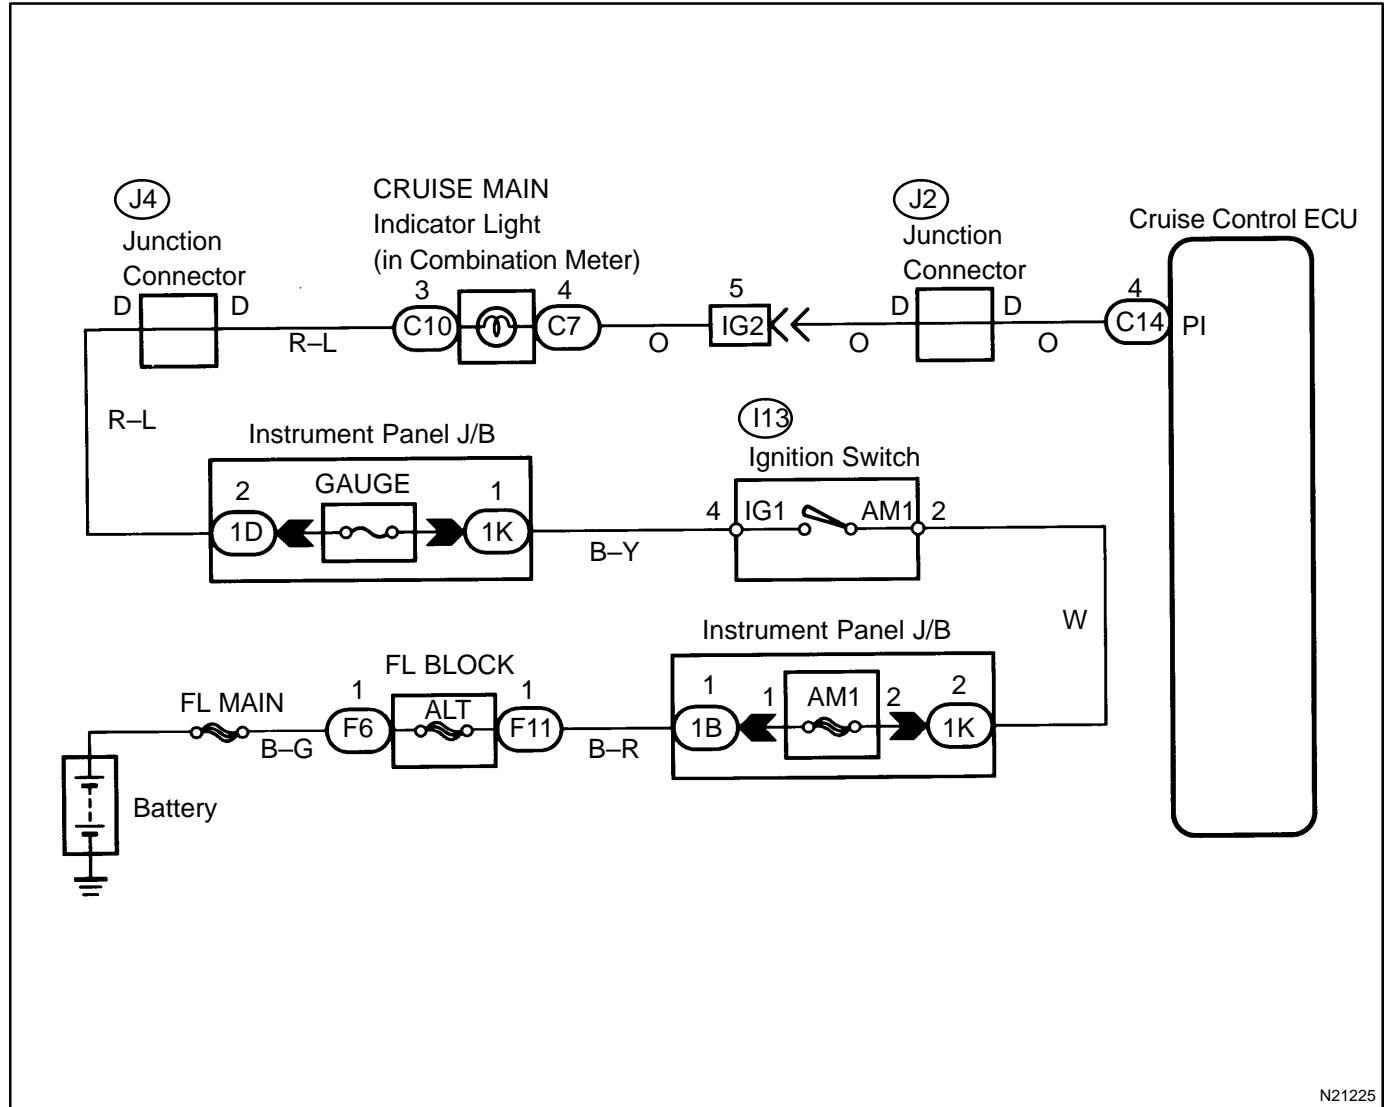

N21225

INSPECTION PROCEDURE

1 Check voltage between terminals PI and GND of cruise control ECU connector.

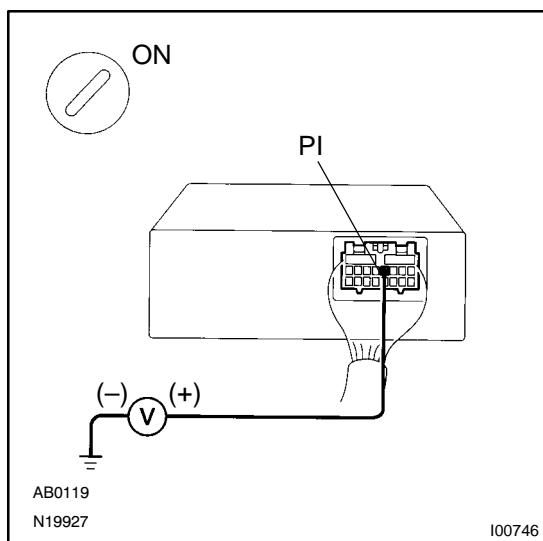**PREPARATION:**

Turn ignition switch ON.

CHECK:

Measure voltage between terminals PI and GND of cruise control ECU connector when main switch ON and OFF.

OK:

Switch position	Voltage
OFF	10 – 16 V
ON	Below 1.2 V

OK

Proceed to next circuit inspection shown in problem symptom table (See page [DI-649](#)).

NG

2 Check combination meter (See page [BE-3](#)).

NG

Replace combination meter.

OK

Check and replace cruise control ECU (See page [IN-31](#)).