


Position of Parts in Engine Compartment <2AZ-FE>

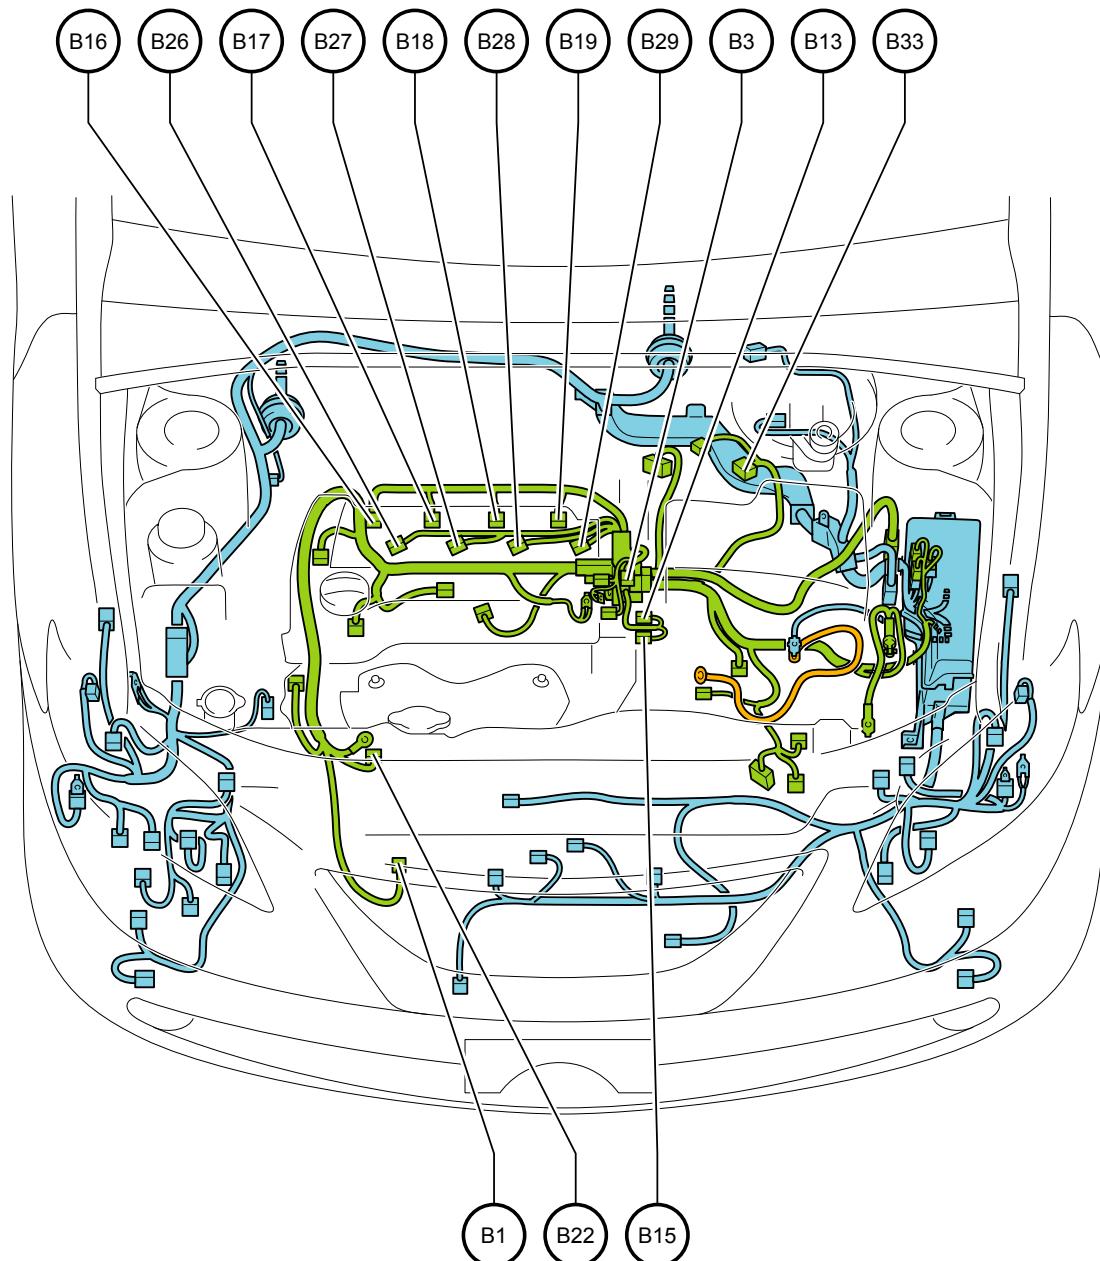

- B 1 A/C Compressor
- B 3 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- B 13 Water Temp. Sensor
- B 15 Engine Oil Pressure SW
- B 16 Fuel Injector (No.1)
- B 17 Fuel Injector (No.2)
- B 18 Fuel Injector (No.3)
- B 19 Fuel Injector (No.4)
- B 22 Alternator
- B 26 Ignition Coil (No.1)
- B 27 Ignition Coil (No.2)
- B 28 Ignition Coil (No.3)
- B 29 Ignition Coil (No.4)
- B 33 Air Flow Meter

Position of Parts in Engine Compartment <2AZ-FE>

---

