


Position of Parts in Seat

\* 1:w/ Pre-Crush Safety System  
\* 2:w/o Pre-Crush Safety System

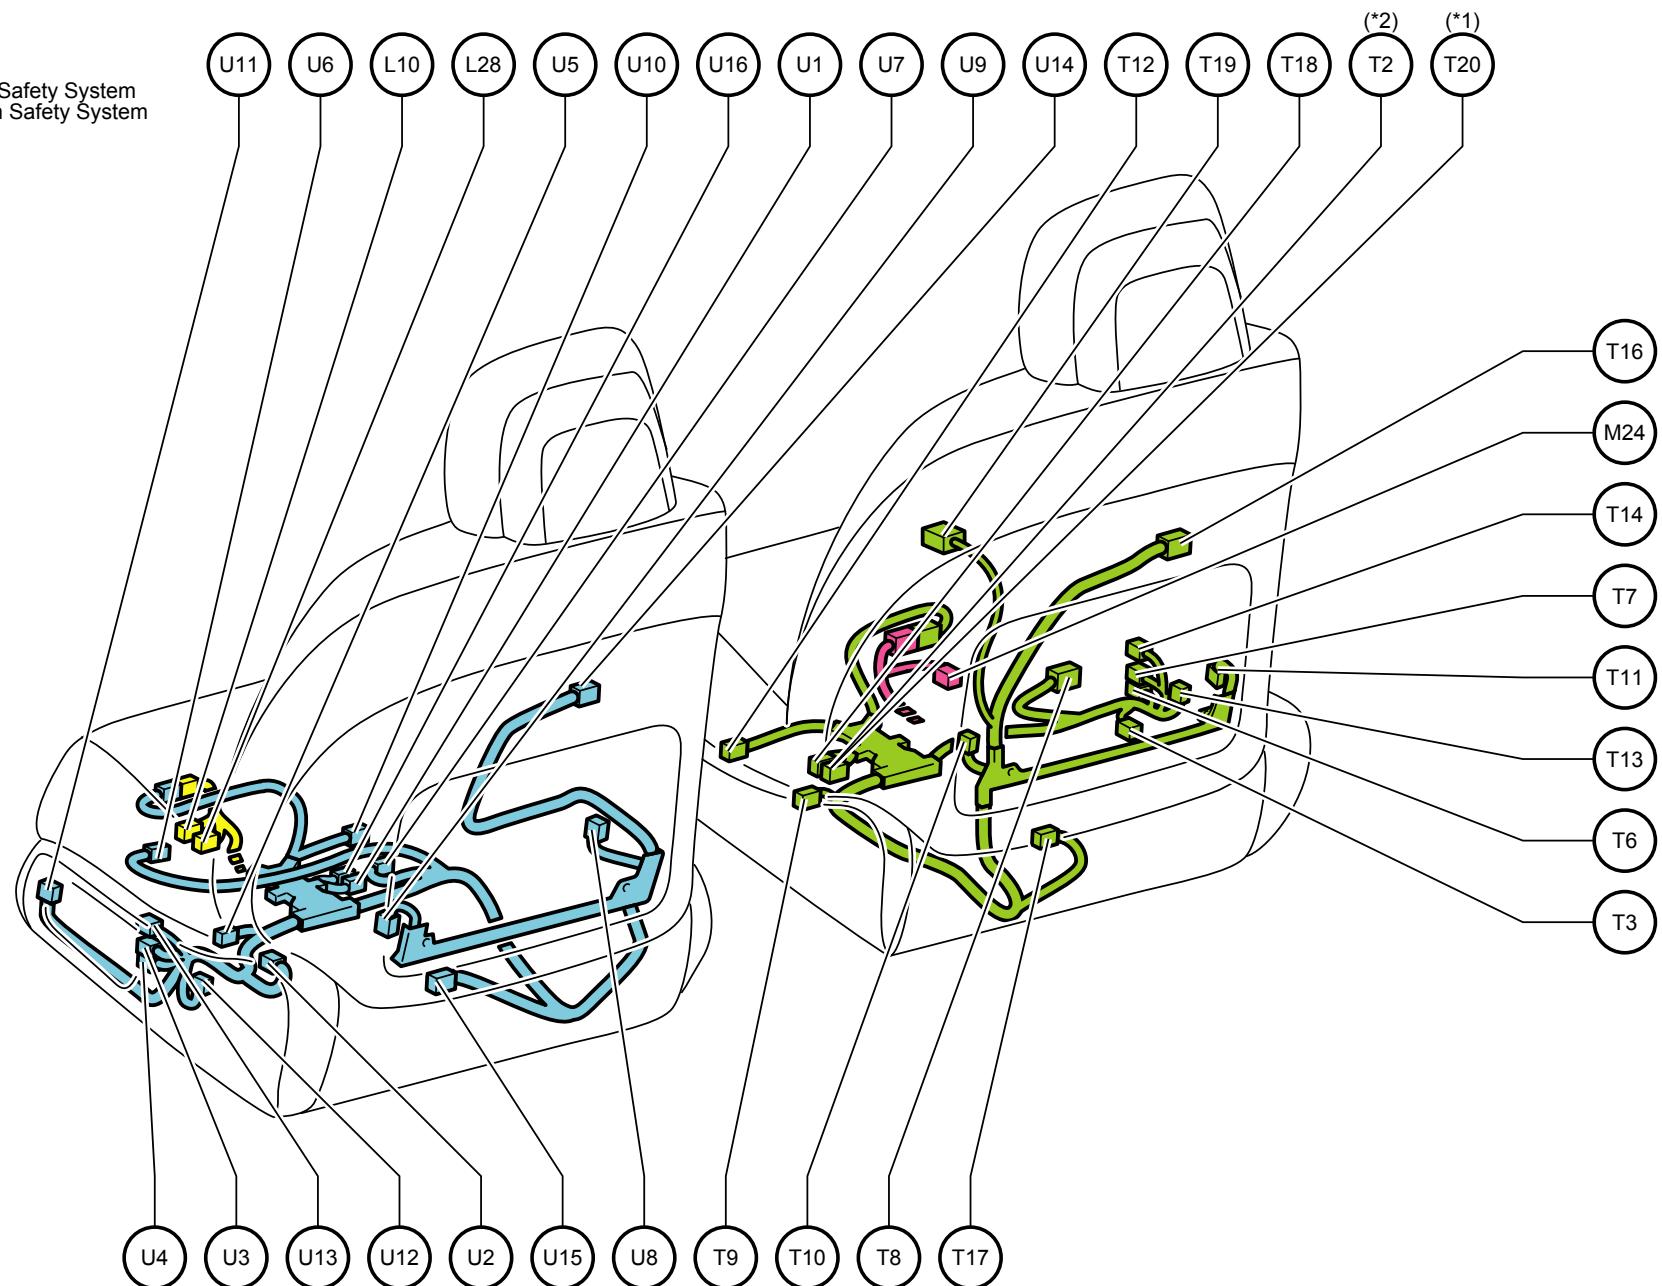

L 10 Front Seat Inner Belt (LH)  
L 28 Side Airbag Squib (Front LH)

M 24 Side Airbag Squib (Front RH)

T 2 Front Seat Inner Belt (RH)  
T 3 Junction Connector  
T 6 Position Control ECU and SW (Front RH Seat)  
T 7 Position Control ECU and SW (Front RH Seat)  
T 8 Power Seat Motor (Front RH Seat Front Vertical Control)  
T 9 Power Seat Motor (Front RH Seat Lifter Control)  
T 10 Power Seat Motor (Front RH Seat Lumbar Support Control)  
T 11 Power Seat Motor (Front RH Seat Reclining Control)  
T 12 Power Seat Motor (Front RH Seat Slide Control)  
T 13 Power Seat SW (Front RH Seat Lumbar Support Control)  
T 14 Power Seat SW (Front RH Seat)  
T 16 Seat Climate Control Blower (Front RH Seat Back)  
T 17 Seat Climate Control Blower (Front RH Seat Cushion)  
T 18 Seat Heater (RH)  
T 19 Lumbar Front Power Seat Switch  
T 20 Front Seat Inner Belt (RH)

U 1 Front Seat Inner Belt (LH)  
U 2 Junction Connector  
U 3 Position Control ECU and SW (Front LH Seat)  
U 4 Position Control ECU and SW (Front LH Seat)  
U 5 Power Seat Motor (Front LH Seat Front Vertical Control)  
U 6 Power Seat Motor (Front LH Seat Leg Support Control)  
U 7 Power Seat Motor (Front LH Seat Lifter Control)  
U 8 Power Seat Motor (Front LH Seat Lumbar Support Control)  
U 9 Power Seat Motor (Front LH Seat Reclining Control)  
U 10 Power Seat Motor (Front LH Seat Slide Control)  
U 11 Power Seat SW (Front LH Seat Leg Support Control)  
U 12 Power Seat SW (Front LH Seat Lumbar Support Control)  
U 13 Power Seat SW (Front LH Seat)  
U 14 Seat Climate Control Blower (Front LH Seat Back)  
U 15 Seat Climate Control Blower (Front LH Seat Cushion)  
U 16 Seat Heater (LH)

**Position of Parts in Seat**

