


Position of Parts in Instrument Panel

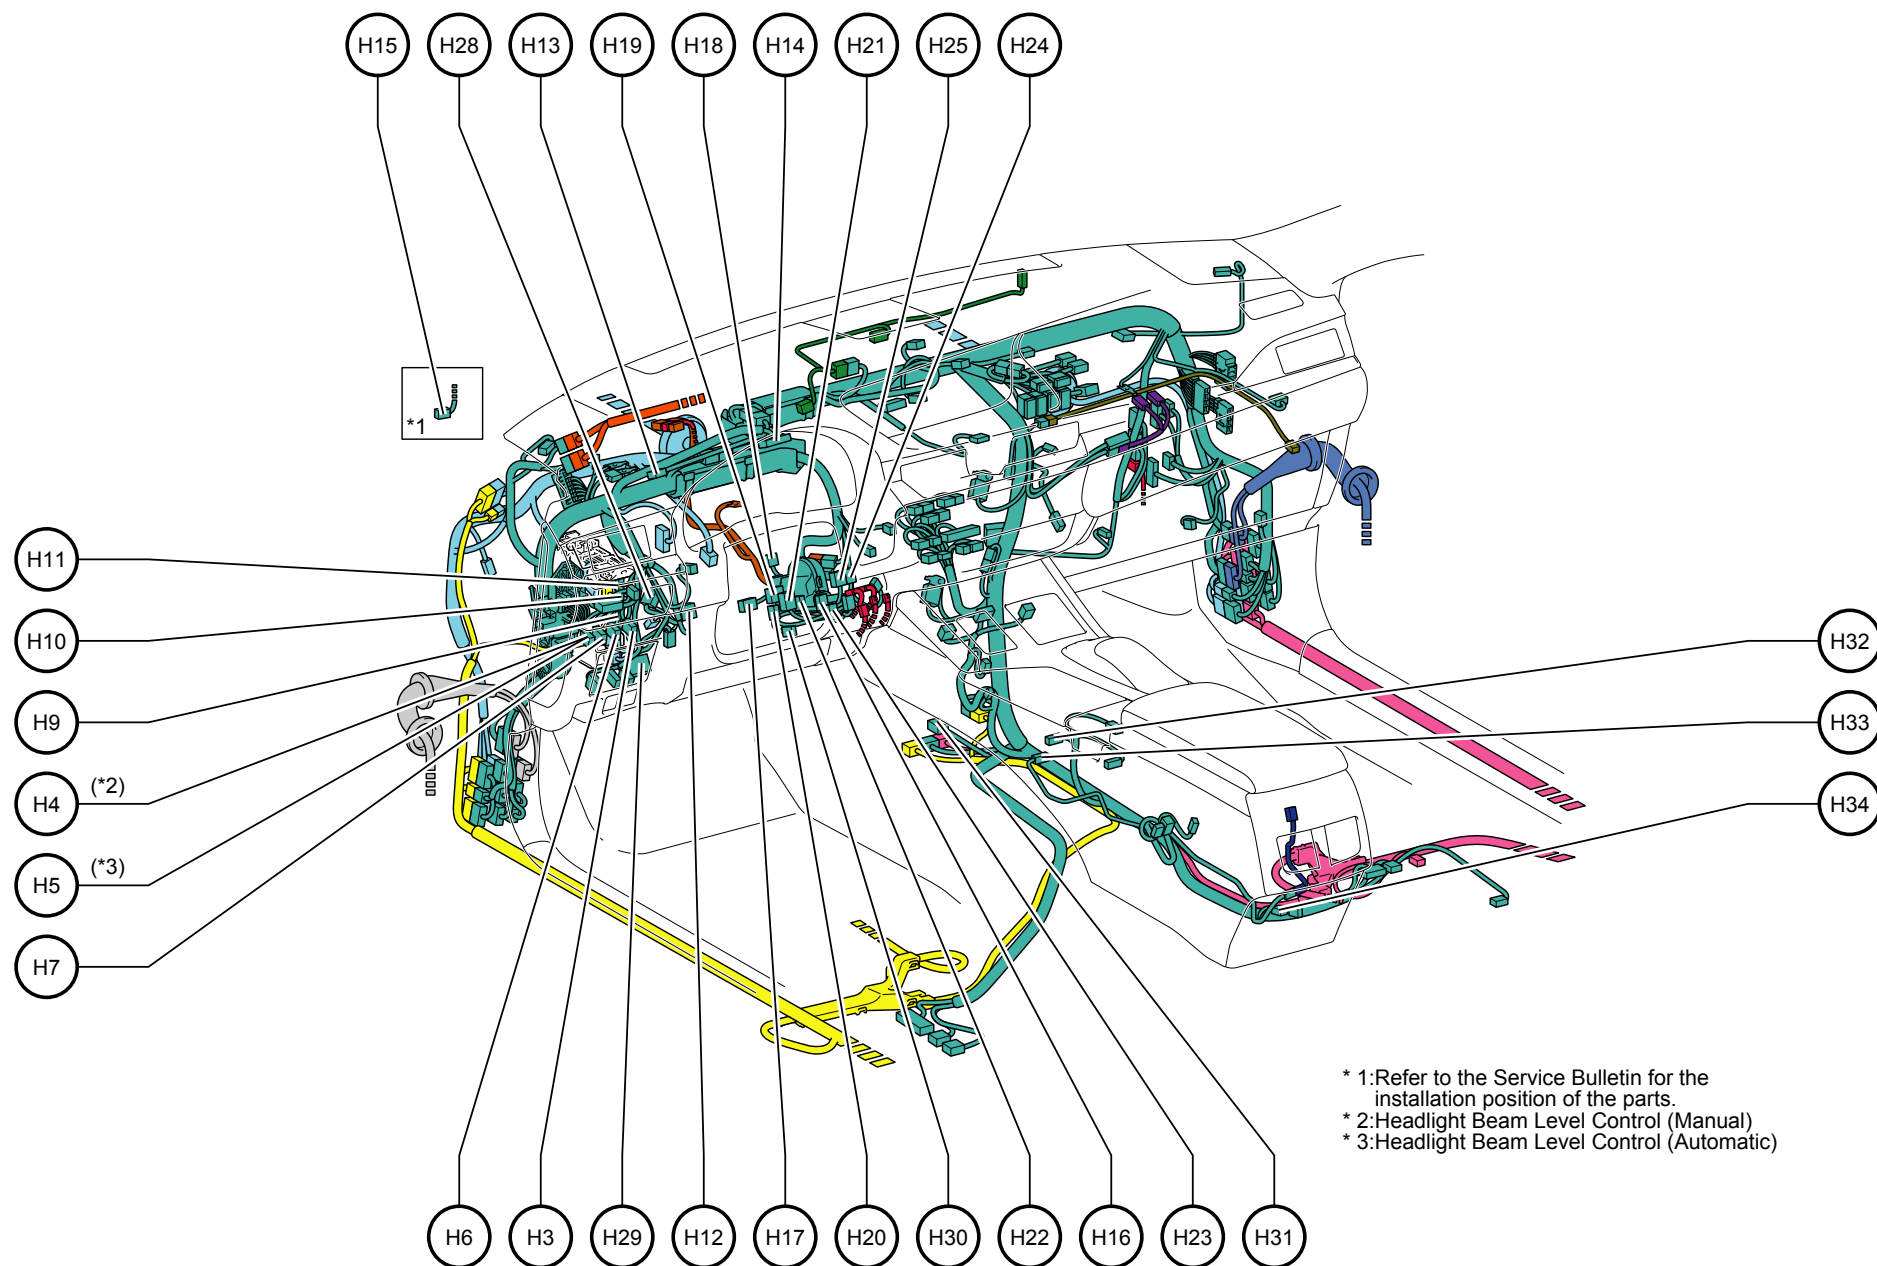


- H 3 Back Sonar or Clearance Sonar Switch Assembly
- H 4 Headlight Leveling Switch
- H 5 Headlight Cleaner Switch Assembly
- H 6 Blind Spot Monitor Main Switch (Warning Canceling Switch Assembly)
- H 7 Auto High Beam Switch
- H 9 Main Body ECU
- H 10 Main Body ECU
- H 11 Main Body ECU
- H 12 Multiplex Tilt & Telescopic ECU
- H 13 Combination Meter Assembly
- H 14 Combination Meter Assembly
- H 15 ID Code Box
- H 16 Electric Power Steering Column Sub-Assembly
- H 17 Electric Power Steering Column Sub-Assembly
- H 18 Steering Lock Actuator Assembly
- H 19 Headlight Dimmer Switch Assembly
- H 20 Tilt & Telescopic Switch
- H 21 Spiral Cable Sub-Assembly
- H 22 Spiral Cable Sub-Assembly
- H 23 Steering Sensor
- H 24 Windshield Wiper Switch Assembly
- H 25 Windshield Wiper Switch Assembly
- H 28 Electric Power Steering Column Sub-Assembly
- H 29 DLC3
- H 30 Lower No. 1 Instrument Panel Airbag Assembly
- H 31 Quick Heater Assembly
- H 32 Shift Lock Control ECU (Lower Shift Lever Assembly)
- H 33 Transmission Control Switch
- H 34 Power Outlet Socket Assembly

Position of Parts in Instrument Panel


H 3

White

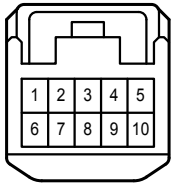


H 4

Blue

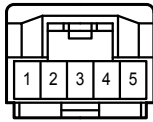


H 5

Gray

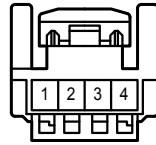


H 6

Black

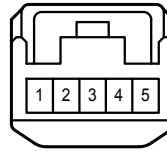


H 7

Black

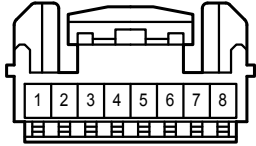


H 9

White

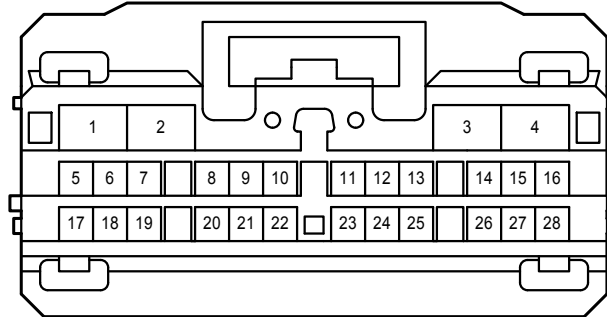


H 10

White

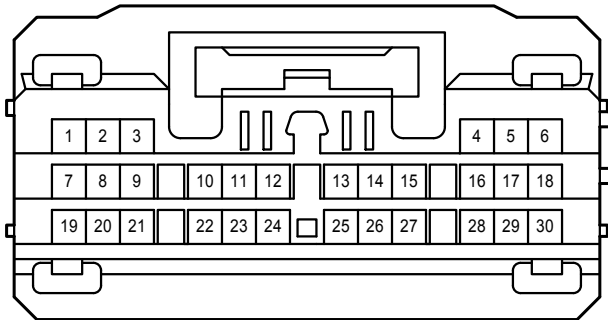


H 11

White

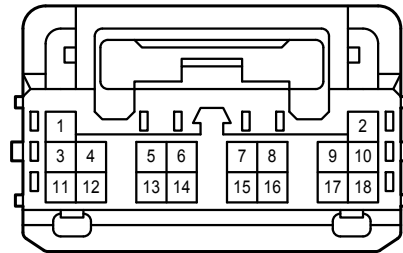


H 12

Black

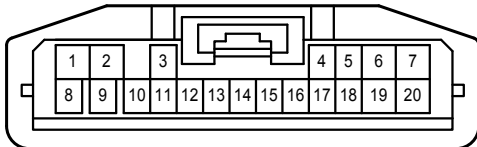


H 13

Black

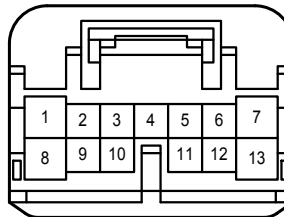


H 14

Black

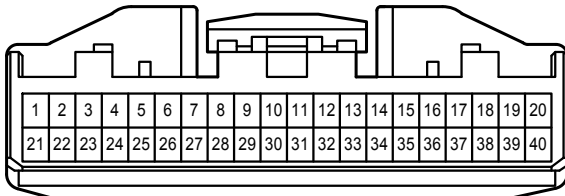

H 15

White

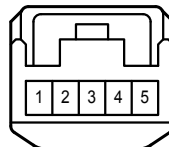

H 16

White



Position of Parts in Instrument Panel

