

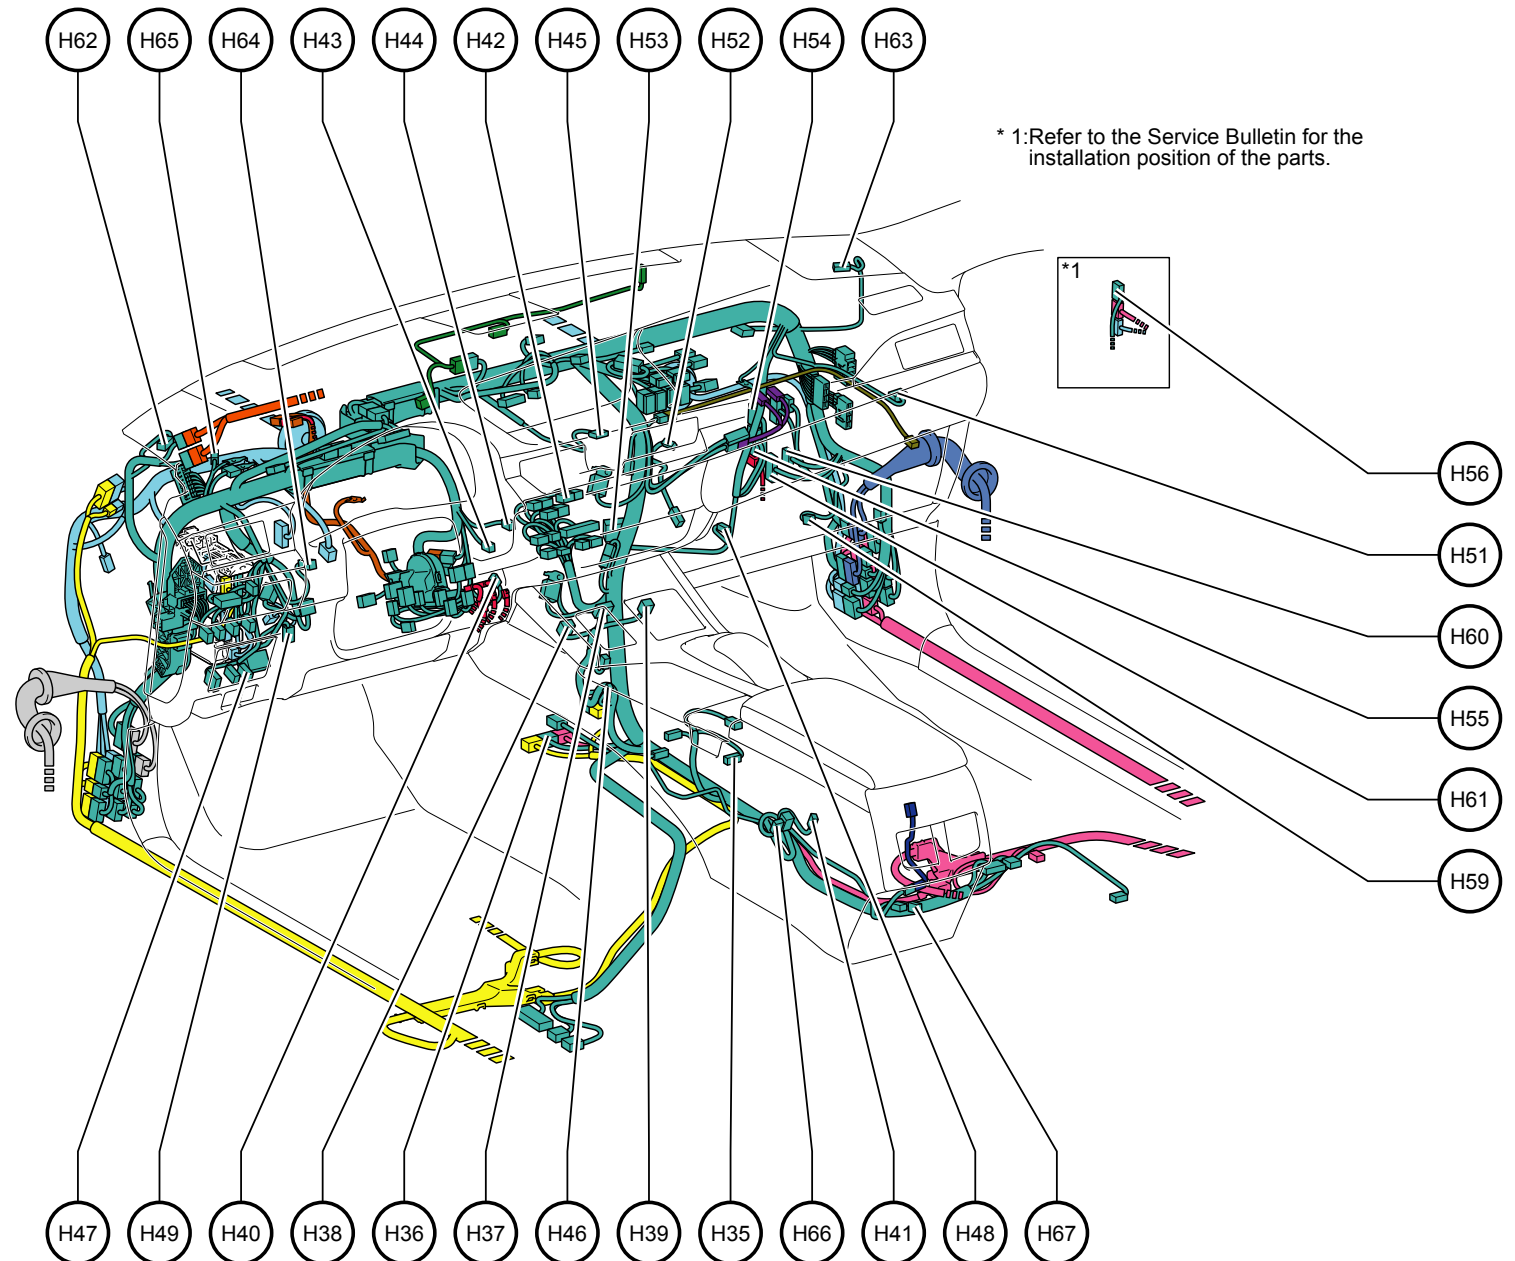
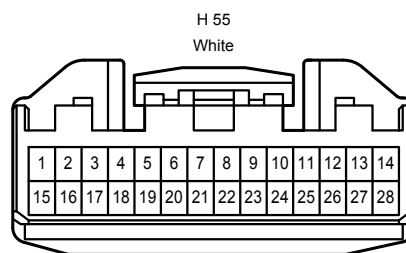
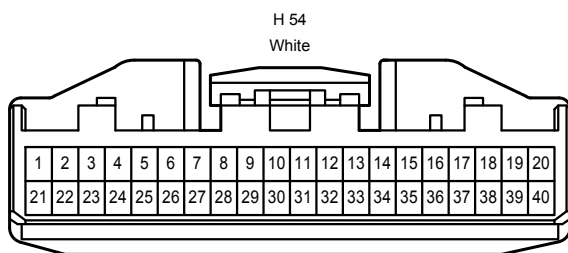
 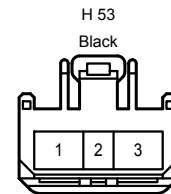
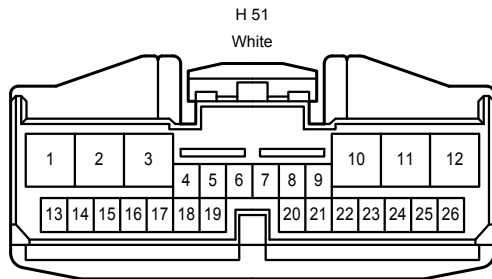

 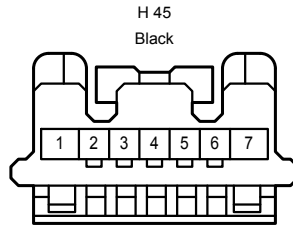
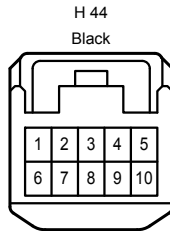
 
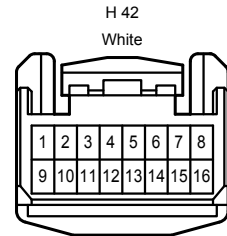

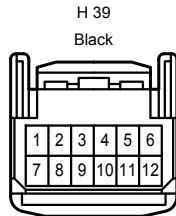
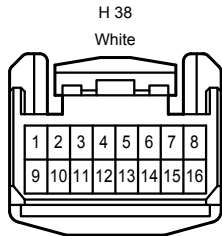
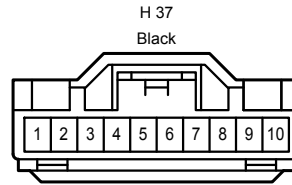


Position of Parts in Instrument Panel

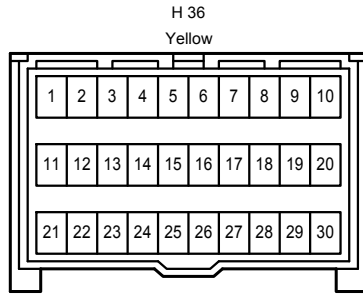


- H 35 No. 1 Indoor Electrical Key Antenna Assembly (Front Floor)
- H 36 Airbag Sensor Assembly
- H 37 Combination Switch Assembly
- H 38 Refreshing Seat Switch LH
- H 39 Refreshing Seat Switch RH
- H 40 No. 1 Clearance Warning Buzzer
- H 41 Cigarette Lighter Assembly
- H 42 Radio Receiver Assembly
- H 43 Cooler (Room Temperature Sensor) Thermistor
- H 44 Engine Switch
- H 45 Clock Assembly
- H 46 Shift Position Indicator (Indicator Light Wire Sub-Assembly)
- H 47 Front Foot Light LH (No. 1 Interior Illumination Light Assembly LH)
- H 48 Front Foot Light RH (No. 1 Interior Illumination Light Assembly RH)
- H 49 Tire Pressure Warning Reset Switch (No. 1 Tire Pressure Warning Switch)
- H 51 Windshield Wiper Relay Assembly
- H 52 Glove Box Light Assembly
- H 53 Blower Motor with Fan Sub-Assembly
- H 54 A/C Amplifier Assembly
- H 55 A/C Amplifier Assembly
- H 56 Certification ECU
- H 59 Lower No. 2 Instrument Panel Airbag Assembly
- H 60 Network Gateway ECU
- H 61 Clearance Warning ECU Assembly
- H 62 Front No. 2 Speaker Assembly LH
- H 63 Front No. 2 Speaker Assembly RH
- H 64 Trip Switch
- H 65 Skid Control Buzzer Assembly
- H 66 No. 1 Stereo Jack Adapter Assembly
- H 67 Power Outlet Illumination

Position of Parts in Instrument Panel

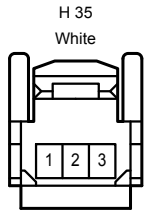


Position of Parts in Instrument Panel


H 56
White

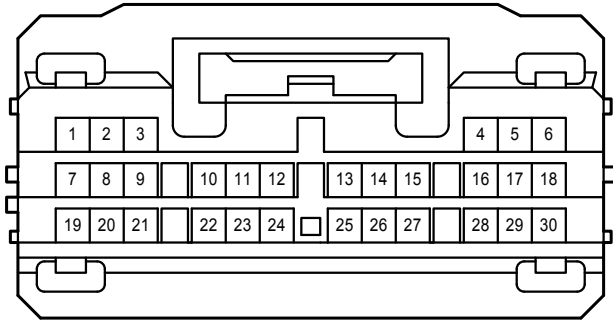


H 59
Black

 


H 60
White

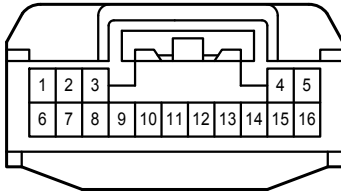


H 61
Black

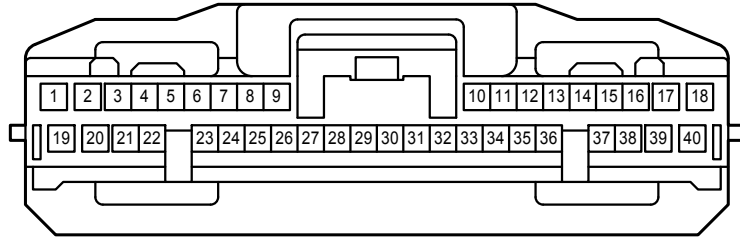


H 62
Black

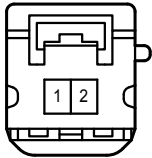

H 63
Black

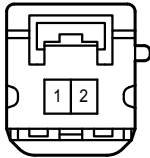


H 64
Black

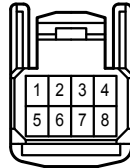

H 65
Blue



H 66
Gray

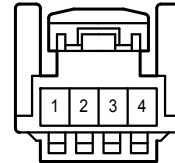

H 67
White

