



Position of Parts in Instrument Panel

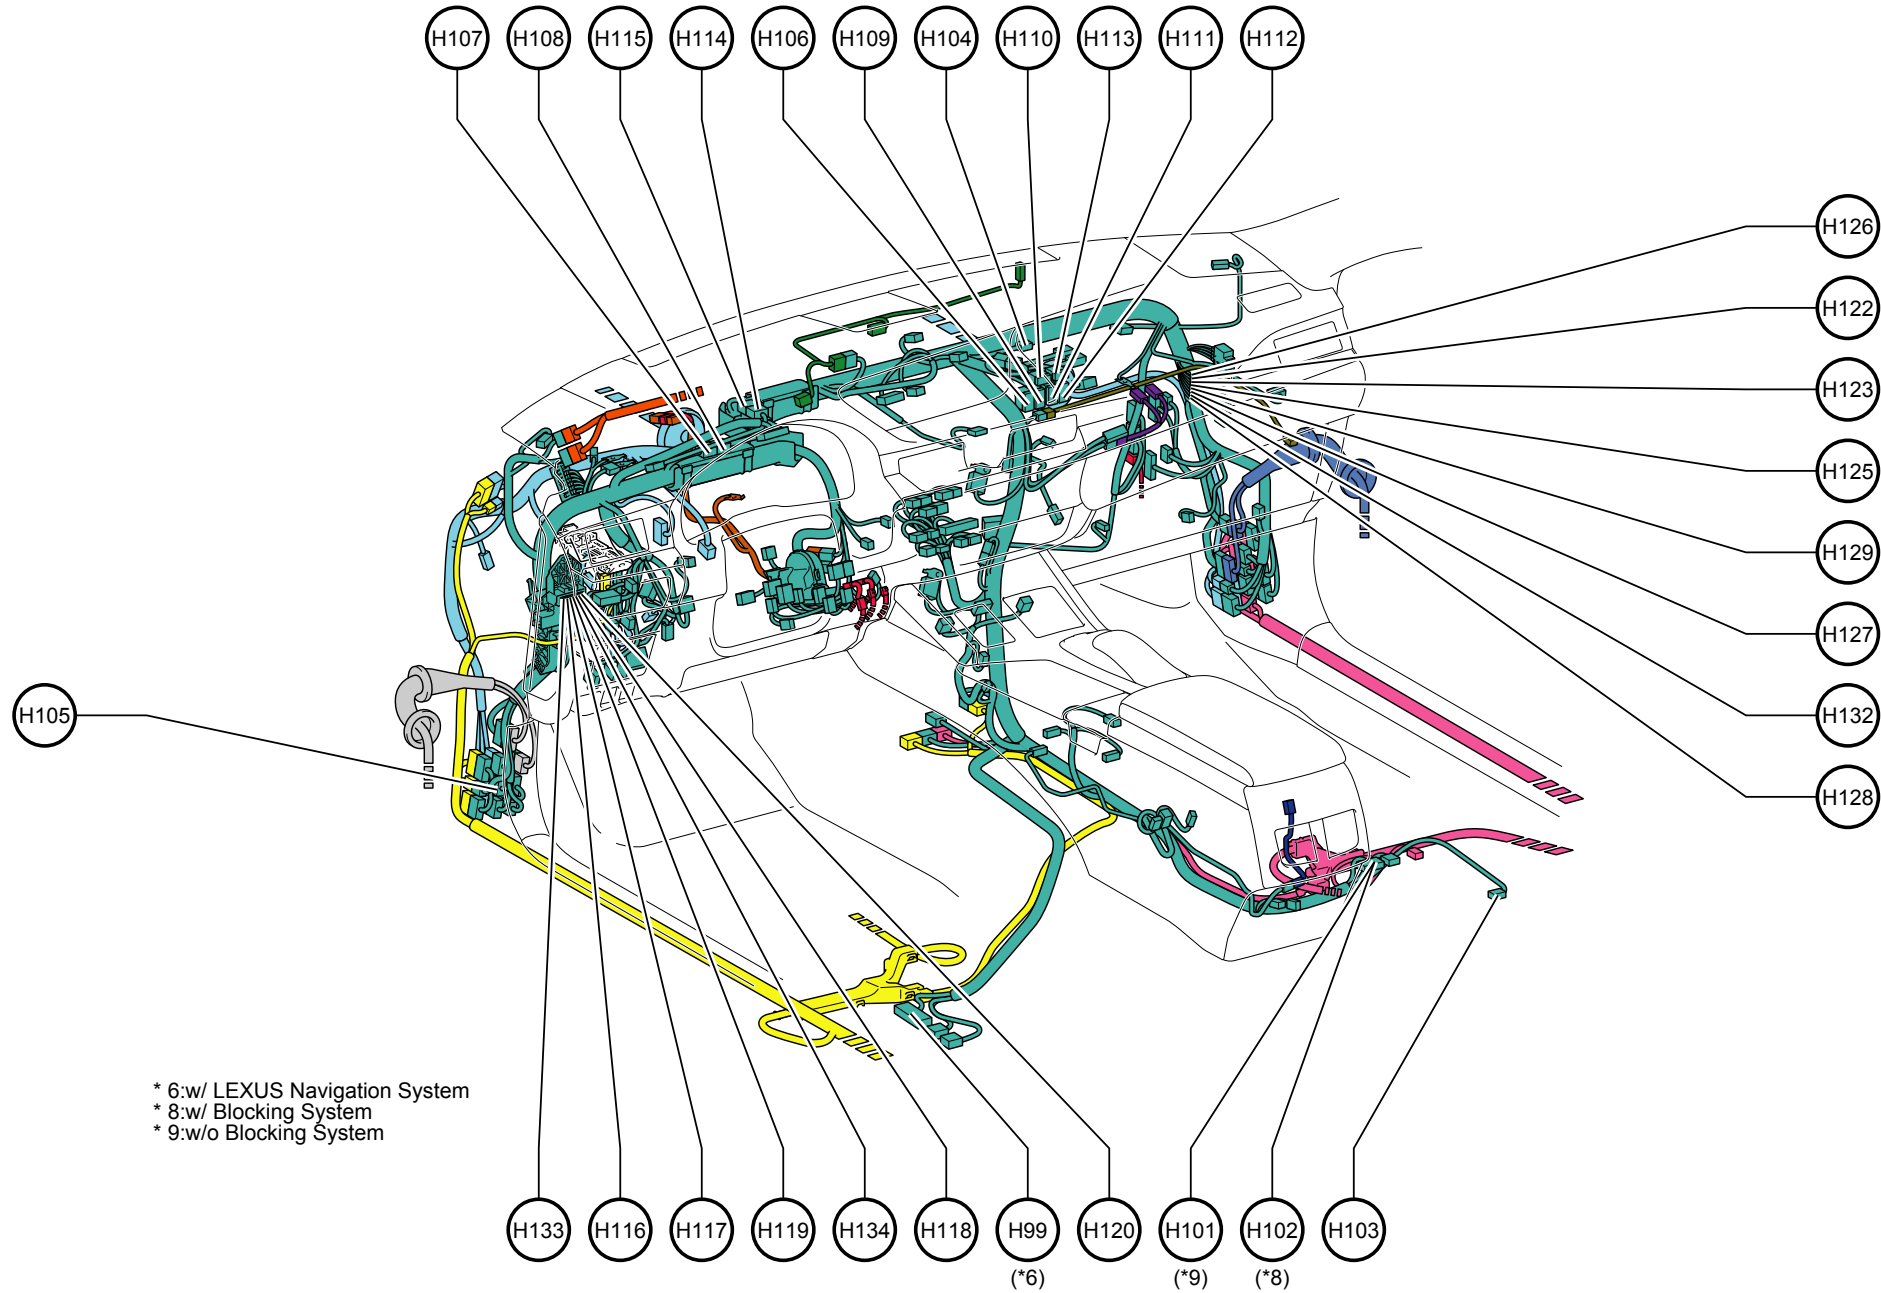


H 99	Stereo Component Amplifier Assembly
H 101	Telematics Transceiver
H 102	Telephone Transceiver Assembly
H 103	Back-Up Battery (Mayday Battery)
H 104	Diode (Shift Position Indicator)
H 105	Junction Connector
H 106	Junction Connector
H 107	Junction Connector
H 108	Junction Connector
H 109	Junction Connector
H 110	Junction Connector
H 111	Junction Connector
H 112	Junction Connector
H 113	Junction Connector
H 114	Junction Connector
H 115	Junction Connector
H 116	Junction Connector
H 117	Junction Connector
H 118	Junction Connector
H 119	Junction Connector
H 120	Junction Connector
H 122	Junction Connector
H 123	Junction Connector
H 125	Junction Connector
H 126	Junction Connector
H 127	Junction Connector
H 128	Junction Connector
H 129	Junction Connector
H 132	Junction Connector
H 133	Junction Connector
H 134	Junction Connector

Position of Parts in Instrument Panel


H 99
White

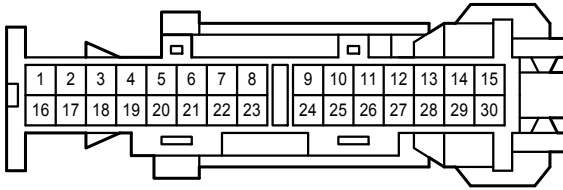


H101
White

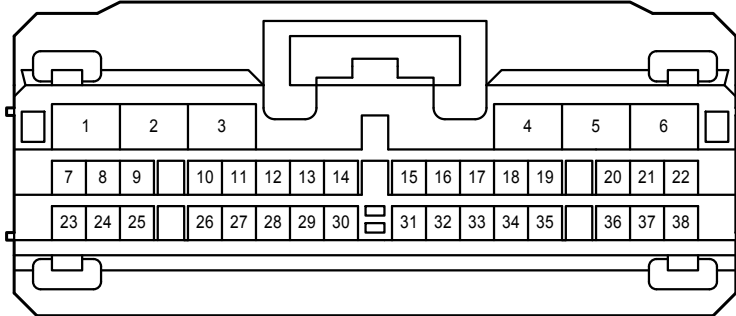

H102
White

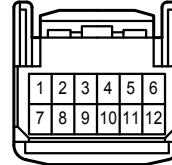


H103
White

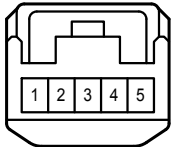


H104
Black




H105
Gray

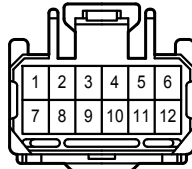


H106
Blue

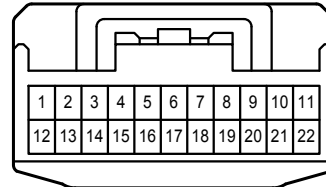


H107
Gray

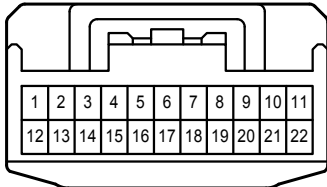


H108
Gray

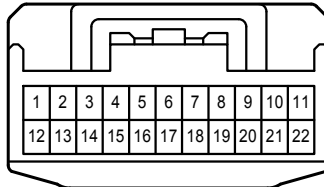


H109
Black

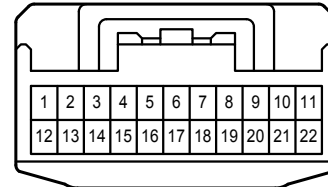


H110
Black

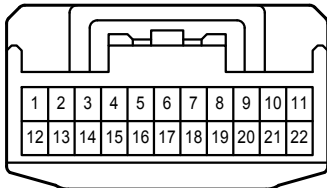


H111
Gray

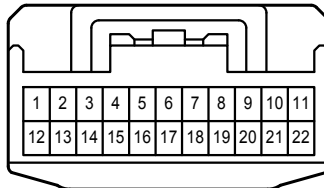


H112
White

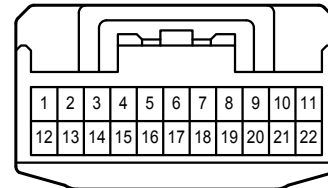


H113
White

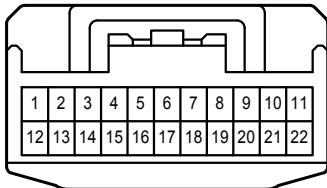

H114
Black

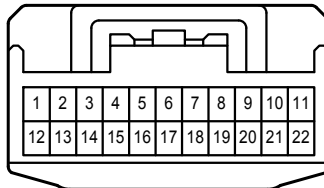

H115
Black

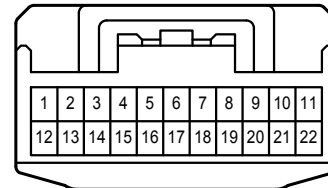

Position of Parts in Instrument Panel

