


Position of Parts in Instrument Panel

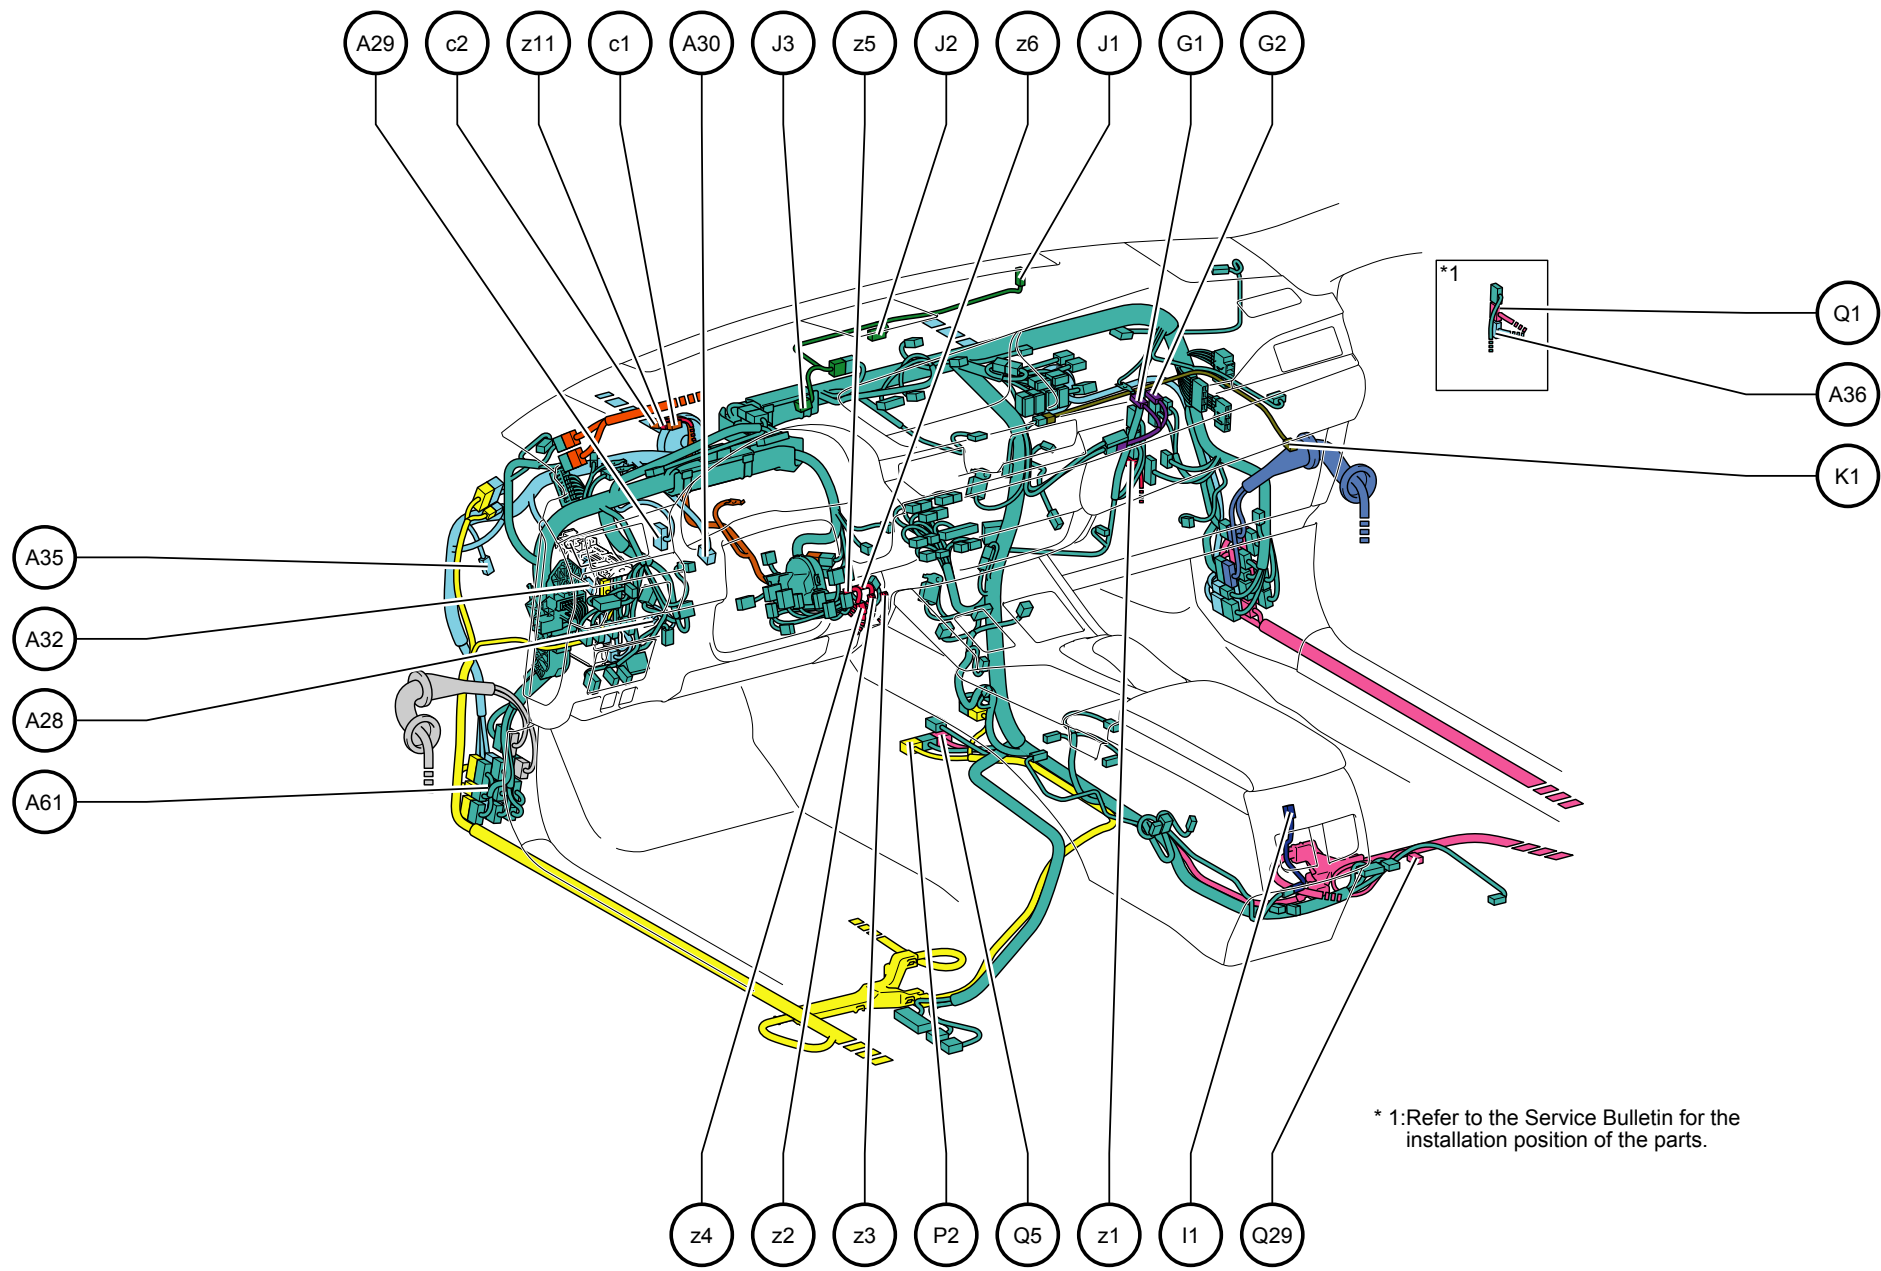

* 1:Refer to the Service Bulletin for the installation position of the parts.

- A 28 Stop Light Switch Assembly
- A 29 Headlight Leveling ECU Assembly
- A 30 Accelerator Pedal Sensor Assembly
- A 32 Brake Pedal Load Sensing Switch (Brake Pedal Support Assembly)
- A 35 Parking Brake Switch Assembly
- A 36 Certification ECU
- A 61 Junction Connector

- G 1 Instrument Panel Passenger Airbag without Door Assembly
- G 2 Instrument Panel Passenger Airbag without Door Assembly

- I 1 Console Box Illumination Light Assembly

- J 1 Automatic Light Control Sensor
- J 2 Front No. 3 Speaker Assembly
- J 3 Ion Generator Sub-Assembly

- K 1 Pre-Crash Safety System Cancel Switch (Pre-Crash System Cancel Switch Assembly)



 



 


 
 
 


 



- P 2 Airbag Sensor Assembly

- Q 1 Certification ECU
- Q 5 Airbag Sensor Assembly
- Q 29 Telematics Transceiver

- c 1 Power Steering ECU Assembly
- c 2 Power Steering ECU Assembly

- z 1 A/C Amplifier Assembly , A/C Unit (A/C Harness Assembly)
- z 2 Spiral Cable Sub-Assembly , Driver Side Squib Circuit (Horn Button Assembly)
- z 3 Spiral Cable Sub-Assembly , Driver Side Squib Circuit (Horn Button Assembly)
- z 4 Spiral Cable Sub-Assembly , Steering Wheel Heater Control Assembly
- z 5 Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
- z 6 Spiral Cable Sub-Assembly , Cruise Control Main Switch
- z 11 Power Steering ECU Assembly , Power Steering Torque Sensor (Electric Power Steering Column Sub-Assembly)

Position of Parts in Instrument Panel

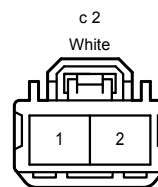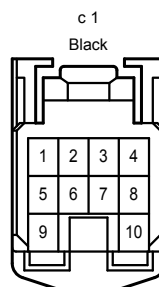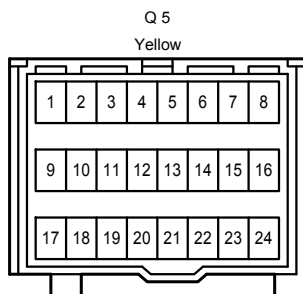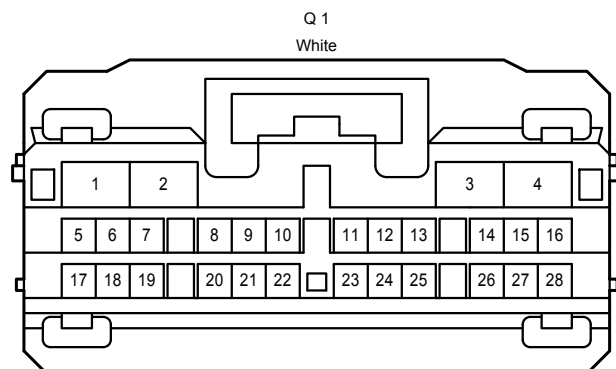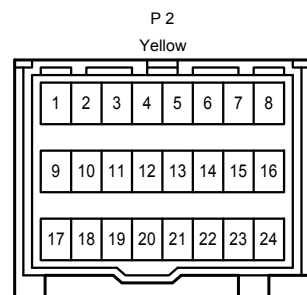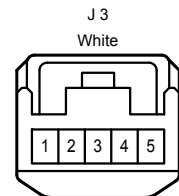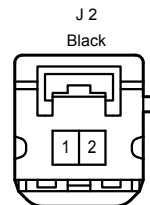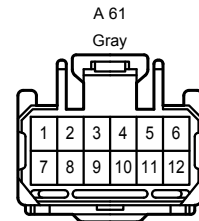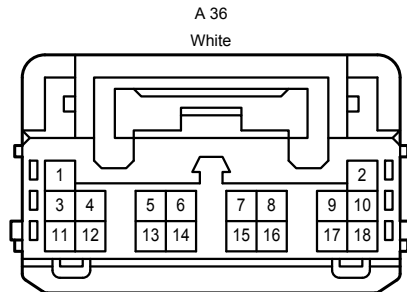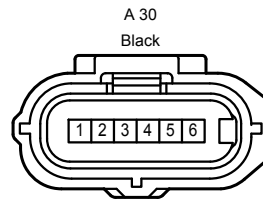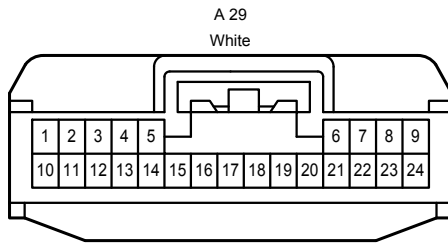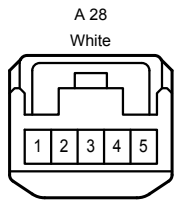

Position of Parts in Instrument Panel

