


Position of Parts in Body

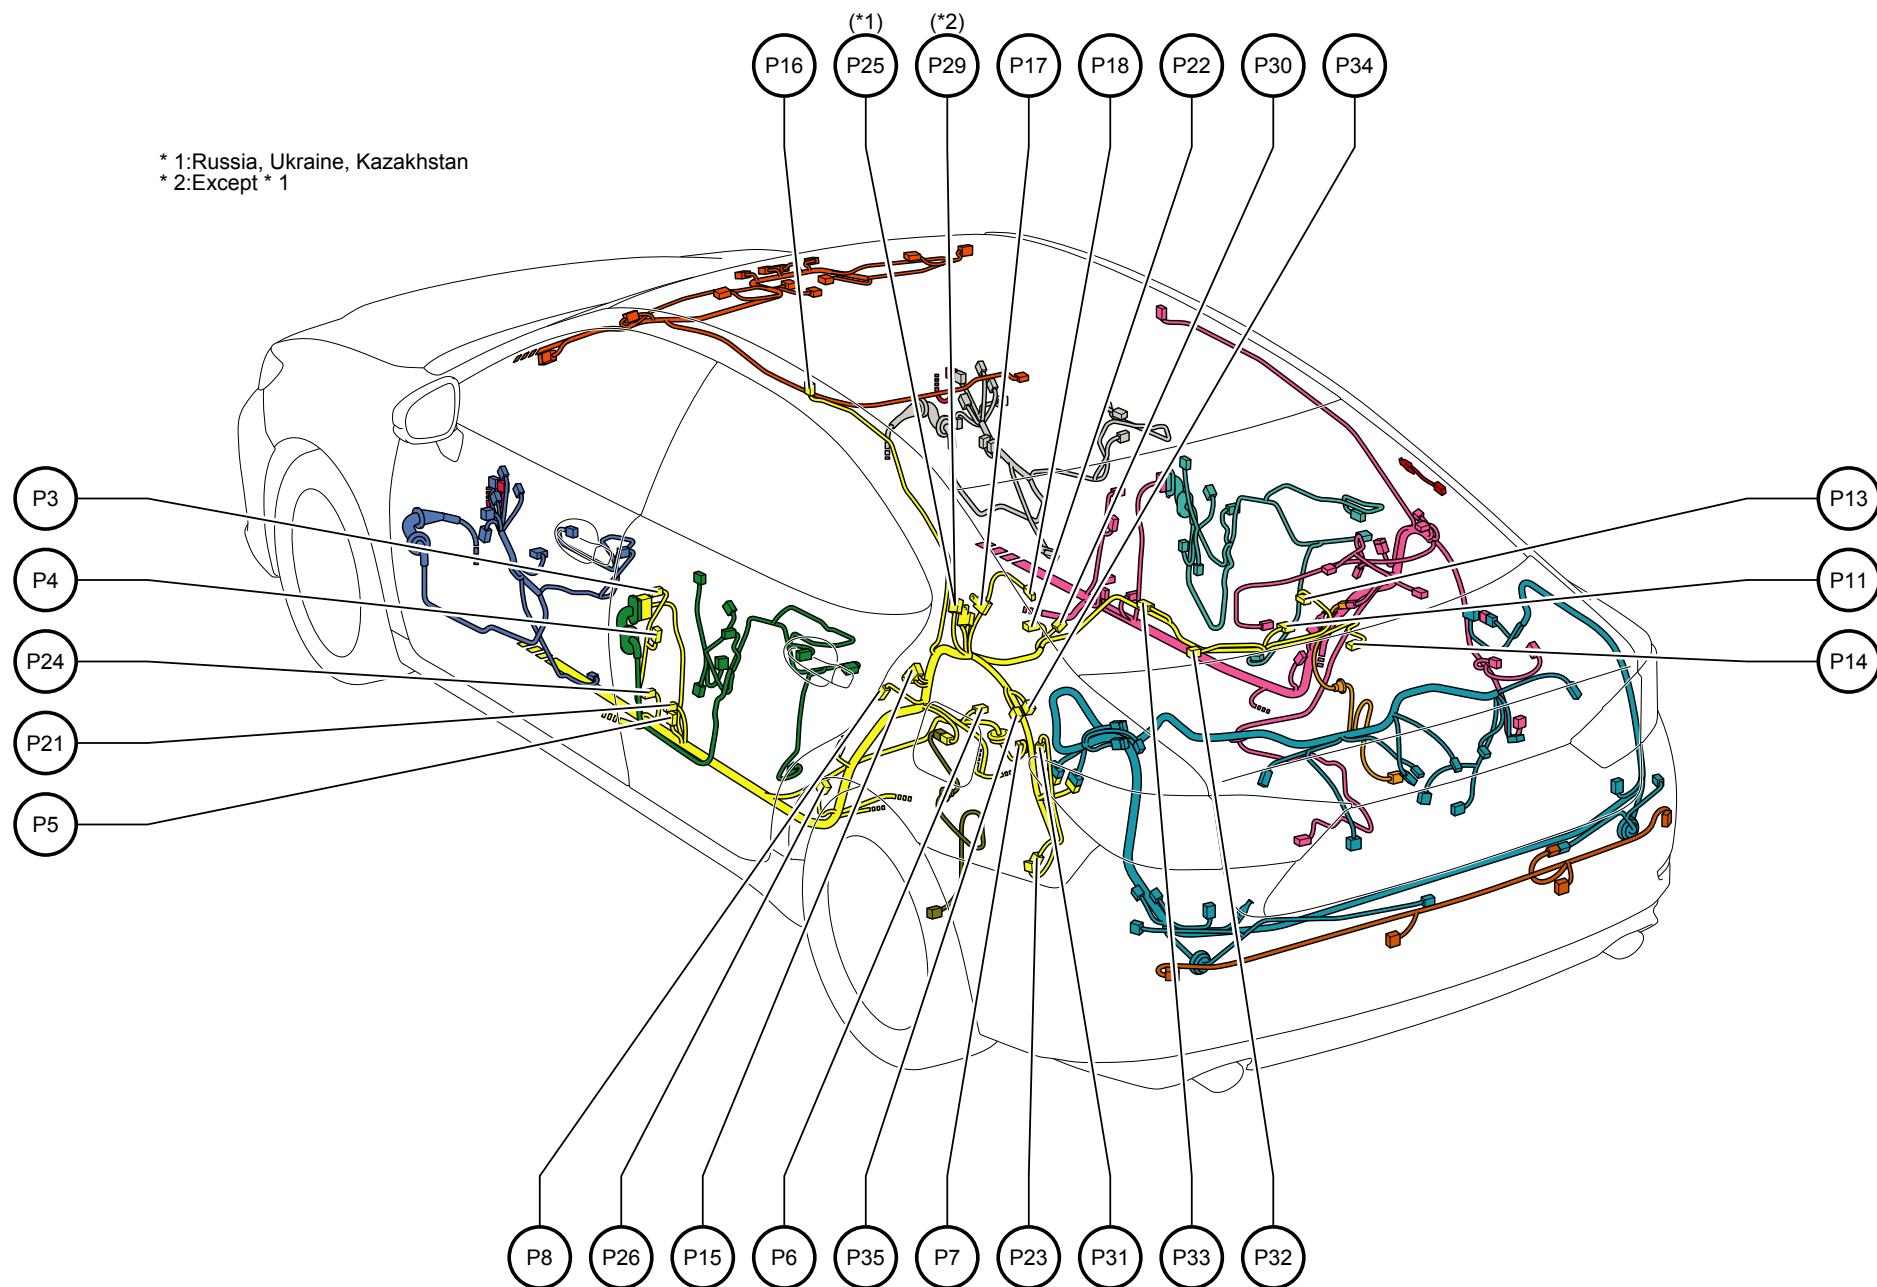

- P 3 Front Door Courtesy Light Switch Assembly LH
- P 4 Side Airbag Sensor Assembly LH
- P 5 Front Seat Outer Belt Assembly LH
- P 6 No. 1 Indoor Electrical Key Antenna Assembly (Rear Floor)
- P 7 Fuel Suction Tube with Pump & Gage Assembly
- P 8 Rear Door Courtesy Light Switch Assembly LH
- P 11 Rear Window Shade Assembly
- P 13 Center Stop Light Set
- P 14 No. 1 Luggage Compartment Light Assembly
- P 15 Noise Filter (No. 1 Luggage Compartment Light Assembly and Center Stop Light Set)
- P 16 Curtain Shield Airbag Assembly LH
- P 17 Noise Filter (Rear Window Defogger)
- P 18 Rear Window Defogger (Back Window Glass)
- P 21 Front Seat Outer Belt Assembly LH
- P 22 Rear Seat 3 Point Type Belt Assembly Outer LH
- P 23 Rear Tire Pressure Monitor Initiator
- P 24 Front Seat Outer Belt Assembly LH
- P 25 Tire Pressure Warning ECU and Receiver (Tire Pressure Monitor Receiver Assembly)
- P 26 Rear Airbag Sensor LH
- P 29 Tire Pressure Warning ECU and Receiver (Door Control & Tire Pressure Monitoring System Receiver Assembly)
- P 30 Door Control Receiver
- P 31 Fuel Lid Lock with Motor Assembly
- P 32 Rear Header Speaker Assembly LH
- P 33 Diode (No. 1 Luggage Compartment Light Assembly)
- P 34 Diode (Luggage Closer Motor Assembly)
- P 35 Junction Connector

**Position of Parts in Body**

