


Position of Parts in Engine Compartment <LHD 1UR-FSE>

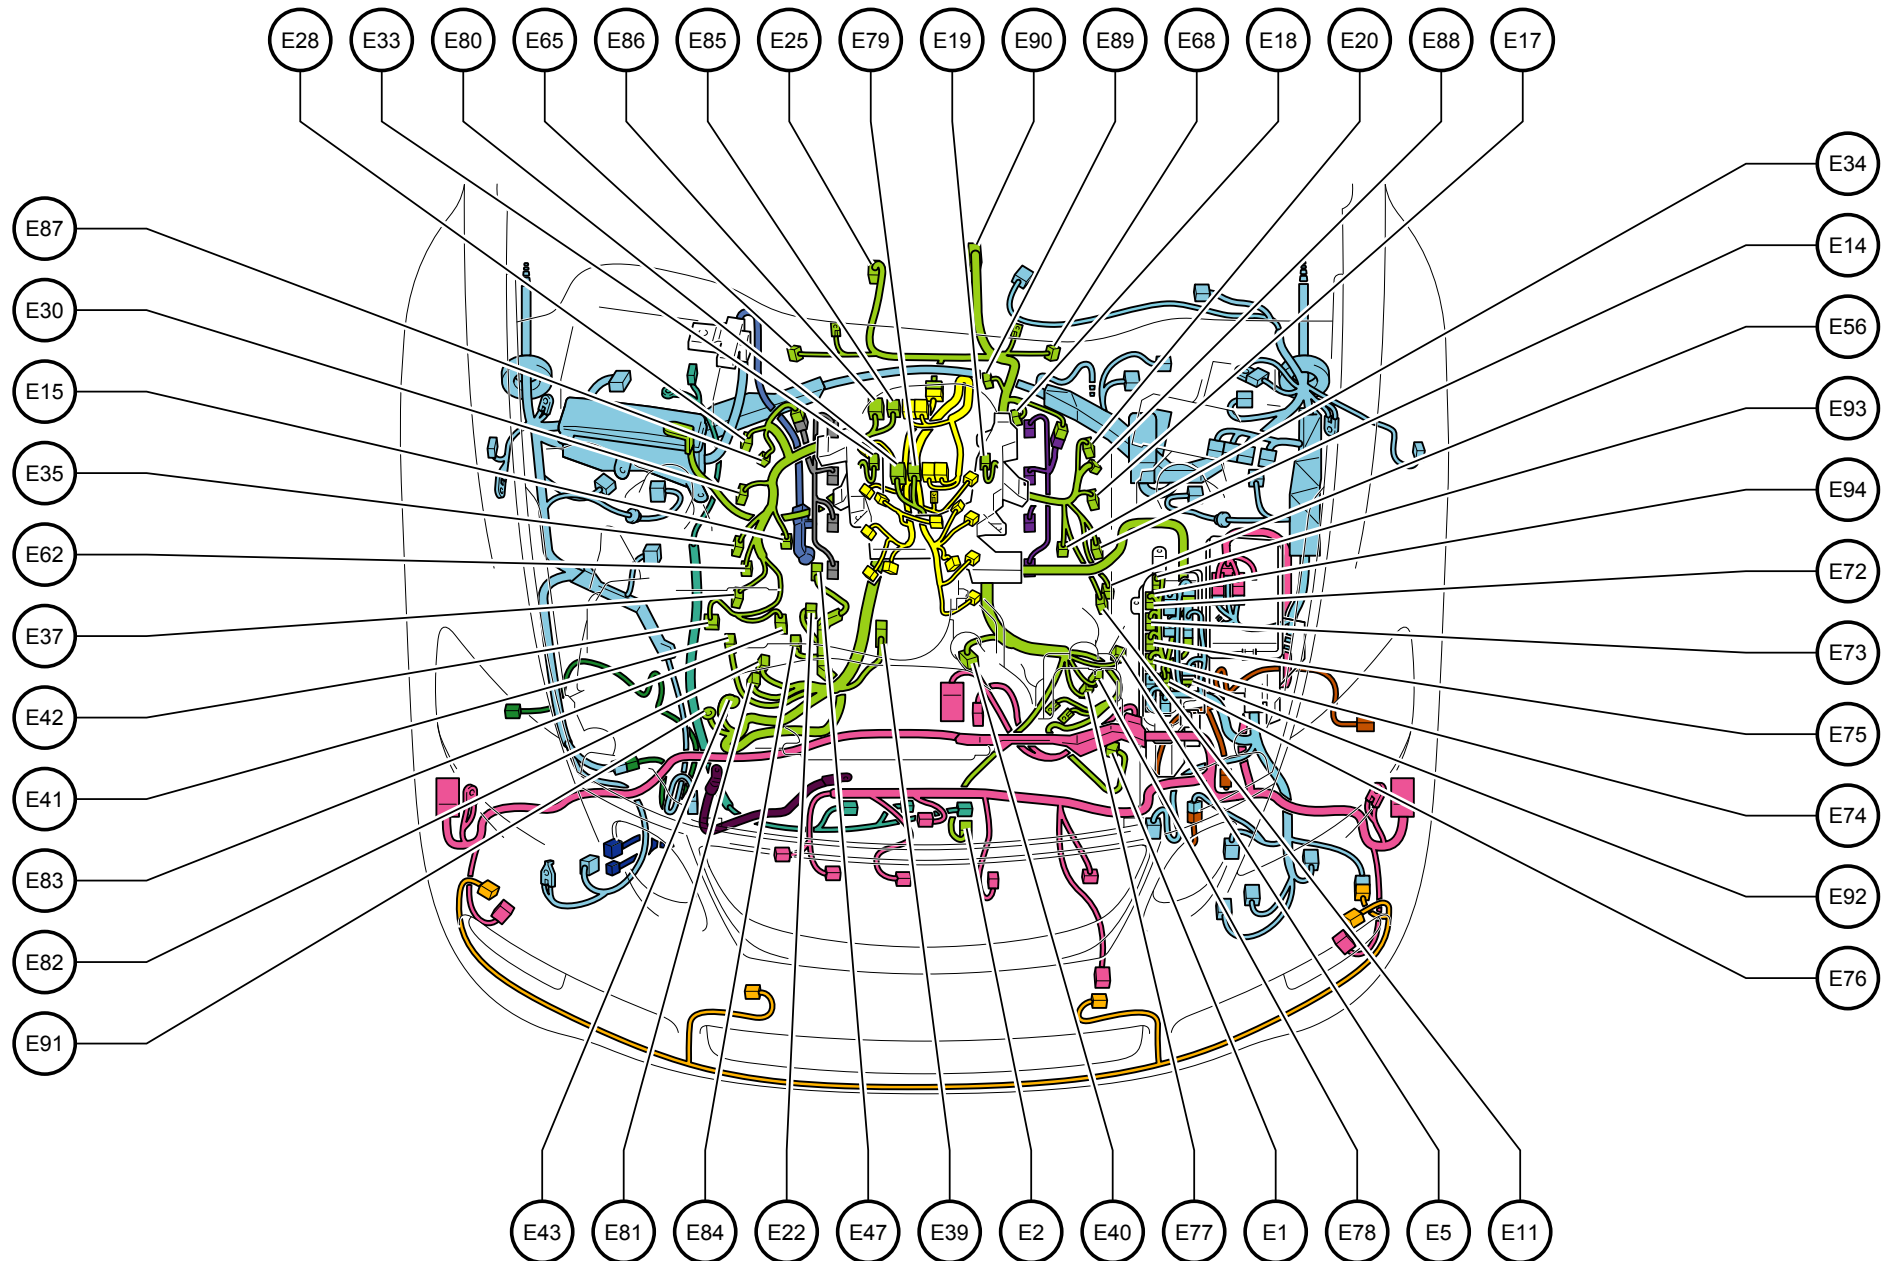

- E 1 A/C Compressor
- E 2 Engine Oil Pressure SW
- E 5 Camshaft Timing Oil Control Valve (LH)
- E 11 Ignition Coil (No.1)
- E 14 Ignition Coil (No.3)
- E 15 VVT Sensor (Bank 2 Intake Side)
- E 17 Ignition Coil (No.5)
- E 18 VSV (Purge)
- E 19 Noise Filter (Ignition LH)
- E 20 Ignition Coil (No.7)
- E 22 Engine Oil Level Sensor
- E 25 Park/Neutral Position SW
- E 28 Ignition Coil (No.8)
- E 30 Ignition Coil (No.6)
- E 33 Noise Filter (Ignition RH)
- E 34 VVT Sensor (Bank 1 Intake Side)
- E 35 Ignition Coil (No.4)
- E 37 Ignition Coil (No.2)
- E 39 Throttle Body Assembly
- E 40 Water Temp. Sensor
- E 41 Camshaft Timing Oil Control Valve (RH)
- E 42 Air Flow Meter
- E 43 Alternator
- E 47 Starter
- E 56 VVT Sensor (Bank 1 Exhaust Side)
- E 62 VVT Sensor (Bank 2 Exhaust Side)
- E 65 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- E 68 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- E 72 Engine ECU
- E 73 Engine ECU
- E 74 Engine ECU
- E 75 Engine ECU
- E 76 Transmission Control ECU
- E 77 Camshaft Control Motor (Bank 1)
- E 78 Camshaft Control Motor (Bank 1)
- E 79 Injector Driver (No.1)
- E 80 Injector Driver (No.1)
- E 81 Camshaft Control Motor (Bank 2)
- E 82 Camshaft Control Motor (Bank 2)
- E 83 Camshaft Position Sensor
- E 84 Crankshaft Position Sensor
- E 85 Injector Driver (No.2)
- E 86 Injector Driver (No.2)
- E 87 Spill Control Valve (Bank 2)
- E 88 Spill Control Valve (Bank 1)
- E 89 Intake Air Control Valve Actuator
- E 90 ECT Solenoid
- E 91 Alternator
- E 92 Junction Connector
- E 93 Junction Connector
- E 94 Junction Connector

