








Position of Parts in Engine Compartment <RHD 1UR-FSE>

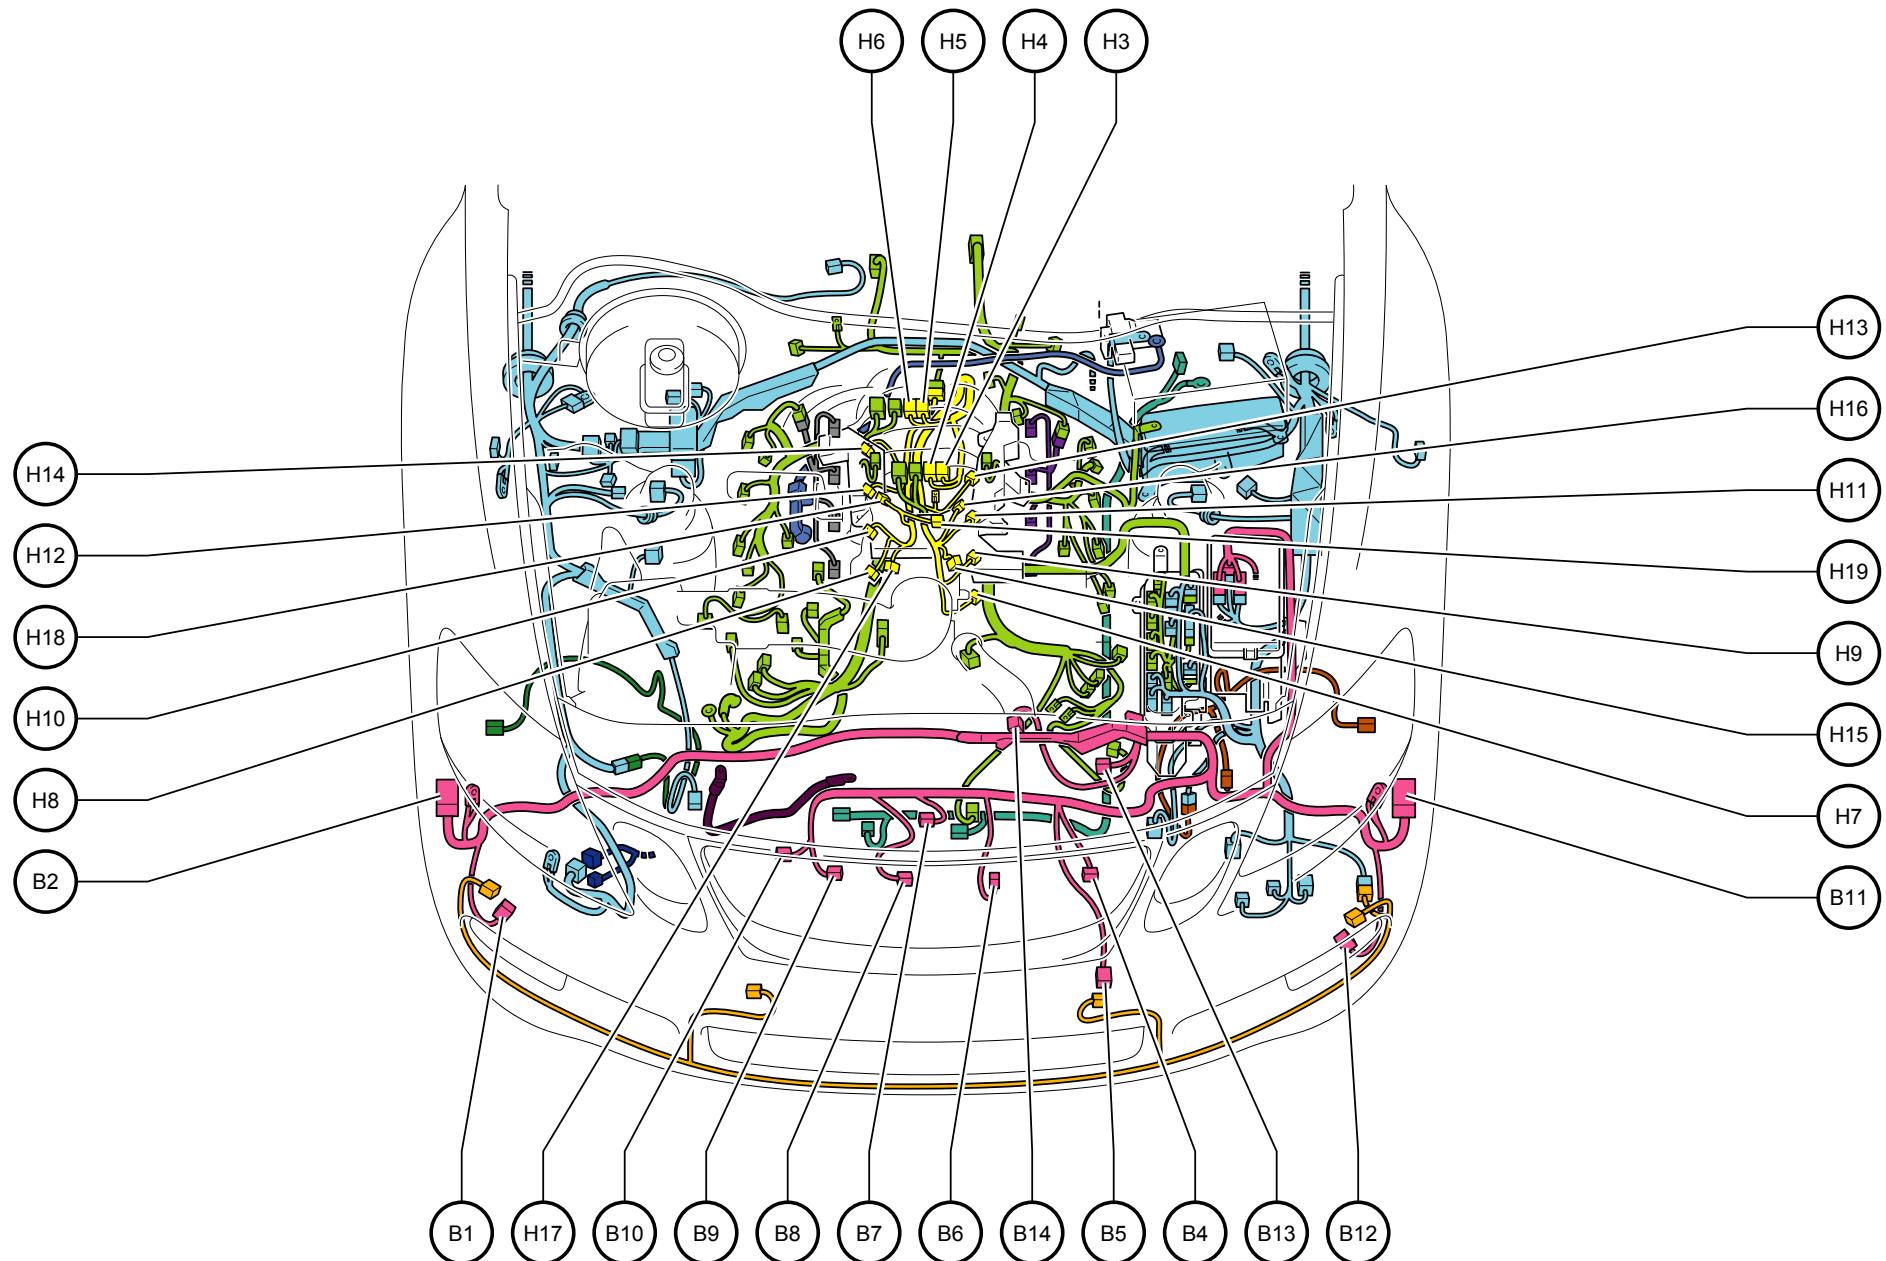


- B 1 Fog Lamp (Front RH)
- B 2 Headlamp Assembly (RH)
- B 4 A/C Pressure Sensor
- B 5 Ambient Temp. Sensor
- B 6 Horn (Low)
- B 7 Engine Hood Courtesy SW
- B 8 Millimeter Wave Radar Sensor
- B 9 Horn (High)
- B 10 Smog Ventilation Sensor
- B 11 Headlamp Assembly (LH)
- B 12 Fog Lamp (Front LH)
- B 13 Cooling Fan ECU
- B 14 Cooling Fan ECU

- H 3 Injector Driver (No.1)
- H 4 Injector Driver (No.1)
- H 5 Injector Driver (No.2)
- H 6 Injector Driver (No.2)
- H 7 Fuel Injector (for Direct Injection No.1)
- H 8 Fuel Injector (for Direct Injection No.2)
- H 9 Fuel Injector (for Direct Injection No.3)
- H 10 Fuel Injector (for Direct Injection No.4)
- H 11 Fuel Injector (for Direct Injection No.5)
- H 12 Fuel Injector (for Direct Injection No.6)
- H 13 Fuel Injector (for Direct Injection No.7)
- H 14 Fuel Injector (for Direct Injection No.8)
- H 15 Knock Control Sensor (Bank 1 Sensor 1)
- H 16 Knock Control Sensor (Bank 1 Sensor 2)
- H 17 Knock Control Sensor (Bank 2 Sensor 1)
- H 18 Knock Control Sensor (Bank 2 Sensor 2)
- H 19 Fuel Pressure Sensor










 

 



Position of Parts in Engine Compartment <RHD 1UR-FSE>

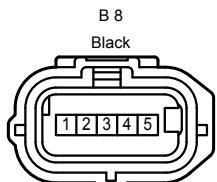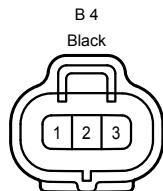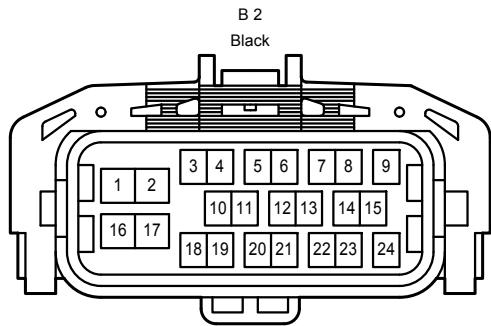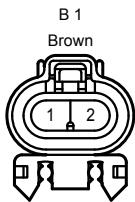

(Before Sep. 2008 Production)

 

(From Sep. 2008 Production)

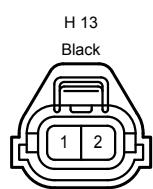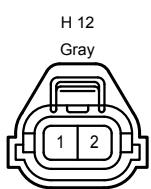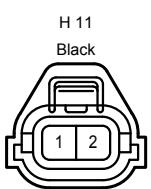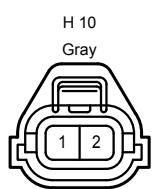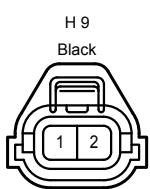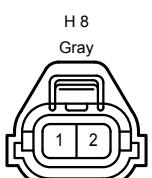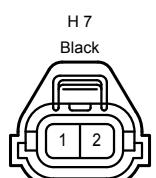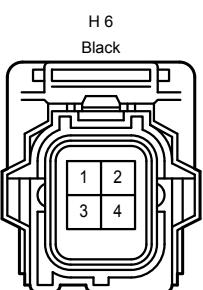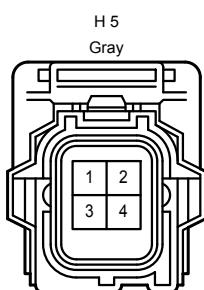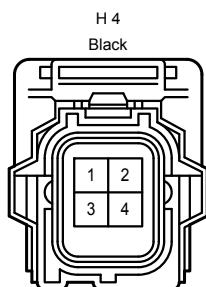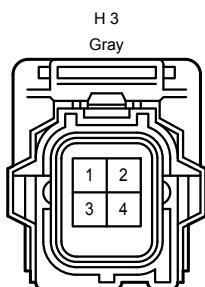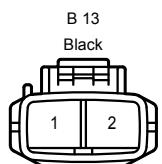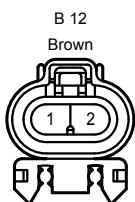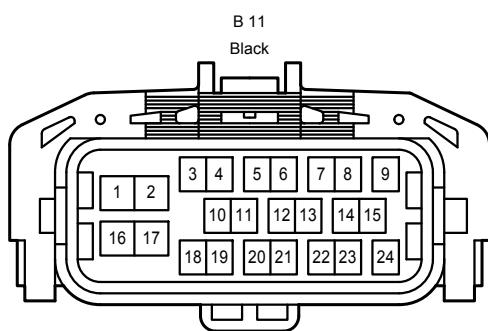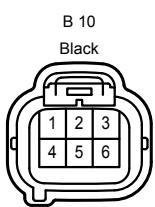

Position of Parts in Engine Compartment <RHD 1UR-FSE>

