

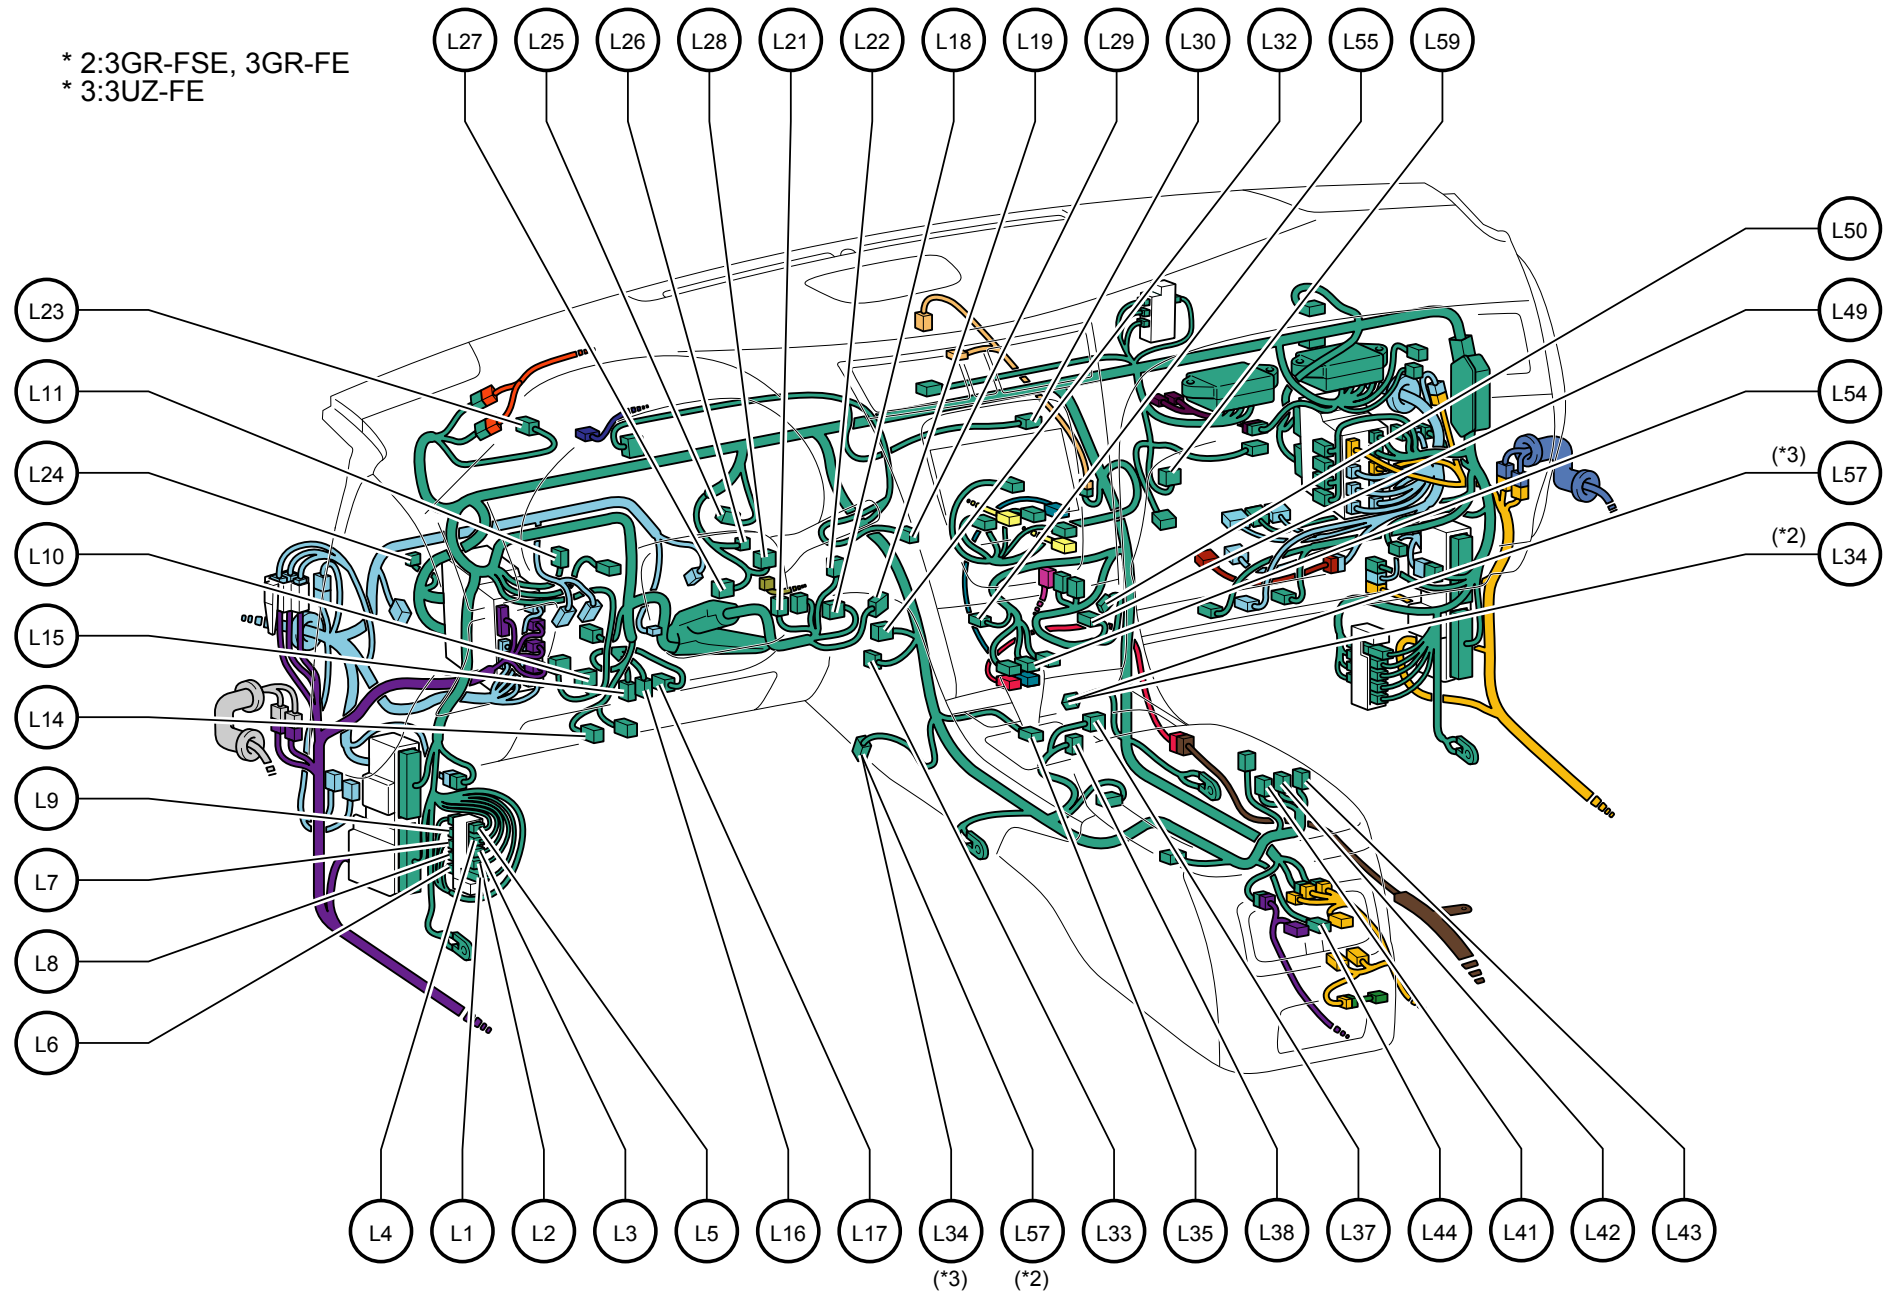
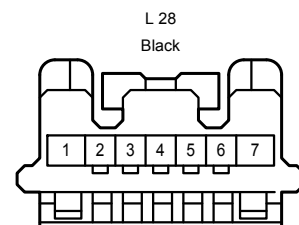
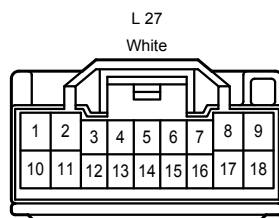
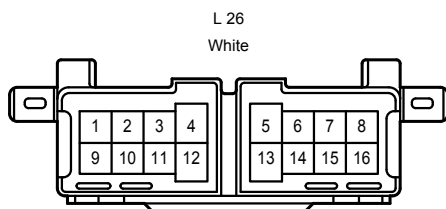
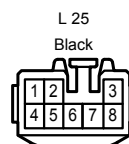
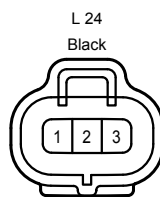
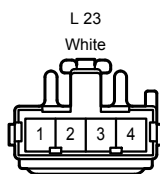
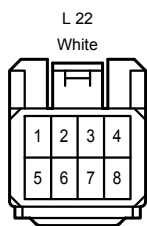
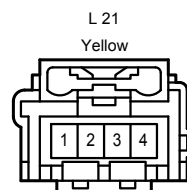
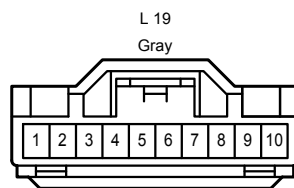
 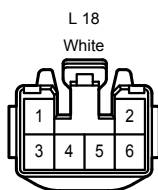
 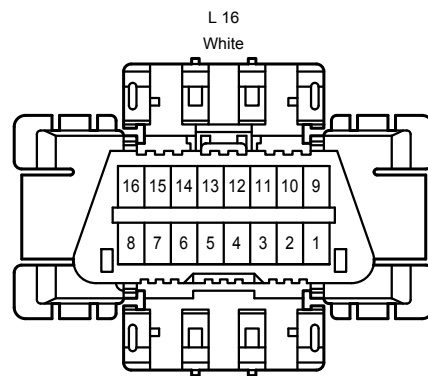


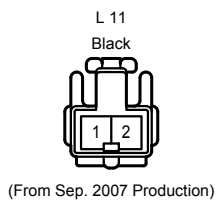
 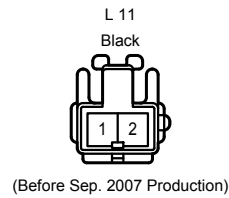
 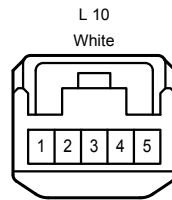
 
 




- L 1 Junction Connector
- L 2 Junction Connector
- L 3 Junction Connector
- L 4 Junction Connector
- L 5 Junction Connector
- L 6 Junction Connector
- L 7 Junction Connector
- L 8 Junction Connector
- L 9 Junction Connector
- L 10 Register Illumination (Driver's Side)
- L 11 VSC Warning Buzzer
- L 14 Airbag Squib (Driver's Side Knee Airbag)
- L 15 Tire Pressure Warning Reset SW
- L 16 DLC3
- L 17 Foot Lamp (LH)
- L 18 Tilt Motor
- L 19 Steering Sensor
- L 21 Airbag Squib (Steering Wheel Pad)
- L 22 Windshield Wiper SW Assembly
- L 23 Tweeter (Front LH)
- L 24 Acceleration Sensor (Front)
- L 25 Turn Signal Flasher
- L 26 Steering Actuator
- L 27 Tilt and Telescopic ECU
- L 28 Steering Lock ECU
- L 29 Power SW
- L 30 Register Illumination (Center)
- L 32 Clearance Warning Buzzer
- L 33 A/C Room Temp. Sensor
- L 34 Heated Oxygen Sensor (Bank 1 Sensor 2)
- L 35 Yaw Rate Sensor
- L 37 A/T Shift Lever Illumination
- L 38 Cigarette Lighter
- L 41 Absorber Control SW
- L 42 ECT Pattern Select SW
- L 42 ECT Pattern Select SW
- L 43 Traction Control SW
- L 44 Airbag Sensor Assembly Center
- L 49 Foot Lamp (RH)
- L 50 Tire Pressure Warning Select SW
- L 54 Radio Receiver Assembly
- L 55 Antenna Amplifier
- L 57 Heated Oxygen Sensor (Bank 2 Sensor 2)
- L 59 Airbag Cut Off SW

Position of Parts in Instrument Panel <LHD From Jul. 2006 Production>



Position of Parts in Instrument Panel <LHD From Jul. 2006 Production>

