


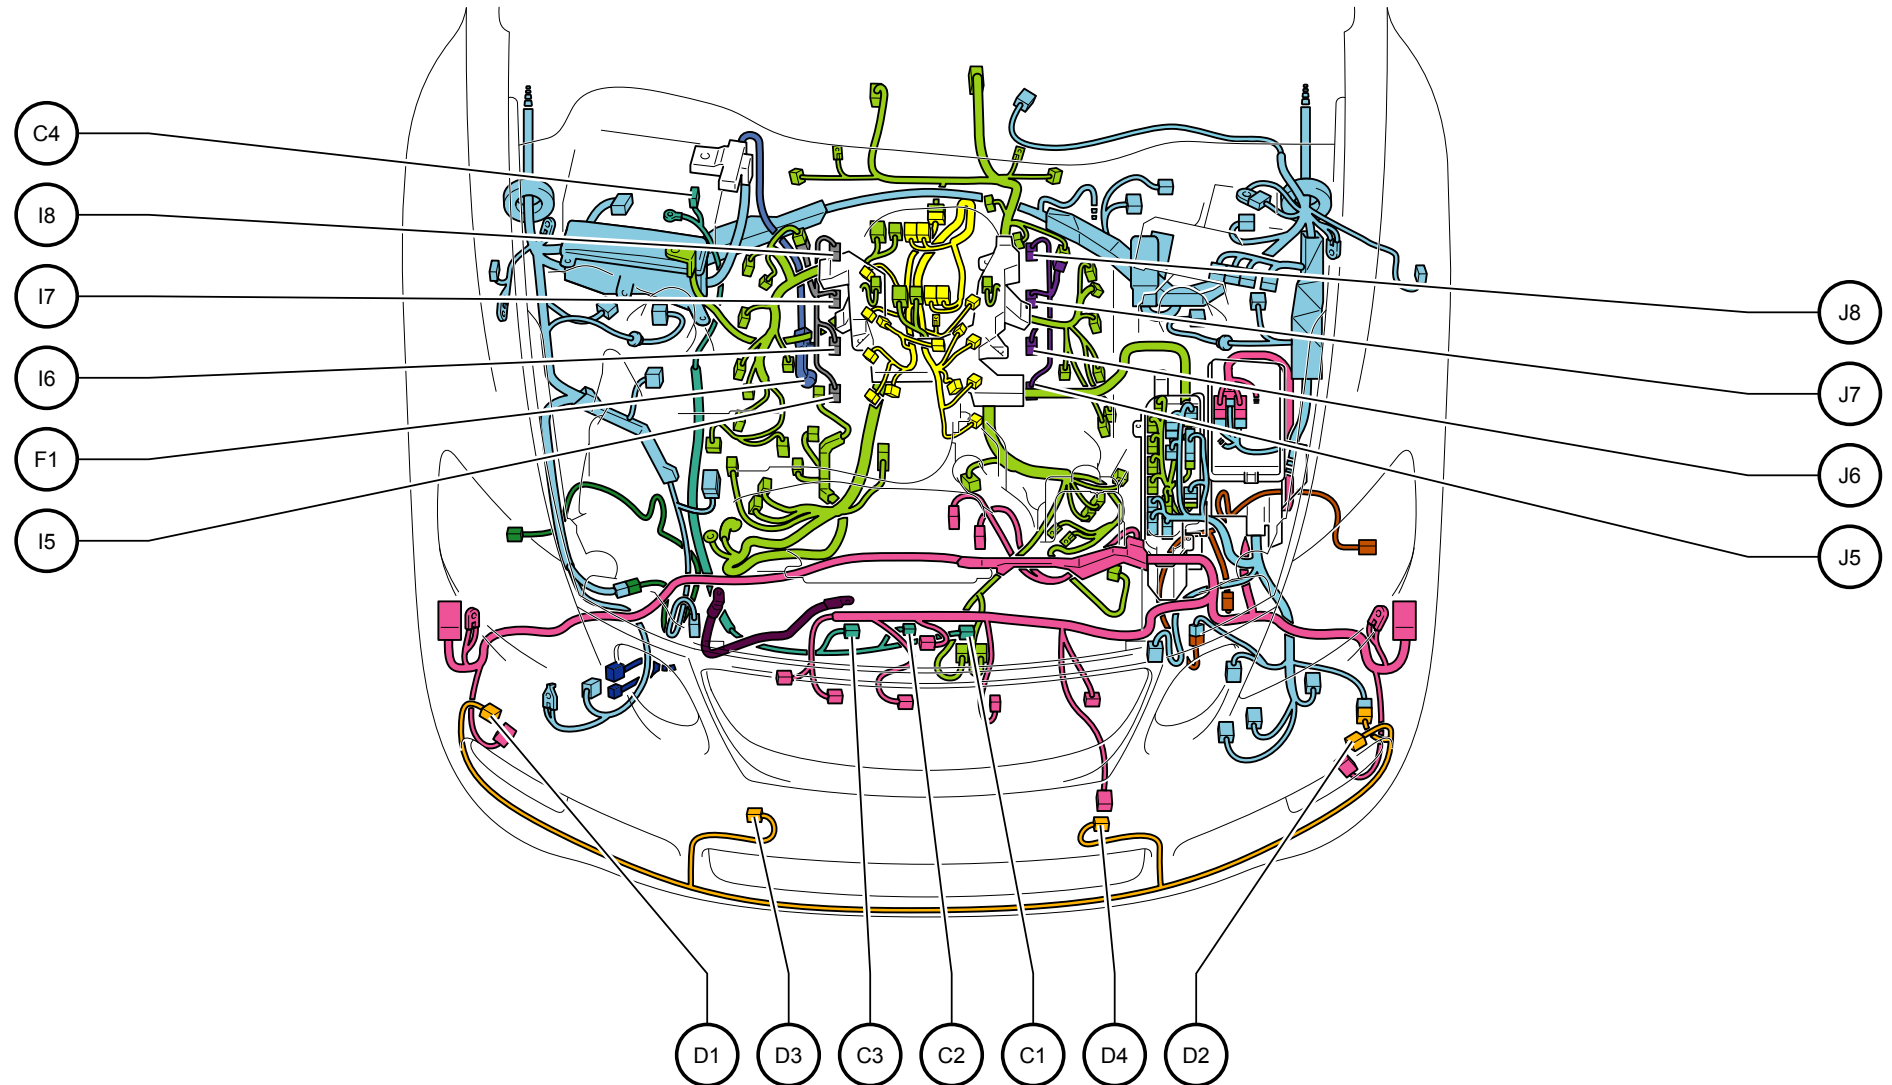

- C 1 Power Steering Motor
- C 2 Power Steering Motor
- C 3 Power Steering Torque Sensor
- C 4 Power Steering ECU

- D 1 Ultrasonic Sensor (Front Corner RH)
- D 2 Ultrasonic Sensor (Front Corner LH)
- D 3 Ultrasonic Sensor (Front Center RH)
- D 4 Ultrasonic Sensor (Front Center LH)


- F 1 Starter

- I 5 Fuel Injector (for Port Injection No.2)
- I 6 Fuel Injector (for Port Injection No.4)
- I 7 Fuel Injector (for Port Injection No.6)
- I 8 Fuel Injector (for Port Injection No.8)

- J 5 Fuel Injector (for Port Injection No.1)
- J 6 Fuel Injector (for Port Injection No.3)
- J 7 Fuel Injector (for Port Injection No.5)
- J 8 Fuel Injector (for Port Injection No.7)


Position of Parts in Engine Compartment <LHD 1UR-FE>

C 1
Gray

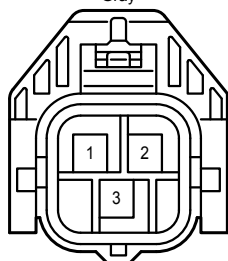


(Before Sep. 2007 Production)

C 1
Gray

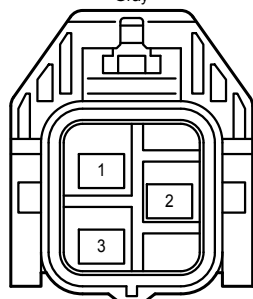


(From Sep. 2007 Production)


C 2
Gray

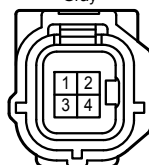


C 3
Gray

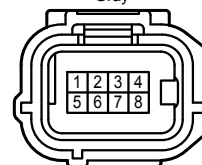


C 4
Black

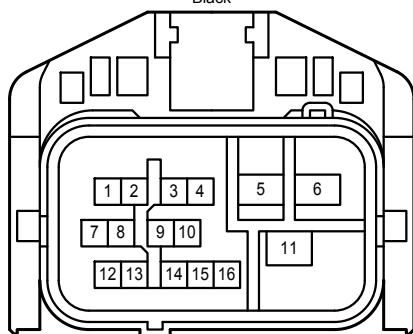


D 1
Black

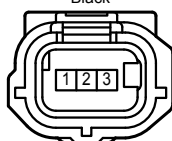


D 2
Black

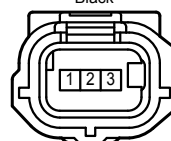


D 3
Black

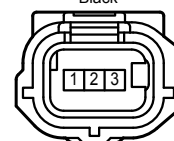

D 4
Black

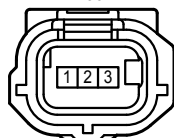


F 1

 

(Before Sep. 2008 Production 1UR-FSE)

 F 1



(From Sep. 2008 Production 1UR-FSE, 1UR-FE)

I 5
Black



I 6
Black



I 7
Black



I 8
Black



J 5
Black



J 6
Black



J 7
Black



J 8
Black

