



F 1 Starter

H 1 Knock Control Sensor (Bank 1)  
H 2 Knock Control Sensor (Bank 2)

I 3 Fuel Injector (No.3)  
I 4 Fuel Injector (No.5)

J 2 Fuel Injector (No.2)  
J 3 Fuel Injector (No.4)  
J 4 Fuel Injector (No.6)

f 2 Combustion Heater Glow Plug (No.1)  
f 3 Combustion Heater Glow Plug (No.2)

m 1 Speed Sensor (Front LH)

n 1 Speed Sensor (Front RH)

Position of Parts in Engine Compartment <LHD 3GR-FE From Jul. 2006 Production>

---

