



F 1 Starter
F 2 Starter
F 3 Knock Control Sensor (Bank 1)
F 4 Knock Control Sensor (Bank 2)

G 1 Alternator

m 1 Speed Sensor (Front LH)

n 1 Speed Sensor (Front RH)

Position of Parts in Engine Compartment <RHD 3UZ-FE Before Jul. 2006 Production>

