

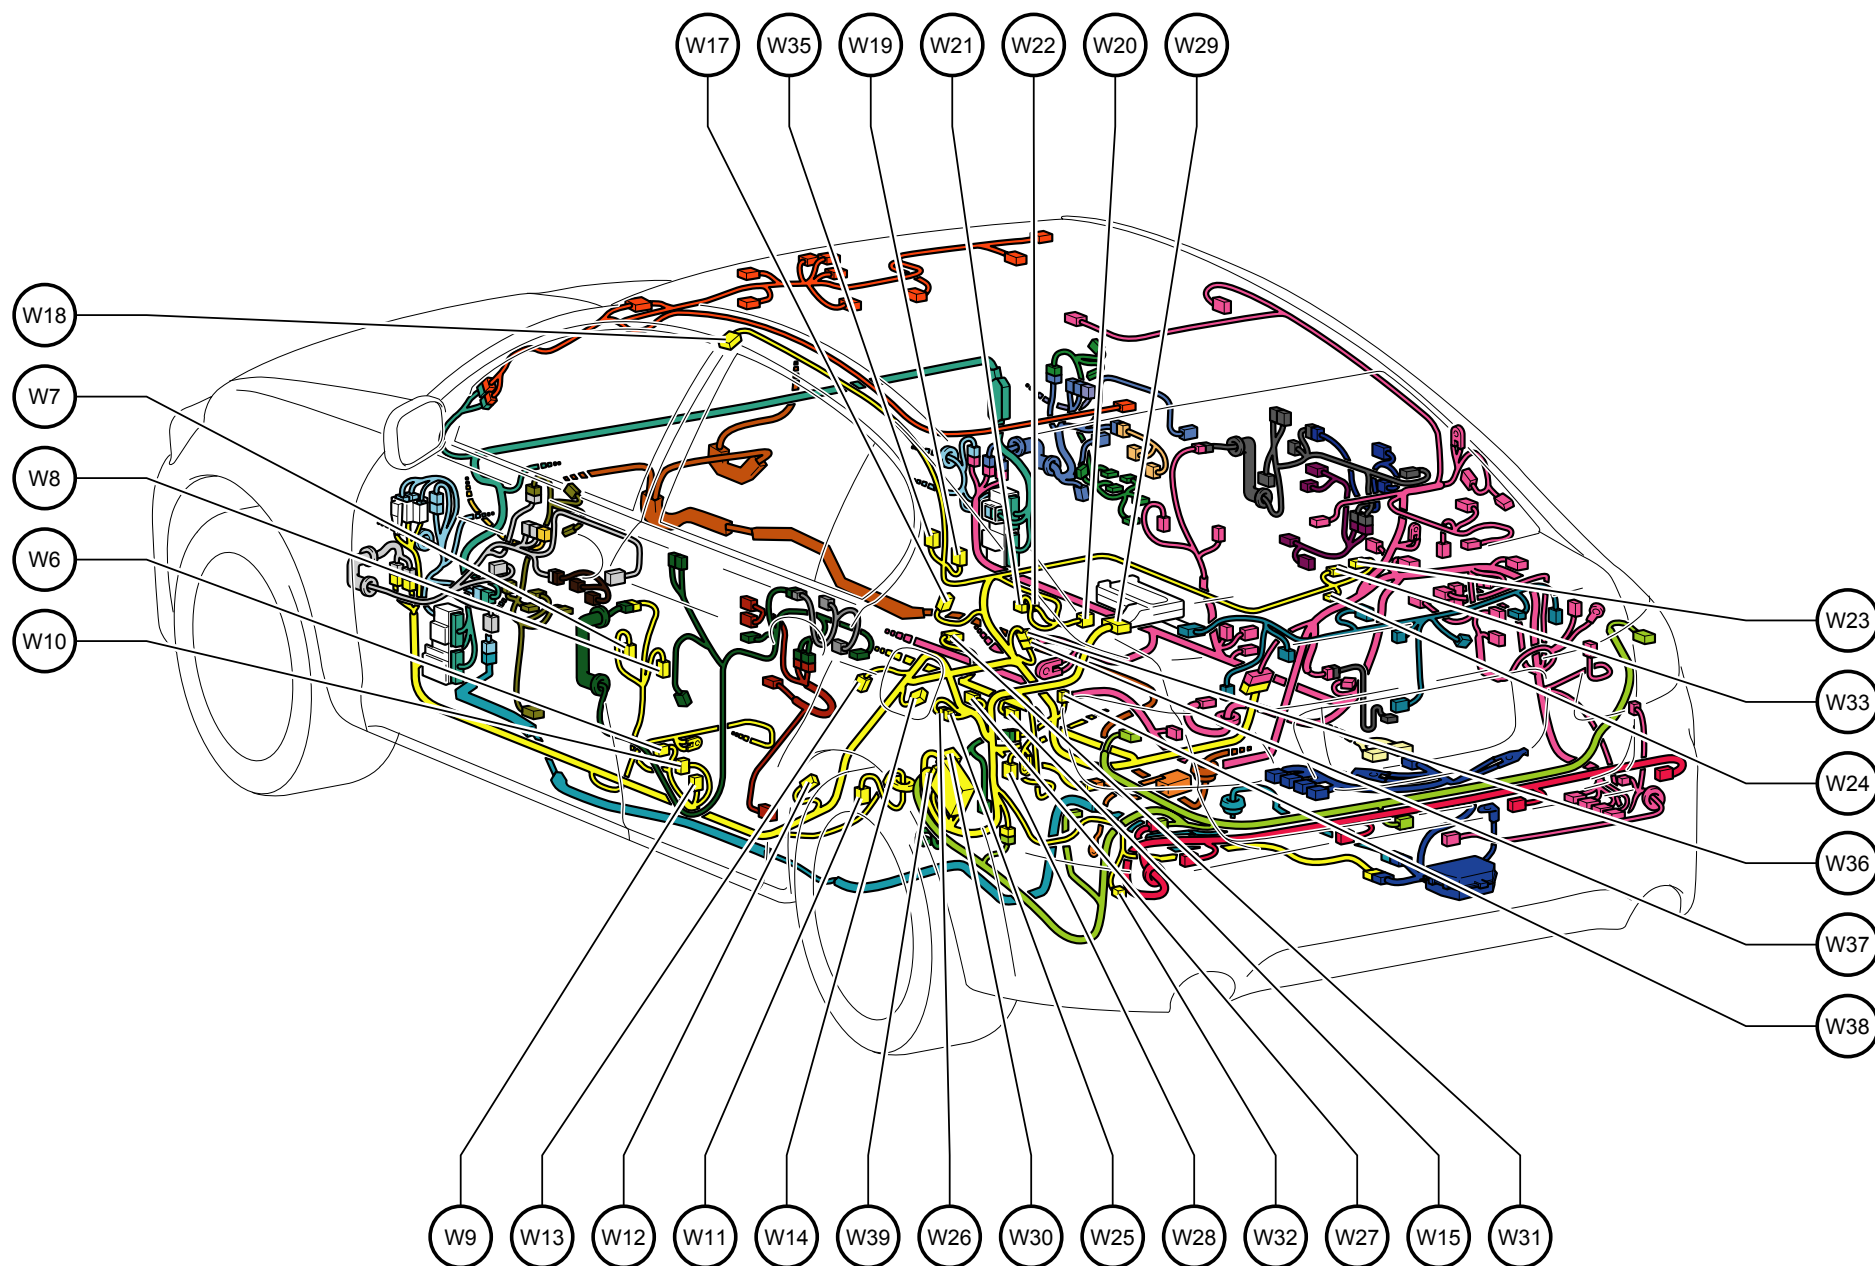
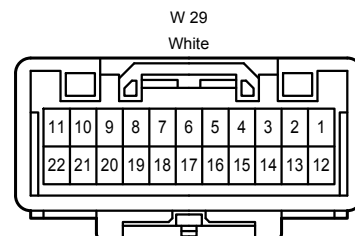
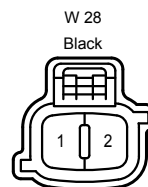
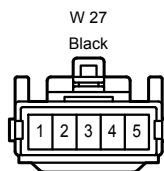
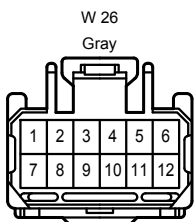
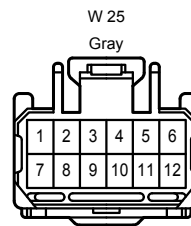
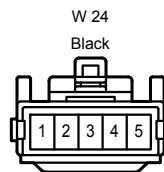
 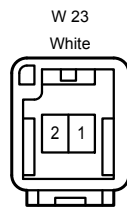
 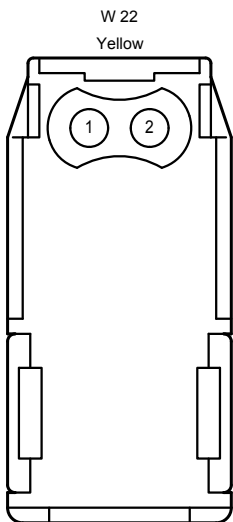


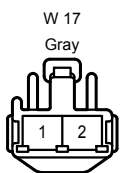
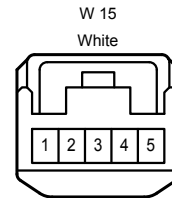
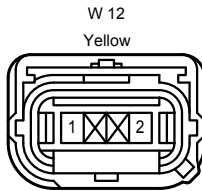
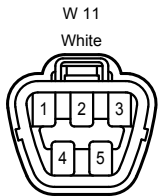
 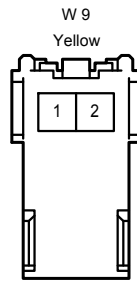


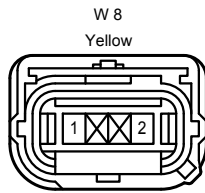


W 6	Front Seat Outer Belt Motor (LH)
W 7	Door Courtesy SW (Front LH)
W 8	Side Airbag Sensor (LH)
W 9	Pretensioner (Front LH)
W 10	Front Seat Outer Belt (LH)
W 11	Fuel Suction Pump and Gage Assembly
W 12	Airbag Sensor (Rear LH)
W 13	Door Courtesy SW (Rear LH)
W 14	Side Airbag Squib (Rear LH)
W 15	Rear Seat Inner Belt (LH)
W 17	Noise Filter (Center Stop Lamp)
W 18	Curtain Shield Airbag Squib (LH)
W 19	Rear Window Defogger
W 20	Speaker (Rear LH)
W 21	Rear Seat Outer Belt (LH)
W 22	Pretensioner (Rear LH)
W 23	Center Stop Lamp
W 24	Rear Sunshade Relay
W 25	Junction Connector
W 26	Junction Connector
W 27	Absorber Control Actuator (Rear LH)
W 28	Fuel Lid Opener Motor
W 29	Wiring Harness Spool
W 30	Seat Belt Control ECU
W 30	Seat Belt Control ECU
W 31	Electrical Key Oscillator (Rear Seat)
W 31	Electrical Key Oscillator (Rear Seat)
W 32	Electrical Key Oscillator (Inside Luggage Room)
W 32	Electrical Key Oscillator (Inside Luggage Room)
W 33	Sun Beam Sensor
W 35	Junction Connector
W 36	Junction Connector
W 37	Junction Connector
W 38	Junction Connector
W 39	Seat Belt Control ECU


Position of Parts in Body <LHD>




Position of Parts in Body <LHD>

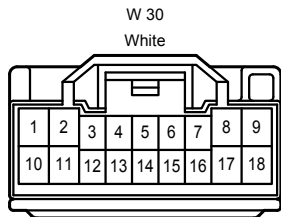


(Before Sep. 2007 Production)

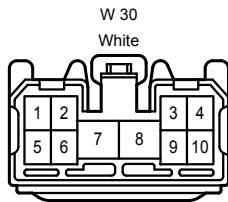


(From Sep. 2007 Production)

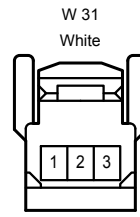


(Before Sep. 2007 Production)

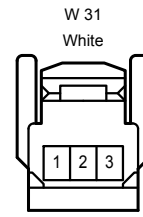

(From Sep. 2007 Production)

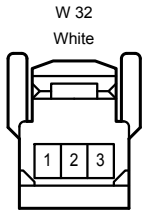

(Before Sep. 2007 Production)

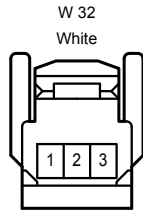

(From Sep. 2007 Production)

