

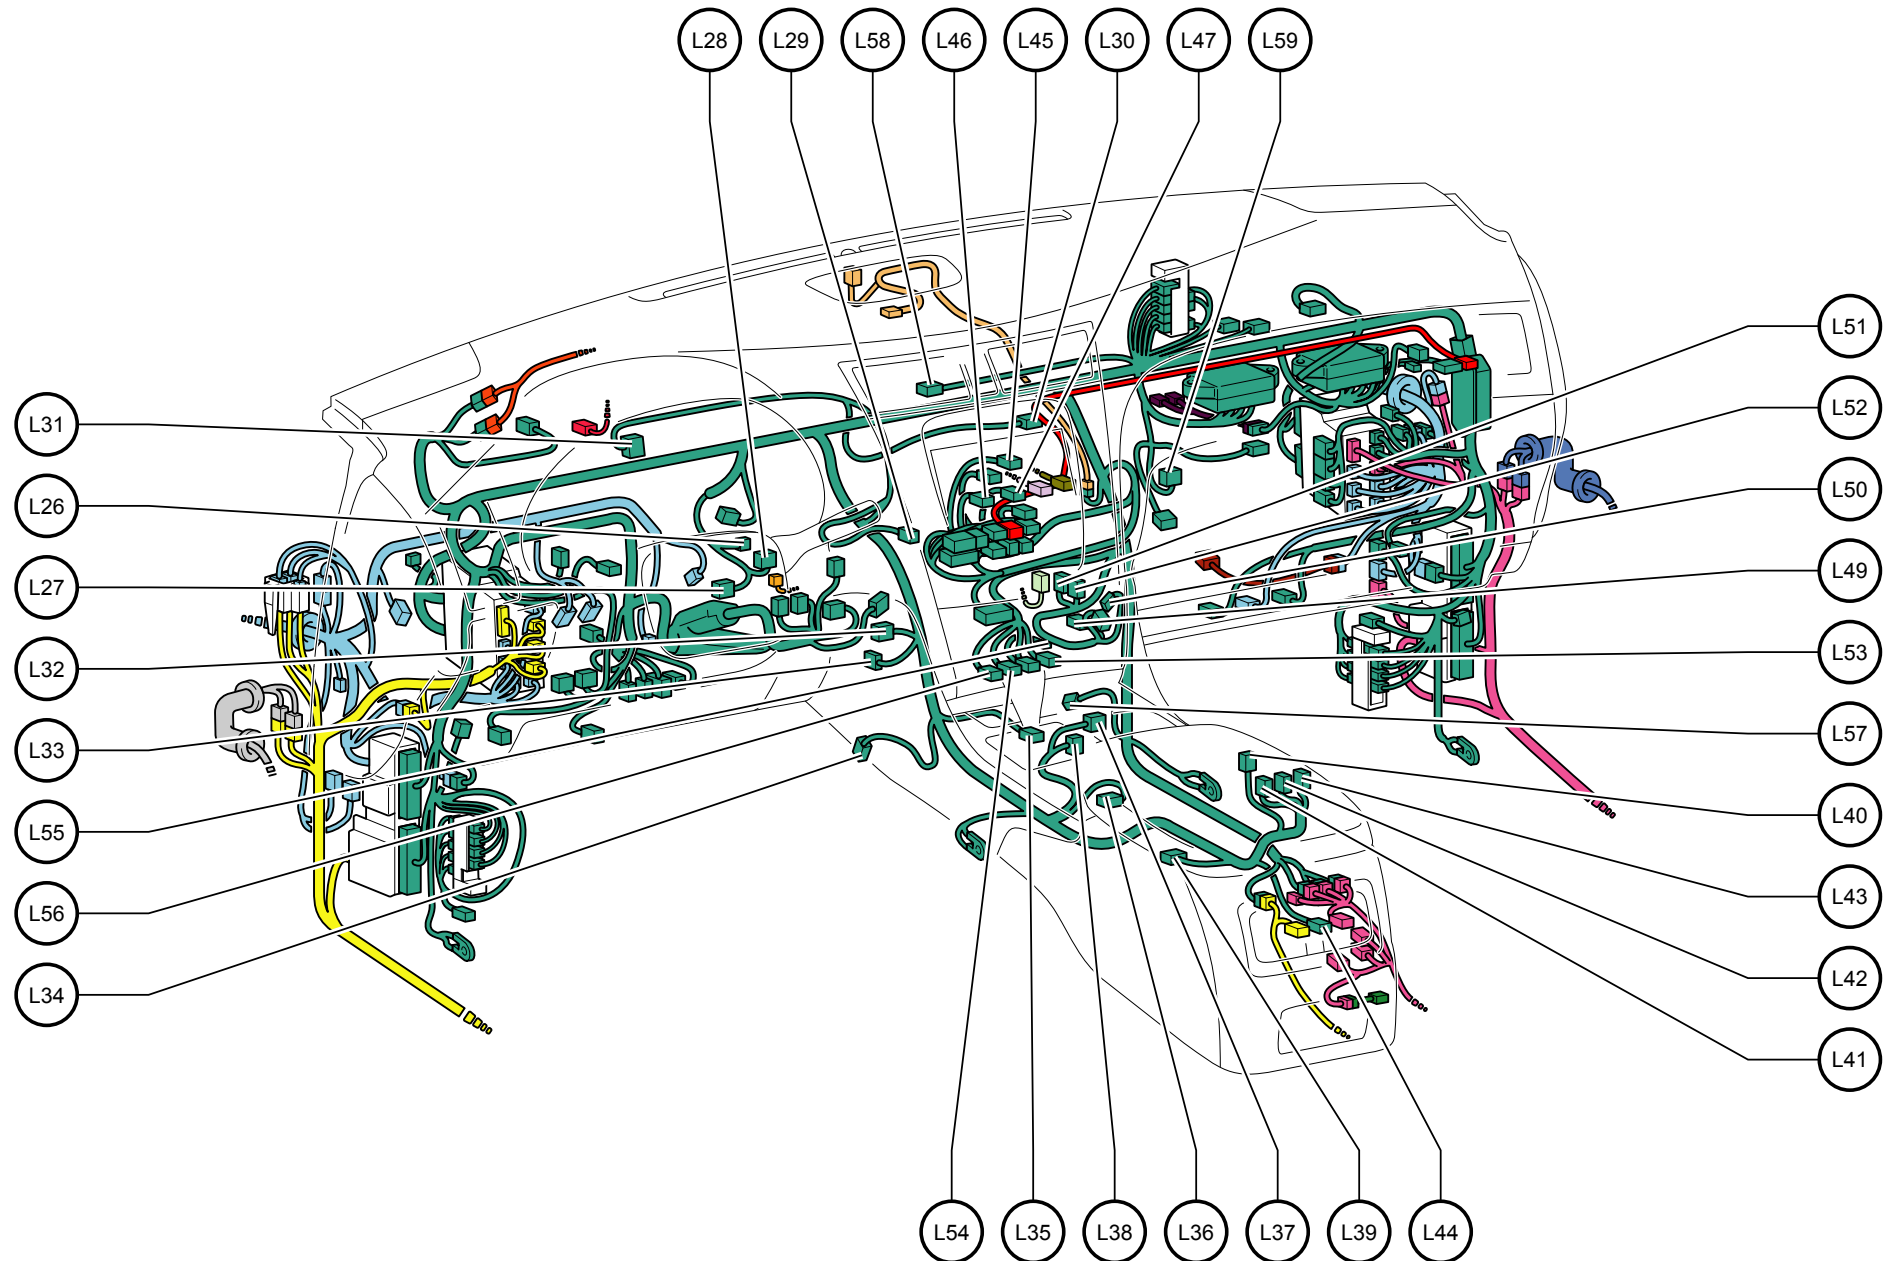
 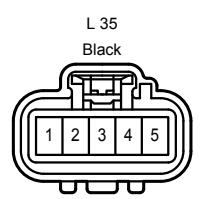
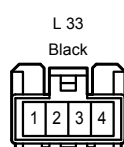

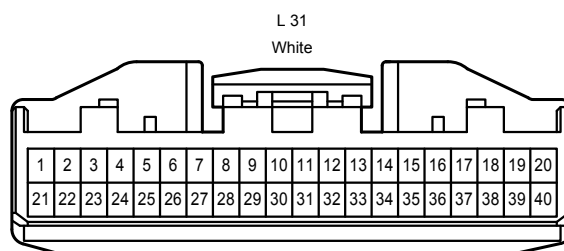
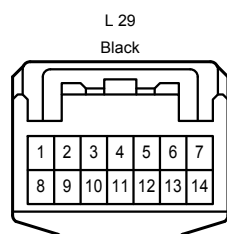
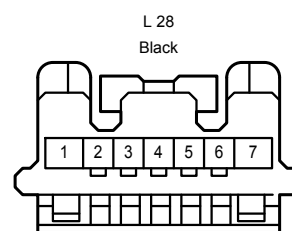


Position of Parts in Instrument Panel <LHD>

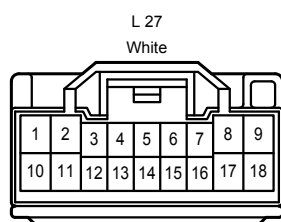


- L 26 Steering Actuator
- L 27 Tilt and Telescopic ECU
- L 28 Steering Lock ECU
- L 29 Power SW
- L 30 Register Illumination (Center)
- L 31 Combination Meter
- L 32 Clearance Warning Buzzer
- L 33 A/C Room Temp. Sensor
- L 34 Heated Oxygen Sensor (Bank 2 Sensor 2)
- L 35 Yaw Rate Sensor
- L 35 Yaw Rate Sensor
- L 36 Transmission Control SW
- L 37 A/T Shift Lever Illumination
- L 38 Cigarette Lighter
- L 39 Shift Lock Control ECU
- L 40 Seat Heater SW
- L 40 Seat Heater SW
- L 41 Absorber Control SW
- L 42 Hybrid Mode Select SW
- L 43 Traction Control SW
- L 44 Airbag Sensor Assembly Center
- L 45 Tire Pressure Warning ECU
- L 46 Multi-Display
- L 47 Multi-Display
- L 49 Foot Lamp (RH)
- L 50 Tire Pressure Warning Select SW
- L 51 A/C Amplifier
- L 52 A/C Amplifier
- L 53 Radio Receiver Assembly
- L 54 Radio Receiver Assembly
- L 55 Antenna Amplifier
- L 56 Radio Receiver Assembly
- L 56 Radio Receiver Assembly
- L 57 Heated Oxygen Sensor (Bank 1 Sensor 2)
- L 58 ID Code Box
- L 59 Airbag Cut Off SW





Position of Parts in Instrument Panel <LHD>

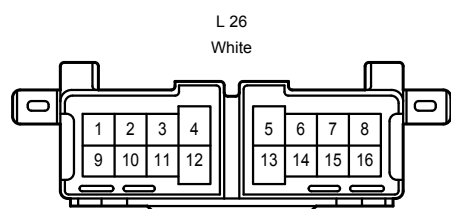


(Before Sep. 2009 Production)

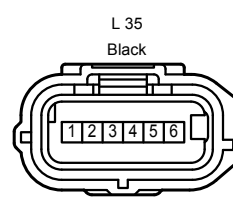







(From Sep. 2009 Production)

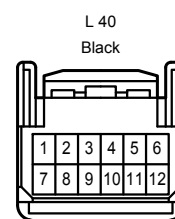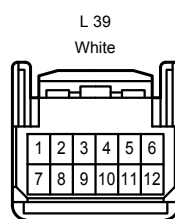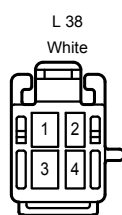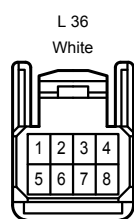








(Before Sep. 2007 Production)

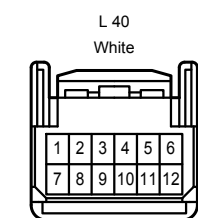


(From Sep. 2007 Production)

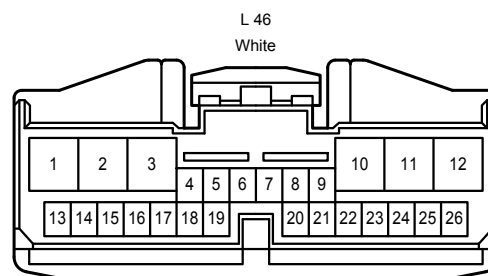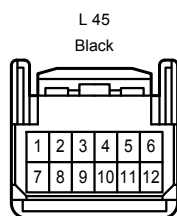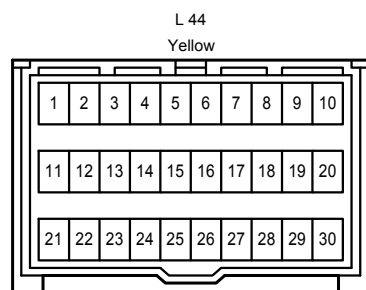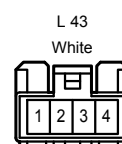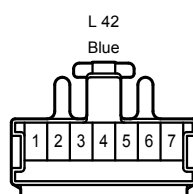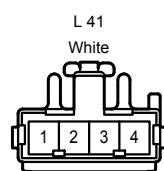

 Position of Parts in Instrument Panel <LHD>

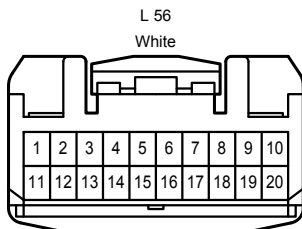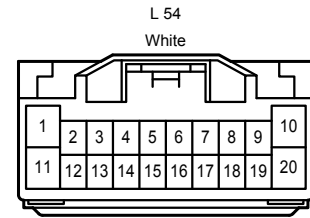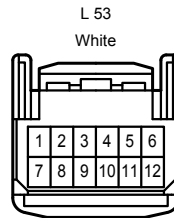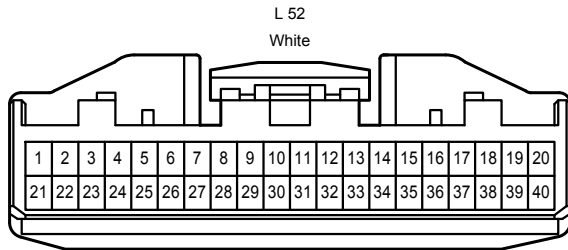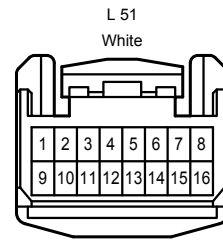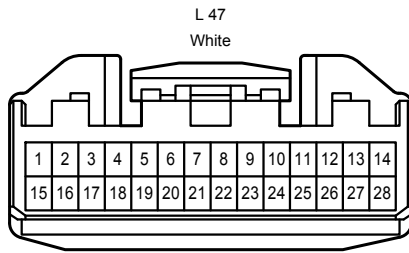

(Before Sep. 2007 Production)

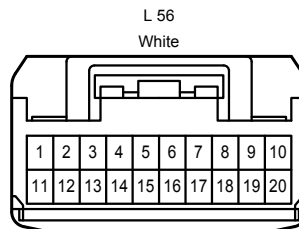

(From Sep. 2007 Production)

