




[Engine Compartment]
(LHD)

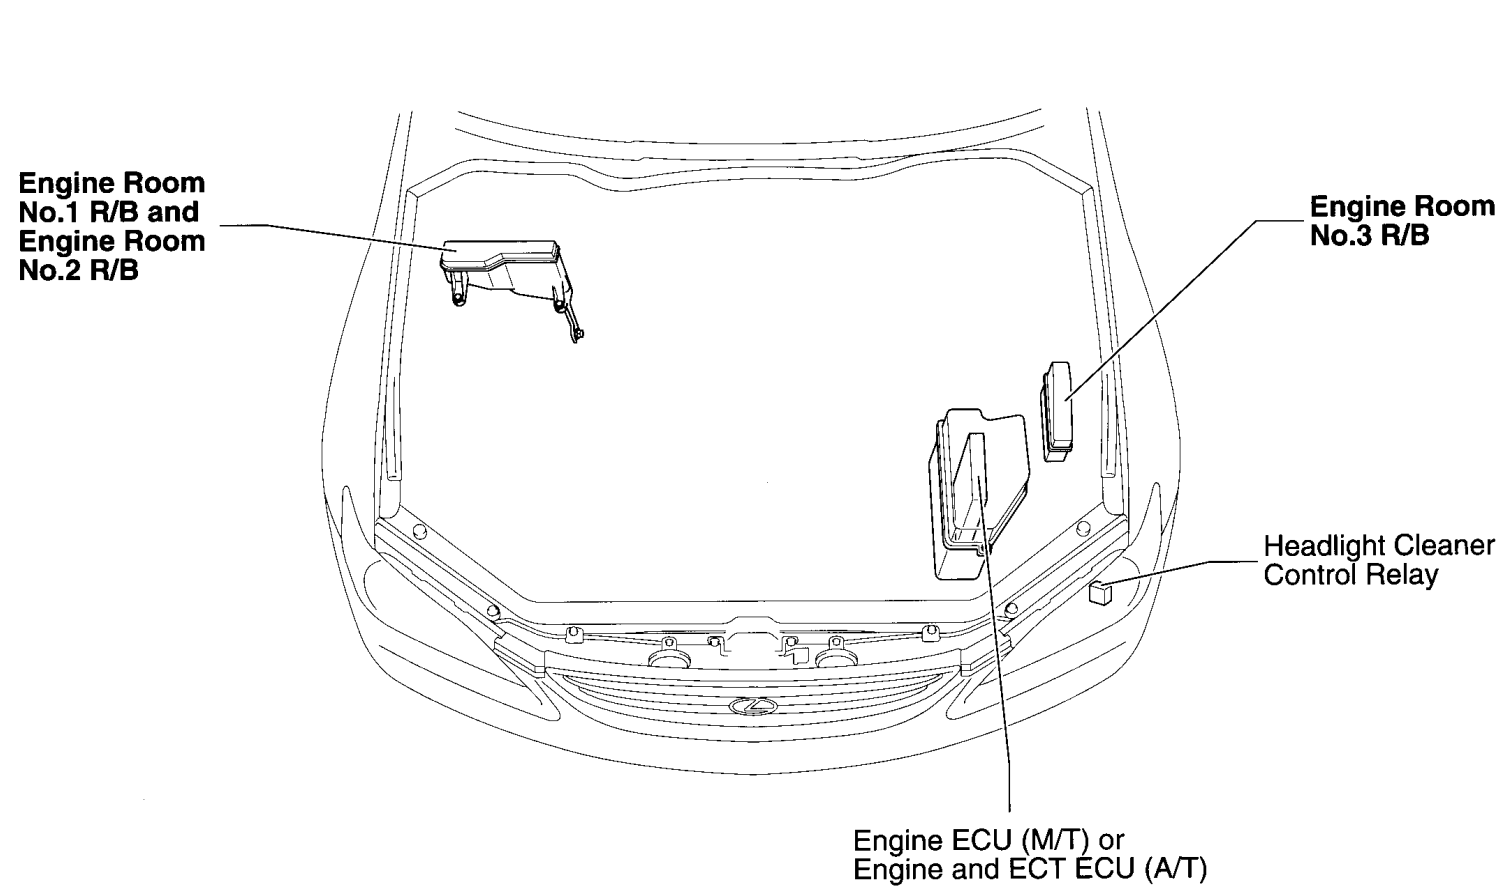


(RHD)

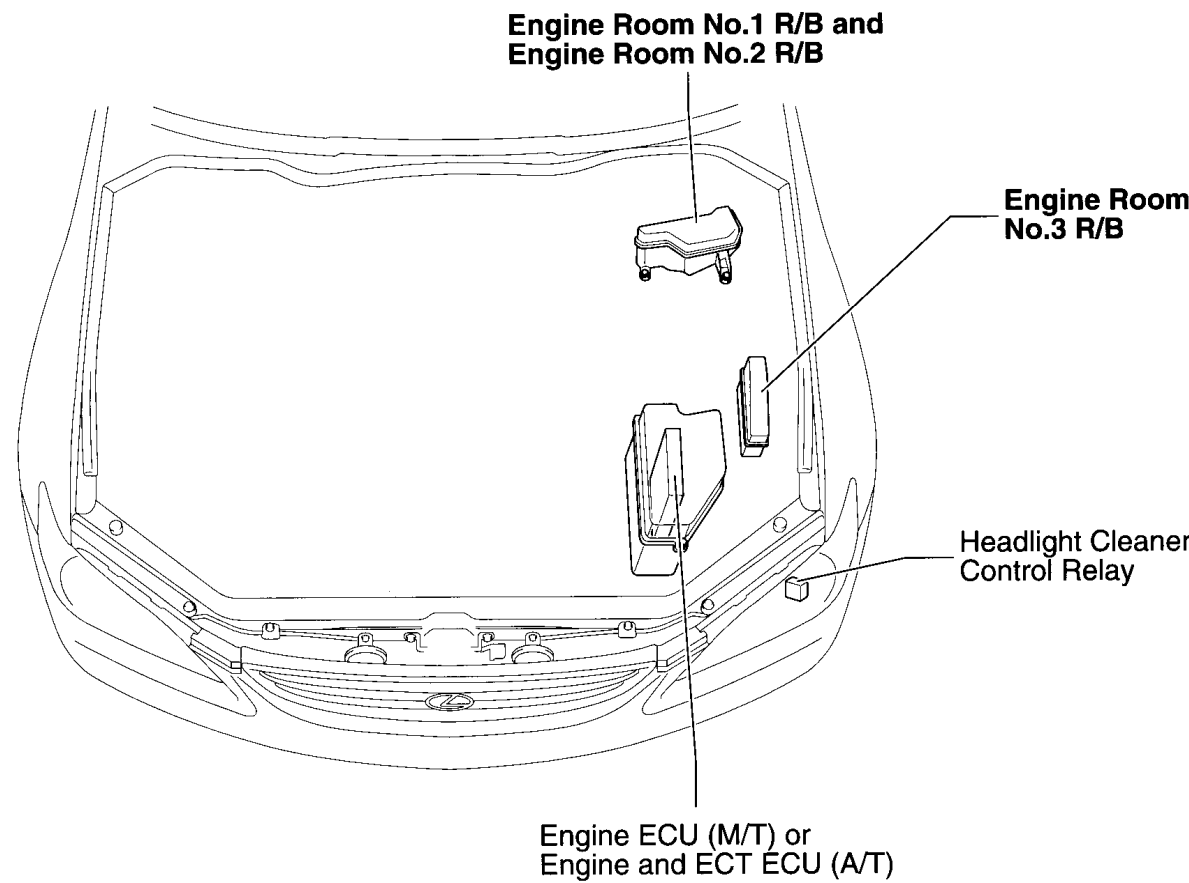

[Instrument Panel]
(LHD)

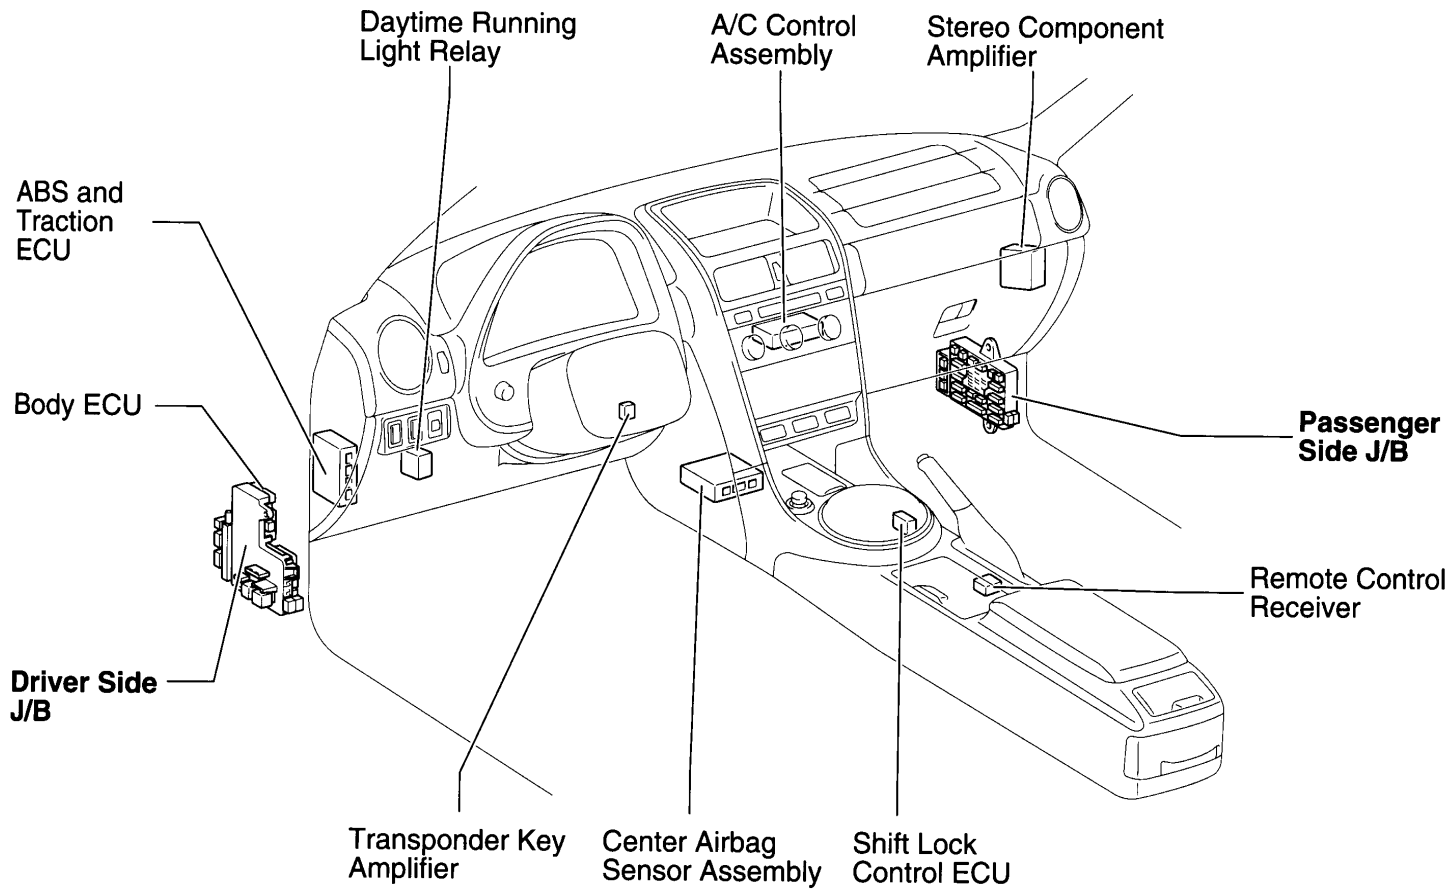


(RHD)

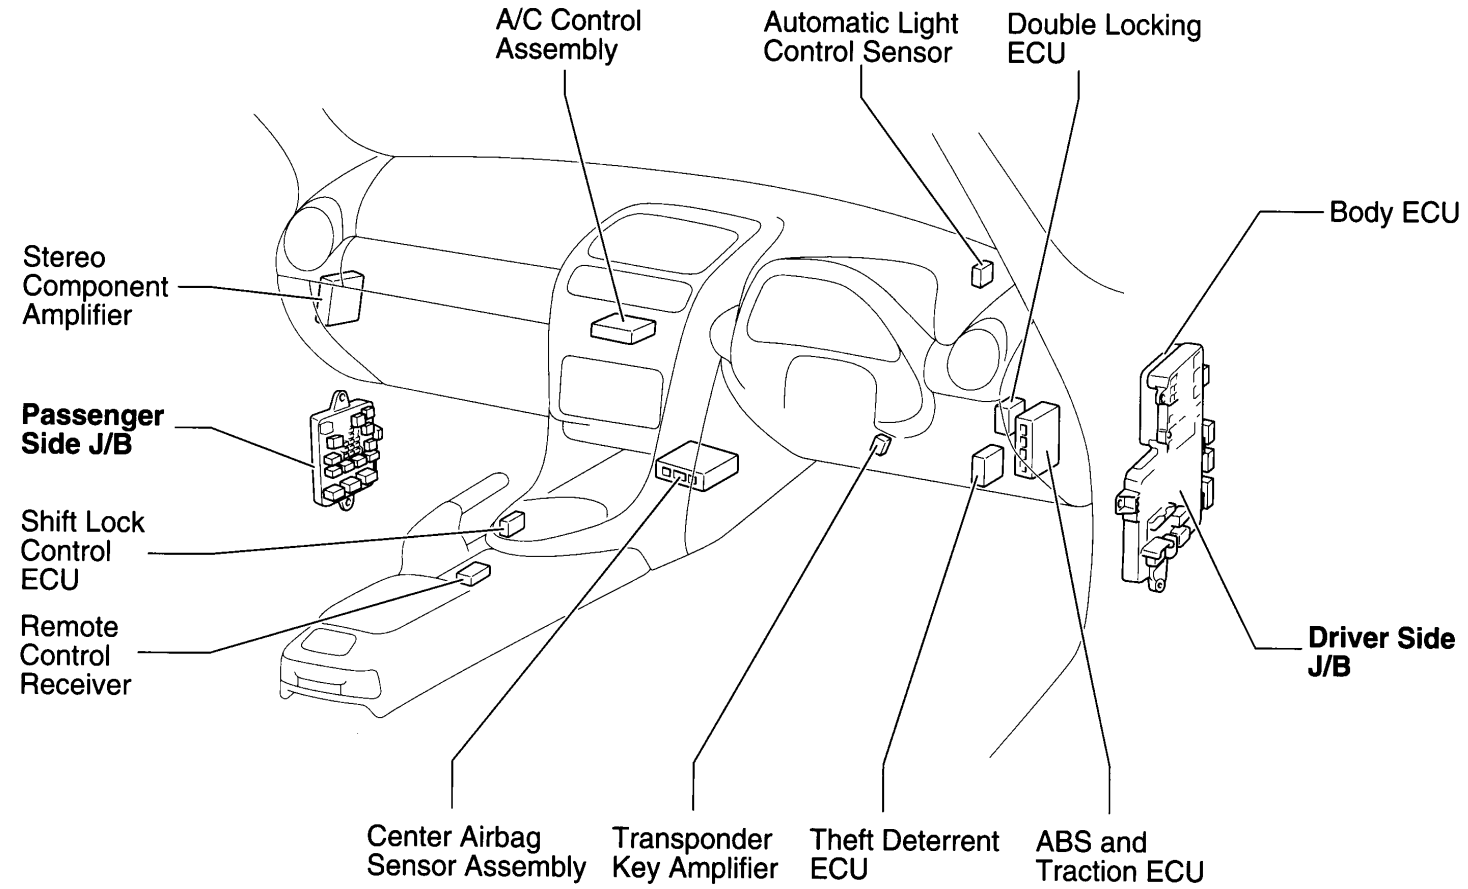

F RELAY LOCATIONS


[Body]

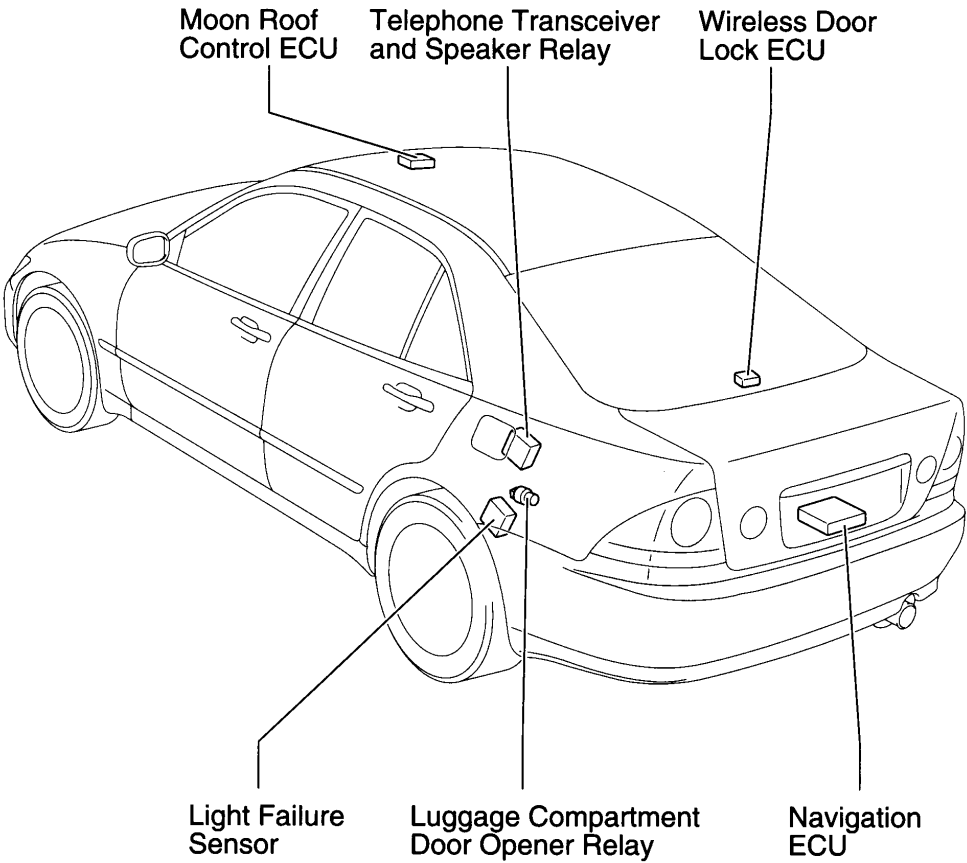


F RELAY LOCATIONS

① : Engine Room No.1 R/B	Engine Compartment Right (See Page 76)
② : Engine Room No.2 R/B	

[LHD]

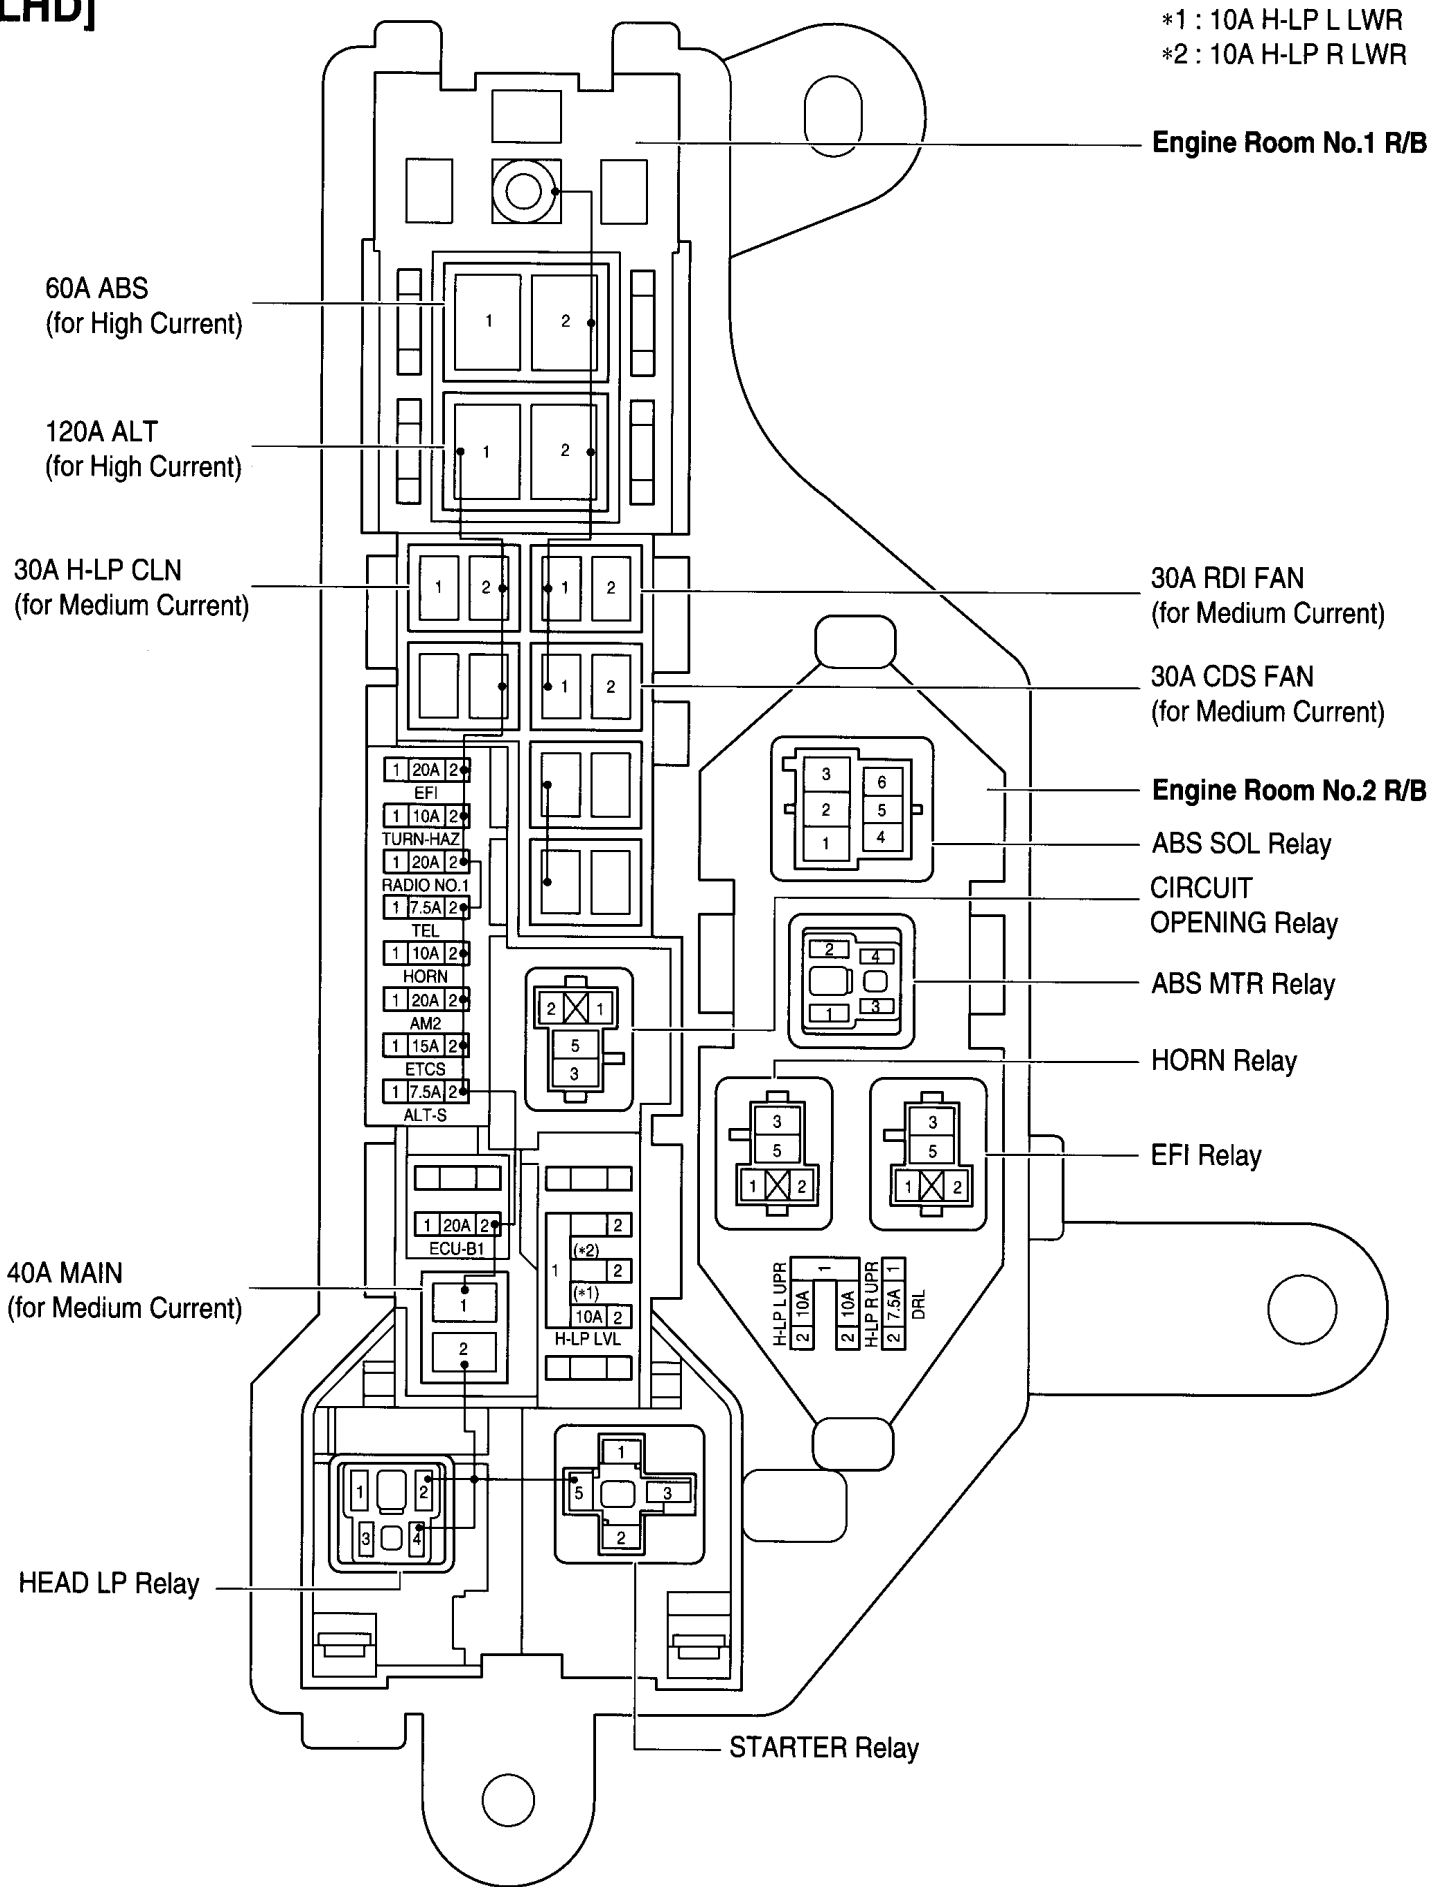


F RELAY LOCATIONS

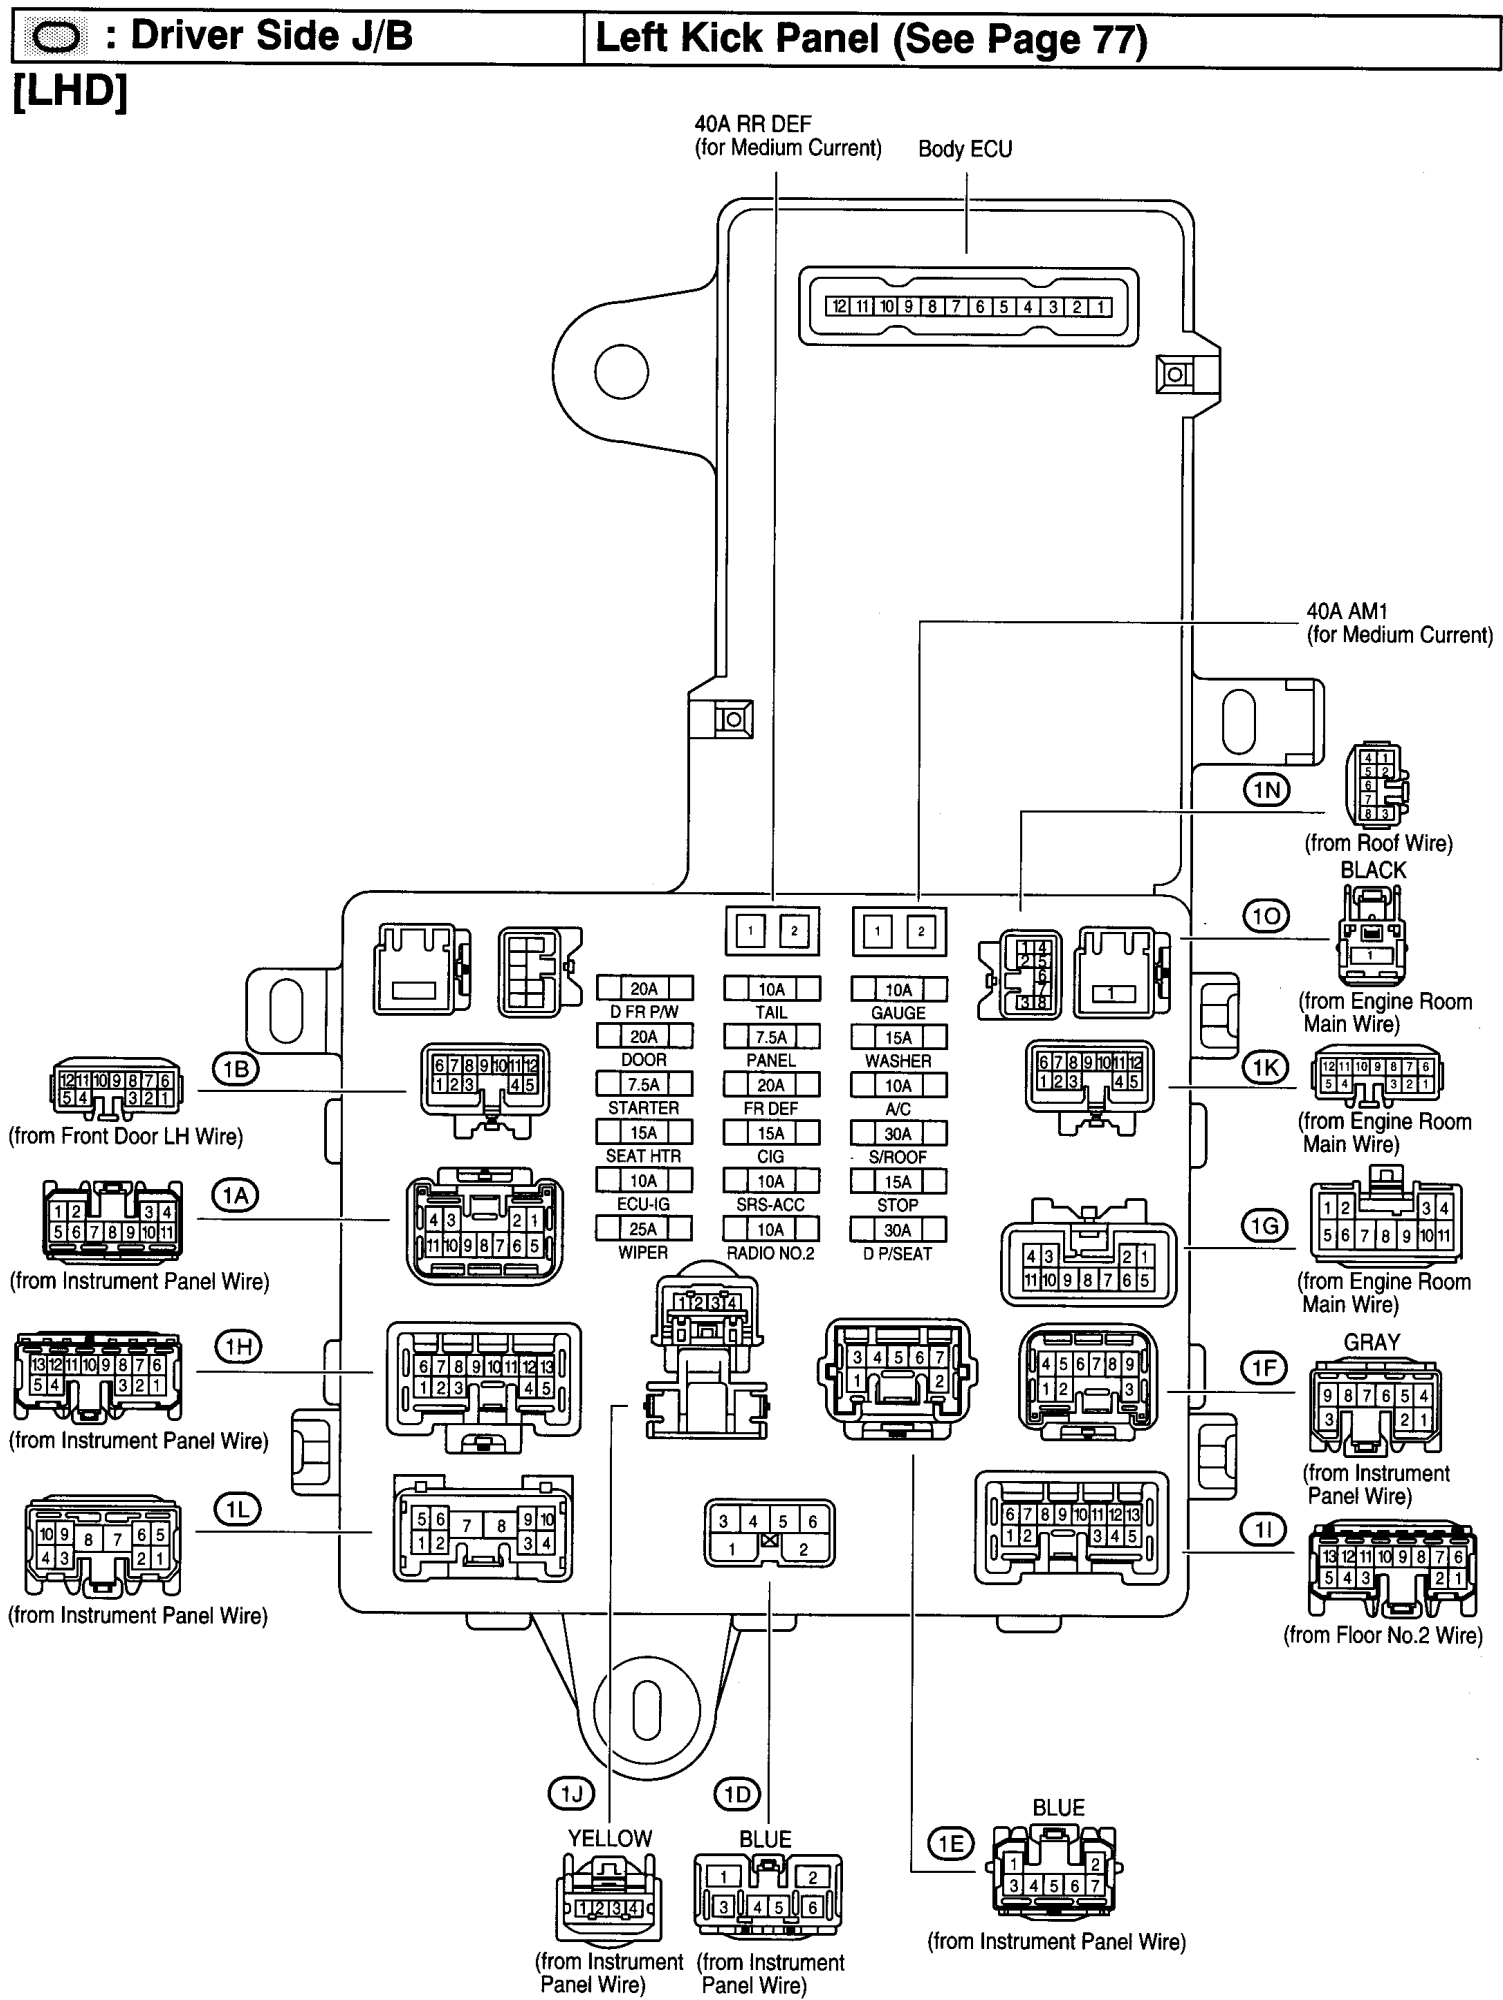

F

(Inner Circuit : See Page 86)


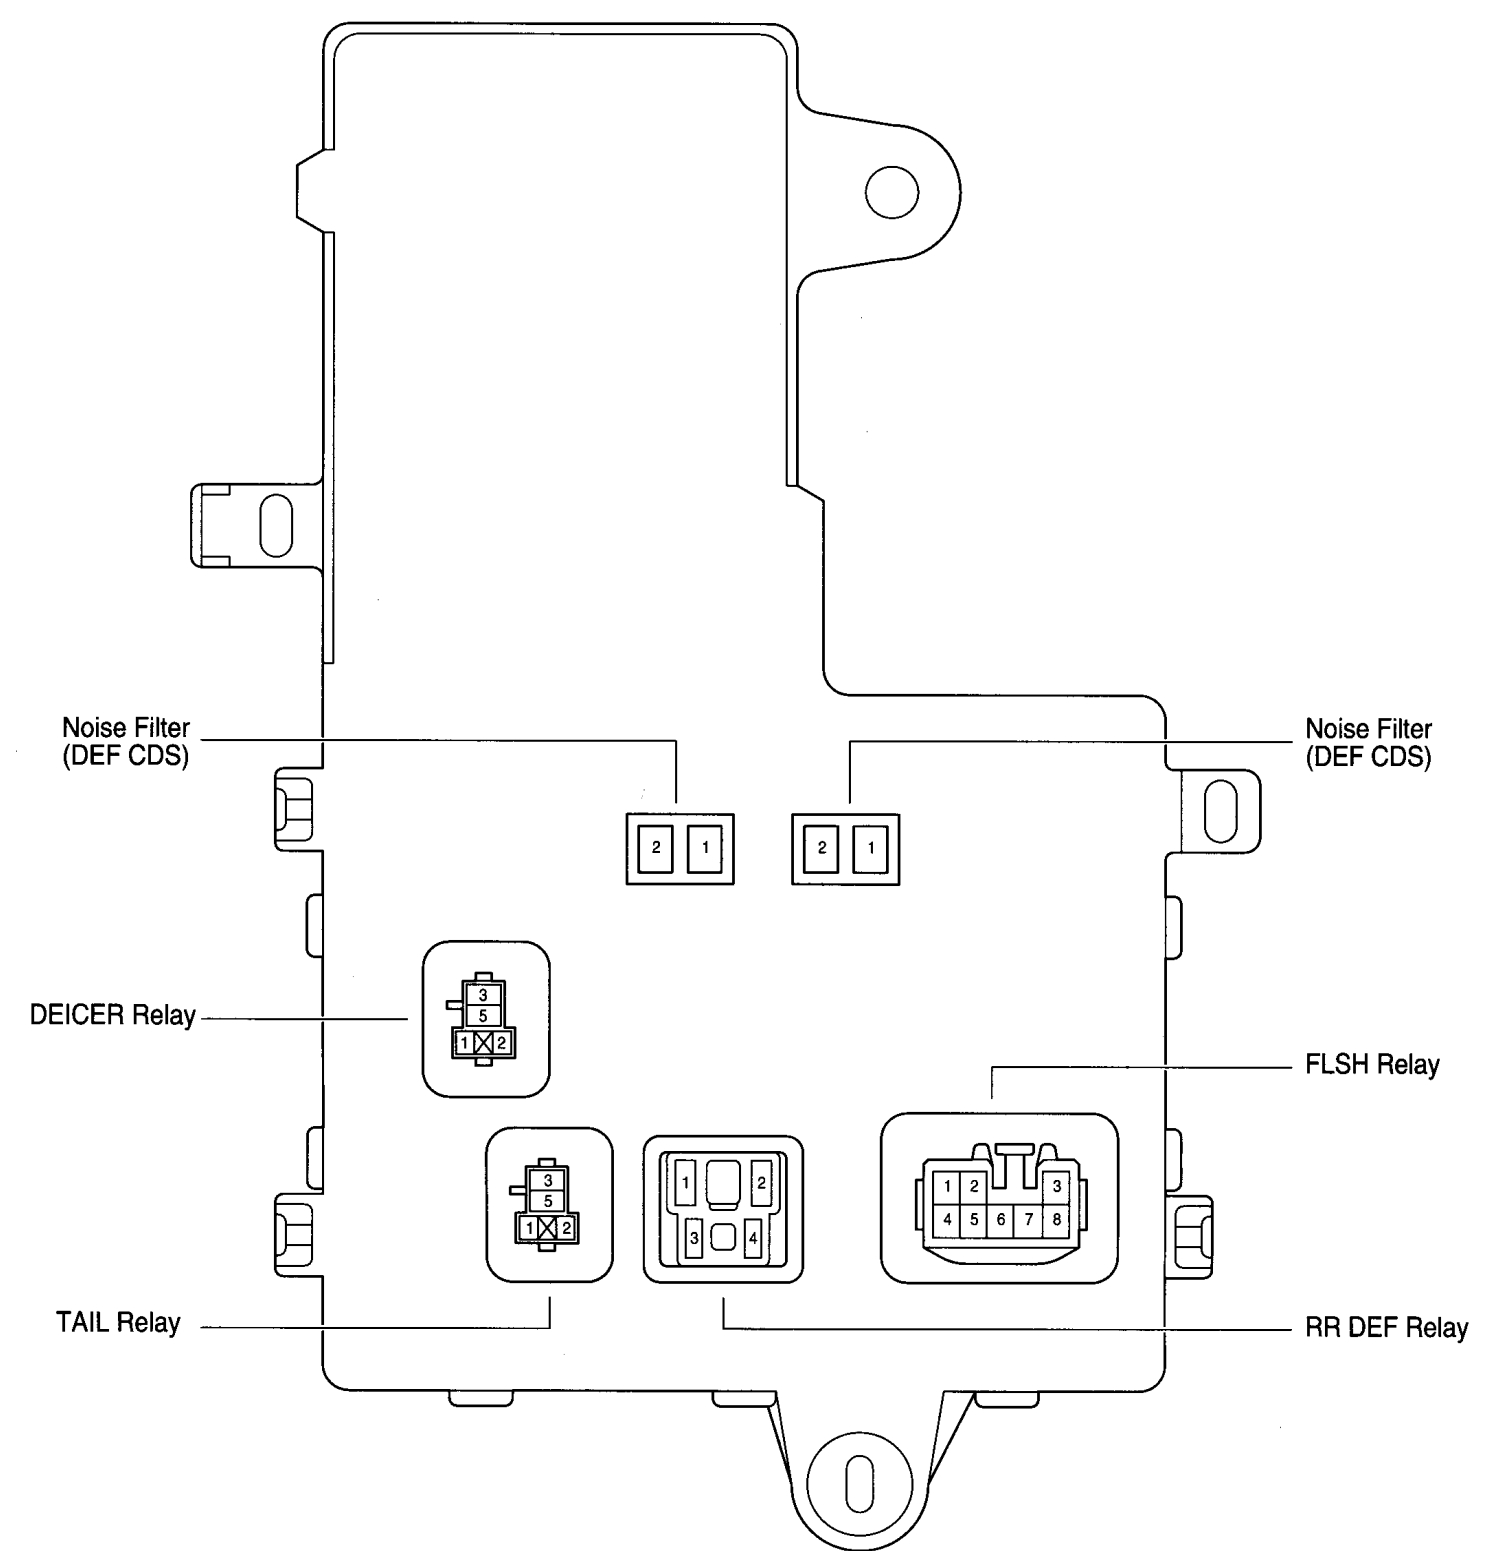


 : Passenger Side J/B


Right Kick Panel (See Page 77)

[LHD]


(Inner Circuit : See Page 87)

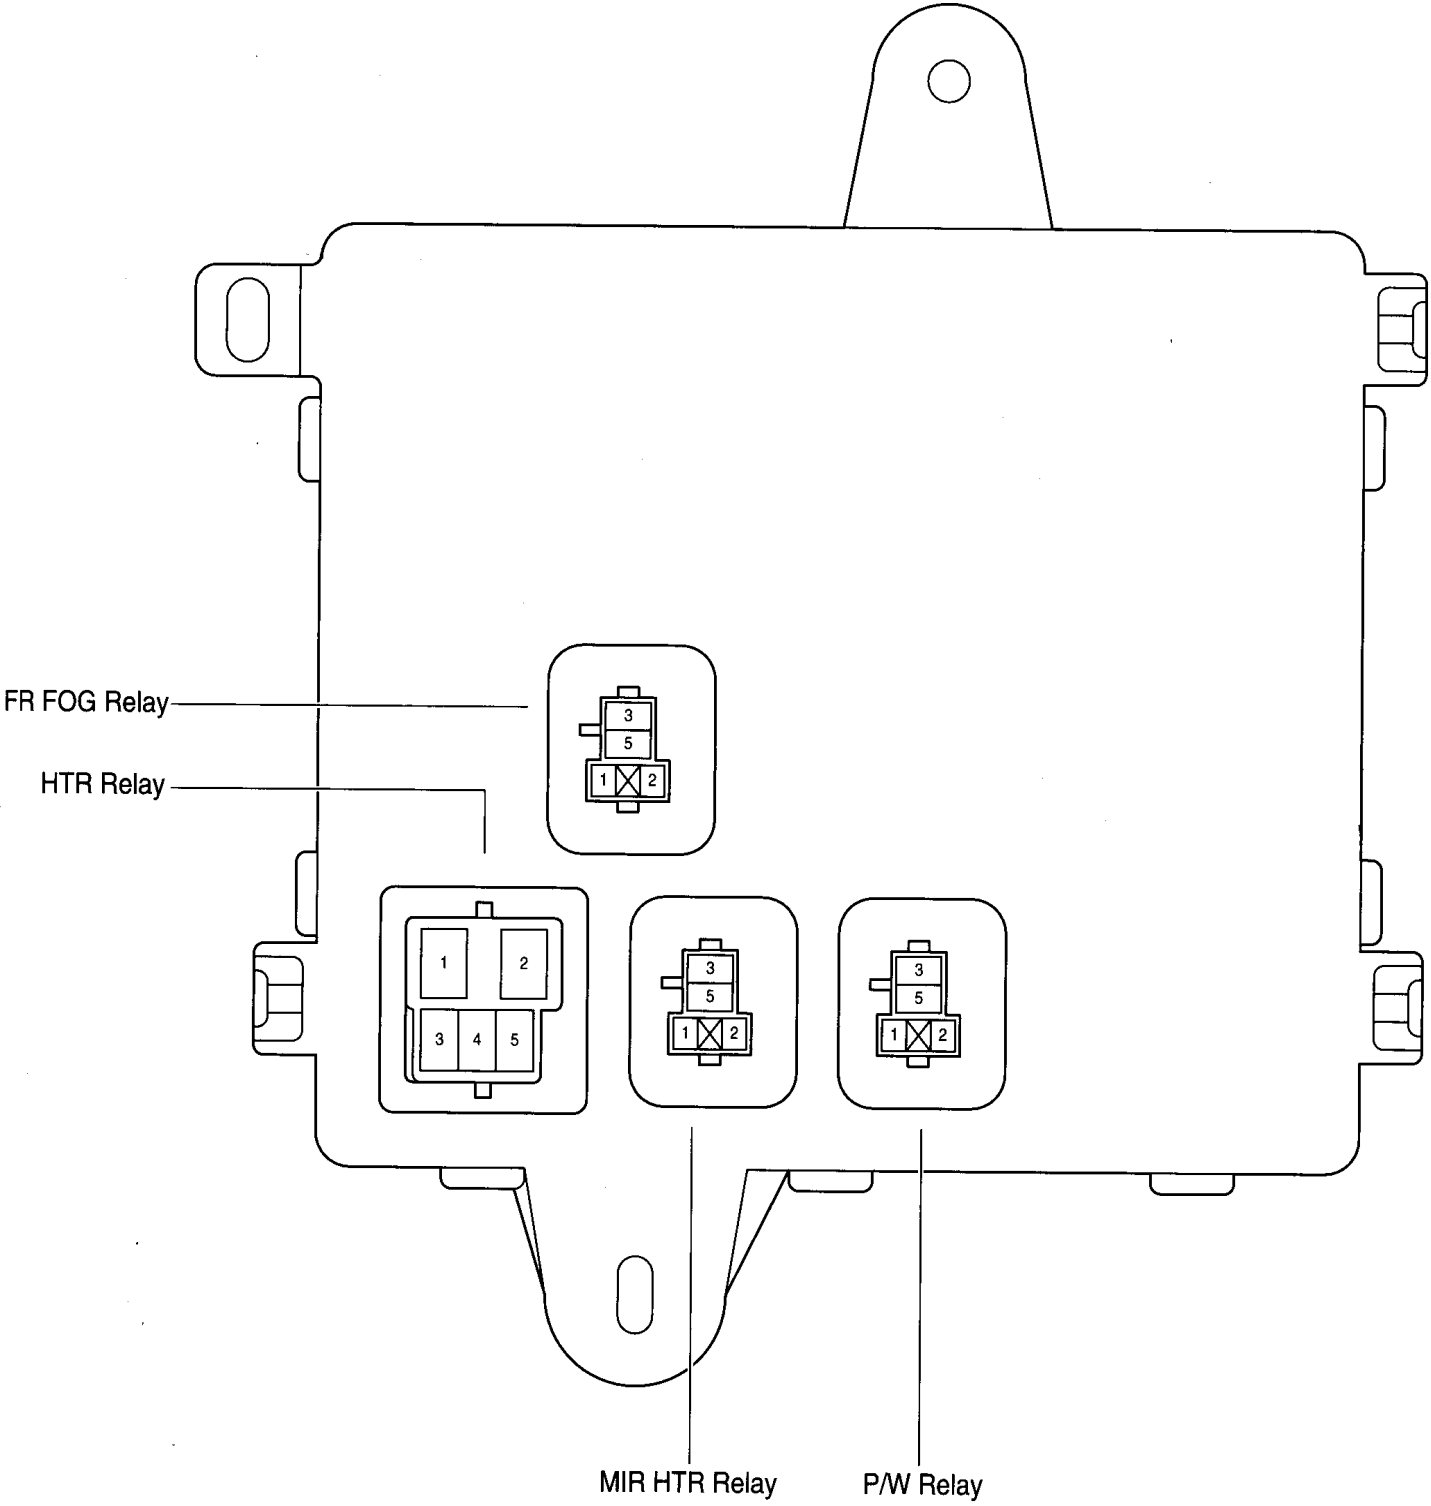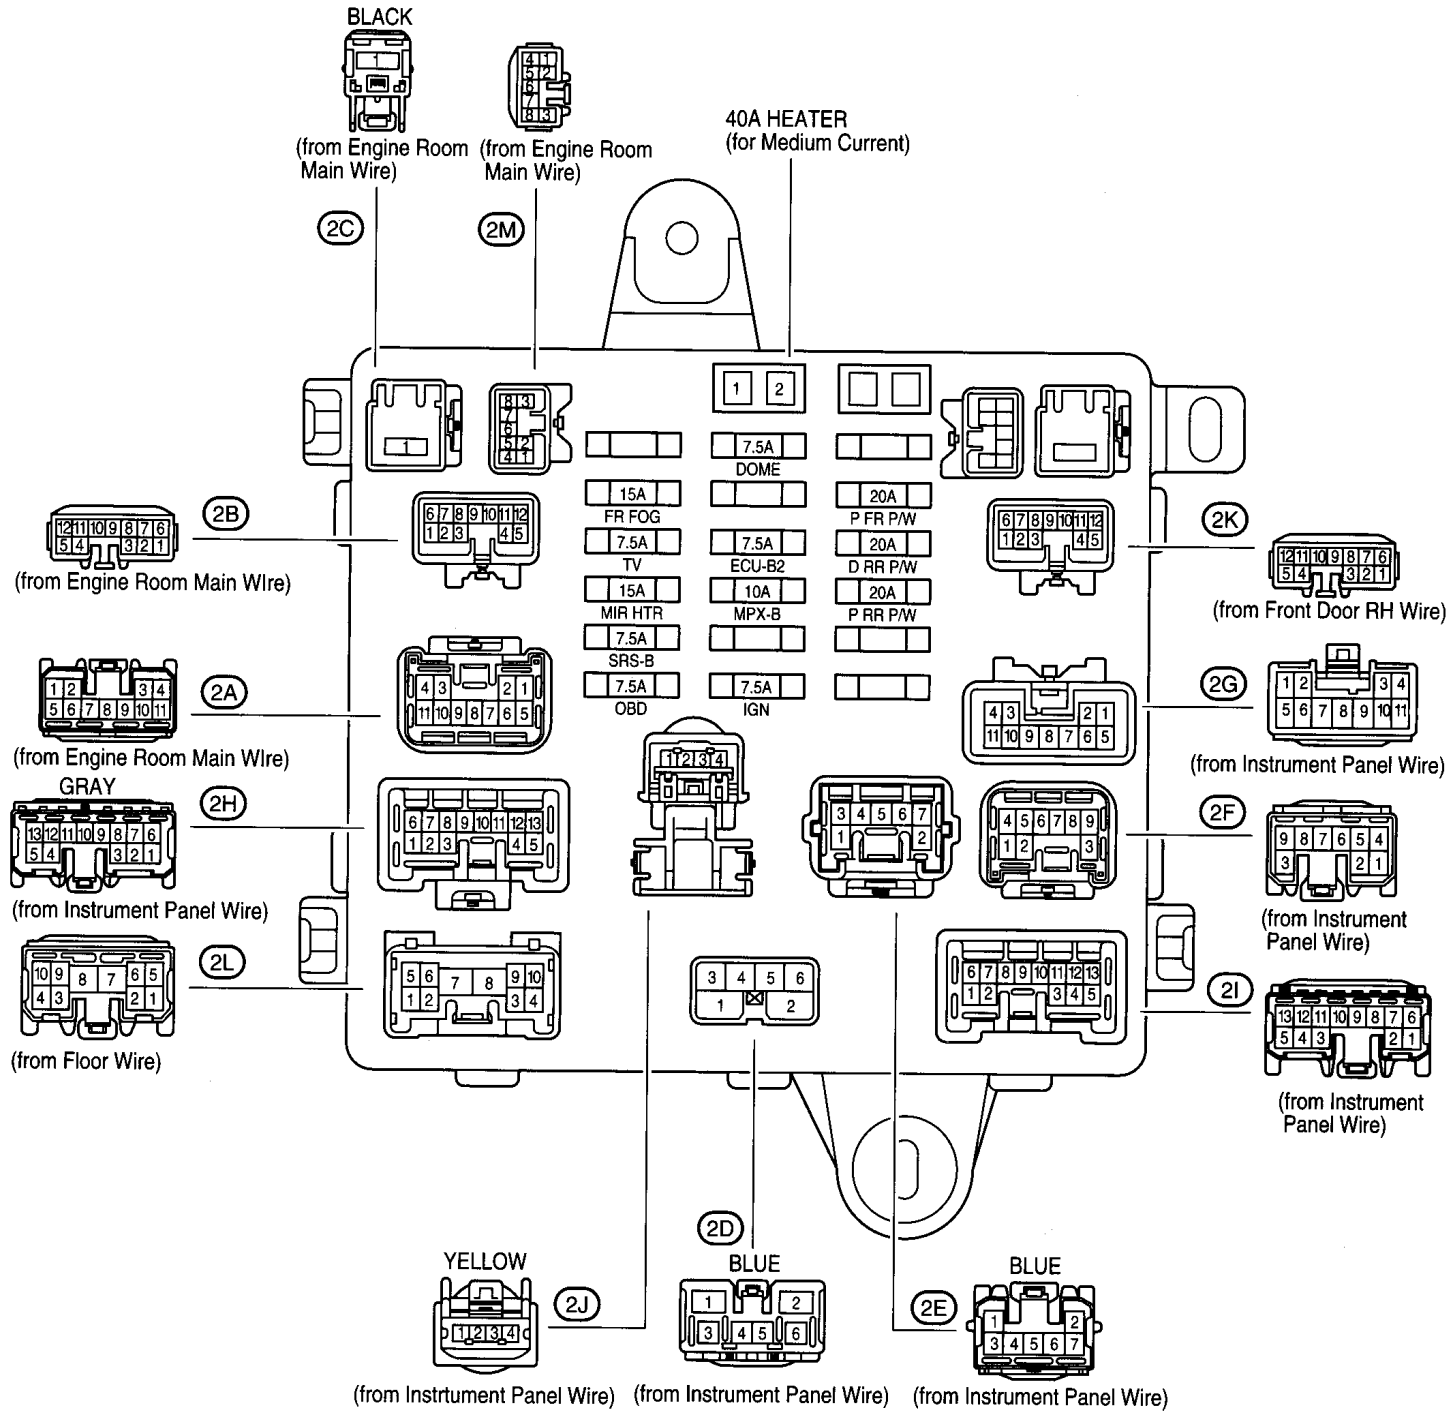

[Driver Side J/B Inner Circuit]

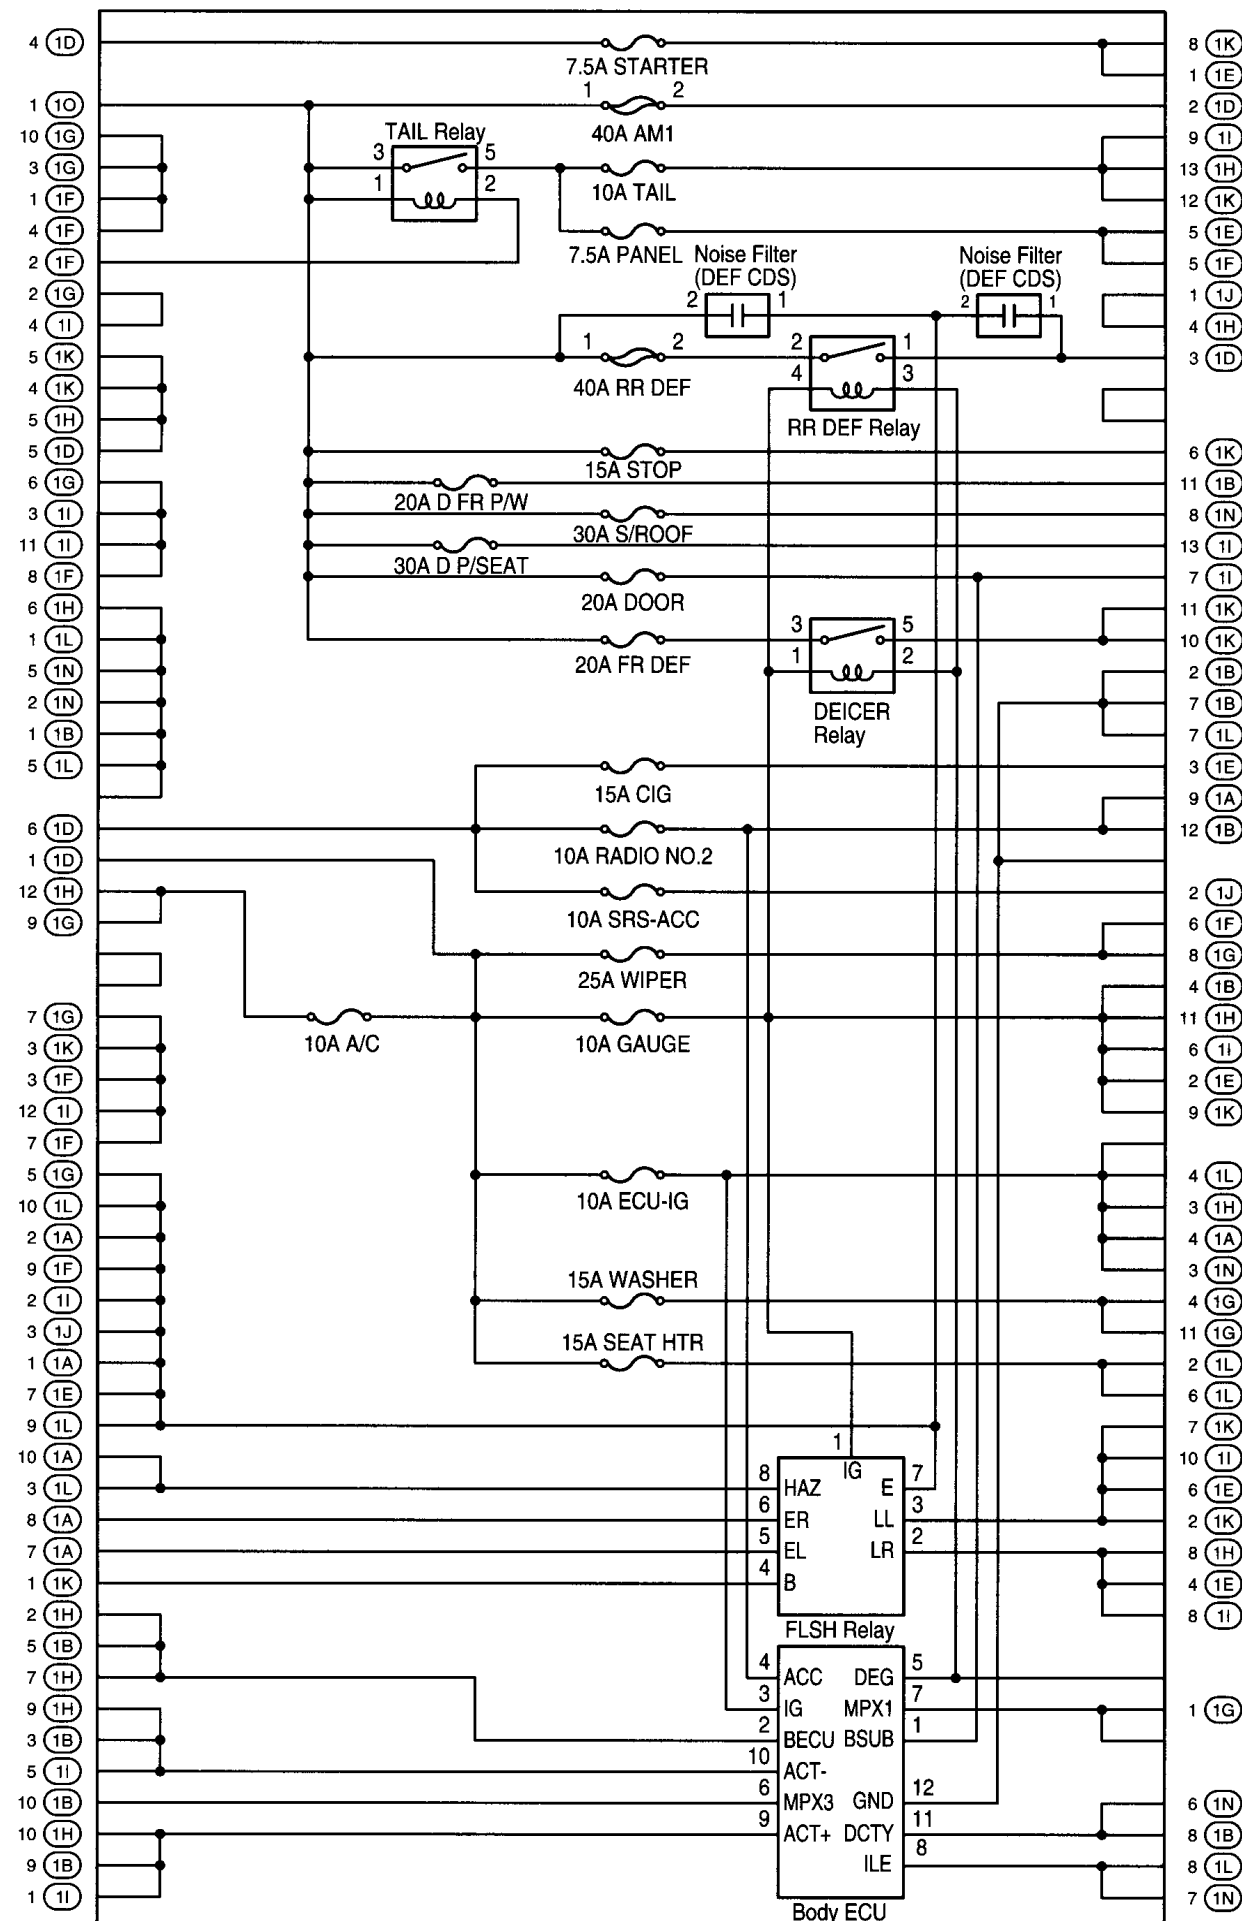

[Passenger Side J/B Inner Circuit]

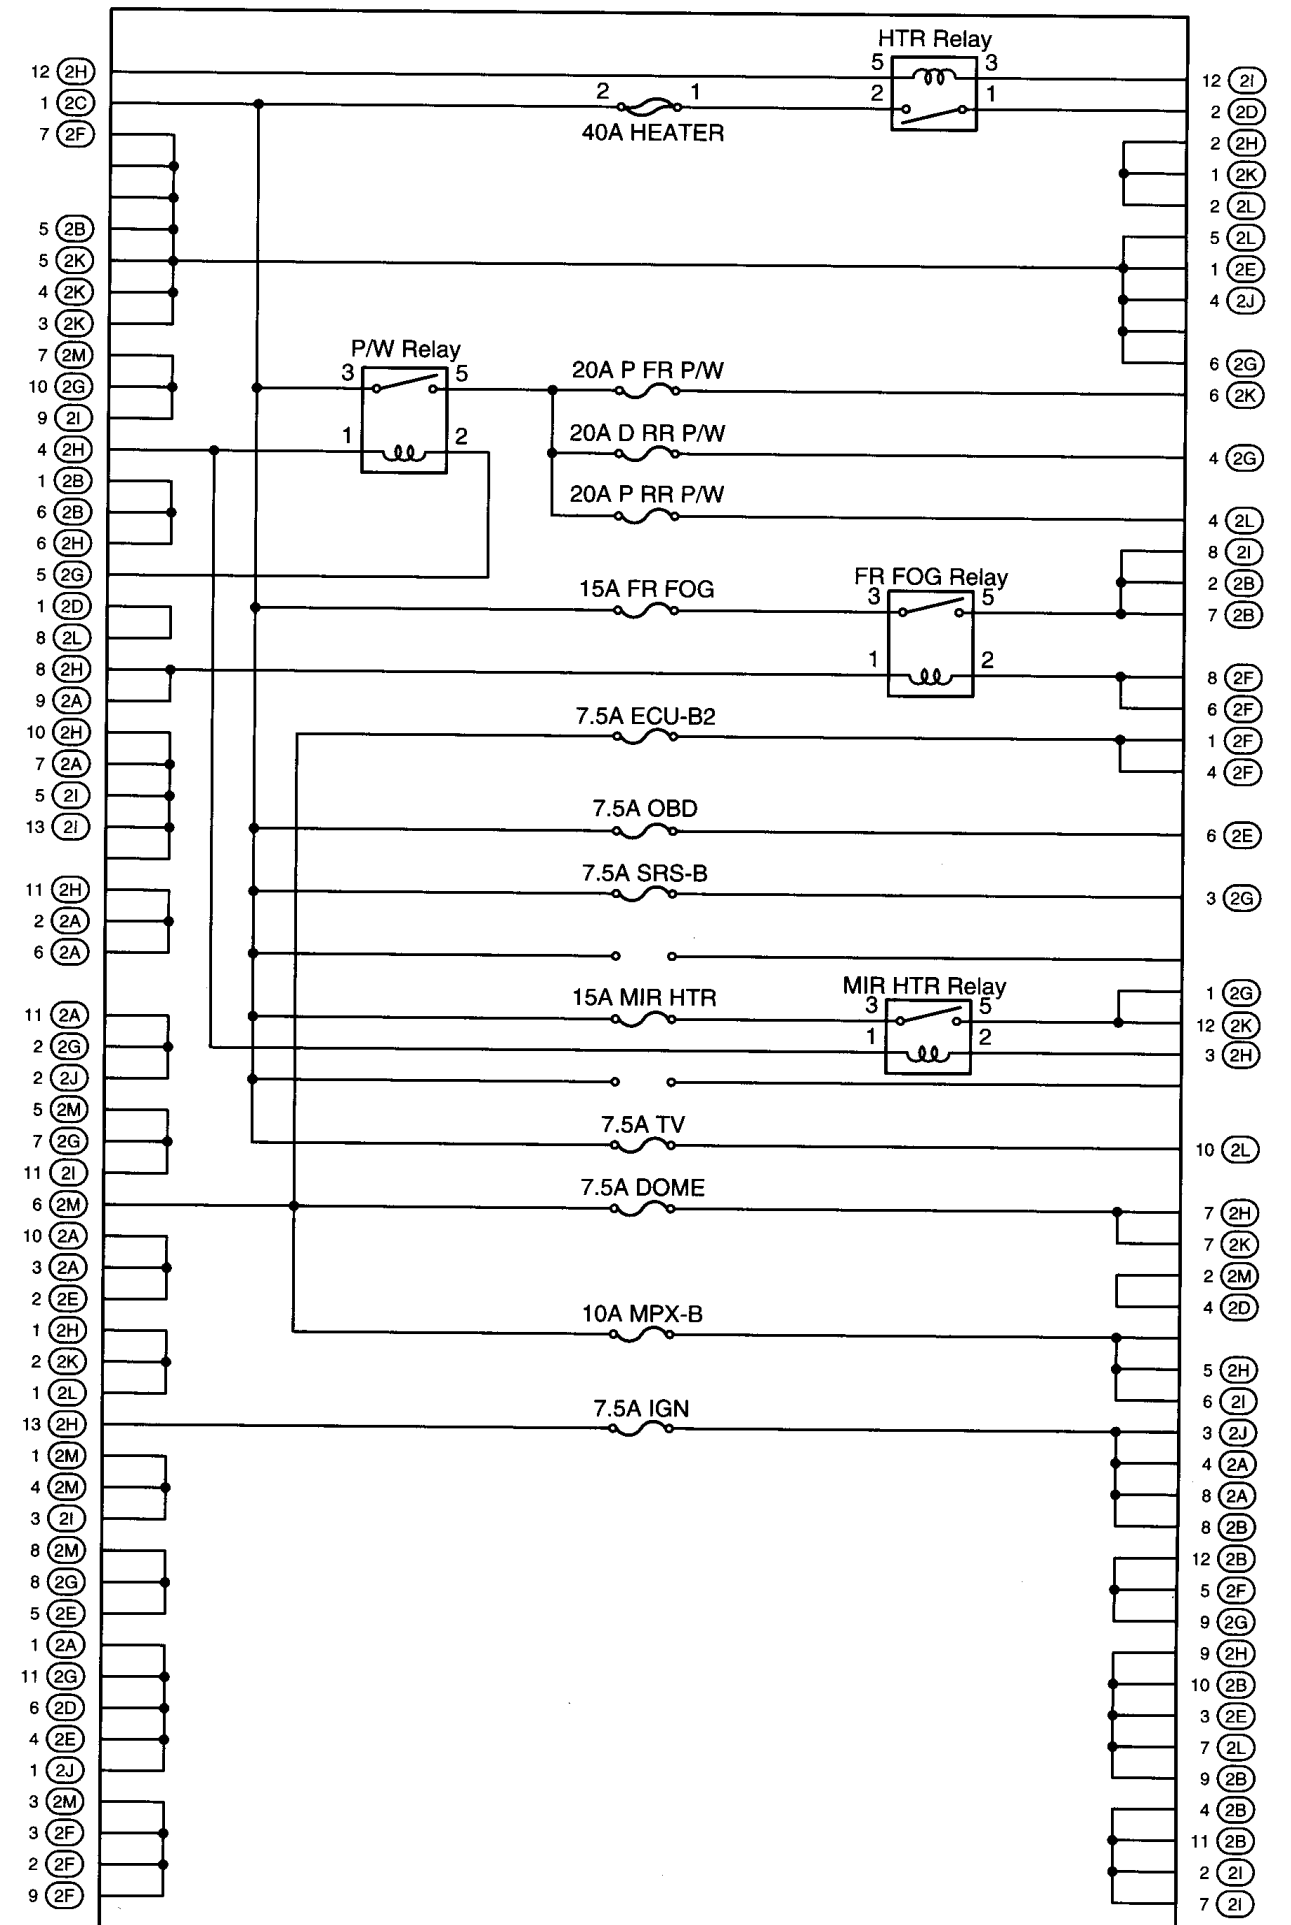

F RELAY LOCATIONS

① : Engine Room No.3 R/B	LHD: Engine Compartment Right (See Page 76)
	RHD: Engine Compartment Left (See Page 76)

