


Position of Parts in Engine Compartment

[LHD]

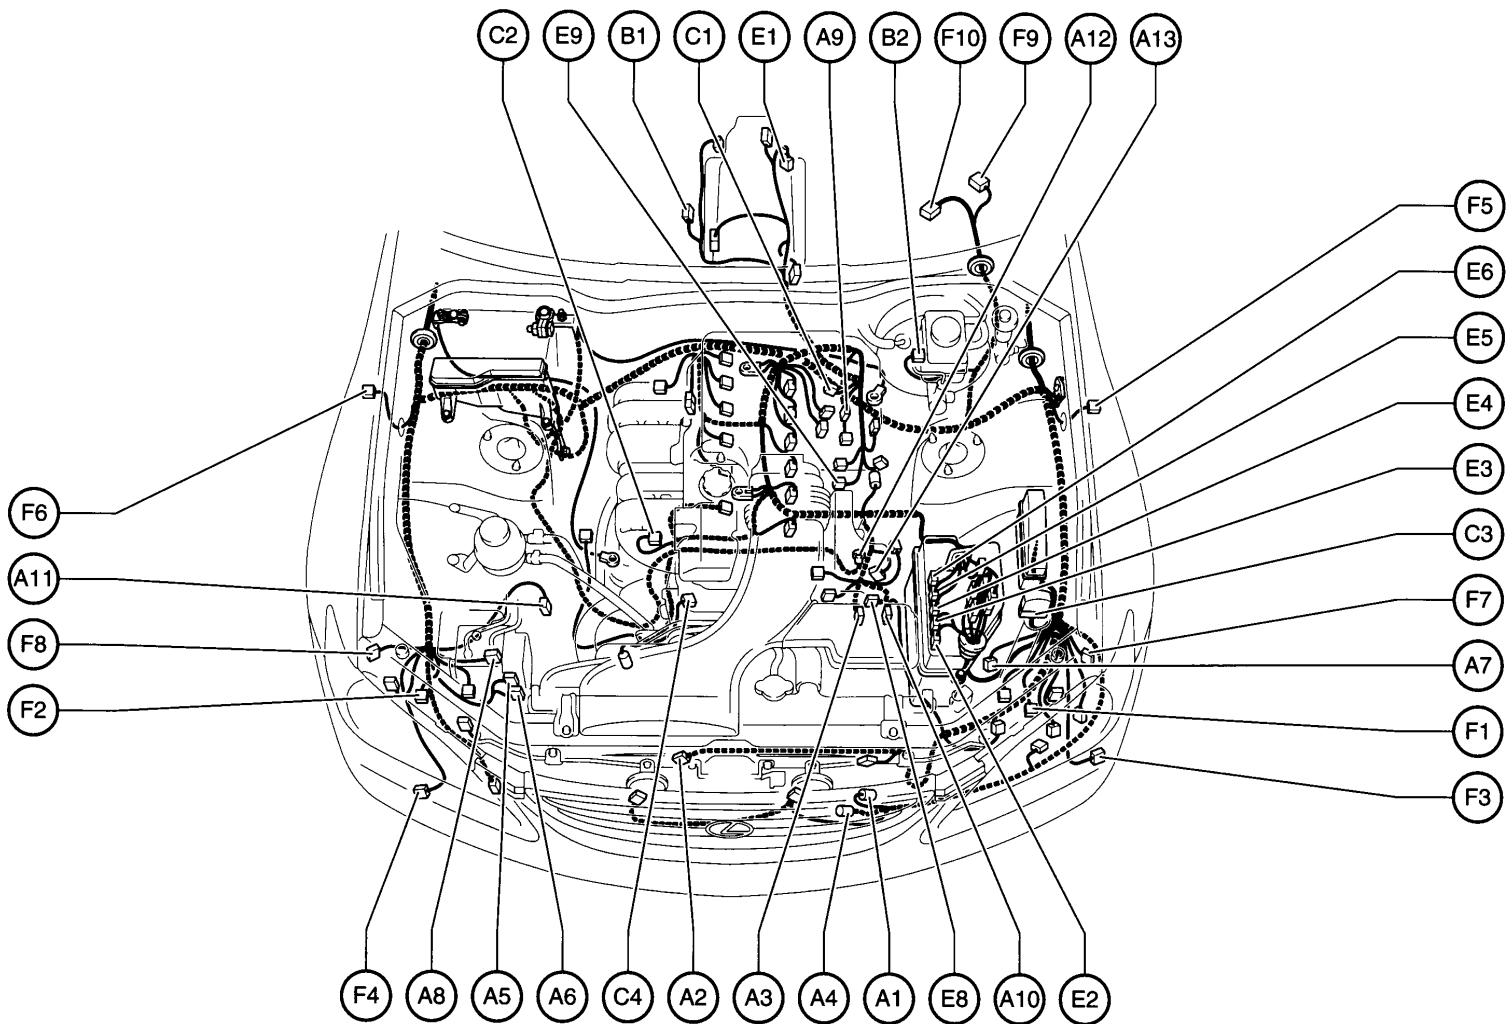

A 1 A/C Ambient Temp. Sensor
 A 2 A/C Condenser Fan Motor
 A 3 A/C Magnetic Clutch
 A 4 A/C Triple Pressure SW
 (A/C Dual and Single Pressure SW)
 A 5 ABS and Traction Actuator
 A 6 ABS and Traction Actuator
 A 7 ABS Speed Sensor Front LH
 A 8 ABS Speed Sensor Front RH
 A 9 Accel Position Sensor
 A10 Airbag Sensor Front LH
 A11 Airbag Sensor Front RH
 A12 Alternator
 A13 Alternator

B 1 Back-Up Light SW
 B 2 Brake Fluid Level Warning SW


C 1 Camshaft Position Sensor
 C 2 Camshaft Timing Oil Control Valve
 C 3 Check Connector
 C 4 Crankshaft Position Sensor

E 1 ECT Solenoid
 E 2 Engine ECU (M/T) or Engine and ECT ECU (A/T)
 E 3 Engine ECU (M/T) or Engine and ECT ECU (A/T)
 E 4 Engine and ECT ECU
 E 5 Engine ECU (M/T) or Engine and ECT ECU (A/T)
 E 6 Engine ECU (M/T) or Engine and ECT ECU (A/T)
 E 8 Engine Oil Level Sensor
 E 9 Engine Oil Pressure SW

F 1 Front Clearance Light LH
 F 2 Front Clearance Light RH
 F 3 Front Fog Light LH
 F 4 Front Fog Light RH
 F 5 Front Side Turn Signal Light LH
 F 6 Front Side Turn Signal Light RH
 F 7 Front Turn Signal Light LH
 F 8 Front Turn Signal Light RH
 F 9 Front Window Deicer
 F10 Front Wiper Motor

Position of Parts in Engine Compartment

[LHD]

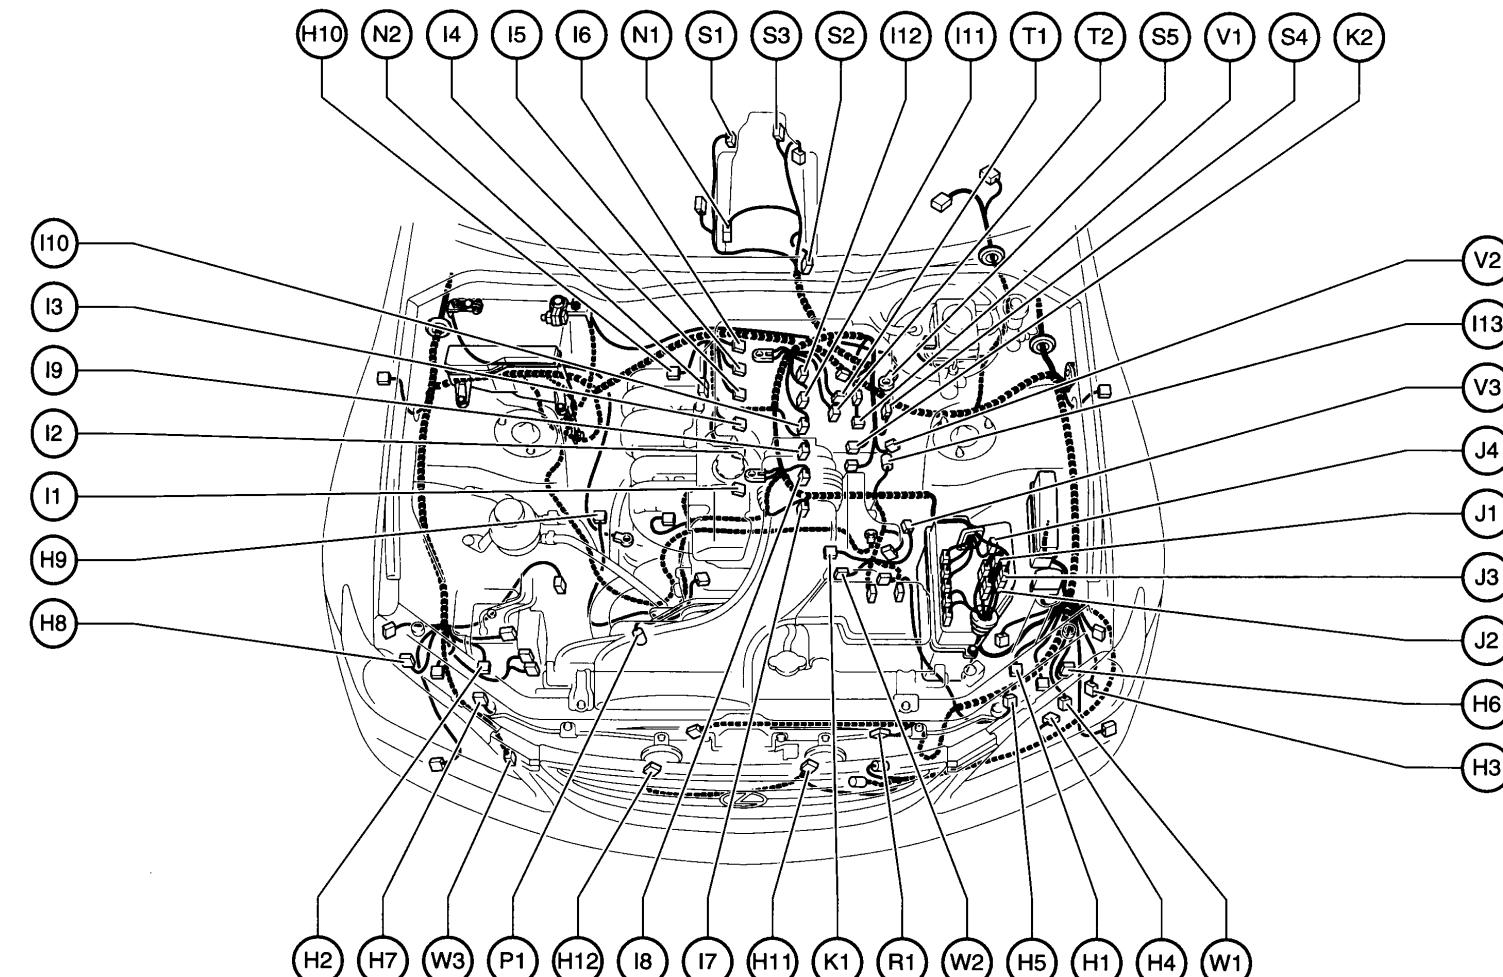

H 1 Headlight Beam Level Control Actuator LH
 H 2 Headlight Beam Level Control Actuator RH
 H 3 Headlight Cleaner Control Relay
 H 4 Headlight Cleaner Motor
 H 5 Headlight LH (High)
 H 6 Headlight LH (Low)
 H 7 Headlight RH (High)
 H 8 Headlight RH (Low)
 H 9 Heated Oxygen Sensor (Bank 1 Sensor 1)
 H10 Heated Oxygen Sensor (Bank 2 Sensor 1)
 H11 Horn LH
 H12 Horn RH

I 1 Ignition Coil and Igniter No.1
 I 2 Ignition Coil and Igniter No.2
 I 3 Ignition Coil and Igniter No.3
 I 4 Ignition Coil and Igniter No.4
 I 5 Ignition Coil and Igniter No.5
 I 6 Ignition Coil and Igniter No.6
 I 7 Injector No.1
 I 8 Injector No.2
 I 9 Injector No.3
 I 10 Injector No.4
 I 11 Injector No.5
 I 12 Injector No.6
 I 13 Intake Air Temp. Sensor

J 1 Junction Connector
 J 2 Junction Connector
 J 3 Junction Connector
 J 4 Junction Connector


K 1 Knock Sensor 1
 K 2 Knock Sensor 2
 N 1 Neutral Start SW
 N 2 Noise Filter (Ignition)
 P 1 Power Steering Oil Pressure SW
 R 1 Radiator Fan Motor
 S 1 Speed Sensor (Combination Meter)
 S 2 Speed Sensor (Transmission Input)
 S 3 Speed Sensor (Transmission Output)
 S 4 Starter
 S 5 Starter

T 1 Throttle Control Motor
 T 2 Throttle Position Sensor
 V 1 Vacuum Sensor
 V 2 VSV (ACIS)
 V 3 VSV (EVAP)

W 1 Washer Motor
 W 2 Water Temp. Sensor
 W 3 Water Temp. SW

Position of Parts in Instrument Panel

[LHD]

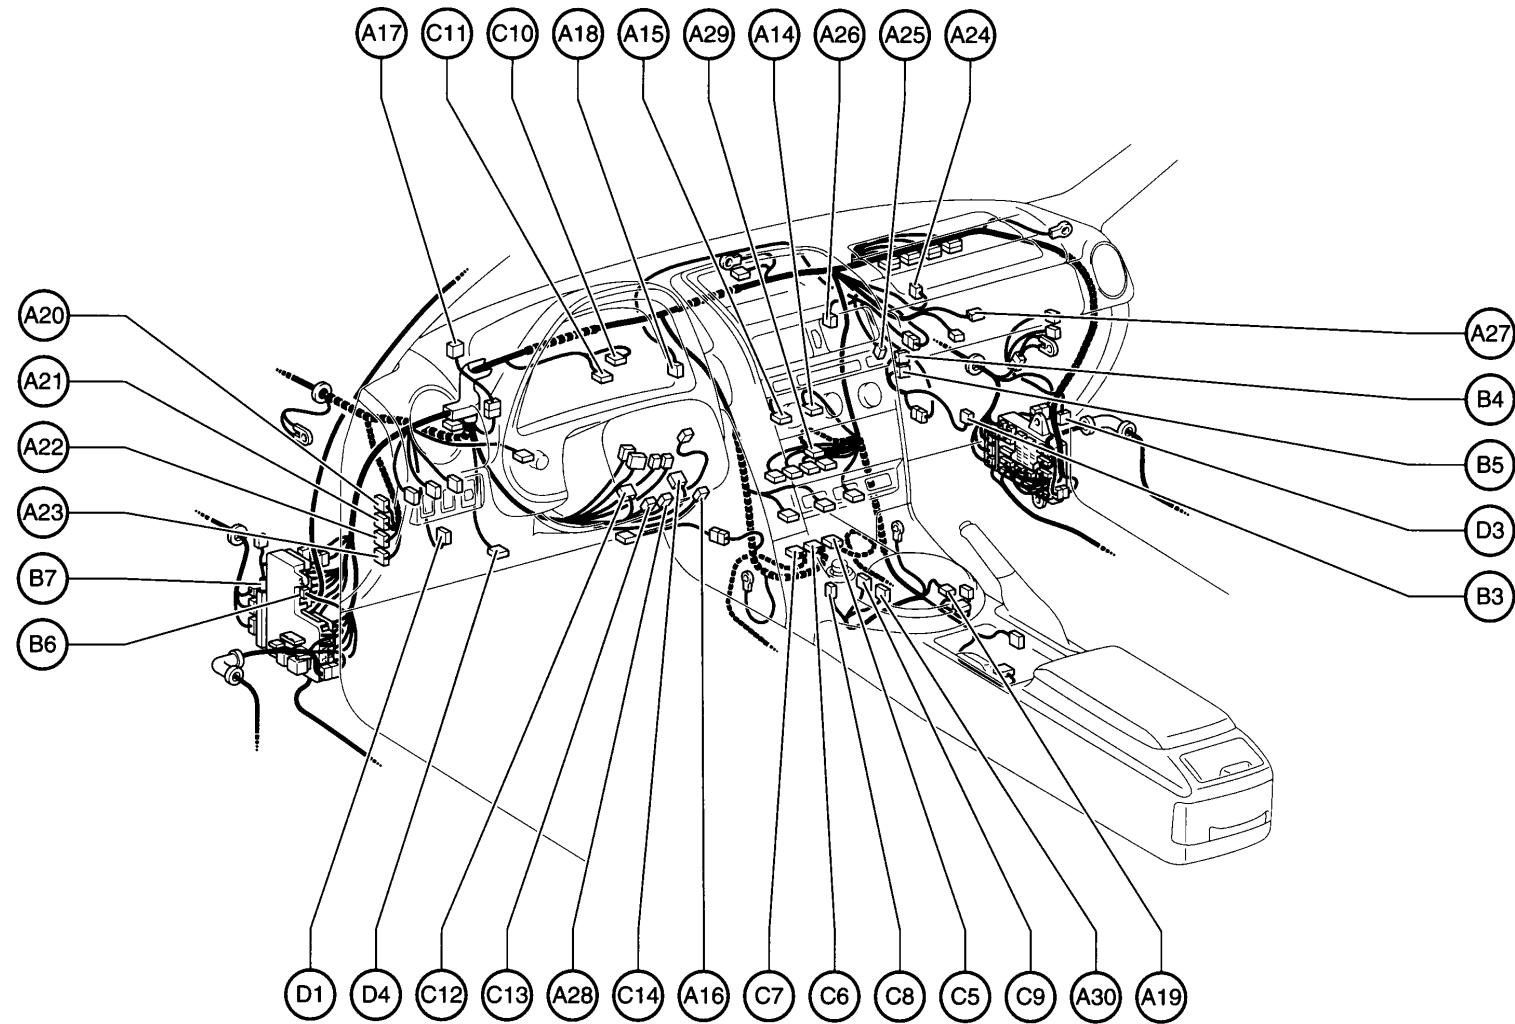


A14 A/C Control Assembly
 A15 A/C Control Assembly
 A16 A/C Room Temp. Sensor
 A17 A/C Solar Sensor
 A18 A/C Thermistor
 A19 A/T Shift Position Illumination
 A20 ABS and Traction ECU
 A21 ABS and Traction ECU
 A22 ABS and Traction ECU
 A23 ABS and Traction ECU
 A24 Air Inlet Control Servo Motor
 A25 Air Mix Control Servo Motor
 A26 Air Vent Mode Control Servo Motor
 A27 Airbag Squib (Front Passenger Airbag Assembly)
 A28 Airbag Squib (Steering Wheel Pad)
 A29 Antenna Amplifier
 A30 Ashtray Illumination

B 3 Blower Motor
 B 4 Blower Motor Controller
 B 5 Blower Motor Controller
 B 6 Body ECU
 B 7 Body ECU

C 5 Center Airbag Sensor Assembly
 C 6 Center Airbag Sensor Assembly
 C 7 Center Airbag Sensor Assembly
 C 8 Cigarette Lighter
 C 9 Cigarette Lighter Illumination
 C10 Combination Meter
 C11 Combination Meter
 C12 Combination SW
 C13 Combination SW
 C14 Combination SW
 D 1 Daytime Running Light Relay
 D 3 Diode (A/C)
 D 4 DLC3

Position of Parts in Instrument Panel

[LHD]

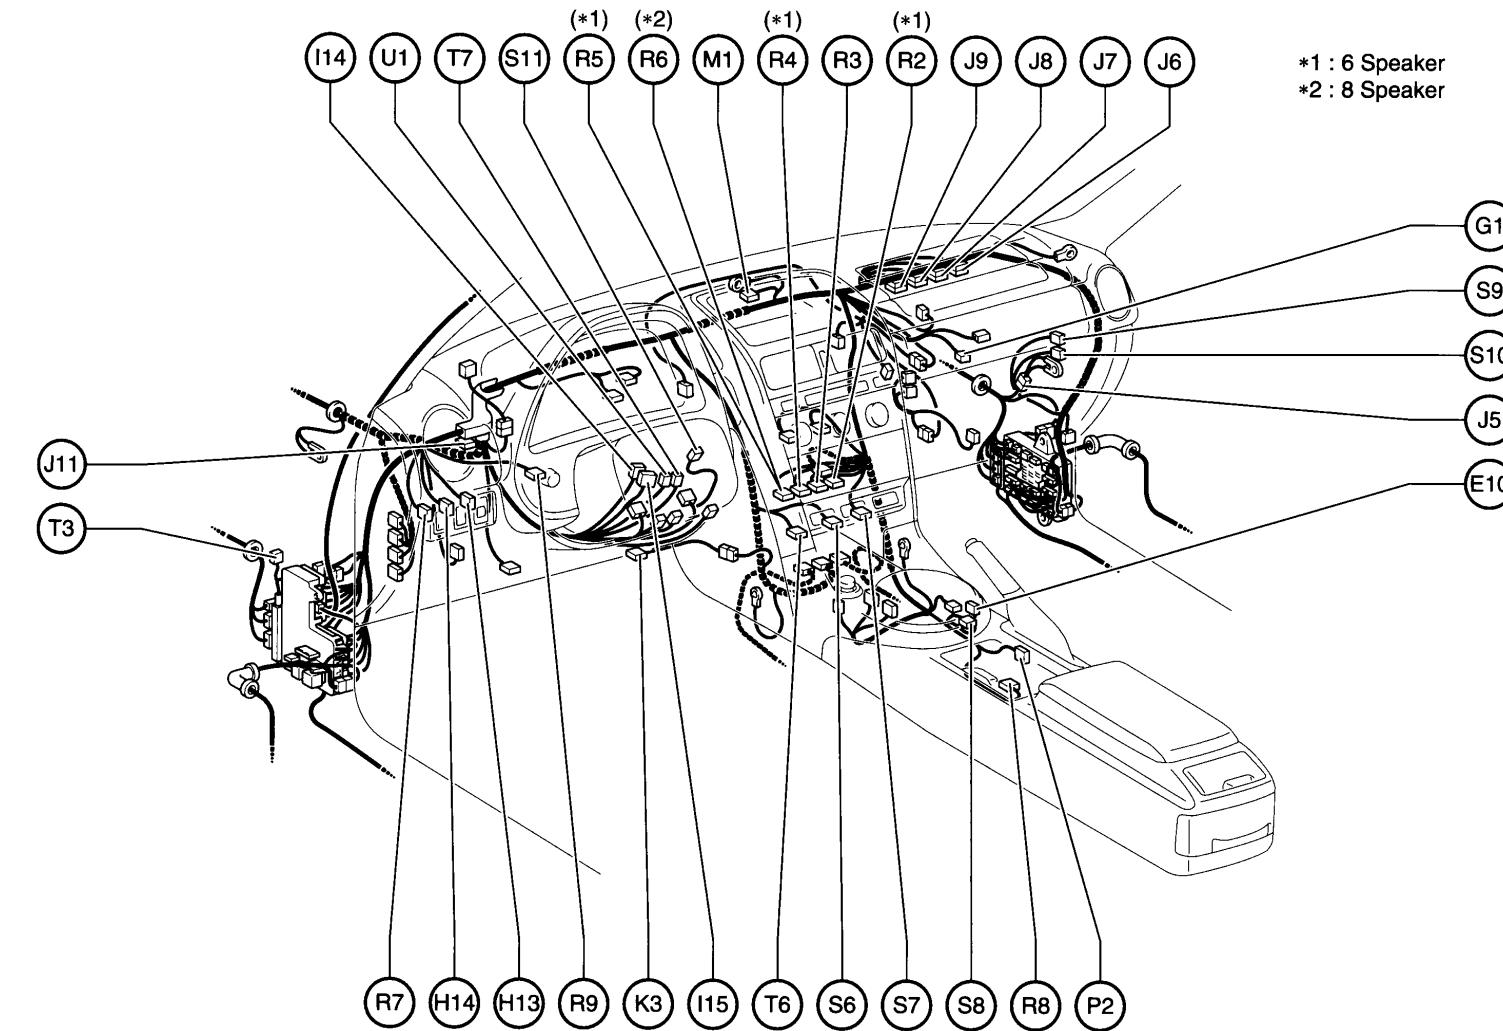

E10 ECT Pattern Select SW
 G 1 Glove Box Light
 H13 Headlight Beam Level Control SW
 H14 Headlight Cleaner SW
 I 14 Ignition Key Cylinder Light
 I 15 Ignition SW
 J 5 Junction Connector
 J 6 Junction Connector
 J 7 Junction Connector
 J 8 Junction Connector
 J 9 Junction Connector
 J 11 Junction Connector
 K 3 Kick Down SW
 M 1 Multi-Display
 P 2 Parking Brake SW


R 2 Radio and Player
 R 3 Radio and Player
 R 4 Radio and Player
 R 5 Radio and Player
 R 6 Radio and Player
 R 7 Rear Fog Light SW
 R 8 Remote Control Receiver
 R 9 Rheostat
 S 6 Seat Heater SW (Driver's Seat)
 S 7 Seat Heater SW (Passenger's Seat)
 S 8 Shift Lock Control ECU
 S 9 Stereo Component Amplifier
 S10 Stereo Component Amplifier
 S11 Stop Light SW
 T 3 Telephone Microphone
 T 6 Traction Cut SW (A/T), Traction Cut SW and Snow SW (M/T)
 T 7 Transponder Key Amplifier
 U 1 Unlock Warning SW and Key Interlock Solenoid

*1 : 6 Speaker
 *2 : 8 Speaker

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

[LHD]

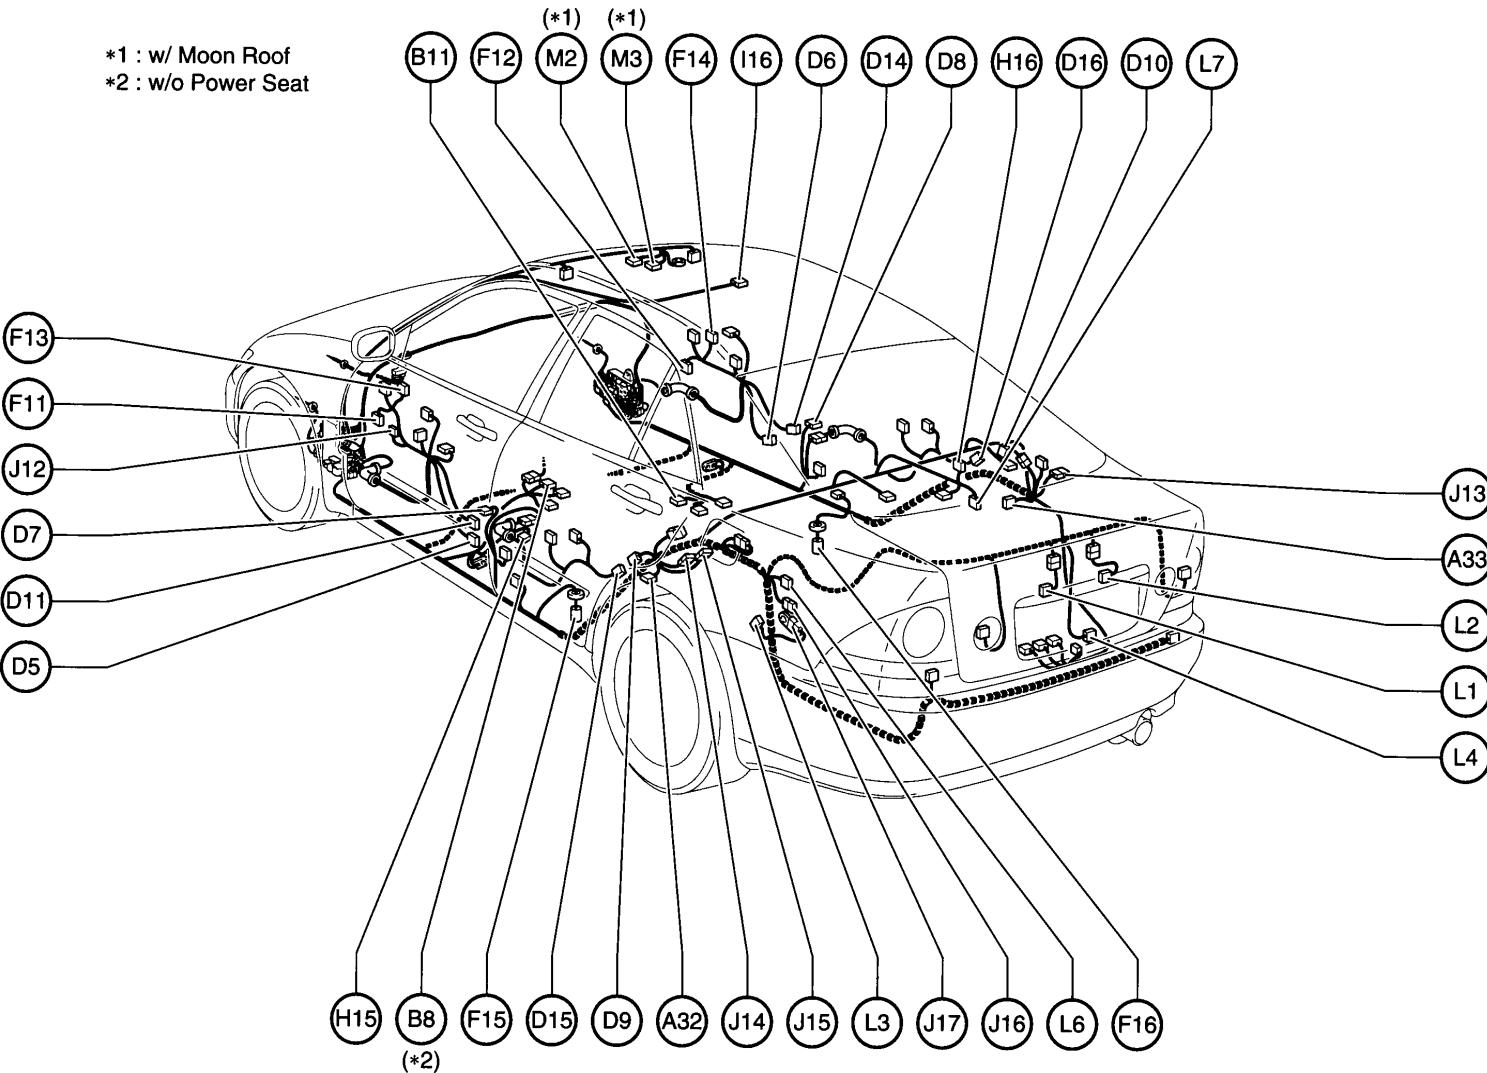

A32 ABS Speed Sensor Rear LH
A33 ABS Speed Sensor Rear RH

B 8 Buckle SW LH
B 11 Buckle SW RH and Seat Belt Warning Occupant Detection Sensor

D 5 Door Courtesy Light Front LH
D 6 Door Courtesy Light Front RH
D 7 Door Courtesy SW Front LH
D 8 Door Courtesy SW Front RH
D 9 Door Courtesy SW Rear LH
D 10 Door Courtesy SW Rear RH

D 11 Door Lock Motor,Door Key Lock and Unlock SW and Door Lock Detection SW Front LH
D 14 Door Lock Motor and Door Lock Detection SW Front RH
D 15 Door Lock Motor and Door Lock Detection SW Rear LH
D 16 Door Lock Motor and Door Lock Detection SW Rear RH

F 11 Front Door Speaker LH
F 12 Front Door Speaker RH
F 13 Front Door Tweeter Speaker LH
F 14 Front Door Tweeter Speaker RH
F 15 Fuel Pump and Sender
F 16 Fuel Sender (Sub)

H15 Heated Oxygen Sensor (Bank 1 Sensor 2)
H16 High Mounted Stop Light

I 16 Interior Light

J 12 Junction Connector
J 13 Junction Connector
J 14 Junction Connector
J 15 Junction Connector
J 16 Junction Connector
J 17 Junction Connector


L 1 License Plate Light LH
L 2 License Plate Light RH
L 3 Light Failure Sensor
L 4 Luggage Compartment Door Courtesy SW and Opener Motor
L 6 Luggage Compartment Door Opener Relay
L 7 Luggage Compartment Light

M 2 Moon Roof Control ECU
M 3 Moon Roof Control SW and Personal Light

Position of Parts in Body

[LHD]

*2 : w/o Power Seat
*3 : 6 Speaker
*4 : 8 Speaker
*5 : w/o Moon Roof

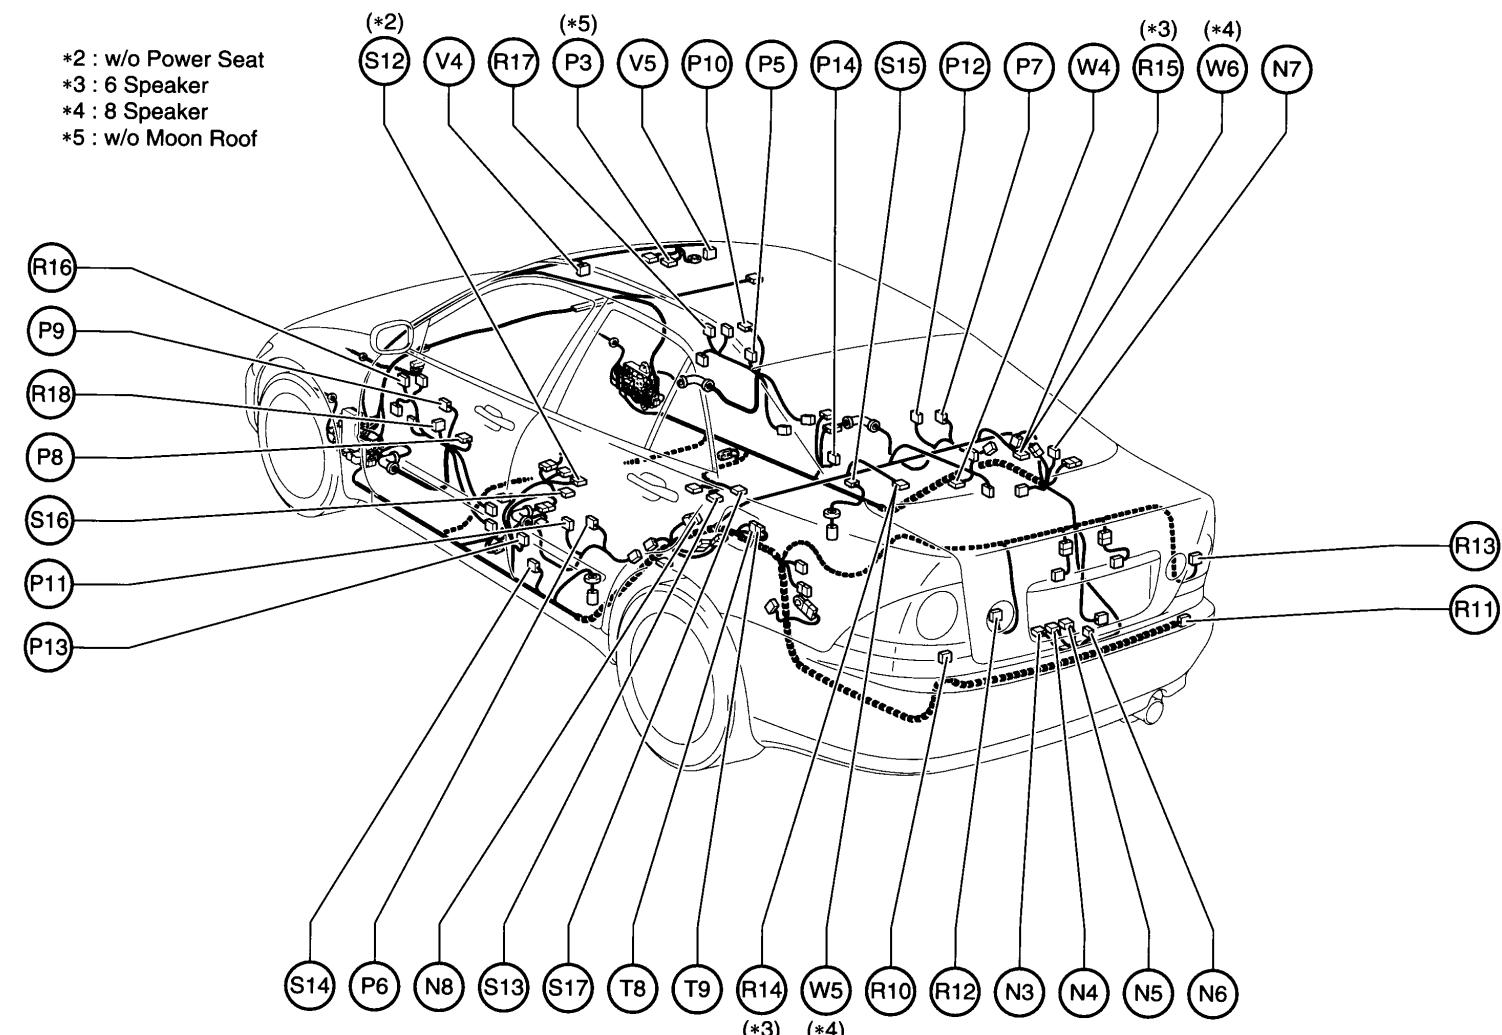

N 3 Navigation ECU
N 4 Navigation ECU
N 5 Navigation ECU
N 6 Navigation ECU
N 7 Noise Filter (Rear Window Defogger)
N 8 Noise Filter (Stop Light)

P 3 Personal Light
P 5 Power Window Control SW Front RH
P 6 Power Window Control SW Rear LH
P 7 Power Window Control SW Rear RH
P 8 Power Window Master SW
P 9 Power Window Motor Front LH
P 10 Power Window Motor Front RH
P 11 Power Window Motor Rear LH
P 12 Power Window Motor Rear RH
P 13 Pretensioner LH
P 14 Pretensioner RH

R10 Rear Combination Light LH
R11 Rear Combination Light RH
R12 Rear Fog Light LH
R13 Rear Fog Light RH
R14 Rear Speaker LH
R15 Rear Speaker RH
R16 Remote Control Mirror LH
R17 Remote Control Mirror RH
R18 Remote Control Mirror SW

S 12 Seat Heater (Driver's Seat)
S 13 Seat Heater (Passenger's Seat)
S 14 Side Airbag Sensor LH
S 15 Side Airbag Sensor RH
S 16 Side Airbag Squib LH
S 17 Side Airbag Squib RH

T 8 Telephone Transceiver and Speaker Relay
T 9 Telephone Transceiver and Speaker Relay


V 4 Vanity Light LH
V 5 Vanity Light RH

W 4 Wireless Door Lock ECU
W 5 Woofer Speaker LH
W 6 Woofer Speaker RH

G ELECTRICAL WIRING ROUTING

Position of Parts in Seat

[LHD]

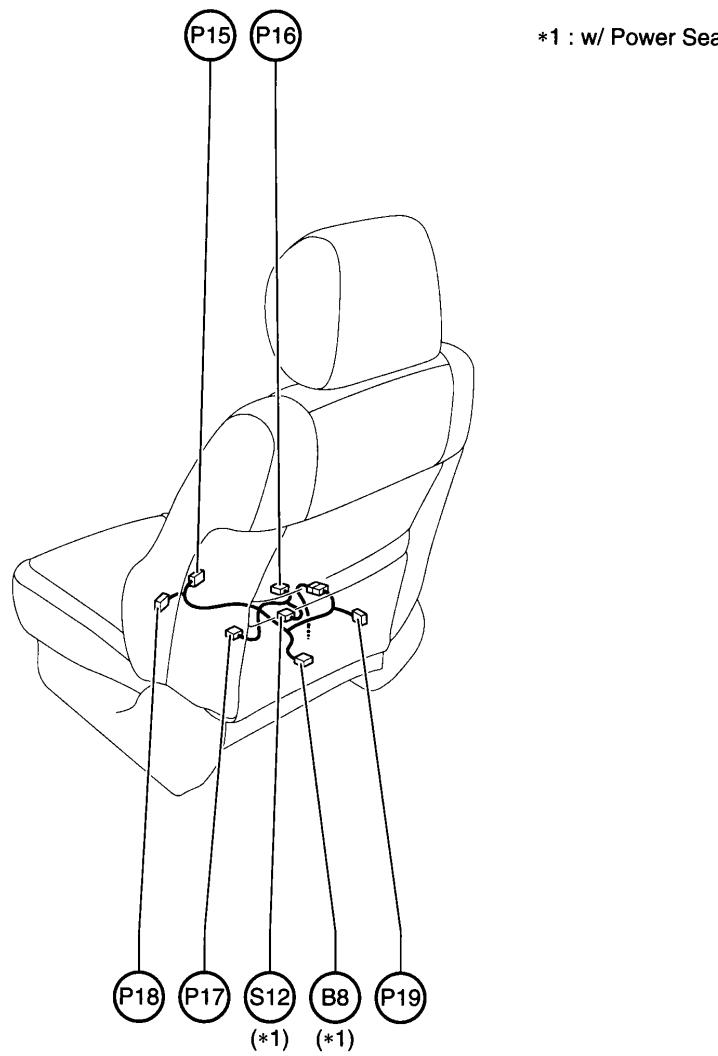

B 8 Buckle SW LH

P15 Power Seat Control SW

P16 Power Seat Motor (Driver's Seat Front Vertical Control)

P17 Power Seat Motor (Driver's Seat Rear Vertical Control)

P18 Power Seat Motor (Driver's Seat Reclining Control)

P19 Power Seat Motor (Driver's Seat Slide Control)


S12 Seat Heater (Driver's Seat)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[LHD]

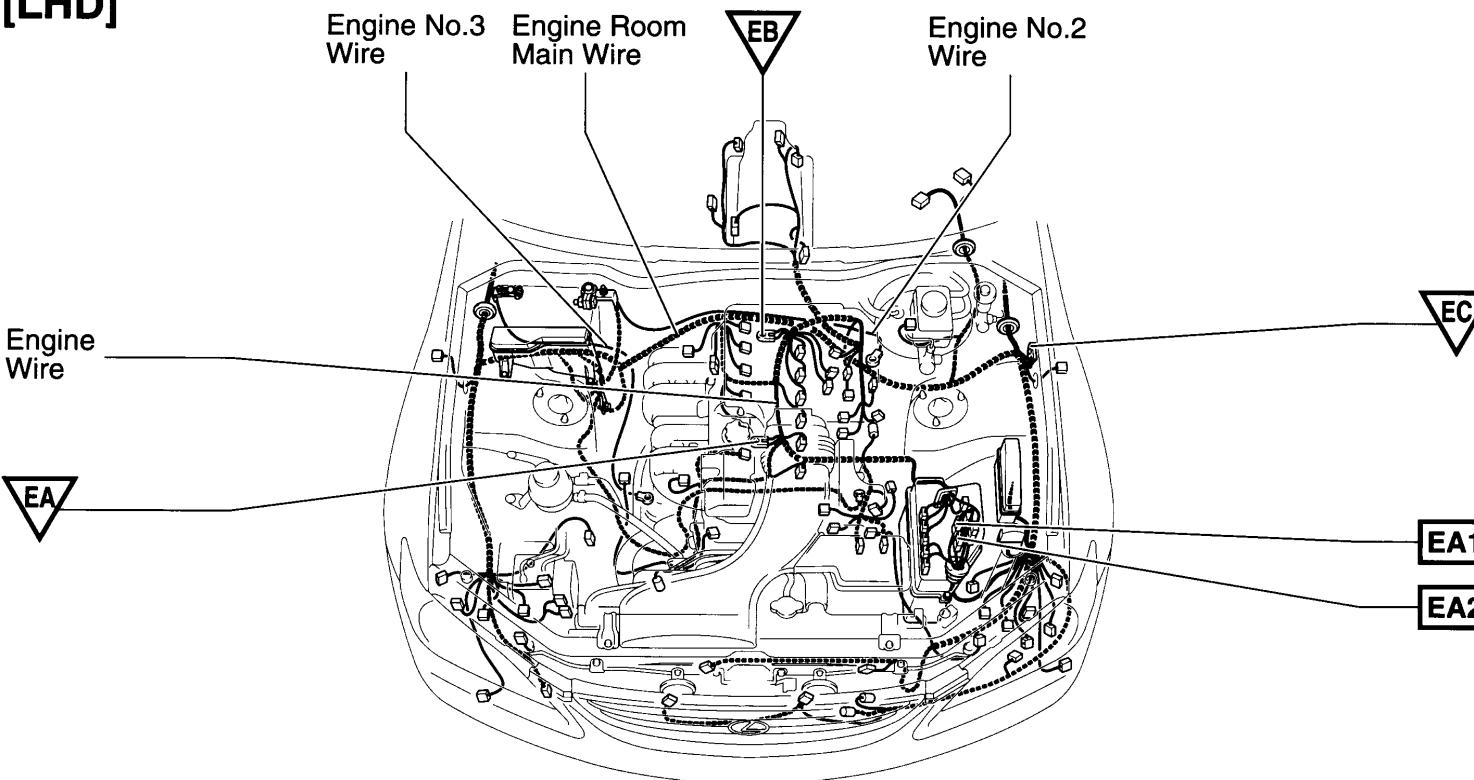


○ : Location of Splice Points



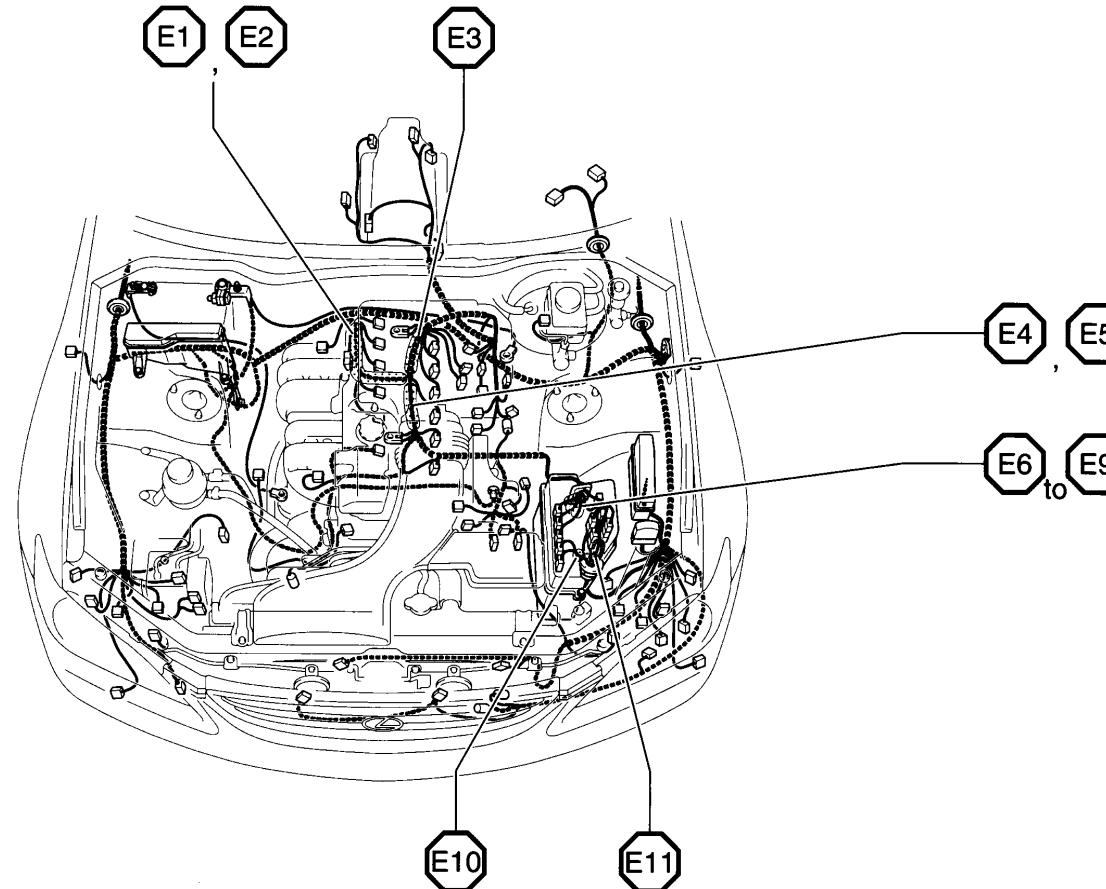


Connector Joining Wire Harness and Wire Harness

EA1 GRAY

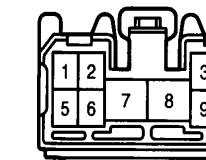


EA2 BLUE

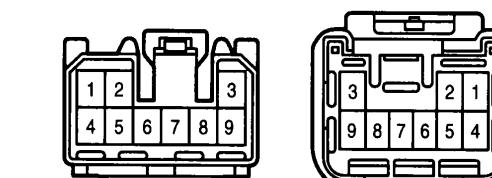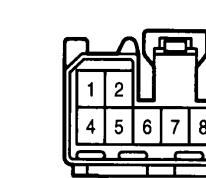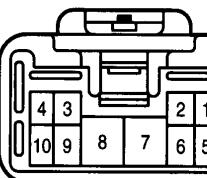


Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Wire and Engine Room Main Wire (Inside of the ECU Box)
EA2	

□ : Location of Connector Joining Wire Harness and Wire Harness



[LHD]

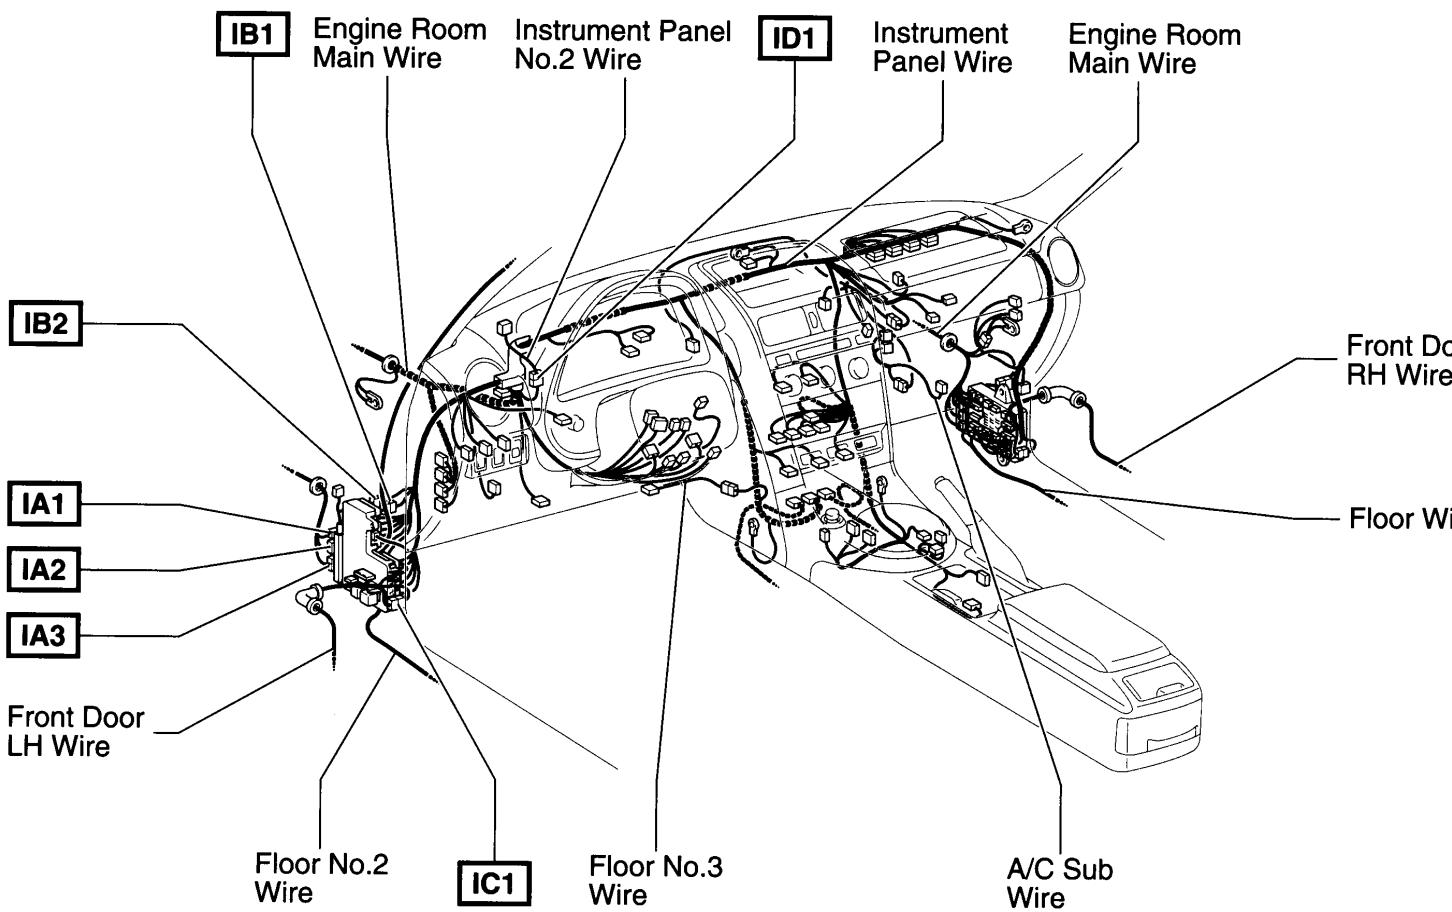

▽ : Location of Ground Points

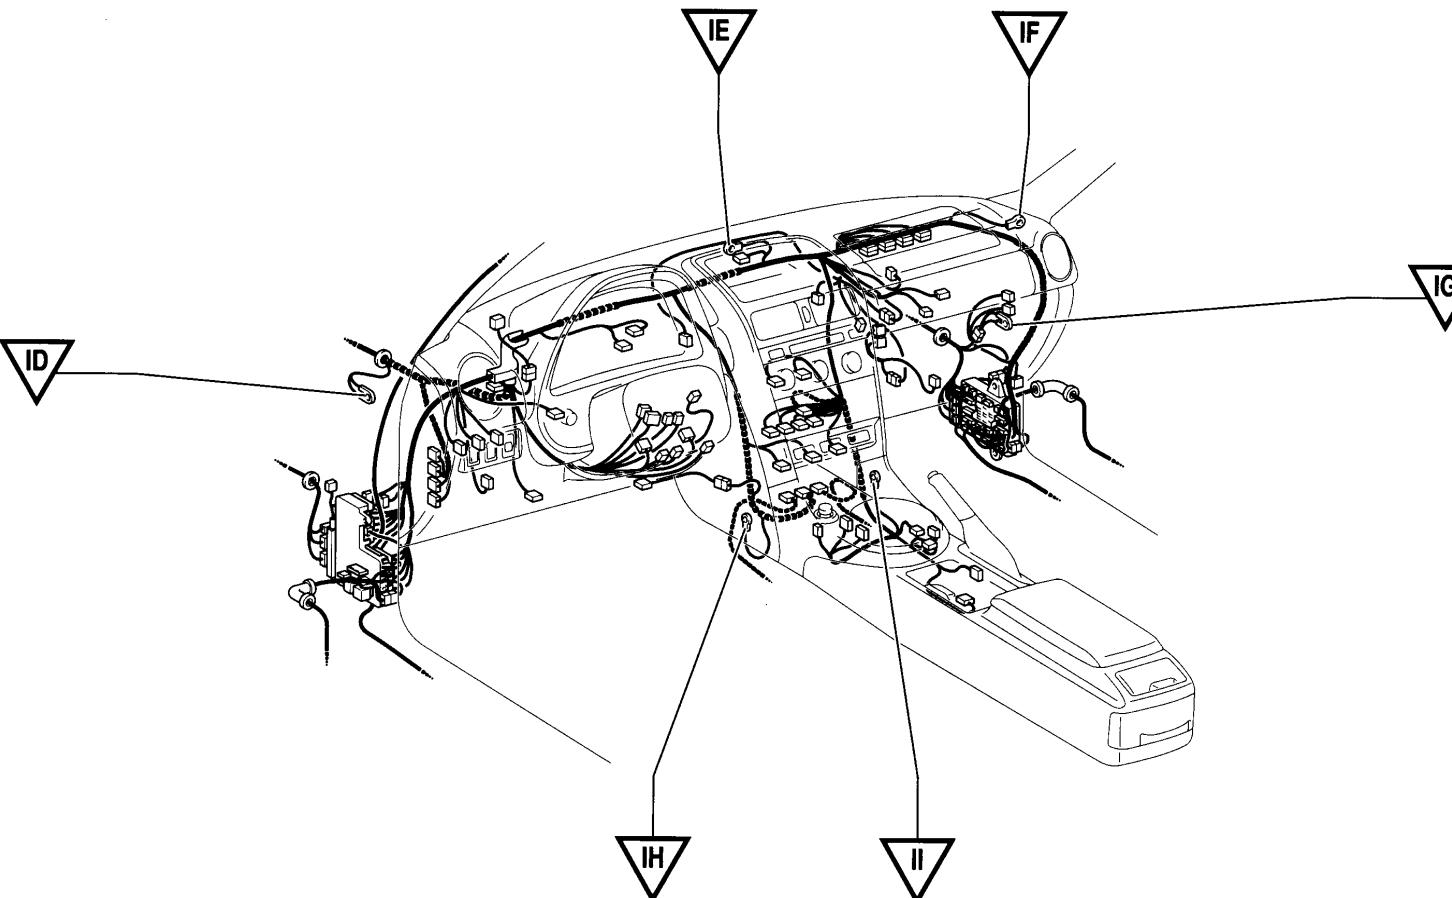


Connector Joining Wire Harness and Wire Harness

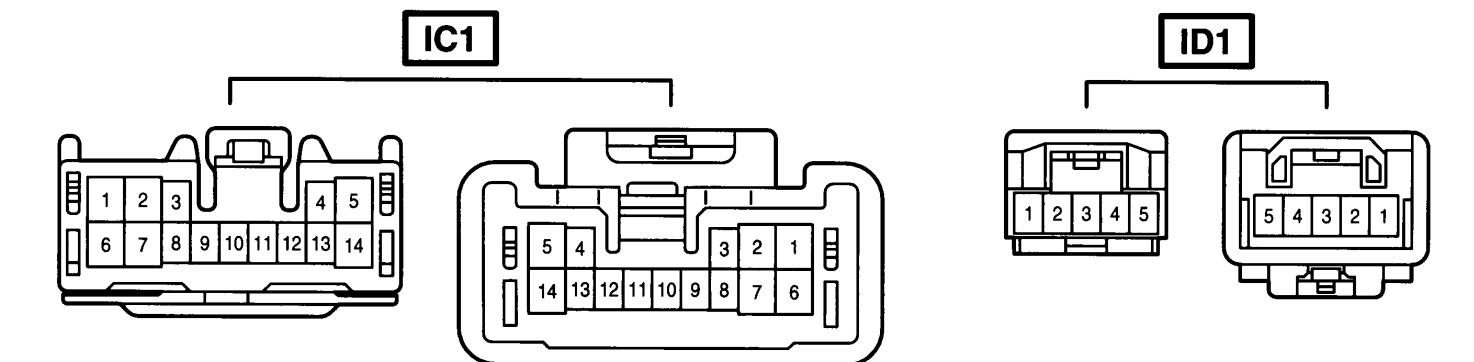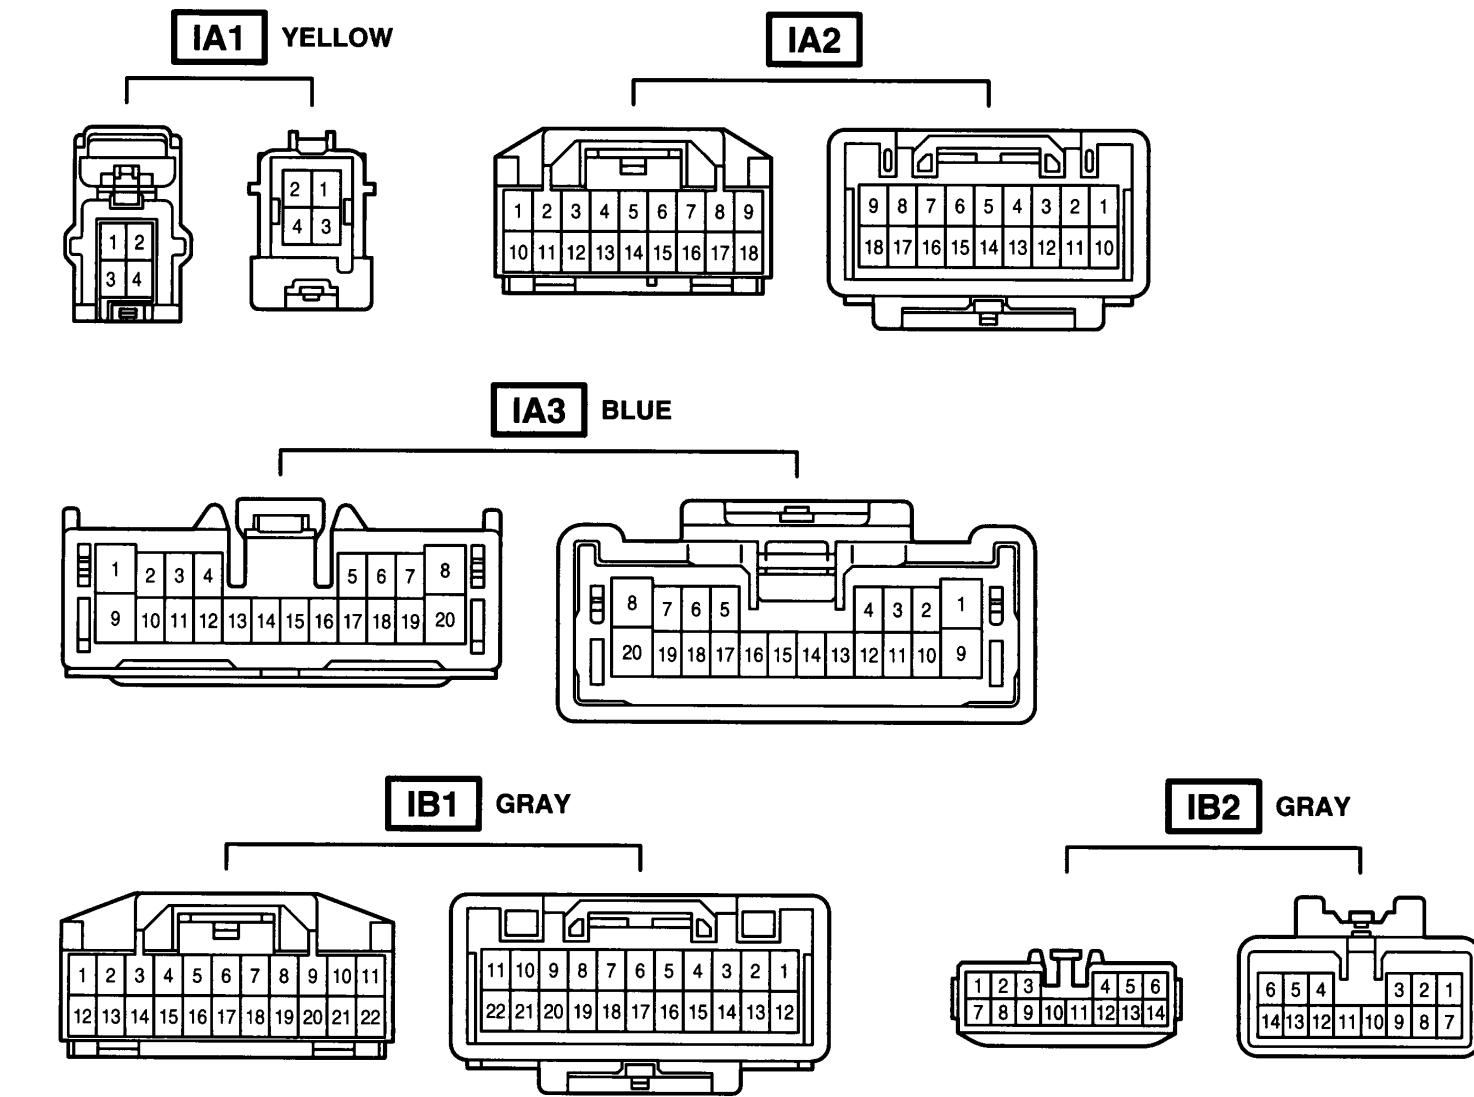


Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	
IA2	Instrument Panel Wire and Engine Room Main Wire (Near the Driver Side J/B)
IA3	
IB1	Instrument Panel Wire and Floor No.2 Wire (Near the Driver Side J/B)
IB2	
IC1	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
ID1	Instrument Panel No.2 Wire and Instrument Panel Wire (Left Side of the Instrument Panel)

: Location of Connector Joining Wire Harness and Wire Harness


[LHD]

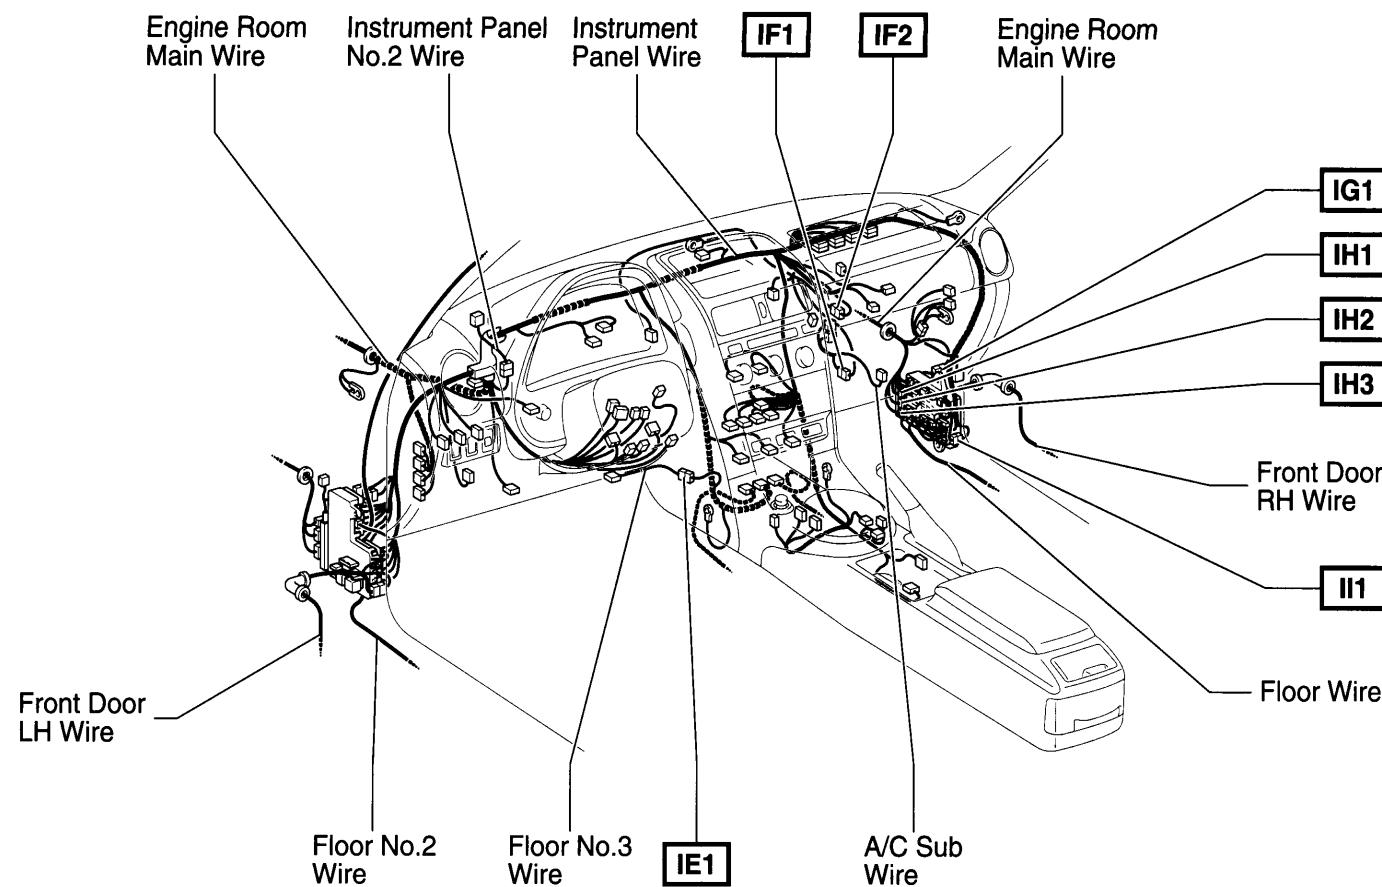

: Location of Splice Points

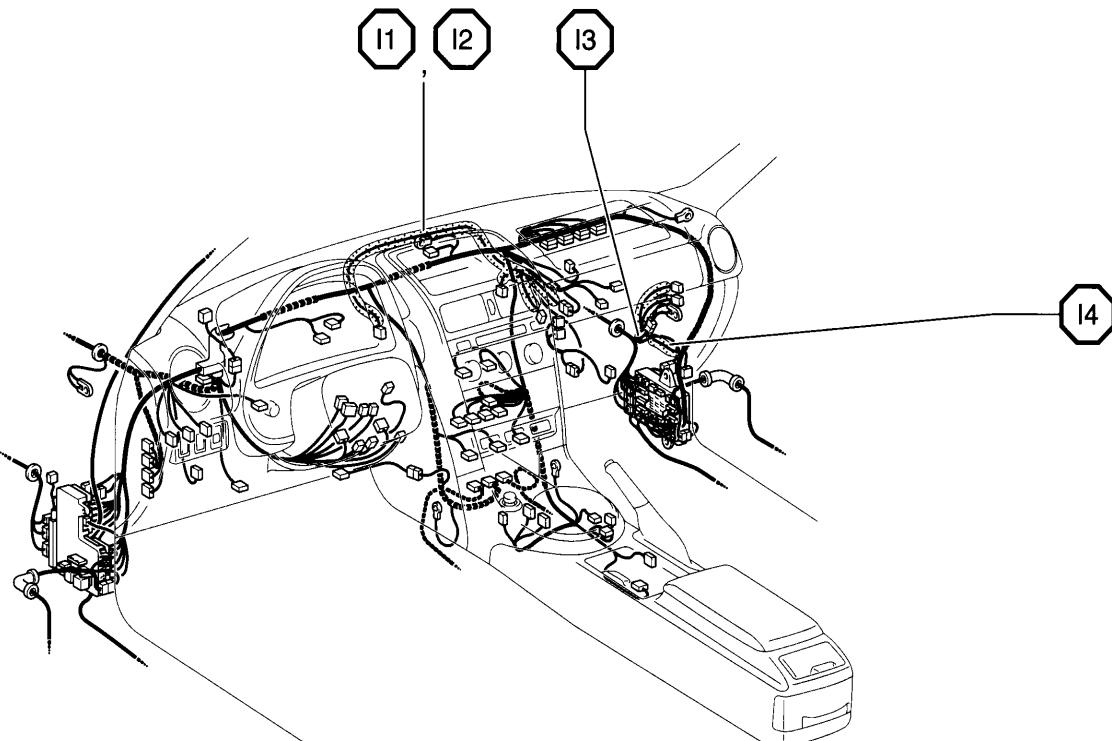

Connector Joining Wire Harness and Wire Harness

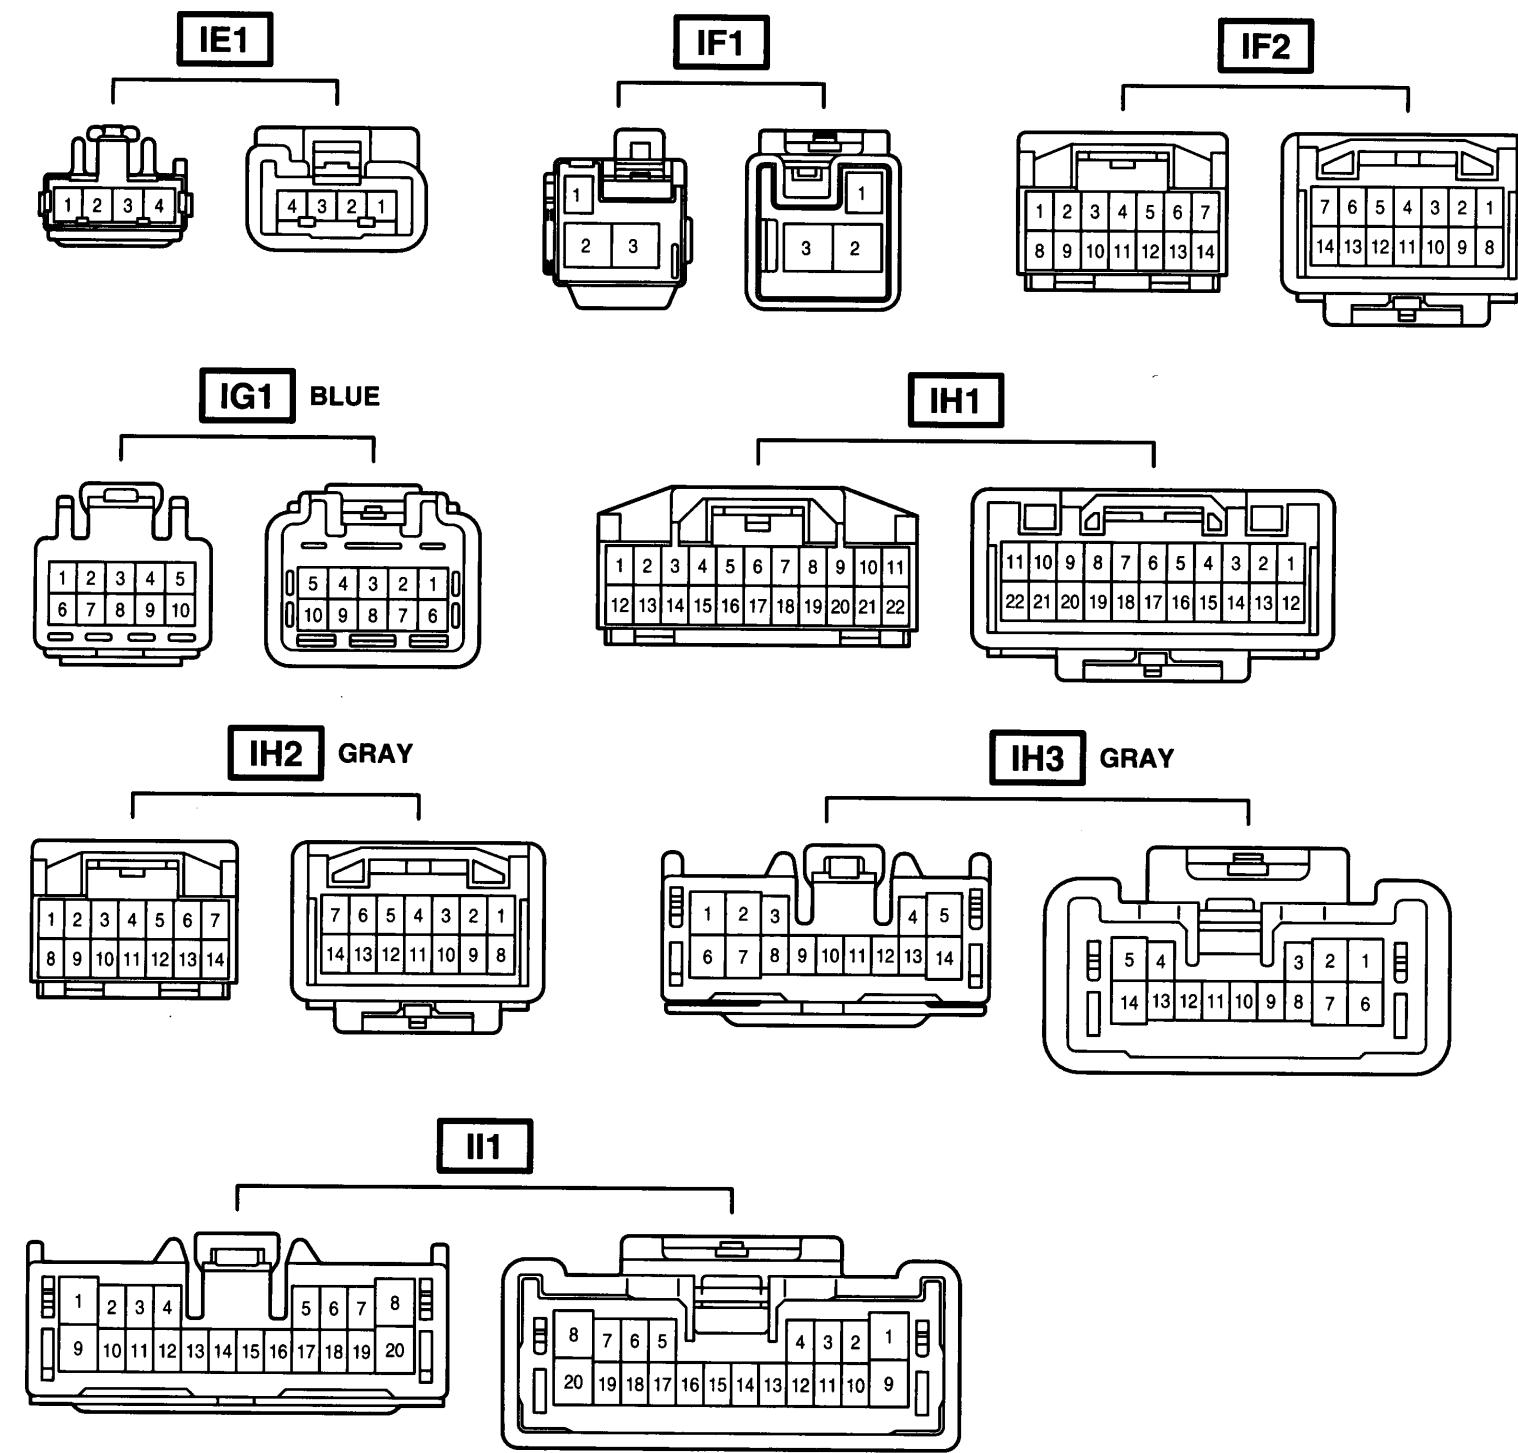


Code	Joining Wire Harness and Wire Harness (Connector Location)
IE1	Floor No.3 Wire and Floor No.2 Wire (Near the Steering Column)
IF1	Instrument Panel Wire and A/C Sub Wire (Left Side of the Blower Unit)
IF2	Instrument Panel Wire and A/C Sub Wire (Right Side of the Blower Unit)
IG1	Instrument Panel Wire and Engine Room Main Wire (Near the Passenger Side J/B)
IH1	Instrument Panel Wire and Floor Wire (Near the Passenger Side J/B)
IH2	Instrument Panel Wire and Floor Wire (Near the Passenger Side J/B)
IH3	Instrument Panel Wire and Floor Wire (Near the Passenger Side J/B)
II1	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[LHD]

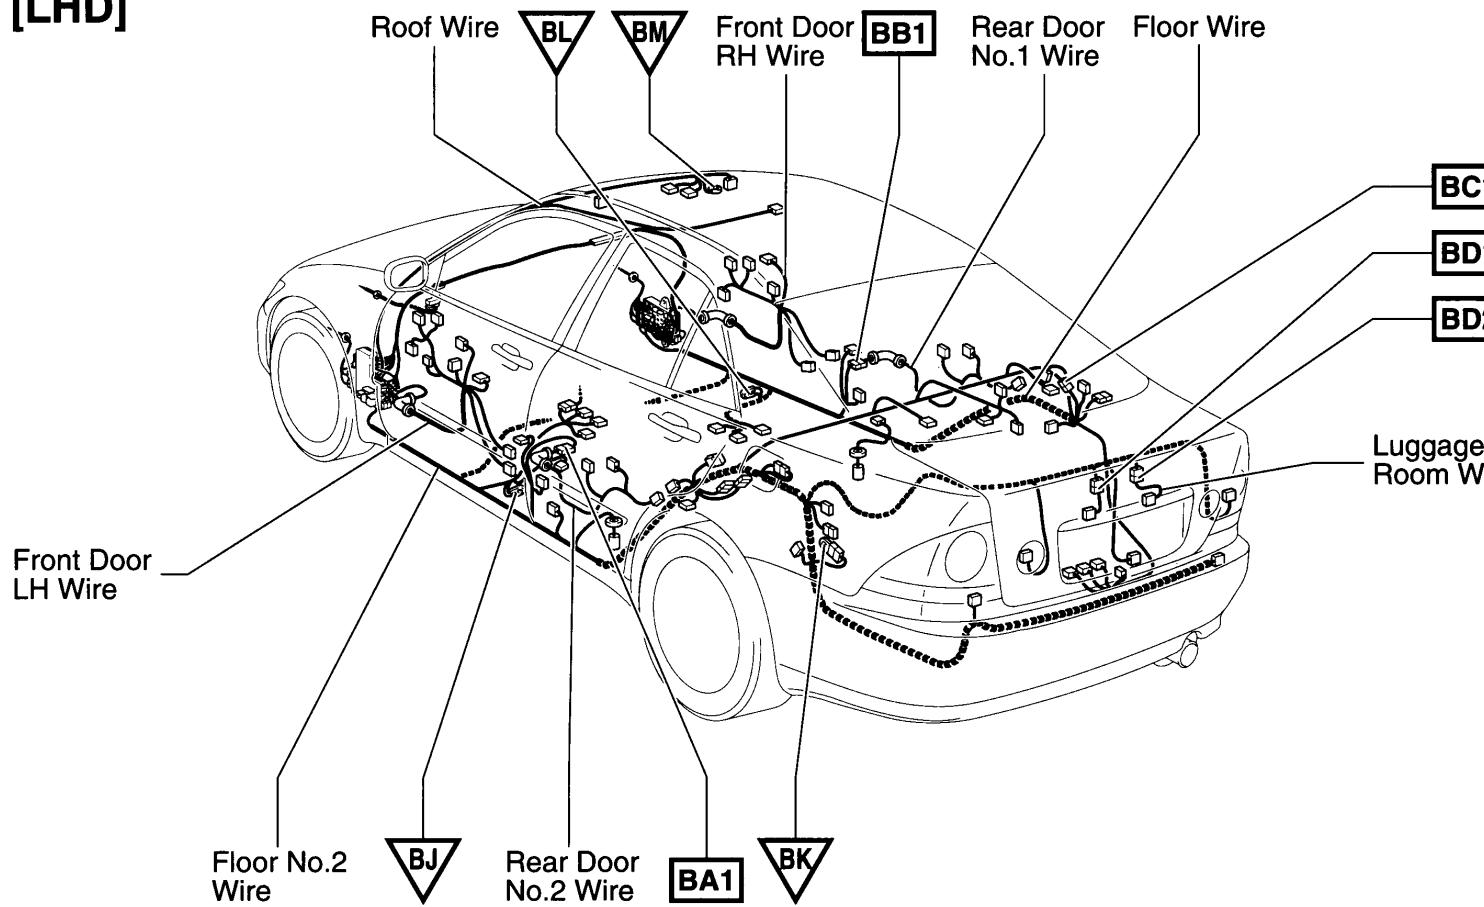


○ : Location of Splice Points

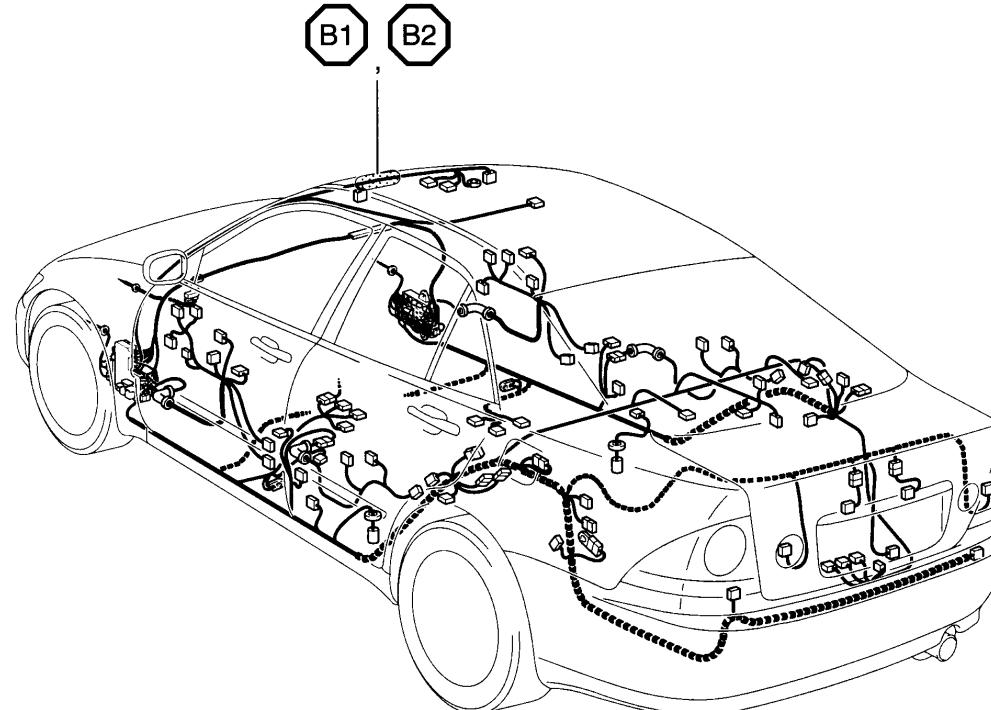


Connector Joining Wire Harness and Wire Harness


BA1

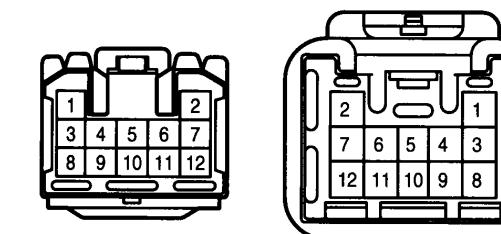


BB1

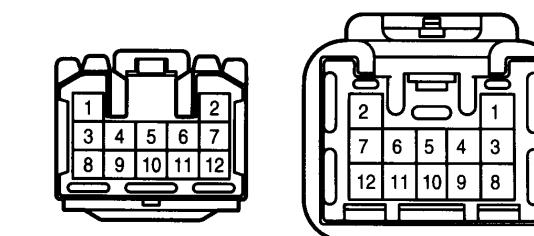


BC1

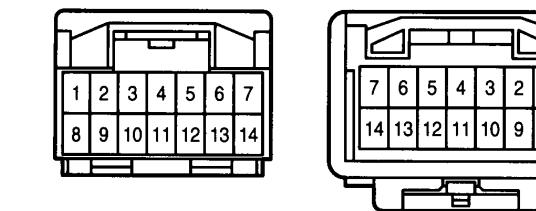

BD1 GRAY

 


BD2 GRAY

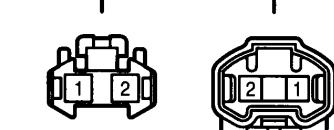


Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BB1	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BC1	Floor No.2 Wire and Floor Wire (Under the Right Rear Cushion)
BD1	Floor No.2 Wire and Luggage Room Wire (Right Side of the Luggage Door)
BD2	

: Location of Connector Joining Wire Harness and Wire Harness

[LHD]

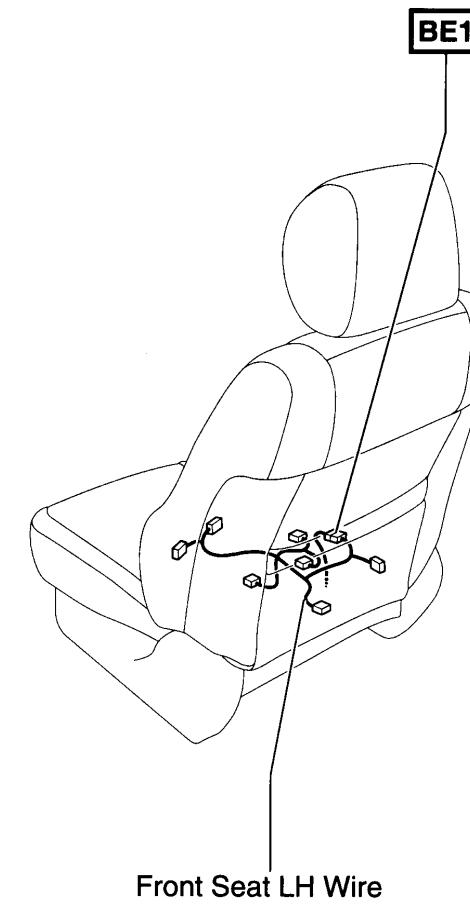

Connector Joining Wire Harness and Wire Harness

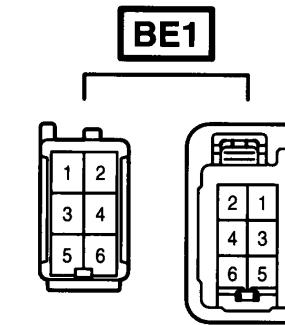

Code	Joining Wire Harness and Wire Harness (Connector Location)
BE1	Floor No.2 Wire and Front Seat LH Wire (Under the Driver's Seat)

: Location of Splice Points

