

## ABBREVIATIONS

The following abbreviations are used in this manual.

A/C	= Air Conditioner
ABS	= Anti-Lock Brake System
AVC-LAN	= Audio Visual Communication - Local Area Network
CAN	= Controller Area Network
DLC3	= Data Link Connector 3
DRL	= Daytime Running Light
DVD	= Digital Versatile Disc
E.F.I.	= Electronic Fuel Injection
EC	= Electrochromic
ECM	= Engine Control Module
ECU	= Electronic Control Unit
EGR	= Exhaust Gas Recirculation
EPS	= Electric Motor Power Steering
GPS	= Global Positioning System
HDD	= Hard Disk Drive
HV	= Hybrid Vehicle
IC	= Integrated Circuit
IEEE	= Institute of Electrical and Electronic Engineers
J/B	= Junction Block
LED	= Light Emitting Diode
LH	= Left-Hand
LHD	= Left-Hand Drive
PTC	= Positive Temperature Coefficient
R/B	= Relay Block
RH	= Right-Hand
RHD	= Right-Hand Drive
SRS	= Supplemental Restraint System
TRC	= Traction Control
VSC	= Vehicle Stability Control
VSV	= Vacuum Switching Valve
VVT	= Variable Valve Timing
w/	= With
w/o	= Without

\*The titles given inside the components are the names of the terminals (terminal codes) and are not treated as being abbreviations.