


Position of Parts in Engine Compartment <LHD 3GR-FE>

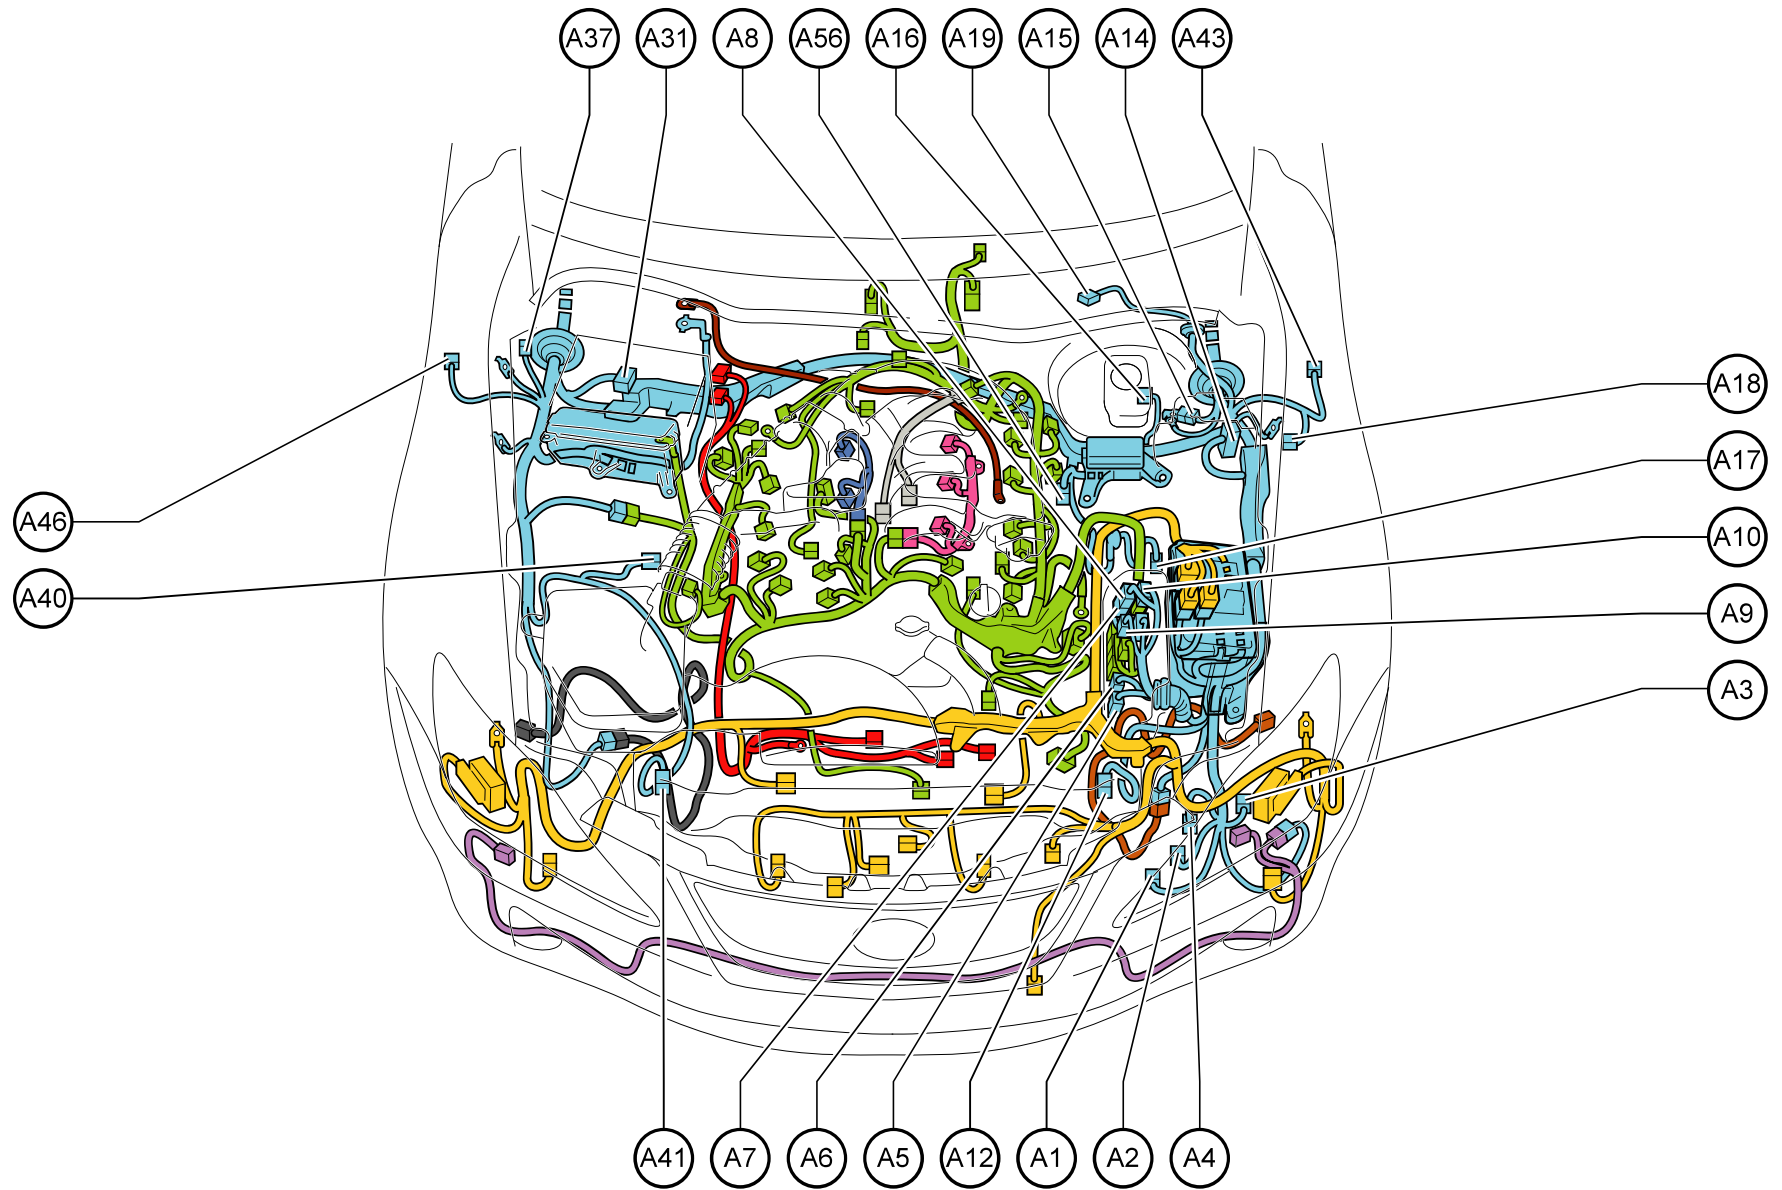


Position of Parts in Engine Compartment <LHD 3GR-FE>

A	1	Water Level Warning SW
A	2	Headlamp Cleaner Motor
A	3	Headlamp Cleaner Control Relay
A	4	Windshield Washer Motor
A	5	Engine ECU
A	6	Engine ECU
A	7	Junction Connector
A	8	Junction Connector
A	9	Junction Connector
A	10	Junction Connector
A	12	Airbag Sensor (Front LH)
A	14	Skid Control ECU with Actuator
A	15	Junction Connector
A	16	Brake Fluid Level Warning SW
A	17	Height Control Sensor (Front)
A	18	Wireless Door Lock Buzzer
A	19	Windshield Wiper Motor
A	31	Power Steering ECU
A	37	Security Horn
A	40	Fuel Pump Resistor
A	41	Airbag Sensor (Front RH)
A	43	Turn Signal Lamp (Front Side LH)
A	46	Turn Signal Lamp (Front Side RH)
A	56	A/C Pressure Sensor (Low)

Position of Parts in Engine Compartment <LHD 3GR-FE>


A 1
Black

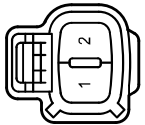


A 2
Black




A 3
Gray

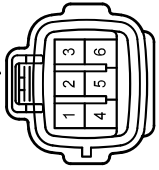


A 4
Black

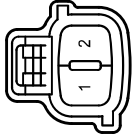


A 5
White

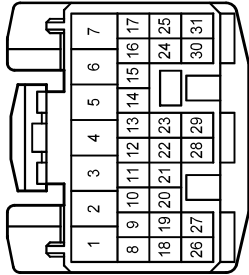

A 6
White

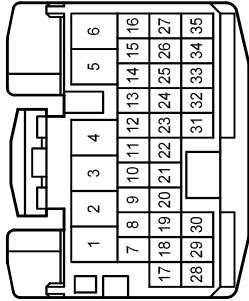


A 7
Blue

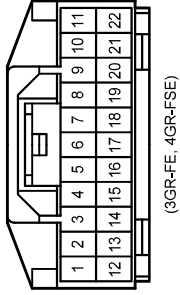


(3GR-FE, 4GR-FSE)

A 8
Blue

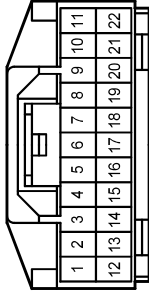


(3GR-FE, 4GR-FSE)

 A 9
White




A 10
Gray

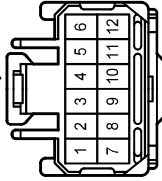


(3GR-FE, 4GR-FSE)


A 12
Yellow

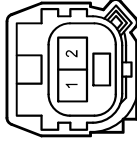


A 14
Black

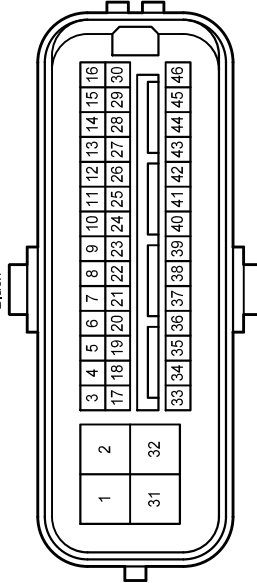


A 15
White

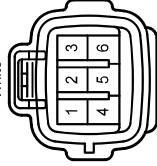


A 16
Gray

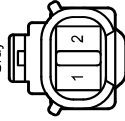


A 17
Black

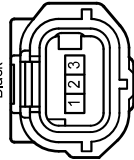


A 18
Black

 

A 19
Black

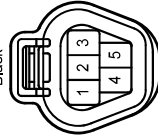

A 31
Black

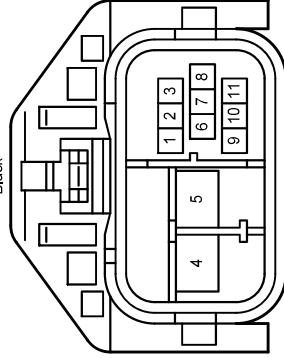


A 37
Black




A 40
Black




A 41
Yellow

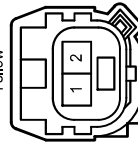


A 43
Gray

 


A 46
Gray

 



















A 56
Black

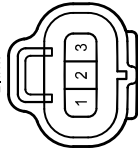

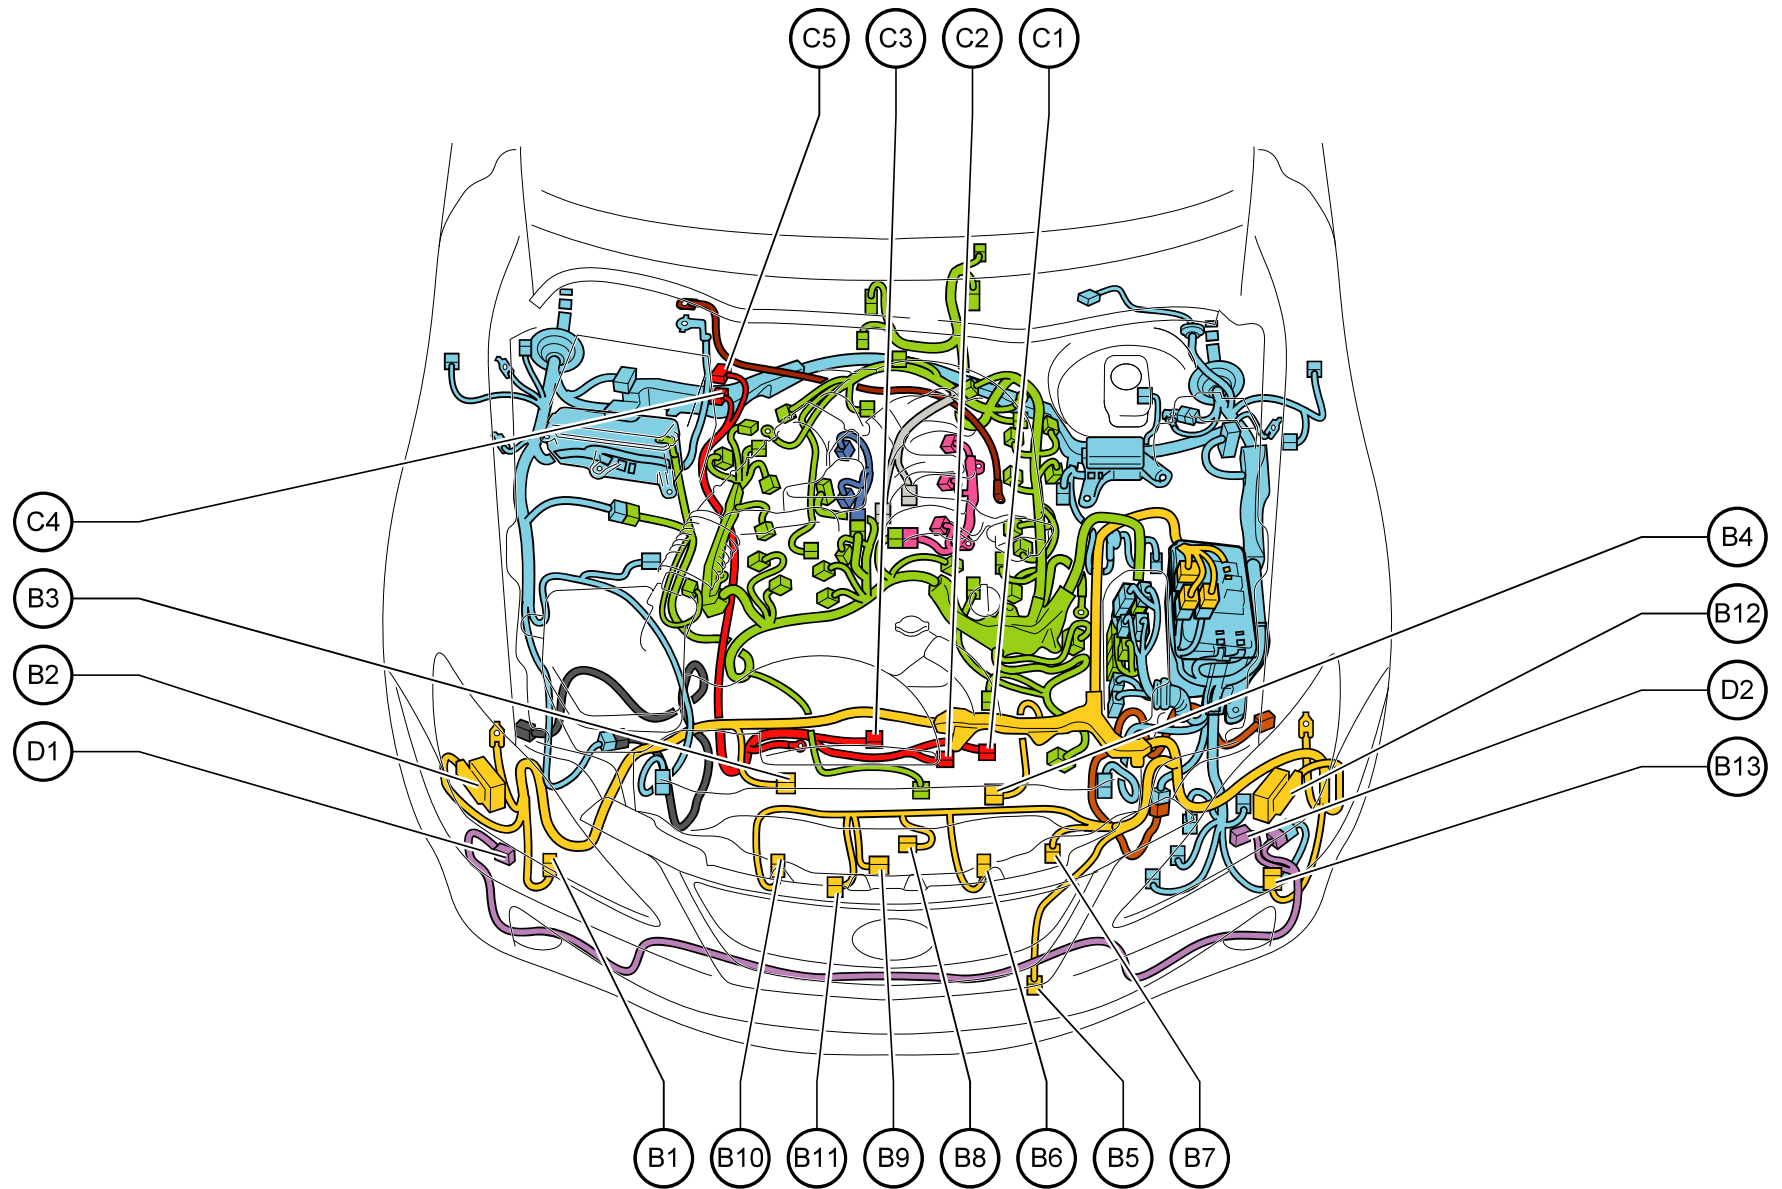


B	1	Fog Lamp (Front RH)
B	2	Headlamp Assembly (RH)
B	3	Cooling Fan Motor (No.2)
B	4	Cooling Fan Motor (No.1)
B	5	Ambient Temp. Sensor
B	6	Horn (Low)
B	7	A/C Pressure Sensor
B	8	Engine Hood Courtesy SW
B	9	Millimeter Wave Radar Sensor
B	10	Horn (High)
B	11	Smog Ventilation Sensor
B	12	Headlamp Assembly (LH)
B	13	Fog Lamp (Front LH)
C	1	Power Steering Torque Sensor
C	2	Power Steering Motor
C	3	Power Steering Motor
C	4	Power Steering ECU
C	5	Power Steering ECU
D	1	Ultrasonic Sensor (Front Corner RH)
D	2	Ultrasonic Sensor (Front Corner LH)

 Position of Parts in Engine Compartment <LHD 3GR-FE>

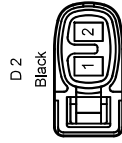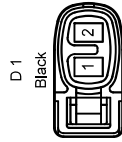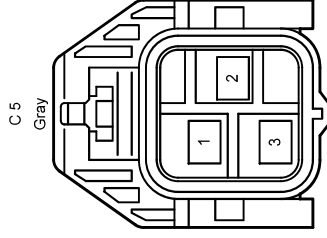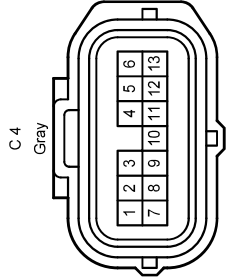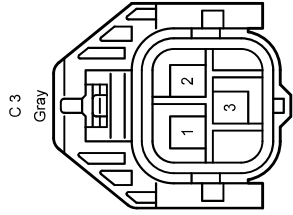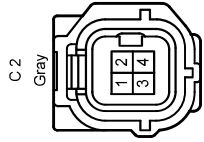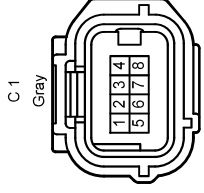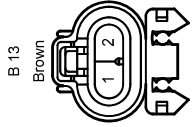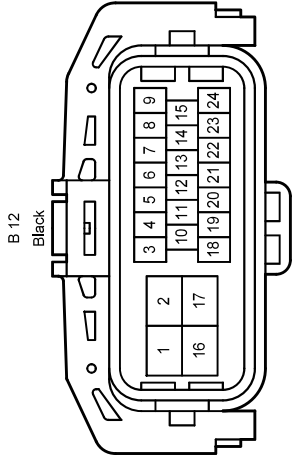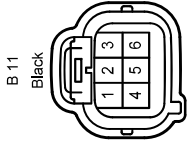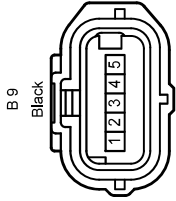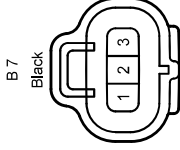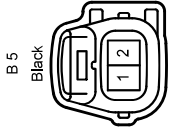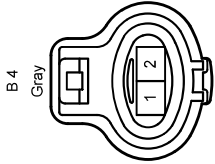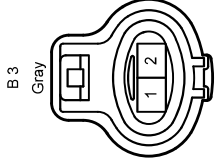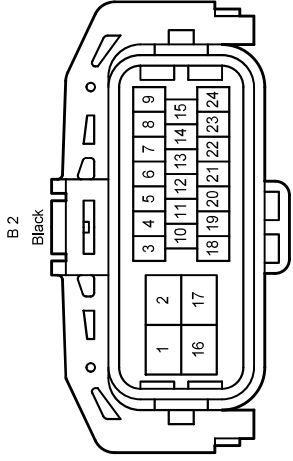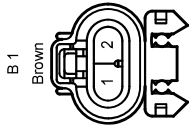


Position of Parts in Engine Compartment <LHD 3GR-FE>

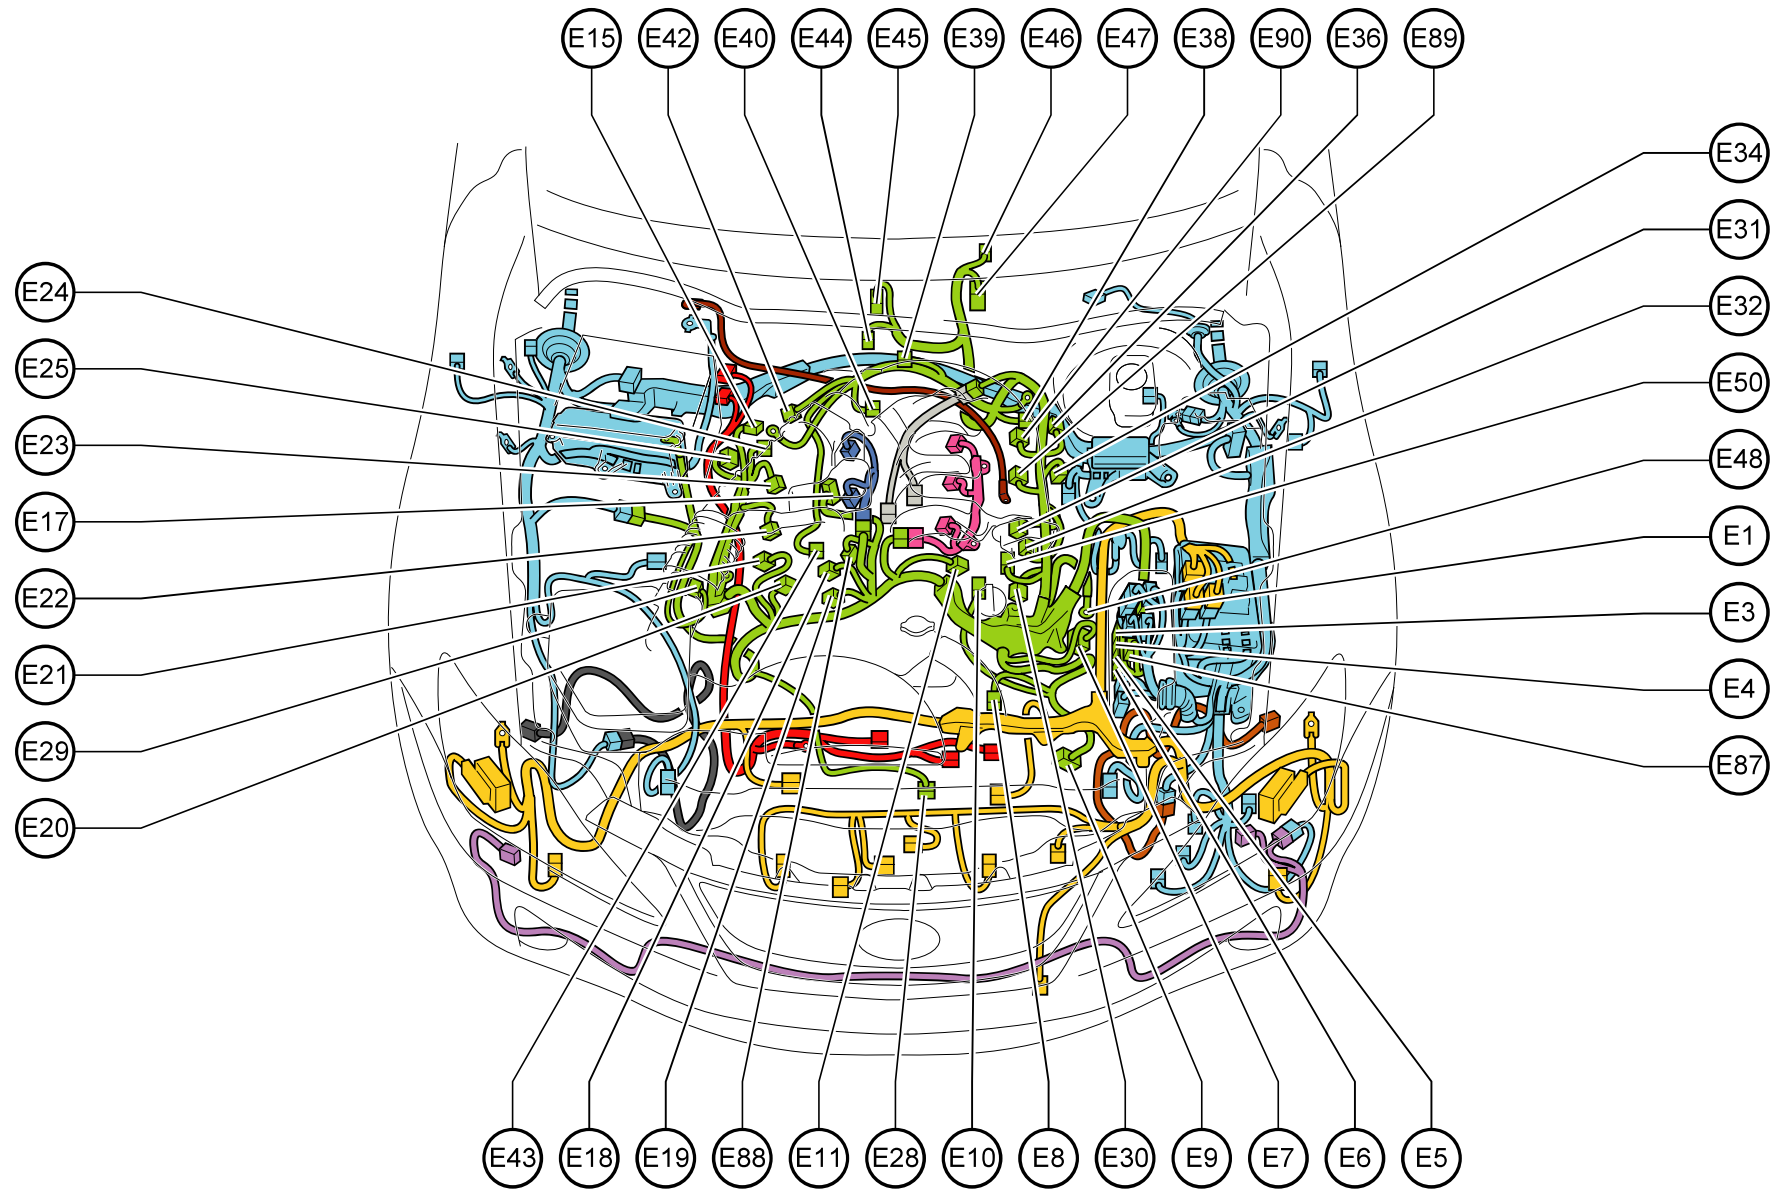


Position of Parts in Engine Compartment <LHD 3GR-FE>


E 1	Junction Connector
E 3	Engine ECU
E 4	Engine ECU
E 5	Engine ECU
E 6	Engine ECU
E 7	Alternator
E 8	A/C Compressor
E 9	Crankshaft Position Sensor
E 10	Starter
E 11	Camshaft Timing Oil Control Valve (LH Intake Side)
E 15	VSV (Purge)
E 17	Throttle Body Assembly
E 18	Camshaft Timing Oil Control Valve (RH Intake Side)
E 19	VVT Sensor (Bank 1 Intake Side)
E 20	Noise Filter (Ignition RH)
E 21	Camshaft Timing Oil Control Valve (RH Exhaust Side)
E 22	Ignition Coil (No.1)
E 23	Ignition Coil (No.3)
E 24	Ignition Coil (No.5)
E 25	VVT Sensor (Bank 1 Exhaust Side)
E 28	Engine Oil Pressure SW
E 29	Air Flow Meter
E 30	VVT Sensor (Bank 2 Intake Side)
E 31	Camshaft Timing Oil Control Valve (LH Exhaust Side)
E 32	Ignition Coil (No.2)
E 34	VVT Sensor (Bank 2 Exhaust Side)
E 36	Noise Filter (Ignition LH)
E 38	Air Fuel Ratio Sensor (Bank 2 Sensor 1)
E 39	Combustion Heater Glow Plug
E 40	Water Temp. Sensor
E 42	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
E 43	Engine Oil Level Sensor
E 44	Transmission Revolution Sensor (Turbine)
E 45	Park/Neutral Position SW
E 45	Park/Neutral Position SW
E 46	Transmission Revolution Sensor (Counter Gear)
E 47	ECT Solenoid
E 48	Alternator
E 50	VSV (ACIS)
E 87	Junction Connector
E 88	Fuel Injector (No.1)
E 89	Ignition Coil (No.4)
E 90	Ignition Coil (No.6)

Position of Parts in Engine Compartment <LHD 3GR-FE>

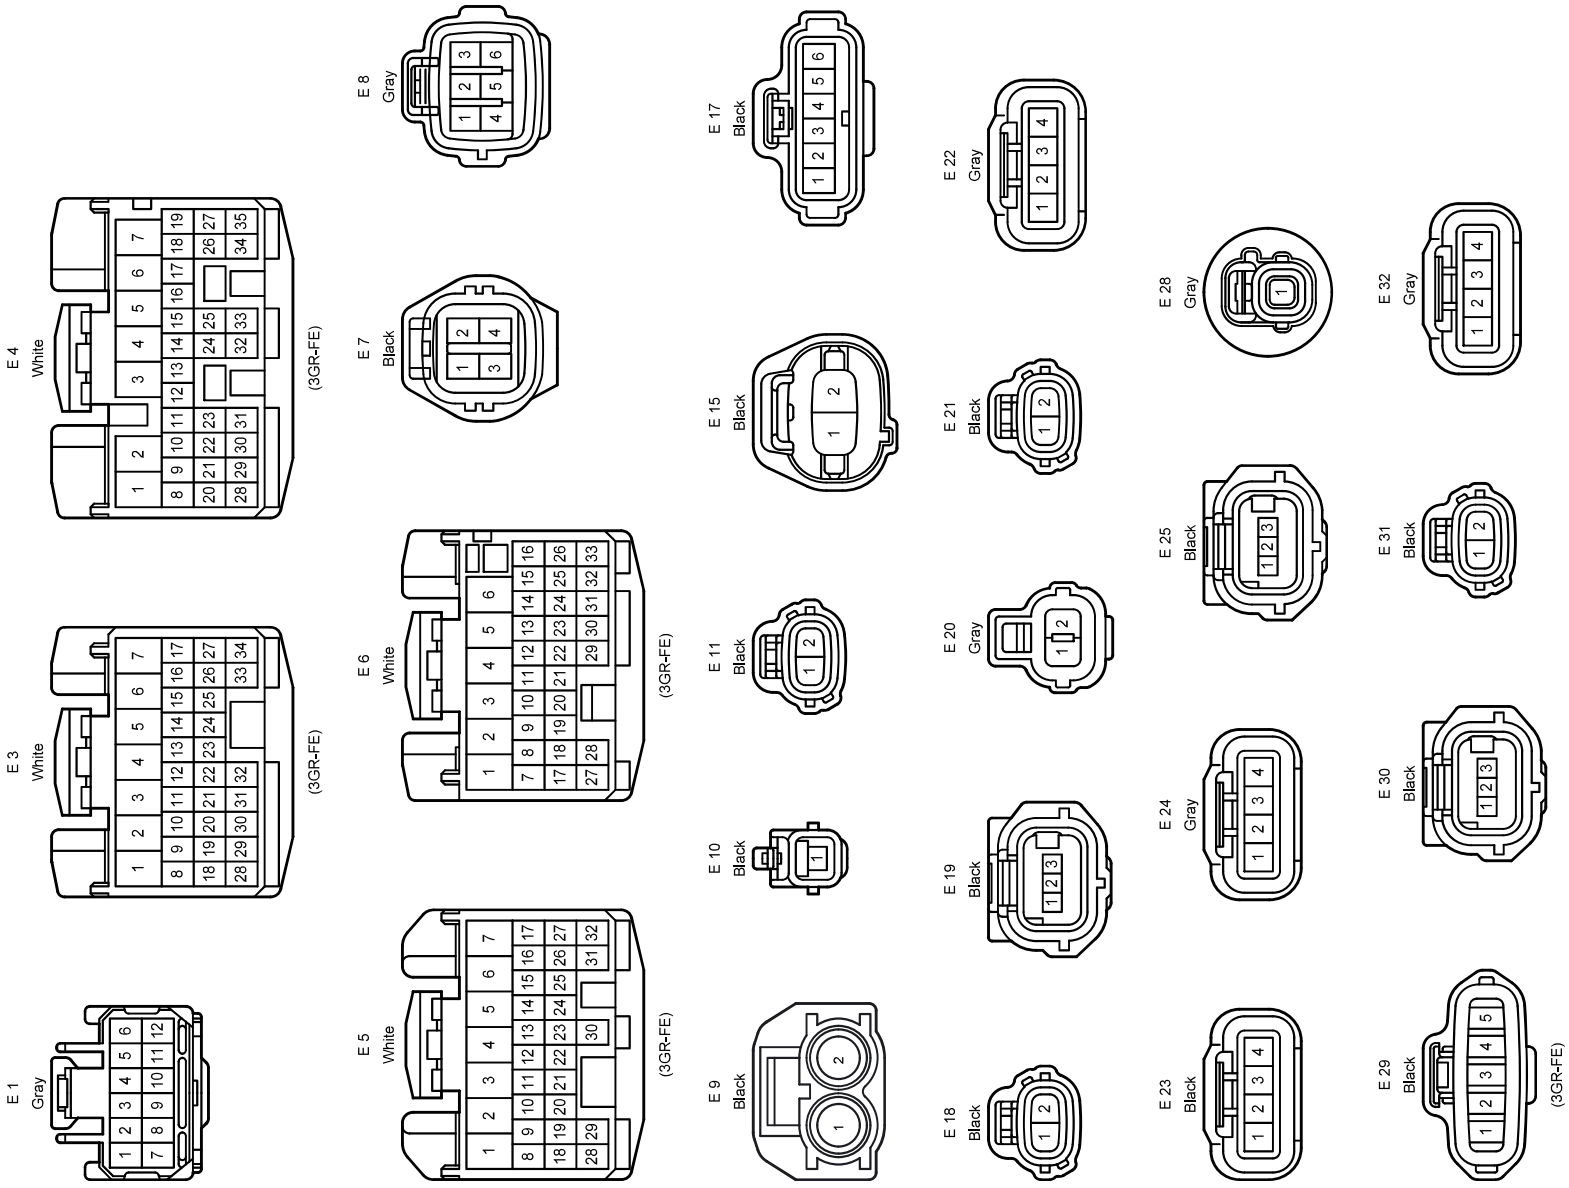

Position of Parts in Engine Compartment <LHD 3GR-FE>

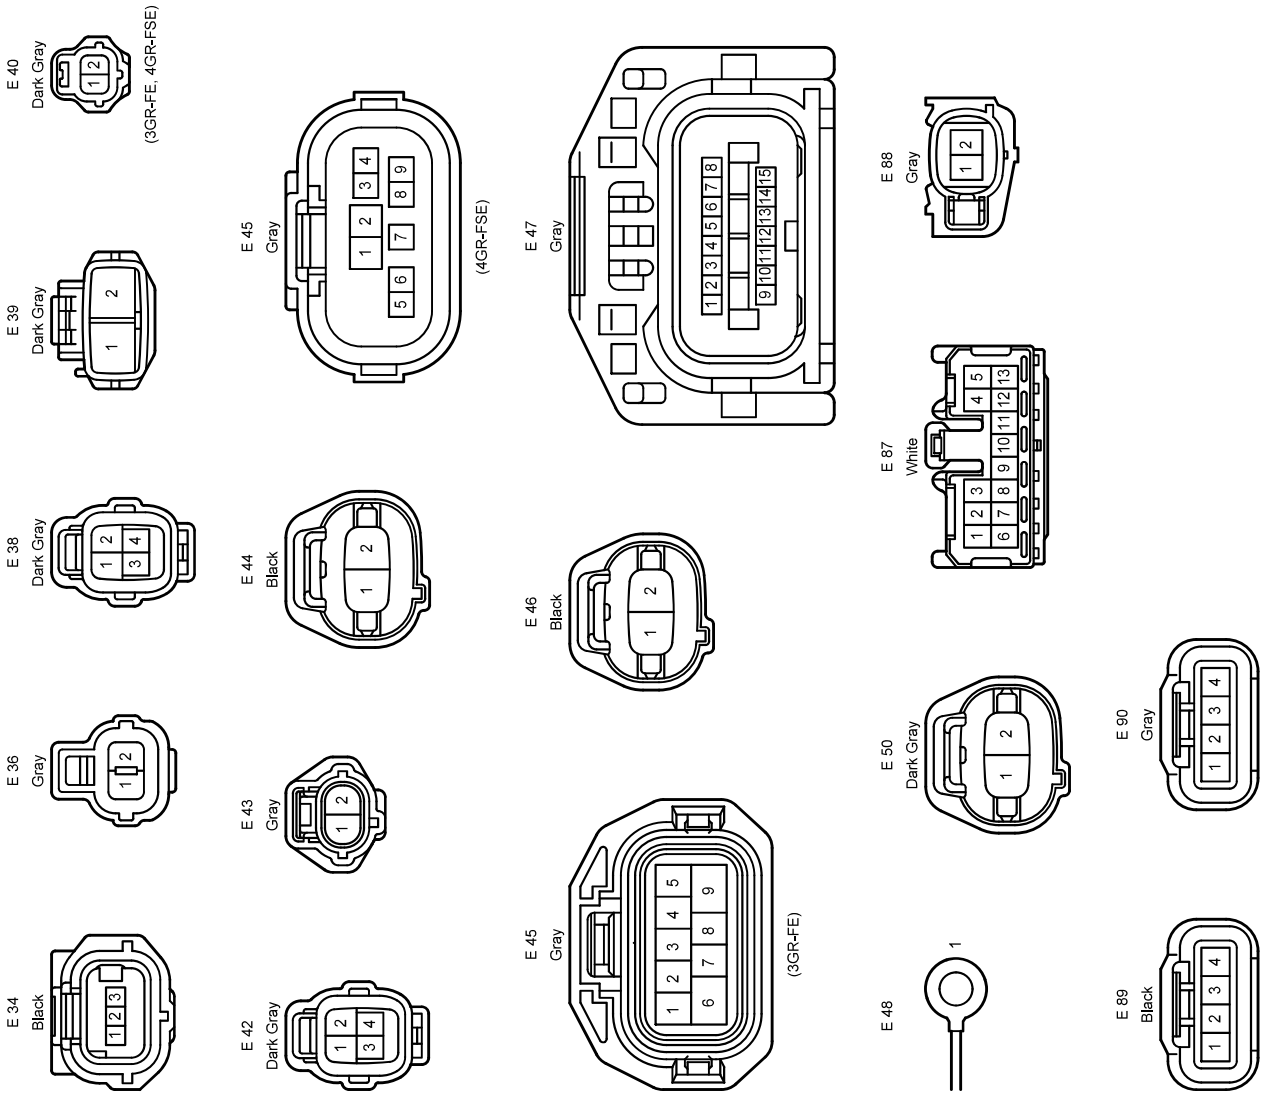

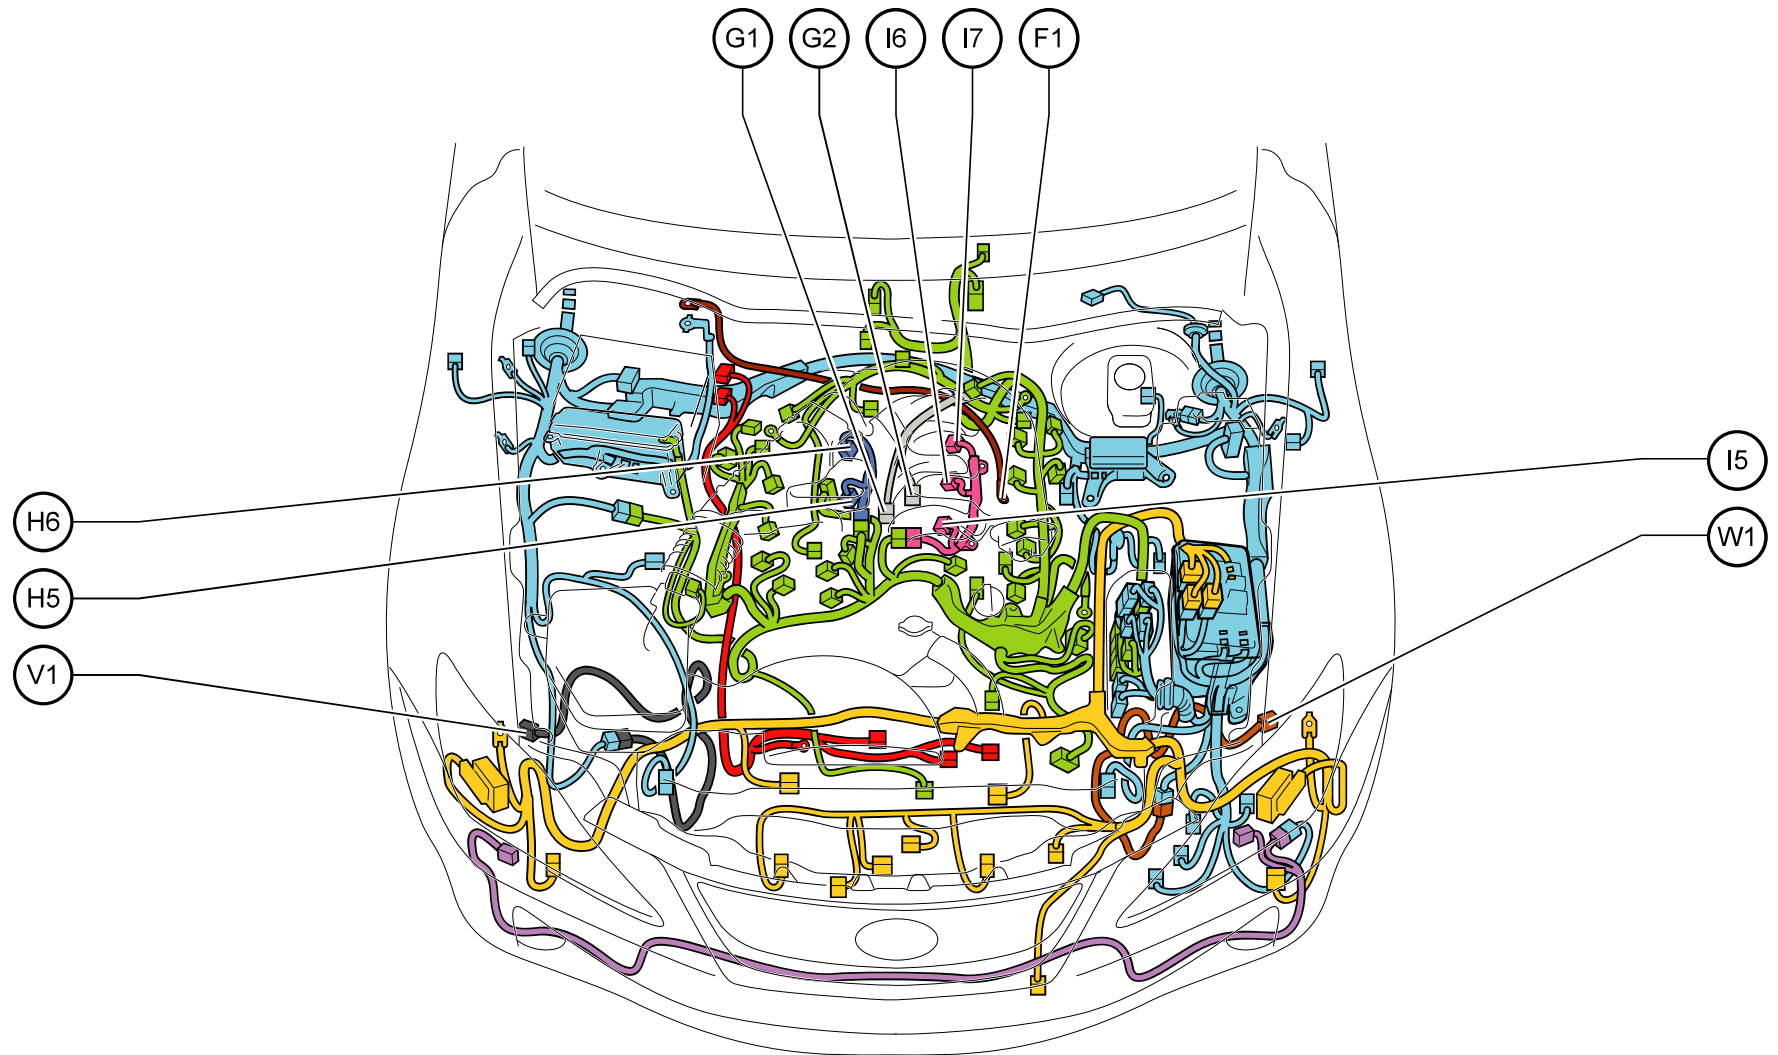

Position of Parts in Engine Compartment <LHD 3GR-FE>

F	1	Starter
G	1	Knock Control Sensor (Bank 1)
G	2	Knock Control Sensor (Bank 2)
H	5	Fuel Injector (No.3)
H	6	Fuel Injector (No.5)
I	5	Fuel Injector (No.2)
I	6	Fuel Injector (No.4)
I	7	Fuel Injector (No.6)
V	1	Speed Sensor (Front RH)
W	1	Speed Sensor (Front LH)

Position of Parts in Engine Compartment <LHD 3GR-FE>

