


Position of Parts in Body <RHD>

- * 5:15 Speaker
- * 6:8 Speaker
- * 7: Refer to the Service Bulletin for the installation position of the parts.

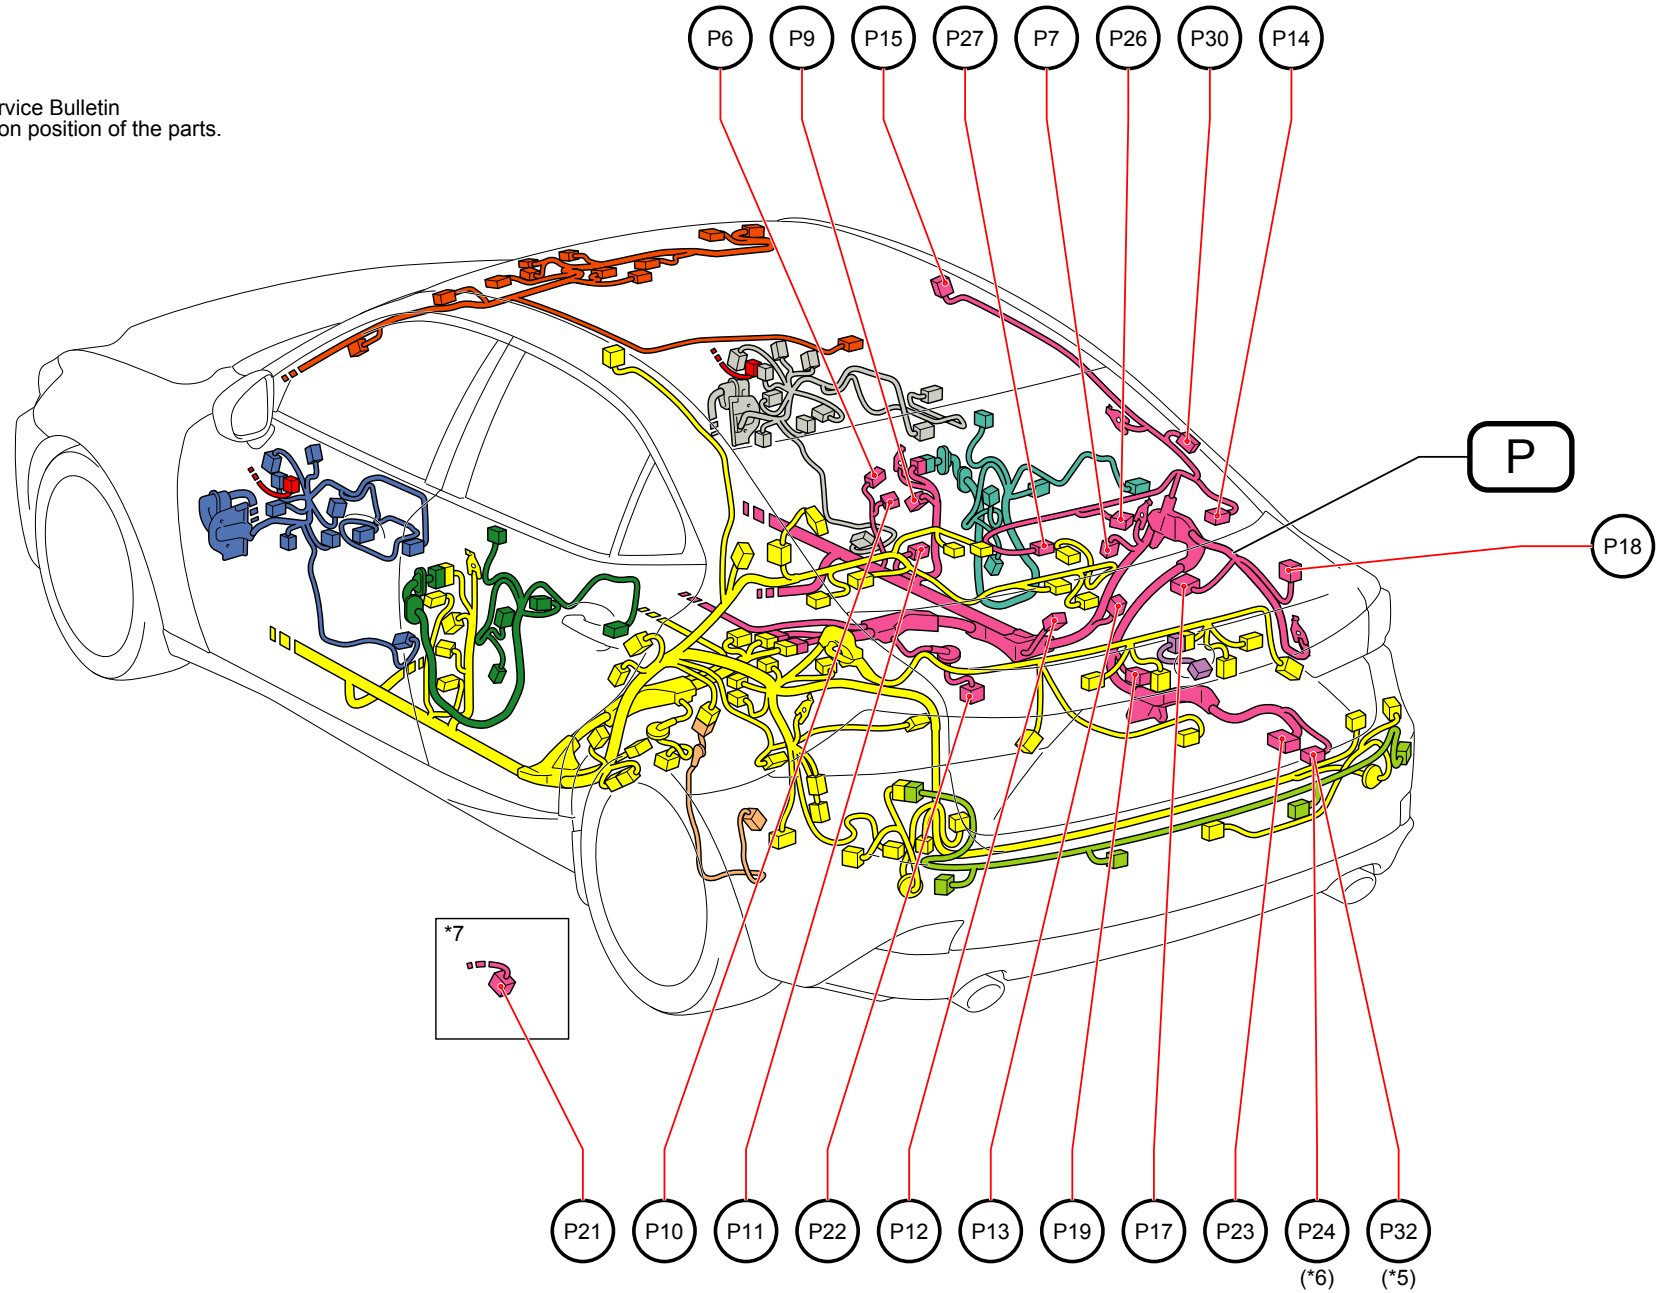

- P 6 Front Door Courtesy Light Switch Assembly RH
- P 7 Rear Door Courtesy Light Switch Assembly RH
- P 9 Side Airbag Sensor Assembly RH
- P 10 Front Seat Outer Belt Assembly RH
- P 11 Front Seat Outer Belt Assembly RH
- P 12 Rear Seat Airbag Assembly RH (Rear Side Seat Back Assembly RH)
- P 13 Rear Airbag Sensor RH
- P 14 Rear Seat 3 Point Type Outer Belt Assembly RH
- P 15 Curtain Shield Airbag Assembly RH
- P 17 Rear Absorber Control Actuator RH
- P 18 Rear Acceleration Sensor RH
- P 19 Rear Speed Sensor RH
- P 21 Theft Warning Siren Assembly
- P 22 Fuel Tank Vent Tube Assembly
- P 23 Stereo Component Amplifier Assembly
- P 24 Stereo Component Amplifier Assembly
- P 26 Rear Header Speaker Assembly RH
- P 27 Rear No. 3 Speaker Assembly
- P 30 Rear Window Defogger (Back Window Glass)
- P 32 Stereo Component Amplifier Assembly

Position of Parts in Body <RHD>

