

打印

关闭

Instrument Panel J/B Assembly

	Fuse	System
5A	P/W	<u>Power Window (LHD)</u> <u>Power Window (RHD)</u> <u>Remote Control Mirror (LHD w/ Seat Position Memory)</u> <u>Remote Control Mirror (LHD w/o Seat Position Memory)</u> <u>Remote Control Mirror (RHD w/ Seat Position Memory)</u> <u>Remote Control Mirror (RHD w/o Seat Position Memory)</u>
5A	SMART	<u>Entry & Start System (LHD)</u> <u>Entry & Start System (RHD)</u> <u>Immobiliser System (LHD)</u> <u>Immobiliser System (RHD)</u> <u>Starting (LHD)</u> <u>Starting (RHD)</u> <u>Steering Lock (LHD)</u> <u>Steering Lock (RHD)</u> <u>Wireless Door Lock Control (LHD)</u> <u>Wireless Door Lock Control (RHD)</u>
5A	WIPER SW-IG	<u>Turn Signal and Hazard Warning Light</u> <u>Wiper and Washer</u>
7.5A	A/BAG-IG2	<u>Blocking System</u> <u>G-BOOK (w/ Telematics Transceiver)</u> <u>Seat Belt Warning (LHD)</u> <u>Seat Belt Warning (RHD)</u> <u>SRS</u>
7.5A	A/C	<u>Air Conditioner</u> <u>Cooling Fan</u> <u>Front Window Deicer</u> <u>Mirror Heater (LHD w/ Seat Position Memory)</u> <u>Mirror Heater (RHD w/ Seat Position Memory)</u> <u>Mirror Heater (w/o Seat Position Memory)</u> <u>Rear Window Defogger</u>
7.5A	AM2	<u>Entry & Start System (LHD)</u> <u>Entry & Start System (RHD)</u> <u>Immobiliser System (LHD)</u> <u>Immobiliser System (RHD)</u> <u>Starting (LHD)</u> <u>Starting (RHD)</u> <u>Steering Lock (LHD)</u> <u>Steering Lock (RHD)</u> <u>Wireless Door Lock Control (LHD)</u> <u>Wireless Door Lock Control (RHD)</u>
7.5A	BKUP LP	<u>Back-Up Light</u> <u>Option Connector (Trailer Towing)</u>
7.5A	ECU-ACC	<u>Air Conditioner</u> <u>Audio System</u> <u>Automatic Light Control</u> <u>Back Guide Monitor System</u> <u>Back-Up Light</u> <u>Blind Spot Monitor System (LHD)</u> <u>Blind Spot Monitor System (RHD)</u> <u>Clock</u> <u>Combination Meter</u> <u>Cruise Control (2GR-FSE)</u> <u>Cruise Control (4GR-FSE)</u> <u>Door Lock Control (LHD)</u> <u>Dynamic Radar Cruise Control (LHD 2GR-FSE)</u> <u>Dynamic Radar Cruise Control (LHD 4GR-FSE)</u> <u>Dynamic Radar Cruise Control (RHD 2GR-FSE)</u> <u>Dynamic Radar Cruise Control (RHD 4GR-FSE)</u> <u>ECT and A/T Indicator (2GR-FSE)</u> <u>ECT and A/T Indicator (4GR-FSE)</u> <u>Engine Control (2GR-FSE)</u> <u>Engine Control (4GR-FSE)</u> <u>Entry & Start System (LHD)</u> <u>Entry & Start System (RHD)</u> <u>Front Fog Light</u>

		<u>Fuel Lid Opener (LHD)</u>
		<u>G-BOOK (w/ Telematics Transceiver)</u>
		<u>G-BOOK (w/o Telematics Transceiver)</u>
		<u>Headlight</u>
		<u>Headlight Beam Level Control</u>
		<u>Headlight Cleaner</u>
		<u>Illumination (LHD)</u>
		<u>Illumination (RHD)</u>
		<u>Immobiliser System (LHD)</u>
		<u>Immobiliser System (RHD)</u>
		<u>Interior Light (LHD)</u>
		<u>Interior Light (RHD)</u>
		<u>Lane Departure Alert (LHD)</u>
		<u>Lane Departure Alert (RHD)</u>
		<u>LEXUS Navigation System</u>
		<u>LEXUS Parking Assist-Sensor System (LHD)</u>
		<u>LEXUS Parking Assist-Sensor System (RHD)</u>
		<u>Light Auto Turn Off System</u>
		<u>Light Reminder</u>
		<u>Luggage Compartment Door Opener (LHD)</u>
		<u>Mirror Heater (LHD w/ Seat Position Memory)</u>
		<u>Mirror Heater (RHD w/ Seat Position Memory)</u>
		<u>Option Connector (Trailer Towing)</u>
		<u>Power Seat (LHD Driver's Seat w/ Seat Position Memory)</u>
		<u>Power Seat (RHD Driver's Seat w/ Seat Position Memory)</u>
		<u>Power Tilt and Power Telescopic (LHD)</u>
		<u>Power Tilt and Power Telescopic (RHD)</u>
		<u>Power Window (LHD)</u>
		<u>Power Window (RHD)</u>
		<u>Rear Fog Light</u>
		<u>Rear Sunshade</u>
		<u>Rear View Monitor System</u>
		<u>Remote Control Mirror (LHD w/ Seat Position Memory)</u>
		<u>Remote Control Mirror (LHD w/o Seat Position Memory)</u>
		<u>Remote Control Mirror (RHD w/ Seat Position Memory)</u>
		<u>Remote Control Mirror (RHD w/o Seat Position Memory)</u>
		<u>Sliding Roof</u>
		<u>Starting (LHD)</u>
		<u>Starting (RHD)</u>
		<u>Steering Lock (LHD)</u>
		<u>Steering Lock (RHD)</u>
		<u>Taillight</u>
		<u>Theft Deterrent (LHD)</u>
		<u>Tire Pressure Warning System</u>
		<u>Vehicle Dynamics Integrated Management (LHD)</u>
		<u>Vehicle Dynamics Integrated Management (RHD)</u>
		<u>Wireless Door Lock Control (LHD)</u>
		<u>Wireless Door Lock Control (RHD)</u>
		<u>Cruise Control (2GR-FSE)</u>
		<u>Cruise Control (4GR-FSE)</u>
		<u>Dynamic Radar Cruise Control (LHD 2GR-FSE)</u>
		<u>Dynamic Radar Cruise Control (LHD 4GR-FSE)</u>
		<u>Dynamic Radar Cruise Control (RHD 2GR-FSE)</u>
		<u>Dynamic Radar Cruise Control (RHD 4GR-FSE)</u>
		<u>ECT and A/T Indicator (2GR-FSE)</u>
		<u>ECT and A/T Indicator (4GR-FSE)</u>
		<u>Engine Control (2GR-FSE)</u>
		<u>Engine Control (4GR-FSE)</u>
		<u>Cruise Control (2GR-FSE)</u>
		<u>Cruise Control (4GR-FSE)</u>
		<u>Dynamic Radar Cruise Control (LHD 2GR-FSE)</u>
		<u>Dynamic Radar Cruise Control (LHD 4GR-FSE)</u>
		<u>Dynamic Radar Cruise Control (RHD 2GR-FSE)</u>
		<u>Dynamic Radar Cruise Control (RHD 4GR-FSE)</u>
		<u>ECT and A/T Indicator (2GR-FSE)</u>
		<u>ECT and A/T Indicator (4GR-FSE)</u>
		<u>Engine Control (2GR-FSE)</u>
		<u>Engine Control (4GR-FSE)</u>
		<u>Entry & Start System (LHD)</u>
		<u>Entry & Start System (RHD)</u>
		<u>Immobiliser System (LHD)</u>
		<u>Immobiliser System (RHD)</u>
		<u>Multiplex Communication System (CAN LHD)</u>
		<u>Multiplex Communication System (CAN RHD)</u>
7.5A	IGN NO.1	
7.5A	IGN NO.2	

7.5A METER

Option Connector (Remote Engine Starter System)
Pre-Crash Safety System (LHD)
Pre-Crash Safety System (RHD)
Starting (LHD)
Starting (RHD)
Steering Lock (LHD)
Steering Lock (RHD)
Wireless Door Lock Control (LHD)
Wireless Door Lock Control (RHD)
Adaptive Variable Suspension (LHD)
Adaptive Variable Suspension (RHD)
Air Conditioner
Audio System
Back Guide Monitor System
Blind Spot Monitor System (LHD)
Blind Spot Monitor System (RHD)
Charging
Combination Meter
Cruise Control (2GR-FSE)
Cruise Control (4GR-FSE)
Door Lock Control (LHD)
Door Lock Control (RHD)
Dynamic Radar Cruise Control (LHD 2GR-FSE)
Dynamic Radar Cruise Control (LHD 4GR-FSE)
Dynamic Radar Cruise Control (RHD 2GR-FSE)
Dynamic Radar Cruise Control (RHD 4GR-FSE)
ECT and A/T Indicator (2GR-FSE)
ECT and A/T Indicator (4GR-FSE)
Engine Control (2GR-FSE)
Engine Control (4GR-FSE)
Entry & Start System (LHD)
Entry & Start System (RHD)
EPS (LHD)
EPS (RHD)
Front Fog Light
Fuel Lid Opener (LHD)
Fuel Lid Opener (RHD)
G-BOOK (w/o Telematics Transceiver)
Headlight
Headlight Beam Level Control
Illumination (LHD)
Illumination (RHD)
Immobiliser System (LHD)
Immobiliser System (RHD)
Lane Departure Alert (LHD)
Lane Departure Alert (RHD)
LEXUS Navigation System
LEXUS Parking Assist-Sensor System (LHD)
LEXUS Parking Assist-Sensor System (RHD)
Light Reminder
Luggage Compartment Door Opener (LHD)
Luggage Compartment Door Opener (RHD)
Option Connector (Trailer Towing)
Power Window (LHD)
Power Window (RHD)
Pre-Crash Safety System (LHD)
Pre-Crash Safety System (RHD)
Rear Fog Light
Rear View Monitor System
Seat Belt Warning (LHD)
Seat Belt Warning (RHD)
Sliding Roof
SRS
Starting (LHD)
Starting (RHD)
Steering Lock (LHD)
Steering Lock (RHD)
Taillight
Theft Deterrent (LHD)
Theft Deterrent (RHD)
Tire Pressure Warning System
Turn Signal and Hazard Warning Light
Vehicle Dynamics Integrated Management (LHD)
Vehicle Dynamics Integrated Management (RHD)

		<u>VGRS System (LHD)</u>
		<u>VGRS System (RHD)</u>
		<u>Wiper and Washer</u>
		<u>Wireless Door Lock Control (LHD)</u>
		<u>Wireless Door Lock Control (RHD)</u>
7.5A	OBD	<u>DLC3</u>
7.5A	PANEL	<u>Illumination (LHD)</u>
		<u>Illumination (RHD)</u>
7.5A	SHADE RR	<u>Rear Sunshade</u>
		<u>Door Lock Control (LHD)</u>
		<u>Door Lock Control (RHD)</u>
		<u>Entry & Start System (LHD)</u>
		<u>Entry & Start System (RHD)</u>
		<u>Fuel Lid Opener (LHD)</u>
		<u>Fuel Lid Opener (RHD)</u>
		<u>Immobiliser System (LHD)</u>
		<u>Immobiliser System (RHD)</u>
7.5A	TRUNK OPN	<u>Luggage Compartment Door Opener (LHD)</u>
		<u>Luggage Compartment Door Opener (RHD)</u>
		<u>Starting (LHD)</u>
		<u>Starting (RHD)</u>
		<u>Steering Lock (LHD)</u>
		<u>Steering Lock (RHD)</u>
		<u>Theft Deterrent (LHD)</u>
		<u>Theft Deterrent (RHD)</u>
		<u>Wireless Door Lock Control (LHD)</u>
		<u>Wireless Door Lock Control (RHD)</u>
		<u>Air Conditioner</u>
		<u>Audio System</u>
		<u>Automatic Light Control</u>
		<u>Back Guide Monitor System</u>
		<u>Combination Meter</u>
		<u>Door Lock Control (LHD)</u>
		<u>Door Lock Control (RHD)</u>
		<u>Double Locking (LHD)</u>
		<u>Double Locking (RHD)</u>
		<u>Entry & Start System (LHD)</u>
		<u>Entry & Start System (RHD)</u>
		<u>Front Fog Light</u>
		<u>Fuel Lid Opener (LHD)</u>
		<u>Fuel Lid Opener (RHD)</u>
		<u>G-BOOK (w/o Telematics Transceiver)</u>
		<u>Headlight</u>
		<u>Headlight Beam Level Control</u>
		<u>Headlight Cleaner</u>
		<u>Illumination (LHD)</u>
		<u>Illumination (RHD)</u>
		<u>Immobiliser System (LHD)</u>
		<u>Immobiliser System (RHD)</u>
10A	ECU-B	<u>Interior Light (LHD)</u>
		<u>Interior Light (RHD)</u>
		<u>LEXUS Navigation System</u>
		<u>Light Auto Turn Off System</u>
		<u>Light Reminder</u>
		<u>Luggage Compartment Door Opener (LHD)</u>
		<u>Luggage Compartment Door Opener (RHD)</u>
		<u>Mirror Heater (LHD w/ Seat Position Memory)</u>
		<u>Mirror Heater (RHD w/ Seat Position Memory)</u>
		<u>Option Connector (Trailer Towing)</u>
		<u>Power Seat (LHD Driver's Seat w/ Seat Position Memory)</u>
		<u>Power Seat (RHD Driver's Seat w/ Seat Position Memory)</u>
		<u>Power Tilt and Power Telescopic (LHD)</u>
		<u>Power Tilt and Power Telescopic (RHD)</u>
		<u>Power Window (LHD)</u>
		<u>Power Window (RHD)</u>
		<u>Rear Fog Light</u>
		<u>Rear Sunshade</u>
		<u>Rear View Monitor System</u>
		<u>Remote Control Mirror (LHD w/ Seat Position Memory)</u>
		<u>Remote Control Mirror (LHD w/o Seat Position Memory)</u>
		<u>Remote Control Mirror (RHD w/ Seat Position Memory)</u>

10A ECU-IG1 NO.1

Remote Control Mirror (RHD w/o Seat Position Memory)
Sliding Roof
Starting (LHD)
Starting (RHD)
Steering Lock (LHD)
Steering Lock (RHD)
Taillight
Theft Deterrent (LHD)
Theft Deterrent (RHD)
Tire Pressure Warning System
Vehicle Dynamics Integrated Management (LHD)
Vehicle Dynamics Integrated Management (RHD)
Wireless Door Lock Control (LHD)
Wireless Door Lock Control (RHD)
Air Conditioner
Audio System
Automatic Light Control
Back Guide Monitor System
Blind Spot Monitor System (LHD)
Blind Spot Monitor System (RHD)
Combination Meter
Cooling Fan
Door Lock Control (LHD)
Door Lock Control (RHD)
Double Locking (LHD)
Double Locking (RHD)
Electric Tension Reducer
Entry & Start System (LHD)
Entry & Start System (RHD)
Front Fog Light
Front Window Deicer
Fuel Lid Opener (LHD)
Fuel Lid Opener (RHD)
G-BOOK (w/o Telematics Transceiver)
Headlight
Headlight Beam Level Control
Headlight Cleaner
Illumination (LHD)
Illumination (RHD)
Immobiliser System (LHD)
Immobiliser System (RHD)
Interior Light (LHD)
Interior Light (RHD)
LEXUS Navigation System
LEXUS Parking Assist-Sensor System (LHD)
LEXUS Parking Assist-Sensor System (RHD)
Light Auto Turn Off System
Light Reminder
Luggage Compartment Door Opener (LHD)
Luggage Compartment Door Opener (RHD)
Mirror Heater (LHD w/ Seat Position Memory)
Mirror Heater (RHD w/ Seat Position Memory)
Mirror Heater (w/o Seat Position Memory)
Option Connector (Trailer Towing)
Power Seat (LHD Driver's Seat w/ Seat Position Memory)
Power Seat (RHD Driver's Seat w/ Seat Position Memory)
Power Tilt and Power Telescopic (LHD)
Power Tilt and Power Telescopic (RHD)
Power Window (LHD)
Power Window (RHD)
Rear Fog Light
Rear Sunshade
Rear View Monitor System
Rear Window Defogger
Remote Control Mirror (LHD w/ Seat Position Memory)
Remote Control Mirror (LHD w/o Seat Position Memory)
Remote Control Mirror (RHD w/ Seat Position Memory)
Remote Control Mirror (RHD w/o Seat Position Memory)
Sliding Roof
Starting (LHD)
Starting (RHD)
Steering Lock (LHD)
Steering Lock (RHD)
Taillight

		<u>Theft Deterrent (LHD)</u>
		<u>Theft Deterrent (RHD)</u>
		<u>Tire Pressure Warning System</u>
		<u>Turn Signal and Hazard Warning Light</u>
		<u>Vehicle Dynamics Integrated Management (LHD)</u>
		<u>Vehicle Dynamics Integrated Management (RHD)</u>
		<u>VGRS System (LHD)</u>
		<u>VGRS System (RHD)</u>
		<u>Wireless Door Lock Control (LHD)</u>
		<u>Wireless Door Lock Control (RHD)</u>
		<u>Blind Spot Monitor System (LHD)</u>
		<u>Blind Spot Monitor System (RHD)</u>
		<u>Dynamic Radar Cruise Control (LHD 2GR-FSE)</u>
		<u>Dynamic Radar Cruise Control (LHD 4GR-FSE)</u>
		<u>Dynamic Radar Cruise Control (RHD 2GR-FSE)</u>
		<u>Dynamic Radar Cruise Control (RHD 4GR-FSE)</u>
10A	ECU-IG1 NO.2	<u>Headlight Beam Level Control</u>
		<u>Headlight Cleaner</u>
		<u>Multiplex Communication System (CAN LHD)</u>
		<u>Multiplex Communication System (CAN RHD)</u>
		<u>Pre-Crash Safety System (LHD)</u>
		<u>Pre-Crash Safety System (RHD)</u>
		<u>Tire Pressure Warning System</u>
10A	FOG RR	<u>Rear Fog Light</u>
10A	IG1 NO.1	<u>Shift Lock</u>
		<u>Vehicle Dynamics Integrated Management (LHD)</u>
		<u>Vehicle Dynamics Integrated Management (RHD)</u>
10A	IG1 NO.2	<u>VGRS System (LHD)</u>
		<u>VGRS System (RHD)</u>
		<u>Air Conditioner</u>
		<u>Audio System</u>
		<u>Automatic Glare-Resistant EC Mirror</u>
		<u>Back Guide Monitor System</u>
		<u>Back-Up Light</u>
		<u>Blind Spot Monitor System (LHD)</u>
		<u>Blind Spot Monitor System (RHD)</u>
		<u>Climate Control Seat</u>
		<u>Combination Meter</u>
		<u>Cooling Fan</u>
		<u>Cruise Control (2GR-FSE)</u>
		<u>Cruise Control (4GR-FSE)</u>
		<u>Door Lock Control (LHD)</u>
		<u>Dynamic Radar Cruise Control (LHD 2GR-FSE)</u>
		<u>Dynamic Radar Cruise Control (LHD 4GR-FSE)</u>
		<u>Dynamic Radar Cruise Control (RHD 2GR-FSE)</u>
		<u>Dynamic Radar Cruise Control (RHD 4GR-FSE)</u>
		<u>ECT and A/T Indicator (2GR-FSE)</u>
		<u>ECT and A/T Indicator (4GR-FSE)</u>
		<u>Engine Control (2GR-FSE)</u>
		<u>Engine Control (4GR-FSE)</u>
10A	IG1 NO.3	<u>Front Window Deicer</u>
		<u>Fuel Lid Opener (LHD)</u>
		<u>Garage Door Opener</u>
		<u>G-BOOK (w/o Telematics Transceiver)</u>
		<u>Headlight</u>
		<u>Heated Steering Wheel System</u>
		<u>Lane Departure Alert (LHD)</u>
		<u>Lane Departure Alert (RHD)</u>
		<u>LEXUS Navigation System</u>
		<u>LEXUS Parking Assist-Sensor System (LHD)</u>
		<u>LEXUS Parking Assist-Sensor System (RHD)</u>
		<u>Luggage Compartment Door Opener (LHD)</u>
		<u>Mirror Heater (LHD w/ Seat Position Memory)</u>
		<u>Mirror Heater (RHD w/ Seat Position Memory)</u>
		<u>Mirror Heater (w/o Seat Position Memory)</u>
		<u>Option Connector (Trailer Towing)</u>
		<u>Power Seat (LHD Driver's Seat w/ Seat Position Memory)</u>
		<u>Power Seat (RHD Driver's Seat w/ Seat Position Memory)</u>
		<u>Power Tilt and Power Telescopic (LHD)</u>
		<u>Power Tilt and Power Telescopic (RHD)</u>
		<u>Pre-Crash Safety System (LHD)</u>

		<u>Pre-Crash Safety System (RHD)</u> <u>Rear Sunshade</u> <u>Rear View Monitor System</u> <u>Rear Window Defogger</u> <u>Remote Control Mirror (LHD w/ Seat Position Memory)</u> <u>Remote Control Mirror (RHD w/ Seat Position Memory)</u> <u>Seat Heater</u> <u>Sliding Roof</u> <u>Theft Deterrent (LHD)</u> <u>Vehicle Dynamics Integrated Management (LHD)</u> <u>Vehicle Dynamics Integrated Management (RHD)</u> <u>Wiper and Washer</u> <u>Automatic Light Control</u> <u>Door Lock Control (LHD)</u> <u>Door Lock Control (RHD)</u> <u>Entry & Start System (LHD)</u> <u>Entry & Start System (RHD)</u> <u>Fuel Lid Opener (LHD)</u> <u>Fuel Lid Opener (RHD)</u> <u>Immobiliser System (LHD)</u> <u>Immobiliser System (RHD)</u> <u>Light Auto Turn Off System</u> <u>Luggage Compartment Door Opener (LHD)</u> <u>Luggage Compartment Door Opener (RHD)</u> <u>Power Seat (LHD Driver's Seat w/ Seat Position Memory)</u> <u>Power Seat (RHD Driver's Seat w/ Seat Position Memory)</u> <u>Power Tilt and Power Telescopic (LHD)</u> <u>Power Tilt and Power Telescopic (RHD)</u> <u>Power Window (LHD)</u> <u>Power Window (RHD)</u> <u>Remote Control Mirror (LHD w/ Seat Position Memory)</u> <u>Remote Control Mirror (RHD w/ Seat Position Memory)</u> <u>Sliding Roof</u> <u>Starting (LHD)</u> <u>Starting (RHD)</u> <u>Steering Lock (LHD)</u> <u>Steering Lock (RHD)</u> <u>Theft Deterrent (LHD)</u> <u>Theft Deterrent (RHD)</u> <u>Tire Pressure Warning System</u> <u>Wireless Door Lock Control (LHD)</u> <u>Wireless Door Lock Control (RHD)</u> <u>Blind Spot Monitor System (LHD)</u> <u>Blind Spot Monitor System (RHD)</u> <u>Turn Signal and Hazard Warning Light</u> <u>Vehicle Dynamics Integrated Management (LHD)</u> <u>Vehicle Dynamics Integrated Management (RHD)</u> <u>VGRS System (LHD)</u> <u>VGRS System (RHD)</u> <u>Door Lock Control (LHD)</u> <u>Entry & Start System (LHD)</u> <u>Entry & Start System (RHD)</u> <u>Fuel Lid Opener (LHD)</u> <u>Immobiliser System (LHD)</u> <u>Immobiliser System (RHD)</u> <u>Interior Light (LHD)</u> <u>Interior Light (RHD)</u> <u>Luggage Compartment Door Opener (LHD)</u> <u>Starting (LHD)</u> <u>Starting (RHD)</u> <u>Steering Lock (LHD)</u> <u>Steering Lock (RHD)</u> <u>Theft Deterrent (LHD)</u> <u>Wireless Door Lock Control (LHD)</u> <u>Wireless Door Lock Control (RHD)</u>
10A	J/B-AM	
10A	J/B-B	
15A	DOME	
15A	DOOR DBL/L	<u>Double Locking (LHD)</u> <u>Double Locking (RHD)</u>
15A	HAZ	<u>Combination Meter</u> <u>Door Lock Control (LHD)</u> <u>Door Lock Control (RHD)</u> <u>Entry & Start System (LHD)</u> <u>Entry & Start System (RHD)</u>

		<u>Fuel Lid Opener (LHD)</u>
		<u>Fuel Lid Opener (RHD)</u>
		<u>Immobiliser System (LHD)</u>
		<u>Immobiliser System (RHD)</u>
		<u>Luggage Compartment Door Opener (LHD)</u>
		<u>Luggage Compartment Door Opener (RHD)</u>
		<u>Option Connector (Trailer Towing)</u>
		<u>Starting (LHD)</u>
		<u>Starting (RHD)</u>
		<u>Steering Lock (LHD)</u>
		<u>Steering Lock (RHD)</u>
		<u>Theft Deterrent (LHD)</u>
		<u>Theft Deterrent (RHD)</u>
		<u>Turn Signal and Hazard Warning Light</u>
		<u>Wireless Door Lock Control (LHD)</u>
		<u>Wireless Door Lock Control (RHD)</u>
15A	P/OUTLET NO.1	<u>Power Outlet</u>
		<u>Audio System</u>
		<u>Back Guide Monitor System</u>
		<u>G-BOOK (w/o Telematics Transceiver)</u>
15A	RADIO	<u>LEXUS Navigation System</u>
		<u>LEXUS Parking Assist-Sensor System (LHD)</u>
		<u>LEXUS Parking Assist-Sensor System (RHD)</u>
		<u>Rear View Monitor System</u>
15A	S/HTR F/L	<u>Climate Control Seat</u>
		<u>Seat Heater</u>
15A	S/HTR F/R	<u>Climate Control Seat</u>
		<u>Seat Heater</u>
15A	TAIL	<u>Front Fog Light</u>
		<u>Option Connector (Trailer Towing)</u>
		<u>Taillight</u>
20A	S/ROOF	<u>Sliding Roof</u>
		<u>Entry & Start System (LHD)</u>
		<u>Entry & Start System (RHD)</u>
		<u>Immobiliser System (LHD)</u>
		<u>Immobiliser System (RHD)</u>
20A	STRG LOCK	<u>Option Connector (Remote Engine Starter System)</u>
		<u>Starting (LHD)</u>
		<u>Starting (RHD)</u>
		<u>Steering Lock (LHD)</u>
		<u>Steering Lock (RHD)</u>
		<u>Wireless Door Lock Control (LHD)</u>
		<u>Wireless Door Lock Control (RHD)</u>
20A	TI&TE	<u>Power Tilt and Power Telescopic (LHD)</u>
		<u>Power Tilt and Power Telescopic (RHD)</u>
		<u>Audio System</u>
		<u>Back Guide Monitor System</u>
30A	AMP NO.1	<u>G-BOOK (w/o Telematics Transceiver)</u>
		<u>LEXUS Navigation System</u>
		<u>Rear View Monitor System</u>
		<u>Audio System</u>
		<u>Back Guide Monitor System</u>
30A	AMP NO.2	<u>G-BOOK (w/o Telematics Transceiver)</u>
		<u>LEXUS Navigation System</u>
		<u>Rear View Monitor System</u>
		<u>Door Lock Control (LHD)</u>
		<u>Door Lock Control (RHD)</u>
		<u>Entry & Start System (LHD)</u>
		<u>Entry & Start System (RHD)</u>
		<u>Fuel Lid Opener (LHD)</u>
		<u>Fuel Lid Opener (RHD)</u>
30A	D/L	<u>Immobiliser System (LHD)</u>
		<u>Immobiliser System (RHD)</u>
		<u>Luggage Compartment Door Opener (LHD)</u>
		<u>Luggage Compartment Door Opener (RHD)</u>
		<u>Starting (LHD)</u>
		<u>Starting (RHD)</u>
		<u>Steering Lock (LHD)</u>

		<u>Steering Lock (RHD)</u>
		<u>Theft Deterrent (LHD)</u>
		<u>Theft Deterrent (RHD)</u>
		<u>Wireless Door Lock Control (LHD)</u>
		<u>Wireless Door Lock Control (RHD)</u>
		<u>Interior Light (LHD)</u>
		<u>Interior Light (RHD)</u>
		<u>Mirror Heater (LHD w/ Seat Position Memory)</u>
		<u>Mirror Heater (RHD w/ Seat Position Memory)</u>
30A	DOOR F/L	<u>Power Seat (LHD Driver's Seat w/ Seat Position Memory)</u>
		<u>Power Tilt and Power Telescopic (LHD)</u>
		<u>Power Window (LHD)</u>
		<u>Power Window (RHD)</u>
		<u>Remote Control Mirror (LHD w/ Seat Position Memory)</u>
		<u>Remote Control Mirror (RHD w/ Seat Position Memory)</u>
		<u>Interior Light (LHD)</u>
		<u>Interior Light (RHD)</u>
		<u>Mirror Heater (LHD w/ Seat Position Memory)</u>
		<u>Mirror Heater (RHD w/ Seat Position Memory)</u>
30A	DOOR F/R	<u>Power Seat (RHD Driver's Seat w/ Seat Position Memory)</u>
		<u>Power Tilt and Power Telescopic (RHD)</u>
		<u>Power Window (LHD)</u>
		<u>Power Window (RHD)</u>
		<u>Remote Control Mirror (LHD w/ Seat Position Memory)</u>
		<u>Remote Control Mirror (RHD w/ Seat Position Memory)</u>
30A	DOOR R/L	<u>Power Window (LHD)</u>
		<u>Power Window (RHD)</u>
30A	DOOR R/R	<u>Power Window (LHD)</u>
		<u>Power Window (RHD)</u>
30A	P/SEAT F/L	<u>Power Seat (LHD Driver's Seat w/ Seat Position Memory)</u>
		<u>Power Seat (LHD Driver's Seat w/o Seat Position Memory)</u>
		<u>Power Seat (RHD Front Passenger's Seat)</u>
30A	P/SEAT F/R	<u>Power Seat (LHD Front Passenger's Seat)</u>
		<u>Power Seat (RHD Driver's Seat w/ Seat Position Memory)</u>
		<u>Power Seat (RHD Driver's Seat w/o Seat Position Memory)</u>

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.