


Position of Parts in Engine Compartment

[LHD]

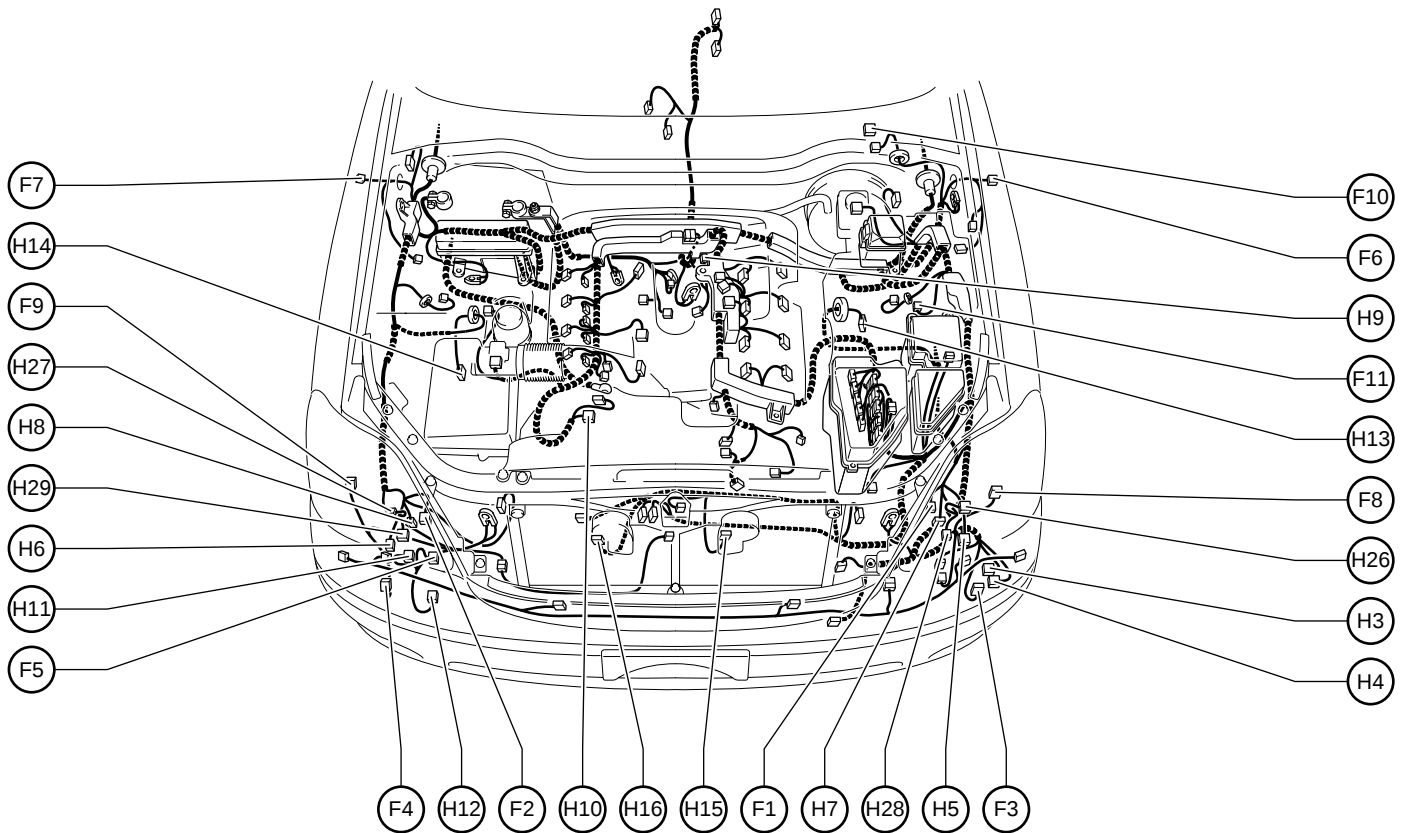

- | | |
|-------------------------------------|--|
| F 1 Front Clearance Light LH | H 3 Headlight Cleaner Control Relay |
| F 2 Front Clearance Light RH | H 4 Headlight Cleaner Motor |
| F 3 Front Fog Light LH | H 5 Headlight Control ECU LH |
| F 4 Front Fog Light RH | H 6 Headlight Control ECU RH |
| F 5 Front Height Control Valve | H 7 Headlight LH (High) |
| F 6 Front Side Turn Signal Light LH | H 8 Headlight RH (High) |
| F 7 Front Side Turn Signal Light RH | H 9 Heated Oxygen Sensor (Bank 1 Sensor 1) |
| F 8 Front Turn Signal Light LH | H10 Heated Oxygen Sensor (Bank 2 Sensor 1) |
| F 9 Front Turn Signal Light RH | H11 Height Control Compressor |
| F10 Front Wiper Motor | H12 Height Control Exhaust Valve |
| F11 Fuel Pump Resistor | H13 Height Control Sensor Front LH |
| | H14 Height Control Sensor Front RH |
| | H15 Horn (High) |
| | H16 Horn (Low) |
| | H26 Headlight Beam Level Control Actuator LH |
| | H27 Headlight Beam Level Control Actuator RH |
| | H28 Headlight LH |
| | H29 Headlight RH |