


Position of Parts in Instrument Panel

[LHD]

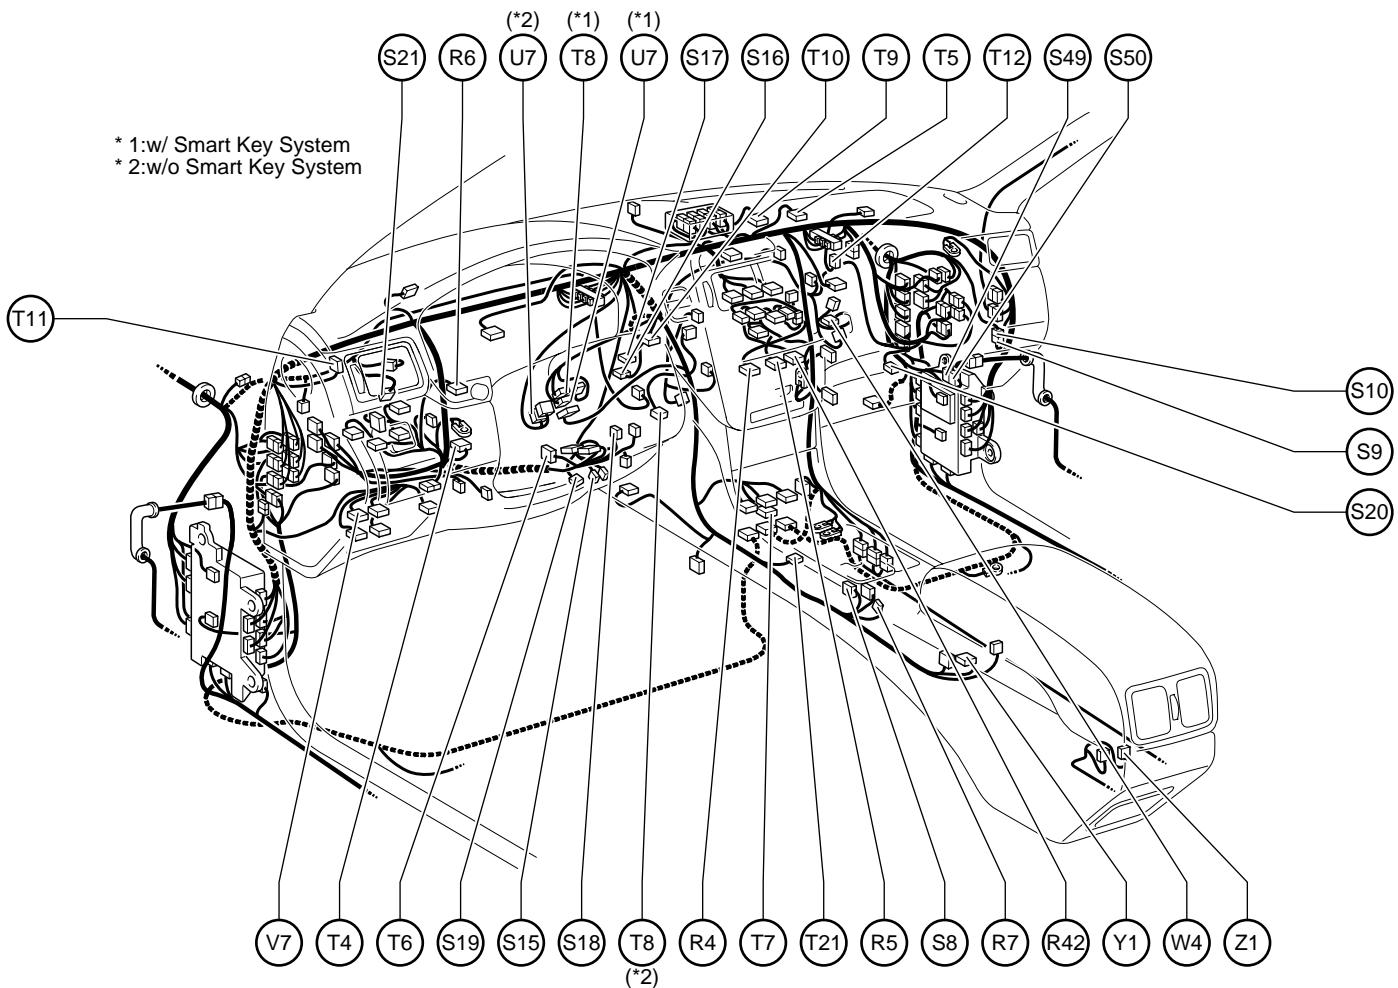

R 4 Radio and Player
 R 5 Radio and Player
 R 6 Rheostat
 R 7 Room Oscillator (Front)
 R42 Radio and Player

S 8 Shift Lock Control ECU
 S 9 Short Connector (Height Control)
 S10 Short Connector (Height Control)
 S15 Smart Key System Cancel SW
 S16 Speed Warning Buzzer
 S17 Steering Lock ECU
 S18 Steering Sensor
 S19 Step Light Front LH
 S20 Step Light Front RH
 S21 Stop Light SW
 S49 Short Connector
 S50 Short Connector

T 4 Telescopic Motor and Position Sensor
 T 5 Theft Deterrent ECU
 T 6 Tilt Motor and Position Sensor
 T 7 Climate Control Seat SW Front LH
 Climate Control Seat SW Front RH
 Headlight Cleaner SW
 Rear Seat Reset SW
 Rear Sunshade SW (Front)
 Seat Heater SW Front LH
 Seat Heater SW Front RH
 Traction Control SW
 T 8 Ignition Key Cylinder Light
 Transponder Key Amplifier
 T 9 Transponder Key Computer
 T 10 Trip SW
 T 11 Tweeter Front LH
 T 12 Tweeter Front RH
 T 21 Transmission Control SW

U 7 Unlock Warning SW
 V 7 VSC Warning Buzzer
 W 4 Water Valve Servo Motor
 Y 1 Yaw Rate Sensor
 Z 1 Option Connector (Cellular Phone)