


Position of Parts in Engine Compartment

[RHD]

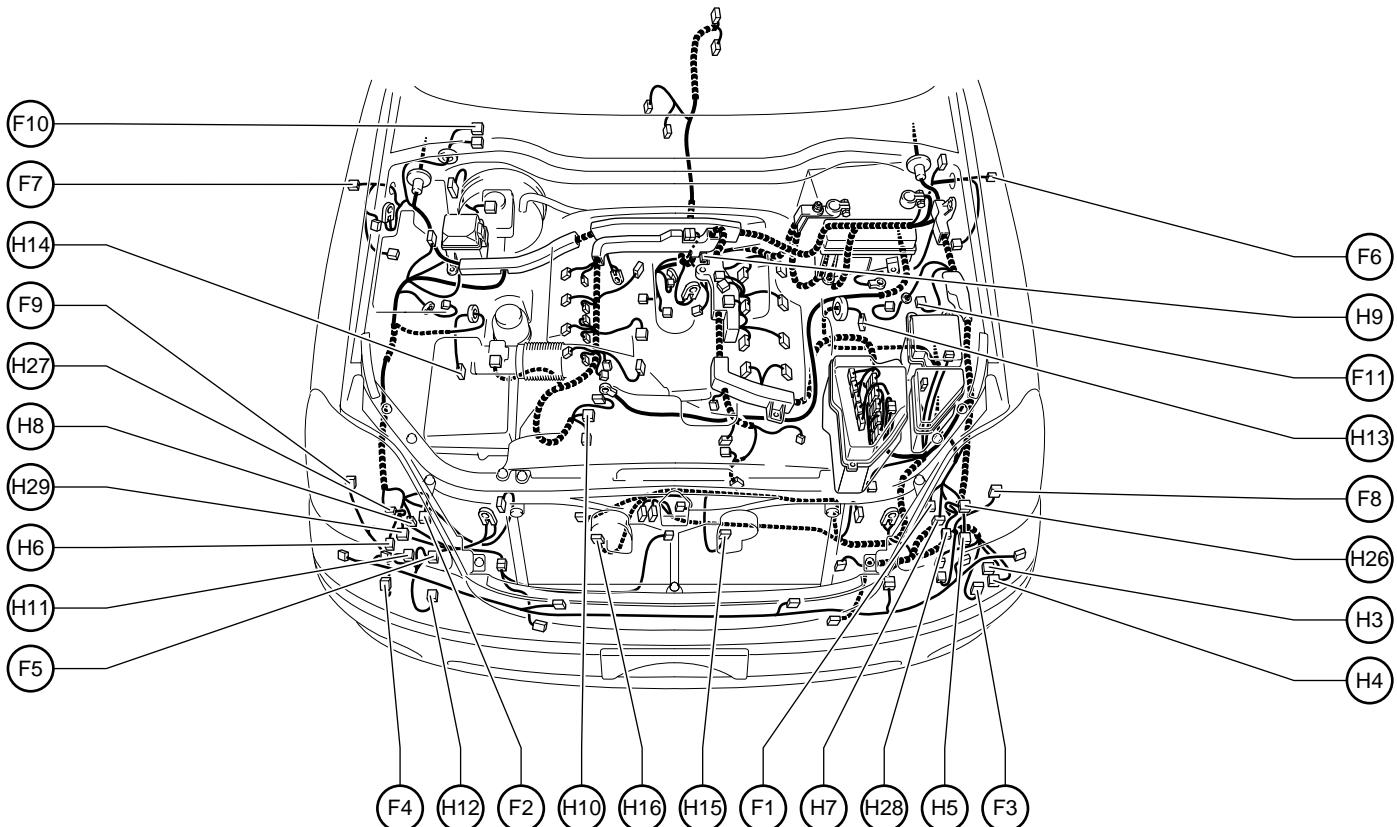

F 1 Front Clearance Light LH
 F 2 Front Clearance Light RH
 F 3 Front Fog Light LH
 F 4 Front Fog Light RH
 F 5 Front Height Control Valve
 F 6 Front Side Turn Signal Light LH
 F 7 Front Side Turn Signal Light RH
 F 8 Front Turn Signal Light LH
 F 9 Front Turn Signal Light RH
 F10 Front Wiper Motor
 F11 Fuel Pump Resistor

H 3 Headlight Cleaner Control Relay
 H 4 Headlight Cleaner Motor
 H 5 Headlight Control ECU LH
 H 6 Headlight Control ECU RH
 H 7 Headlight LH (High)
 H 8 Headlight RH (High)
 H 9 Heated Oxygen Sensor (Bank 1 Sensor 1)
 H10 Heated Oxygen Sensor (Bank 2 Sensor 1)
 H11 Height Control Compressor
 H12 Height Control Exhaust Valve
 H13 Height Control Sensor Front LH
 H14 Height Control Sensor Front RH
 H15 Horn (High)
 H16 Horn (Low)
 H26 Headlight Beam Level Control Actuator LH
 H27 Headlight Beam Level Control Actuator RH
 H28 Headlight LH
 H29 Headlight RH