


Position of Parts in Body

[RHD]

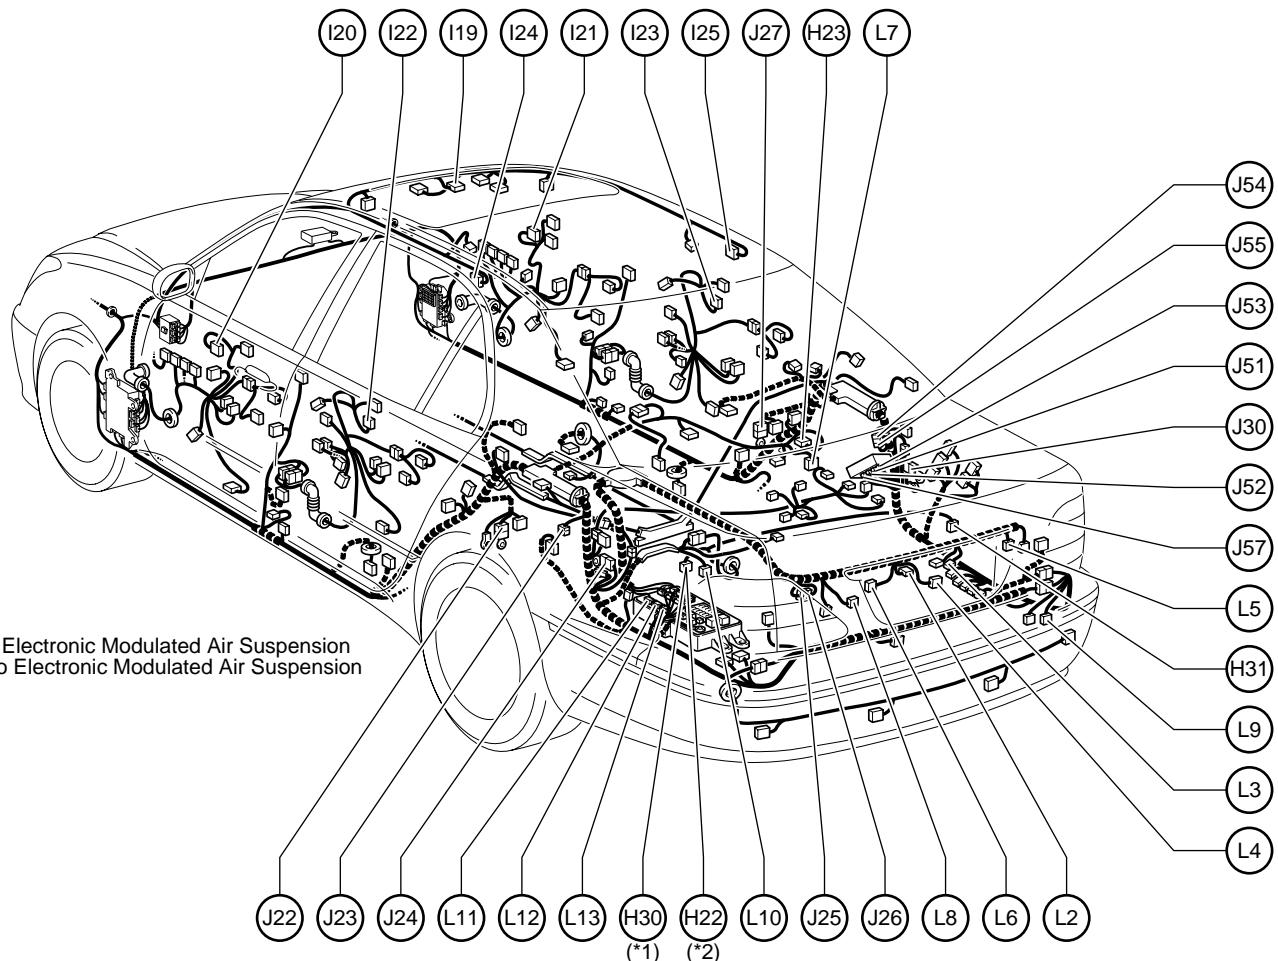

H22 Height Control Sensor Rear
 H23 High Mounted Stop Light
 H30 Height Control Sensor Rear LH
 H31 Height Control Sensor Rear RH
 I 19 Door Lock Control Receiver
 Inner Mirror
 I 20 Inside Handle Illumination Front LH
 I 21 Inside Handle Illumination Front RH
 I 22 Inside Handle Illumination Rear LH
 I 23 Inside Handle Illumination Rear RH
 I 24 Interior Light Rear LH
 I 25 Interior Light Rear RH

J 22 Junction Connector
 J 23 Junction Connector
 J 24 Junction Connector
 J 25 Junction Connector
 J 26 Junction Connector
 J 27 Junction Connector
 J 30 Junction Connector
 J 51 Junction Connector
 J 52 Junction Connector
 J 53 Junction Connector
 J 54 Junction Connector
 J 55 Junction Connector
 J 57 Junction Connector

L 2 License Plate Light LH
 L 3 License Plate Light RH
 L 4 Luggage Compartment Door Closer Motor
 L 5 Luggage Electrical Key SW
 L 6 Luggage Compartment Door Key Unlock SW
 L 7 Luggage Compartment Light No.1
 L 8 Luggage Compartment Light No.2
 L 9 Luggage Oscillator (Inner)
 L 10 Luggage Oscillator (Outer)
 L 11 Luggage Room J/B ECU
 L 12 Luggage Room J/B ECU
 L 13 Luggage Room J/B ECU