


Connector Joining Wire Harness and Wire Harness

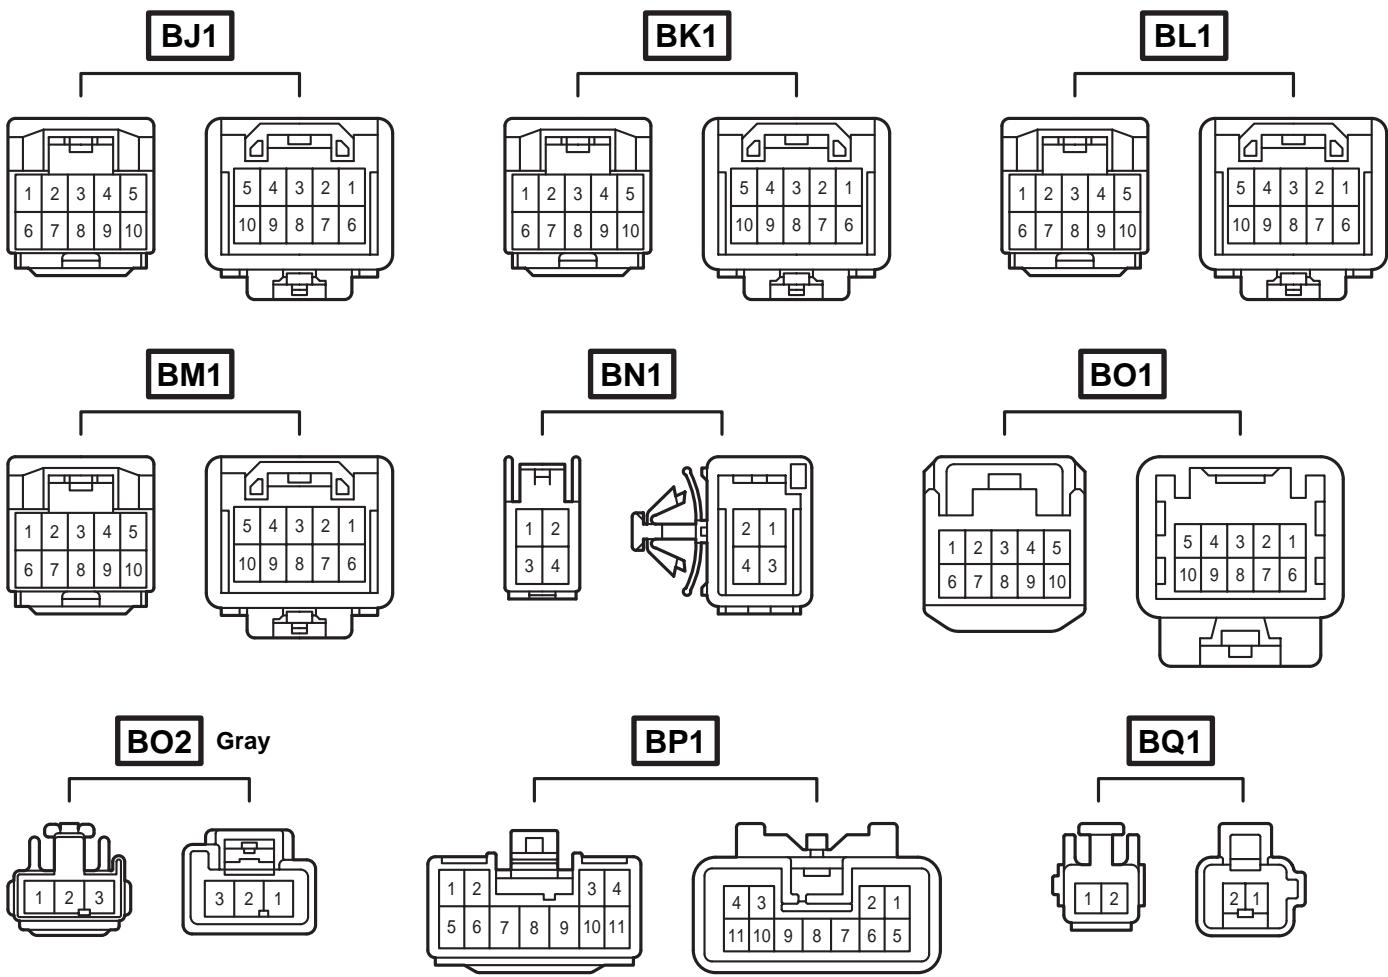

Code	Joining Wire Harness and Wire Harness (Connector Location)
BJ1	Front Door LH Wire and Electrical Key Front LH Sub Wire (Near the Front Door Outside Handle LH)
BK1	Front Door RH Wire and Electrical Key Front RH Sub Wire (Near the Front Door Outside Handle RH)
BL1	Rear Door No.2 Wire and Electrical Key Rear LH Sub Wire (Near the Rear Door Outside Handle LH)
BM1	Rear Door No.1 Wire and Electrical Key Rear RH Sub Wire (Near the Rear Door Outside Handle RH)
BN1	Luggage Room Wire and Floor No.2 Wire (Quarter Panel LH)
BO1	Absorber Control Wire and Floor No.2 Wire (Left Side of Luggage Room)
BO2 Gray	Sensor Wire and Floor No.2 Wire (Left Side of Luggage Room)
BP1	Floor No.2 Wire and A/C Sub Wire No.2 (Quarter Panel LH)
BQ1	Floor No.2 Wire and A/C Sub Wire No.3 (Near the Woofer)